


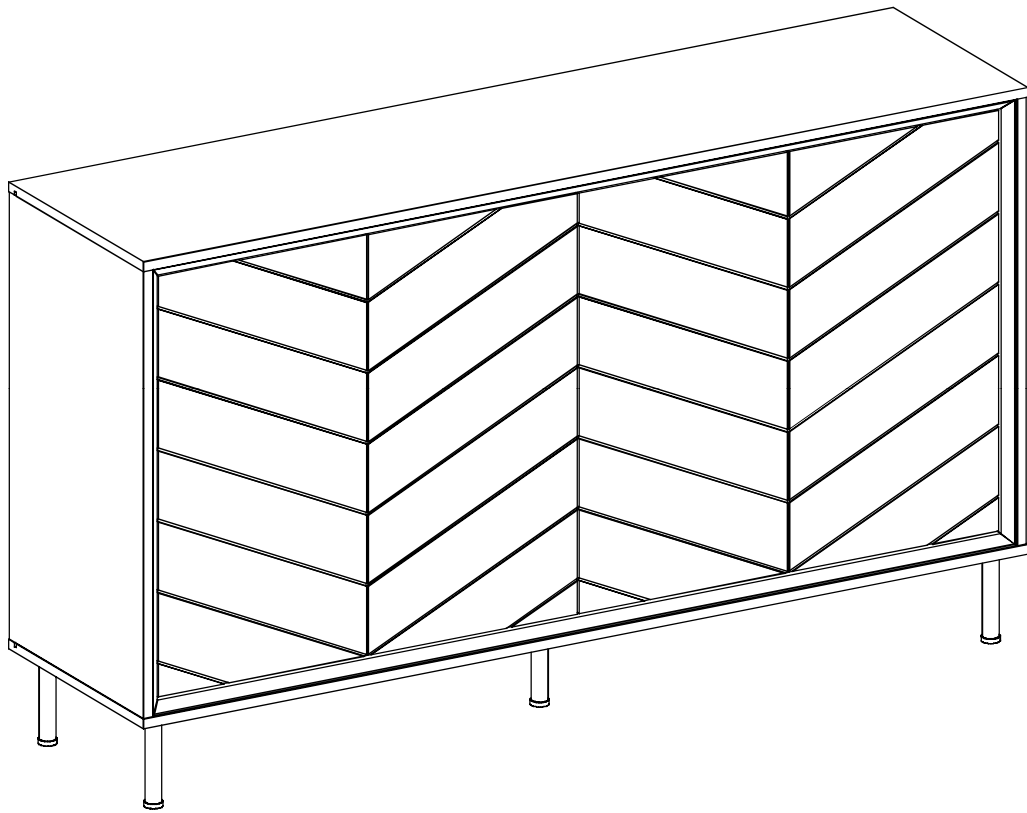

ASSEMBLY INSTRUCTIONS

Sideboard

EEI-6336 / V1.02.02.26

modway



Questions? Contact us!
609.256.9000
cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.


Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Lock Ø15mm	x14
B		Cam Bolt Ø7.5 x 32mm	x14
C		Cam Cover Ø17mm	x10
D		Plastic Dowel Ø8 x 32mm	x24
E		Cover Shock Ø15mm	x2
F		Screw 10 x 33.5mm	x10
G		Screw 6 x 8 mm	x8
H		Backply Stopper	x14
I		Screw 4 x 19mm	x14
J		Push To Open	x4
K		Screw 3 x 12mm	x2
L		Screw 10 x 25mm	x12
M		Full Curve Door Hinge	x4
N		Screw 4 x 10mm	x16
O		H-Profile	x1
P		Shelf Pin	x8
Q		Half Curve Door Hinge	x4
R		Wall Bracket Set	x1


WHAT YOU NEED:



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

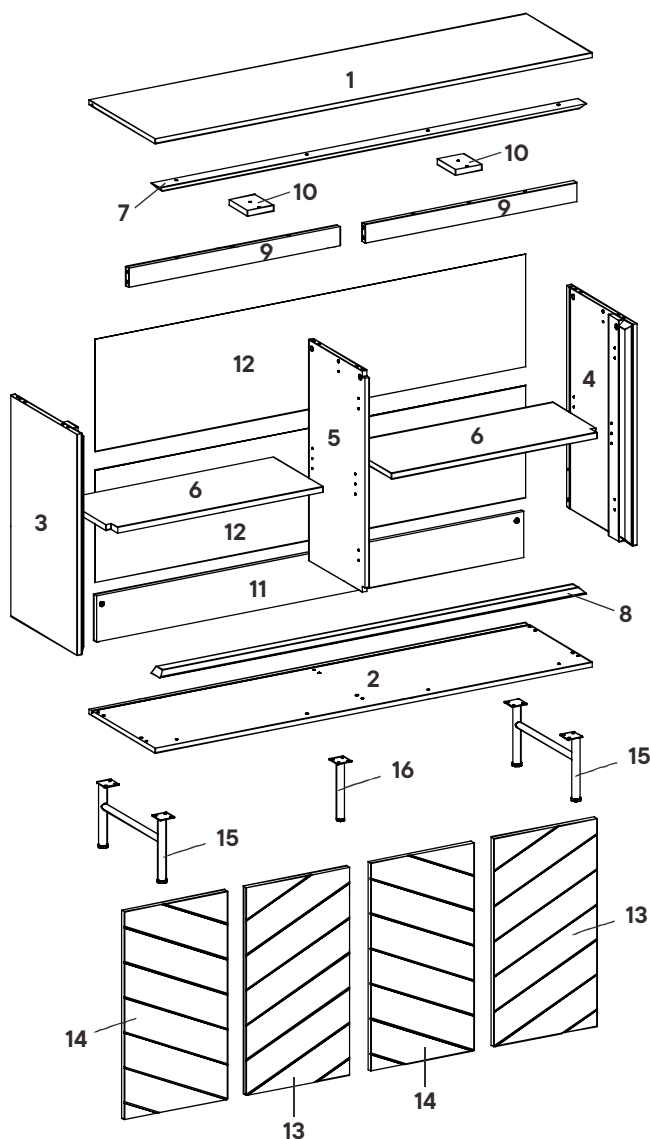


1	Top Board	x1	7	Top Support	x1	13	Right Door	x2
2	Bottom Board	x1	8	Bottom Support	x1	14	Left Door	x2
3	Left Side Board	x1	9	Middle Support	x2	15	Side Leg	x2
4	Right Side Board	x1	10	Rectangle Support	x2	16	Middle Leg	x1
5	Divider Board	x1	11	Bottom Backboard	x1			
6	Adjustable Shelf	x2	12	Backboard	x2			

STEP 01

1.1 Insert and screw Cam Bolt (B) into Top Board (1), Left Side Board (3) and Right Side Board (4) as shown.

1.2 Insert Plastic Dowel (D) into Left Side Board (3) and Right Side Board (4) as shown.

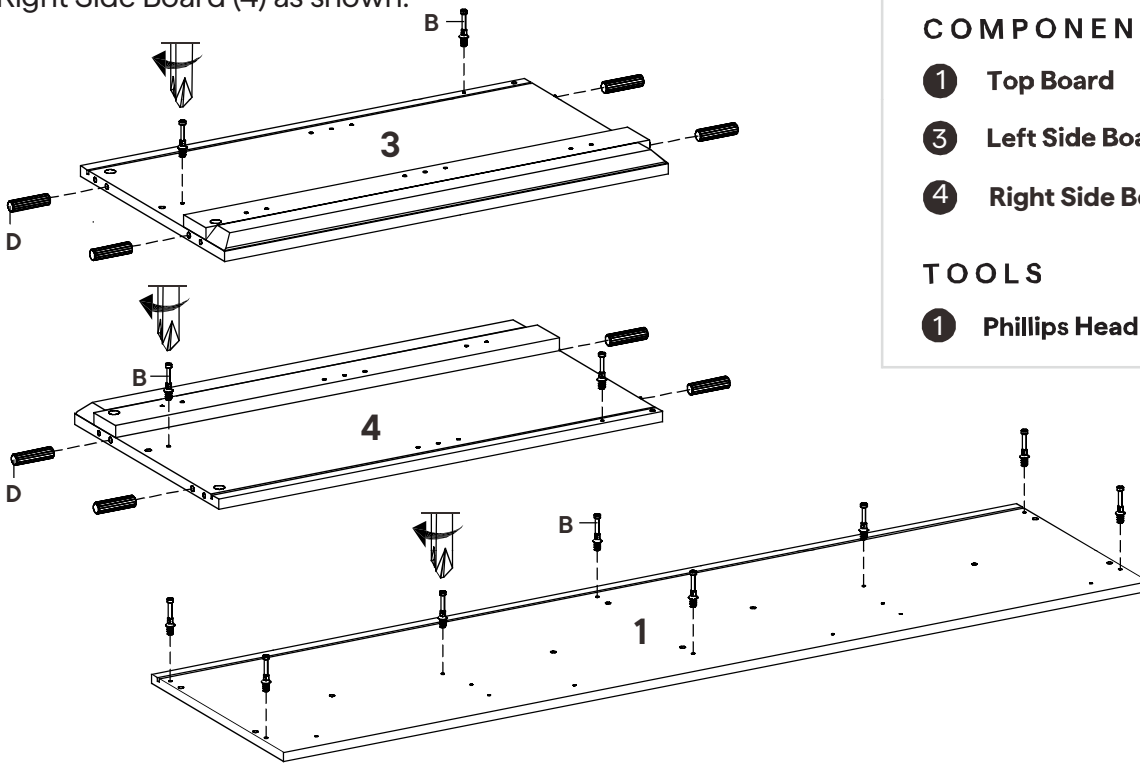

HARDWARE

B Cam Bolt Ø7.5 x 32 mm x12

D Plastic Dowel Ø8 x 32 mm x8

COMPONENTS

1 Top Board x1

3 Left Side Board x1

4 Right Side Board x1

TOOLS


1 Phillips Head Screwdriver x1

STEP 02

2.1 Insert and screw Cam Bolt (B) into Divider Board (5) as shown. Then flip the panel 180°.

2.2 Insert and screw Cam Bolt (B) again into Divider Board (5) as shown.

2.3 Insert Plastic Dowel (D) into into Divider Board (5) as shown.

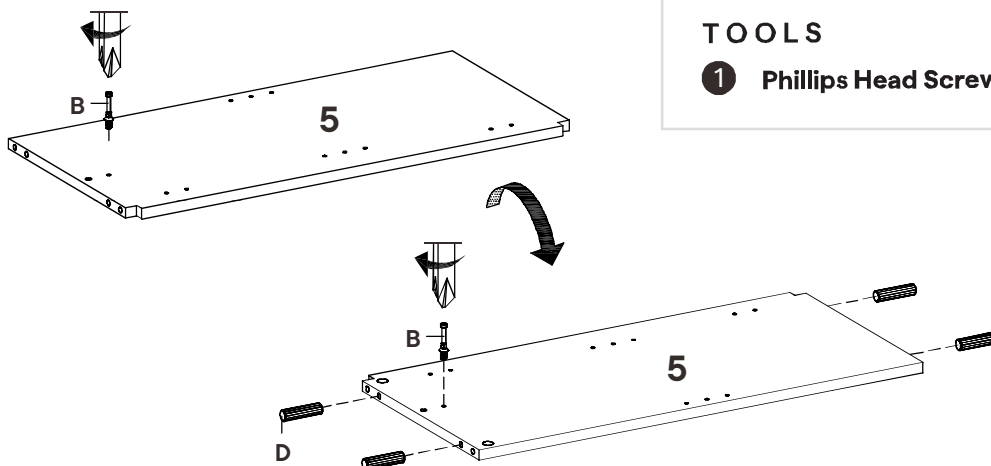

HARDWARE

B Cam Bolt Ø7.5 x 32 mm x2

D Plastic Dowel Ø8 x 32 mm x4


COMPONENTS

5 Divider Board x1

TOOLS

1 Phillips Head Screwdriver x1

3.2 Insert Plastic Dowel (D) into Middle Support (9) and Bottom Backboard (11) as shown.

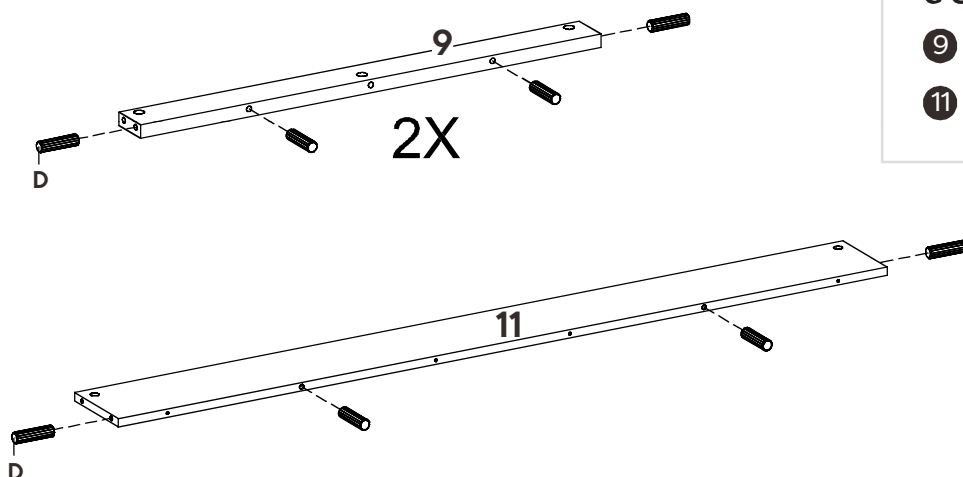

HARDWARE

D Plastic Dowel Ø8 x 32 mm x12


COMPONENTS

9 Middle Support x2

11 Bottom Backboard x1

STEP 04

4.1 Attach Top Support (7) and Rectangle Support (10) to Top Board (1) using Screw (L).

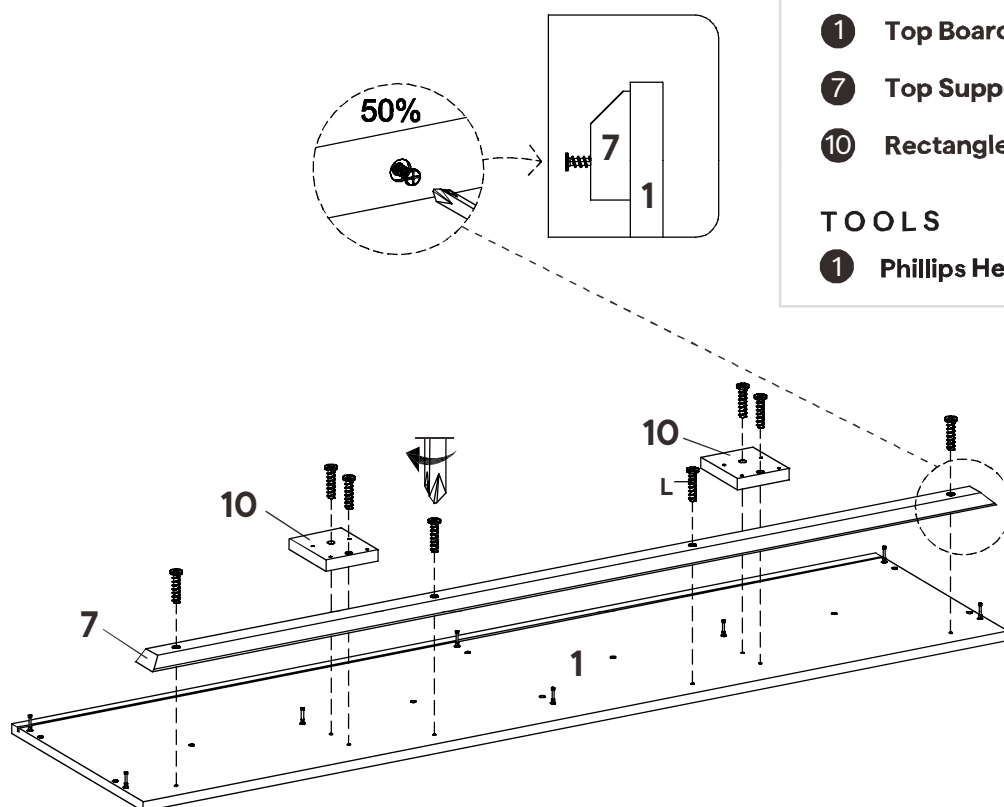

HARDWARE

L Screw M10 x 25 mm x8

COMPONENTS

1 Top Board x1


7 Top Support x1

10 Rectangle Support x2

TOOLS

1 Phillips Head Screwdriver x1

5.1 Attach Push To Open (J) to the assembled unit using Screw (G) as shown.

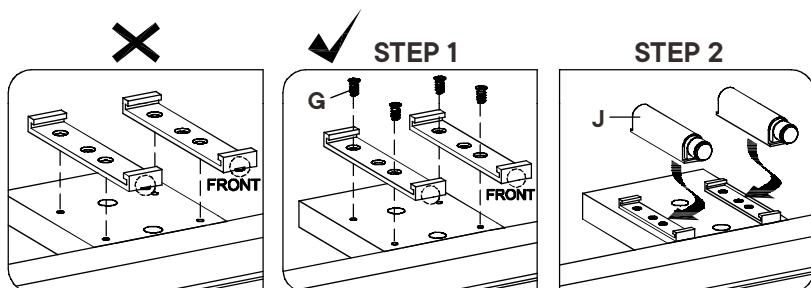

HARDWARE


- G** Screw M 6 x 8 mm x8
- J** Push To Open x4

COMPONENTS

- 10** Rectangle Support x2


TOOLS

- 1** Phillips Head Screwdriver x1

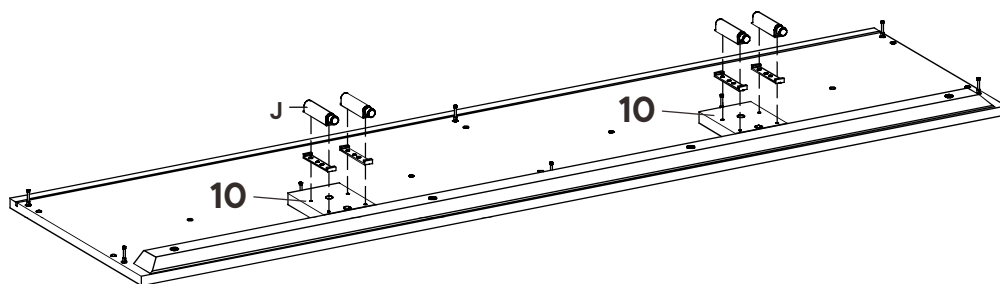

STEP 06

6.1 Attach Bottom Support (8) to Bottom Board (2) using Screw (L). Tighten only 50%.

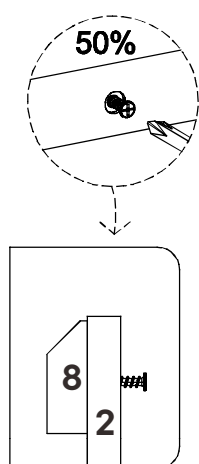

HARDWARE


- L** Screw M 10 x 25 mm x4

COMPONENTS

- 2** Bottom Board x1
- 8** Bottom Support x1


TOOLS

- 1** Phillips Head Screwdriver x1

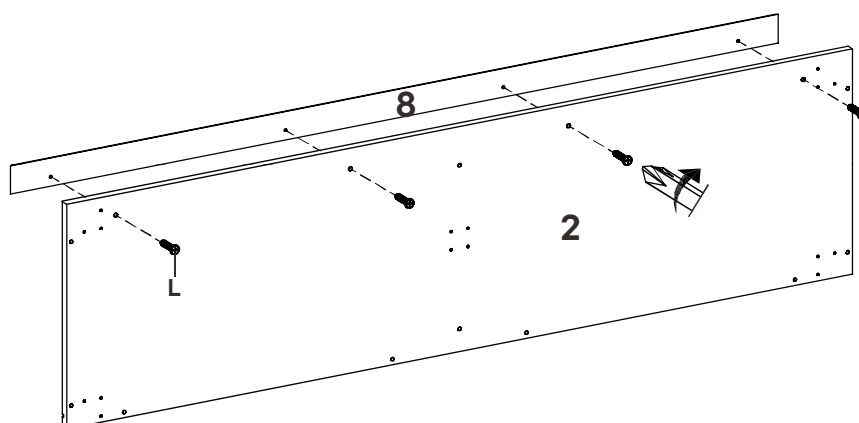

7.1 Attach Middle Support (9) to Divider Board (5) as shown.

7.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.

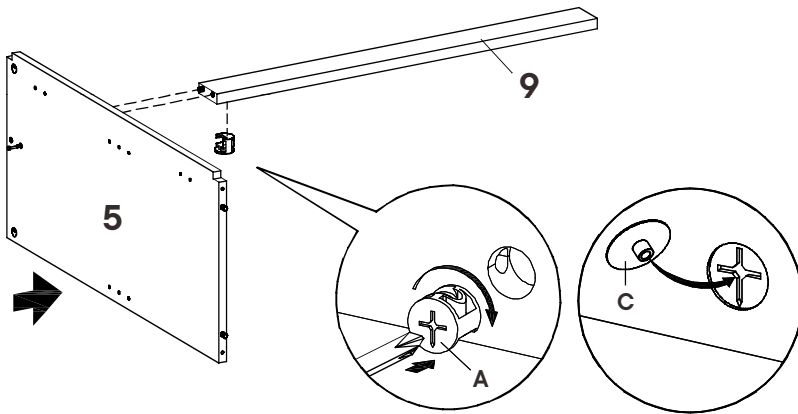

HARDWARE

- A** Cam Lock Ø15 mm x1
- C** Cam Cover Ø17 mm x1

COMPONENTS

- 5** Divider Board x1
- 9** Middle Support x1


TOOLS

- 1** Phillips Head Screwdriver x1

STEP 08

8.1 Attach Right Side Board (4) to the assembled unit as shown.

8.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.

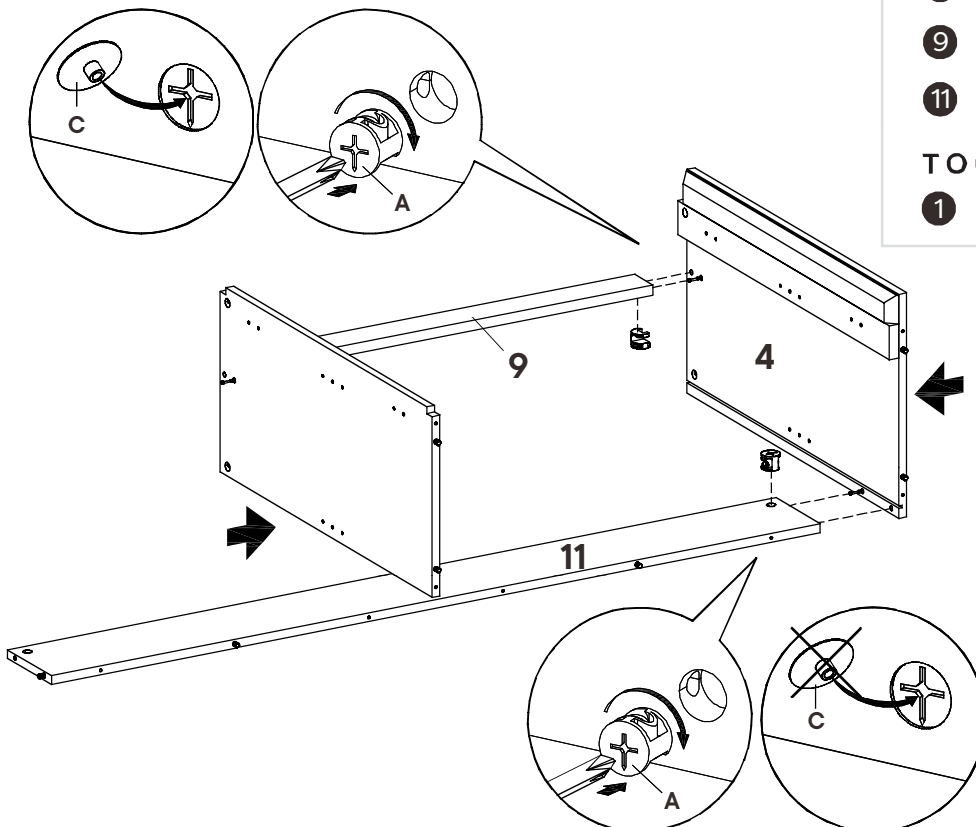

HARDWARE

- A** Cam Lock Ø15 mm x2
- C** Cam Cover Ø17 mm x1

COMPONENTS

- 4** Right Side Board x1
- 9** Middle Support x1
- 11** Bottom Backboard x1

TOOLS

- 1** Phillips Head Screwdriver x1

9.1 Attach Left Side Board (3) and Middle Support (9) to the assembled unit as shown.

9.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.

HARDWARE


- A** Cam Lock Ø15 mm x3
- C** Cam Cover Ø17 mm x2

COMPONENTS

- 3** Left Side Board x1
- 5** Divider Board x1
- 9** Middle Support x1
- 11** Bottom Backboard x1

TOOLS

- 1** Phillips Head Screwdriver x1

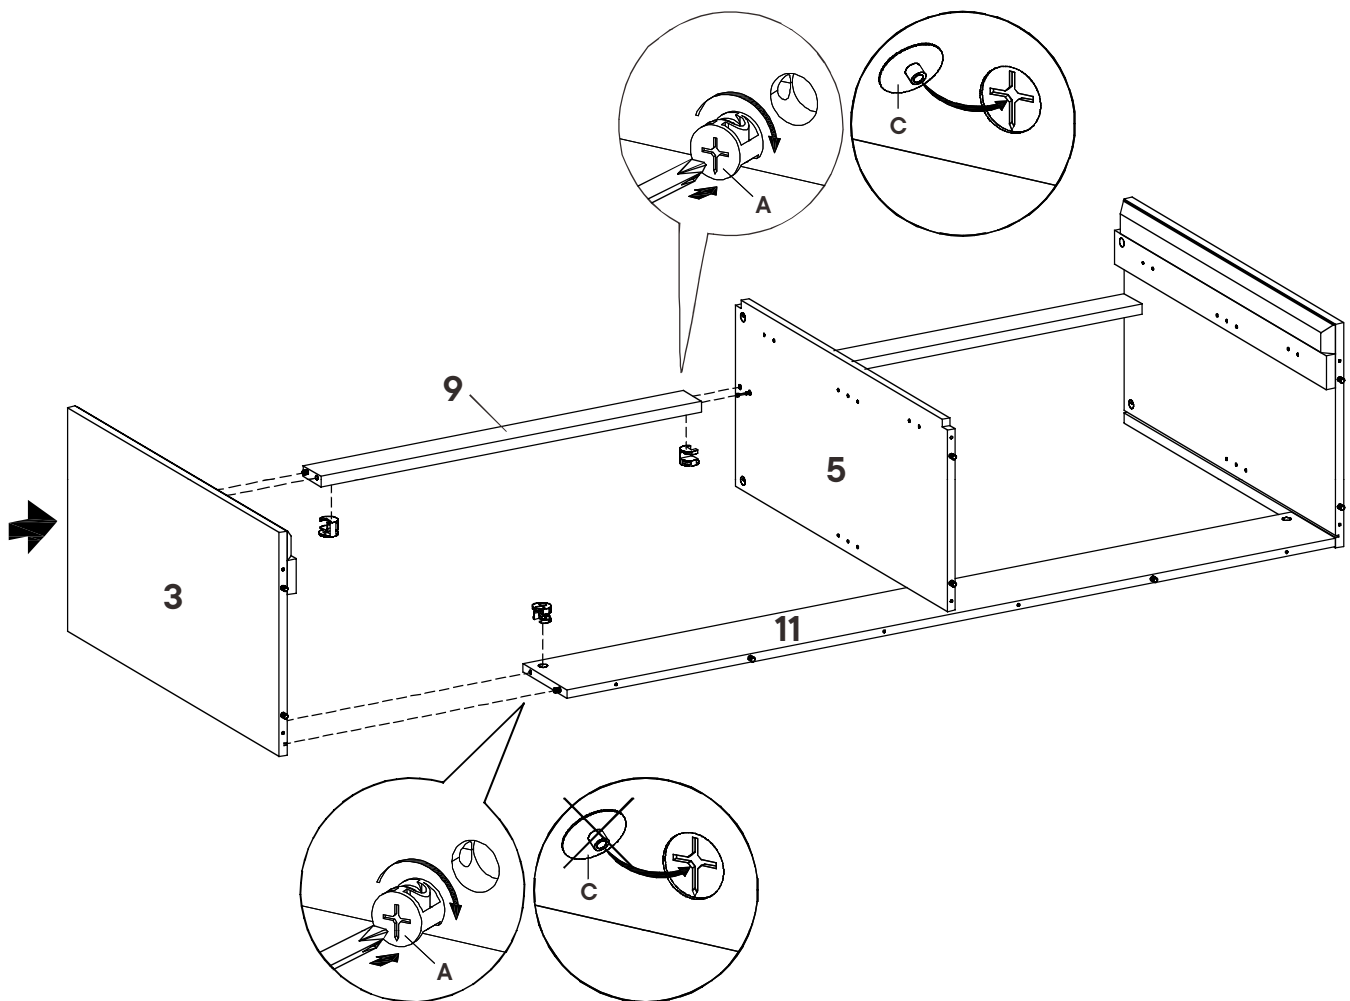

10.1 Attach Bottom Board (2) to the assembled unit using Screw (F). Tighten it 100%,

HARDWARE

F Screw M10 x 33.5 mm x10

COMPONENTS

2 Bottom Board x1

3 Left Side Board x1



4 Right Side Board x1

5 Divider Board x1

11 Bottom Backboard x1

TOOLS

1 Phillips Head Screwdriver x1

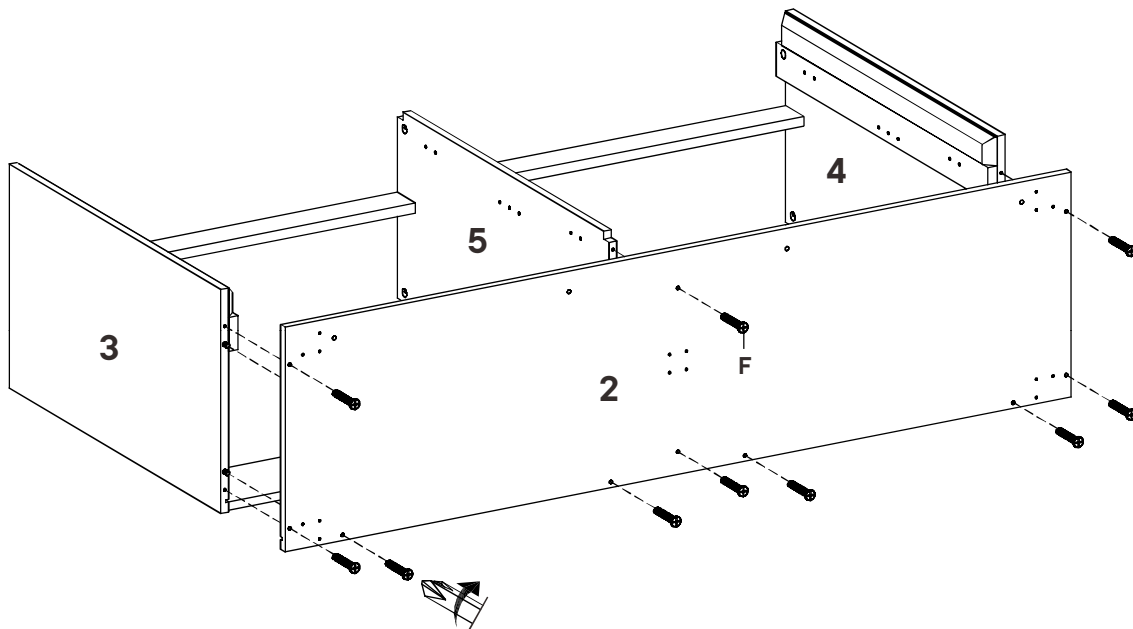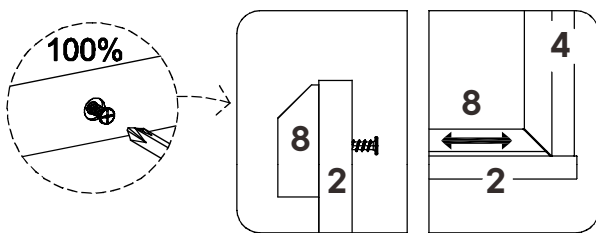

11.1 Attach Side Leg (15) and Middle Leg (16) to the assembled unit using Screw (N).

HARDWARE

(N) Screw M 4 x 10 mm x16

COMPONENTS


(2) Bottom Board x1

(15) Side Leg x2

(16) Middle Leg x1


TOOLS

(1) Phillips Head Screwdriver x1

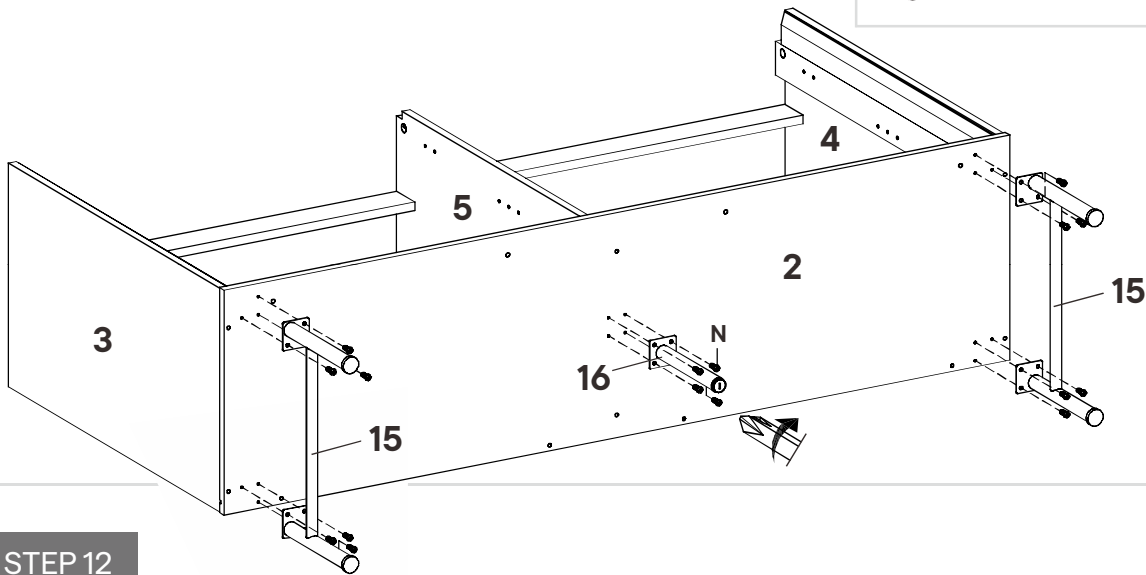

STEP 12

12.1 Attach Backboard (12) to the assembled unit as shown.

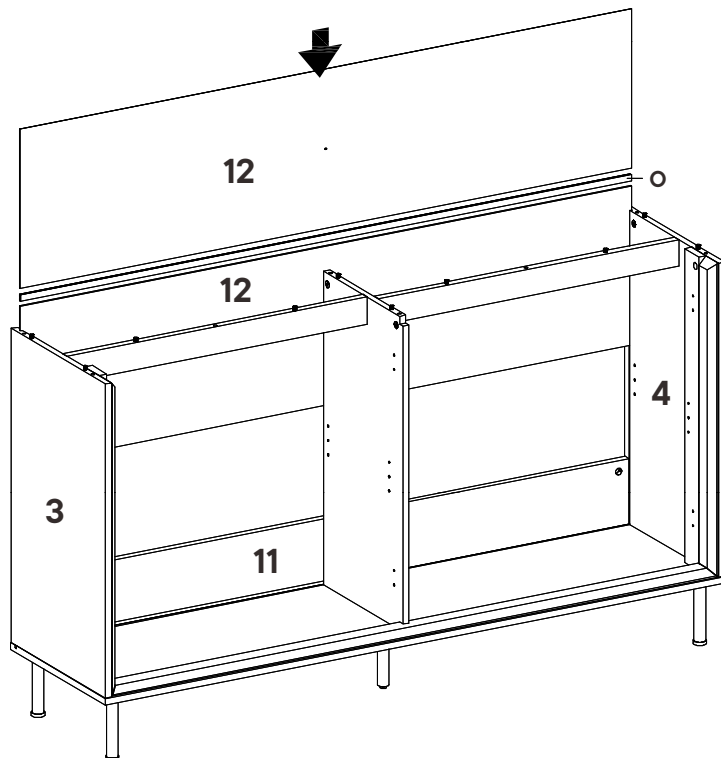

HARDWARE

(O) H-Profile x1


COMPONENTS

(3) Left Side Board x1

(4) Right Side Board x1

(11) Bottom Backboard x1

(12) Backboard x2

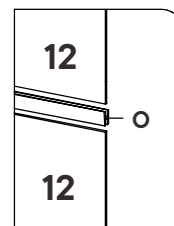

13.1 Attach Top Board (1) to the assembled unit as shown.

13.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.

13.3 Tighten 100% the Screw (L) on the Top Support as shown.

HARDWARE


- | | | |
|----------|---------------------------|-----------|
| A | Cam Lock Ø15 mm | x8 |
| C | Cam Cover Ø17 mm | x6 |
| E | Cover Shock Ø15 mm | x2 |

COMPONENTS

- | | | |
|----------|-------------------------|-----------|
| 1 | Top Board | x1 |
| 3 | Left Side Board | x1 |
| 4 | Right Side Board | x1 |
| 9 | Middle Support | x2 |


TOOLS

- 1 Phillips Head Screwdriver x1**

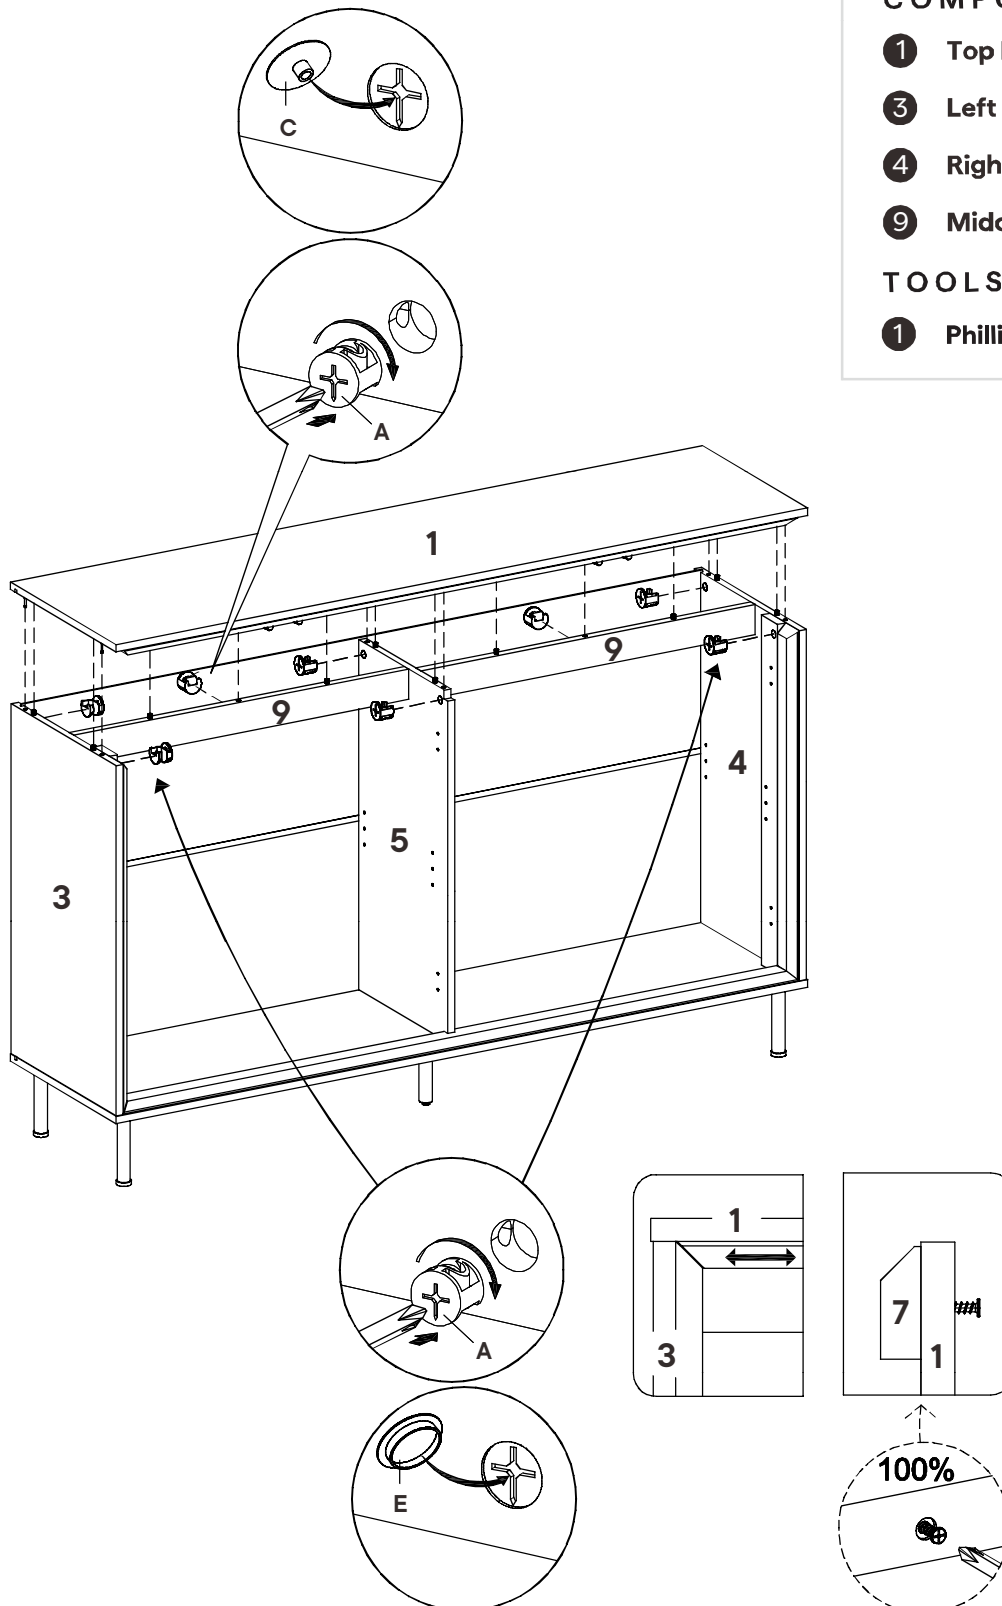

14.1 Install Backply Stopper (H) on the assembled unit using screw (I).

14.2 Tighten the Backboard (12) using Screw (K) as shown.

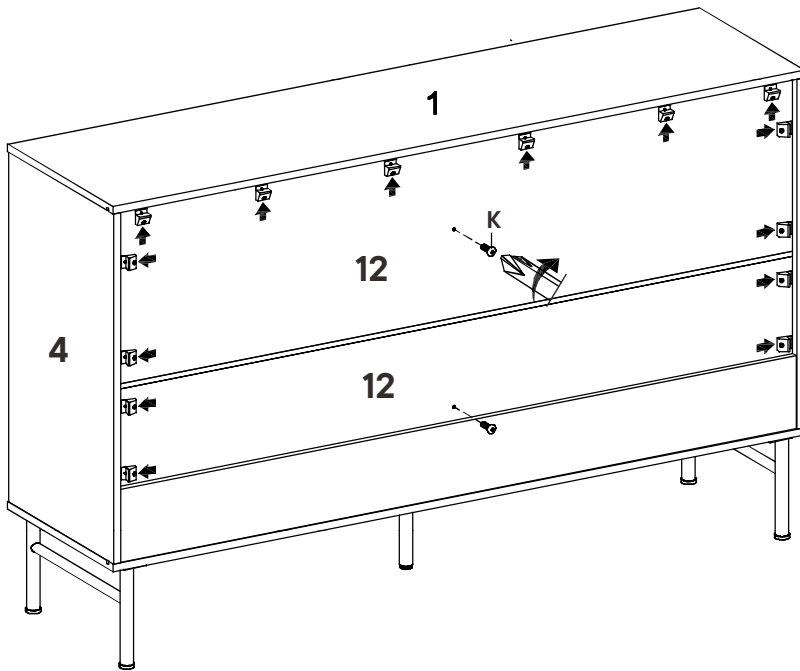

HARDWARE


H	Backply Stopper	x14
I	Screw M 4 x 19 mm	x14
K	Screw M 3 x 12 mm	x2

COMPONENTS

1	Top Board	x1
3	Left Side Board	x1
4	Right Side Board	x1
12	Backboard	x2

TOOLS


1	Phillips Head Screwdriver	x1
----------	----------------------------------	-----------

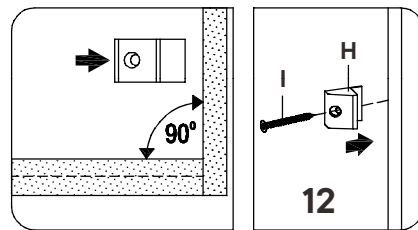

STEP 15

15.1 Insert Shelf Pin (P) into the assembled unit as shown.

15.2 Insert two Adjustable Shelf (6) into the assembled unit as shown.

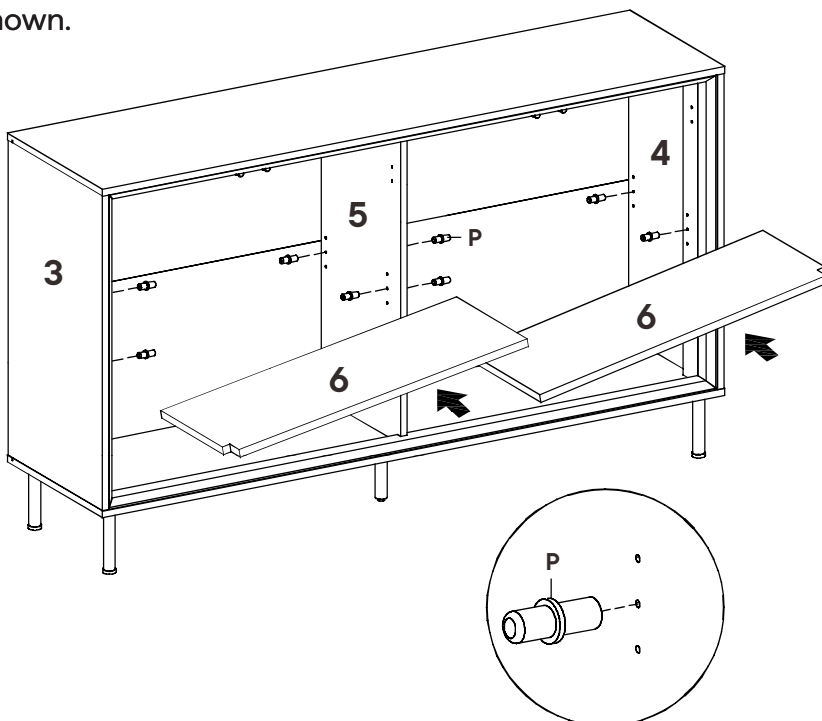


HARDWARE

P	Shelf Pin Ø7 x 16.5 mm	x8
----------	-------------------------------	-----------

COMPONENTS

3	Left Side Board	x1
4	Right Side Board	x1
5	Divider Board	x1
6	Adjustable Shelf	x2

16.1 Attach Full Curve Door Hinge (M) to Right Door (13) and Left Door (14) as shown.

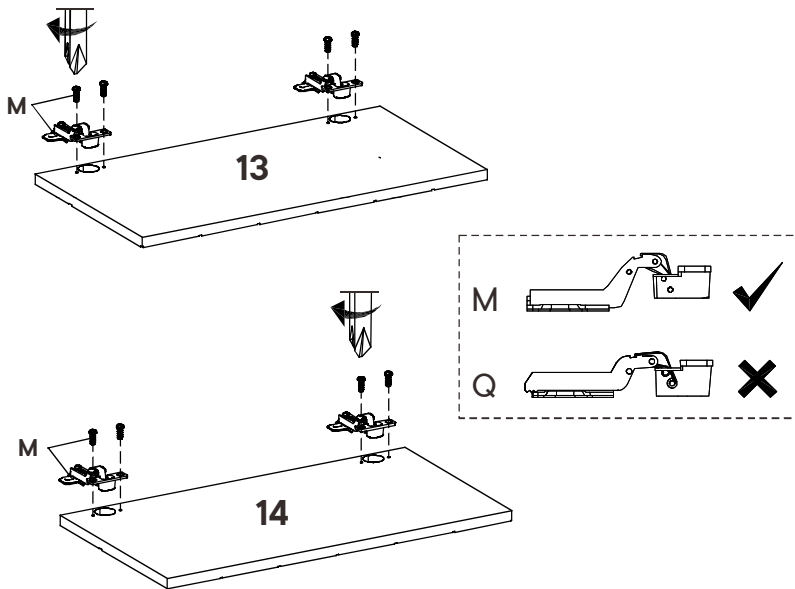

HARDWARE

(M) Full Curve Door Hinge x4

COMPONENTS

(13) Right Door x1

(14) Left Door x1


TOOLS

(1) Phillips Head Screwdriver x1

STEP 17

17.1 Attach Right Door (13) and Left Door (14) to the assembled unit as shown.

17.2 Adjust Door hinge until it's fixed.

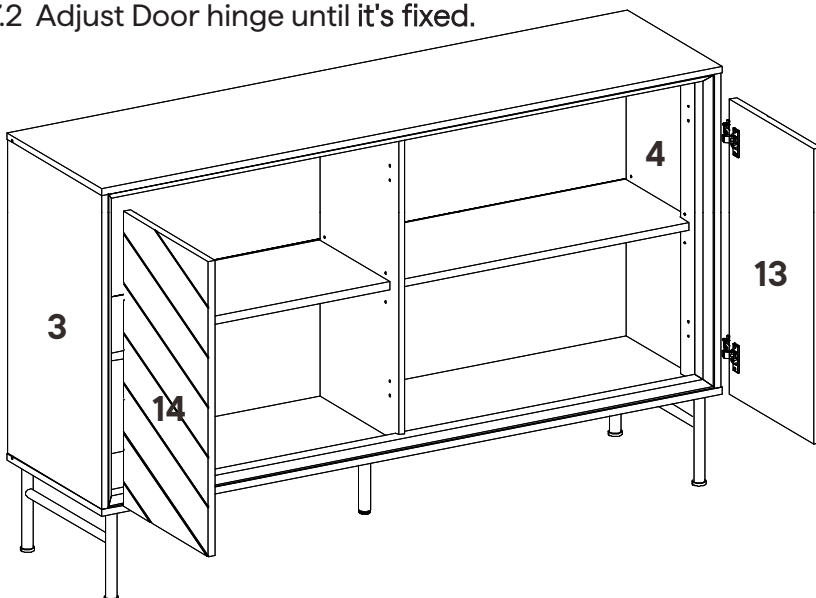

COMPONENTS

(3) Left Side Board x1



(4) Right Side Board x1

(13) Right Door x1


(14) Left Door x1

TOOLS

(1) Phillips Head Screwdriver x1

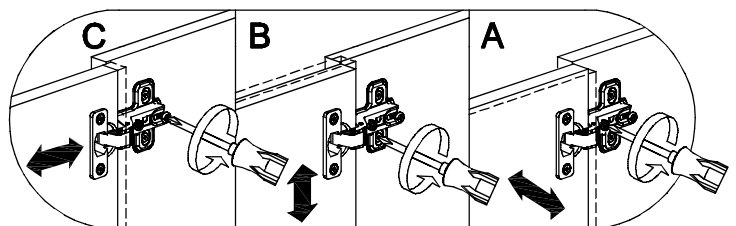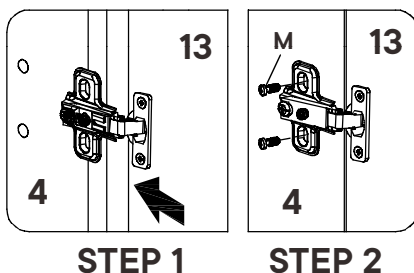

16.1 Attach Half Curve Door Hinge (Q) to Right Door (13) and Left Door (14) as shown.

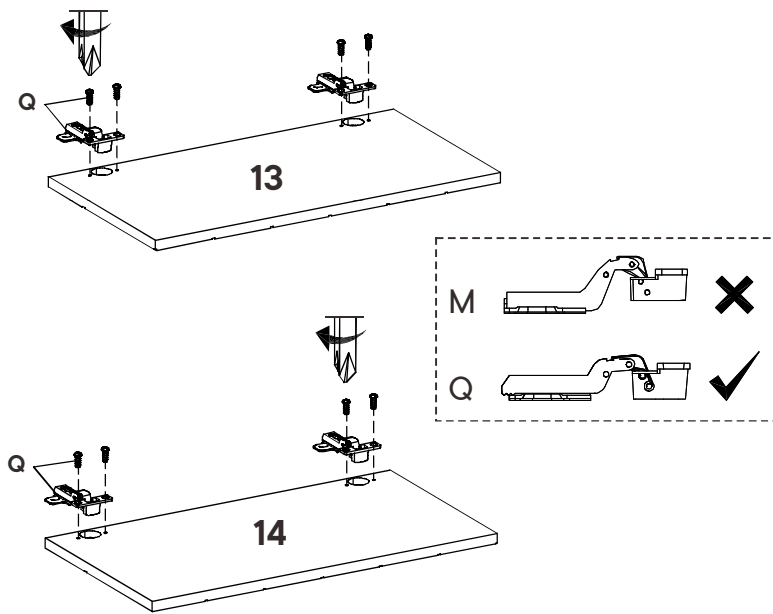

HARDWARE

Q Half Curve Door Hinge x4

COMPONENTS

13 Right Door x1

14 Left Door x1


TOOLS

1 Phillips Head Screwdriver x1

STEP 19

19.1 Attach Right Door (13) and Left Door (14) to the assembled unit as shown.

19.2 Adjust Door hinge until it's fixed.

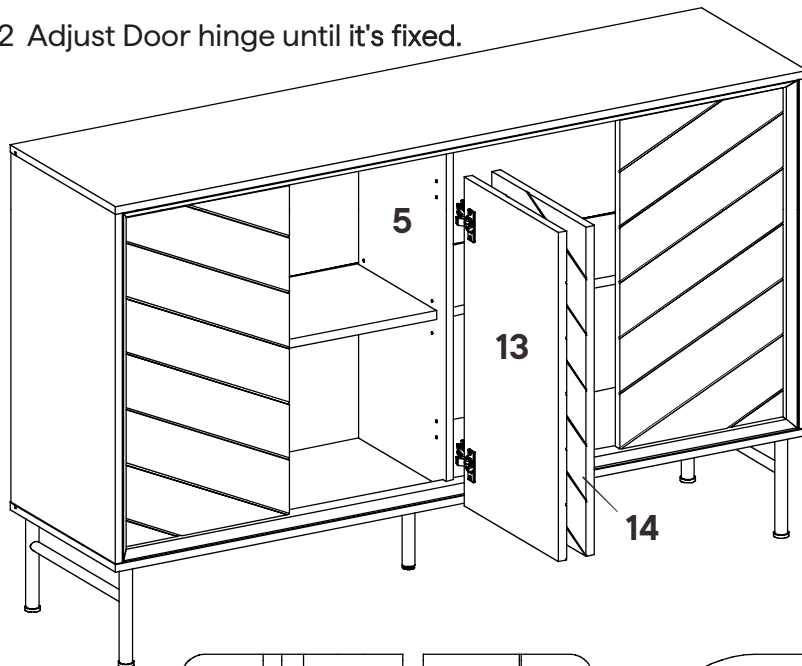

COMPONENTS



5 Divider Board x1

13 Right Door x1

14 Left Door x1




TOOLS

1 Phillips Head Screwdriver x1

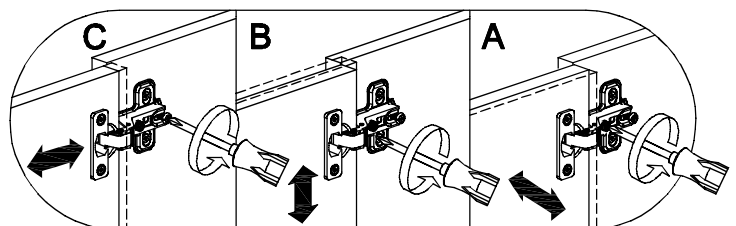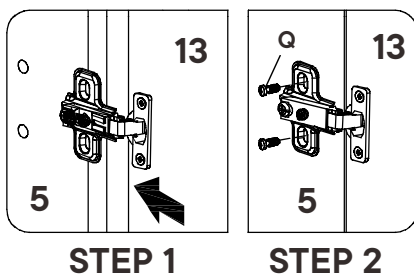

20.1 Adjust push to open (J) until fix. 20.2



Adjust the leveler until it's level with floor.

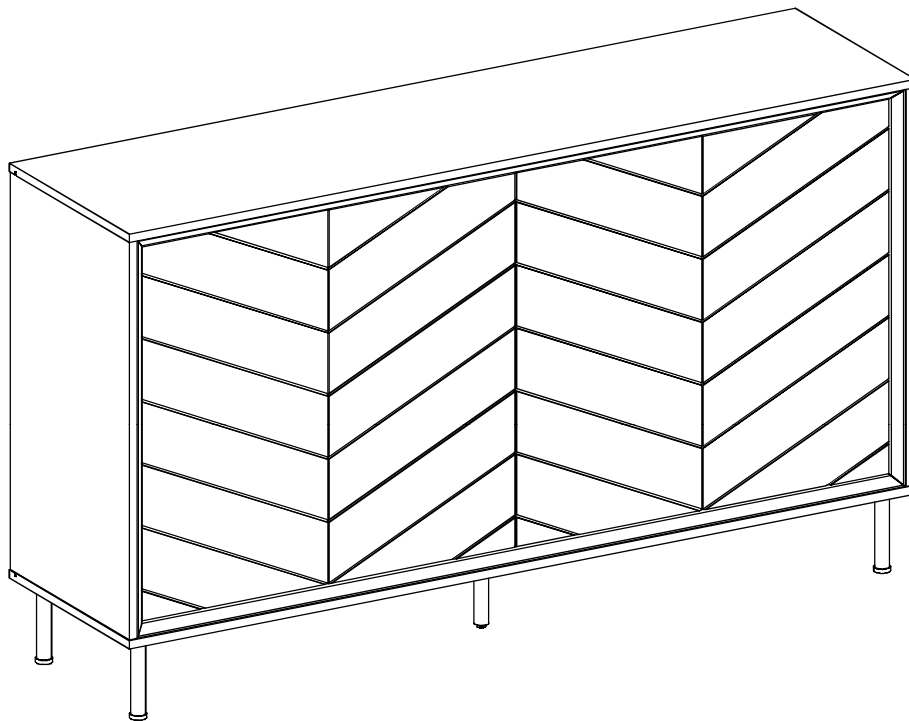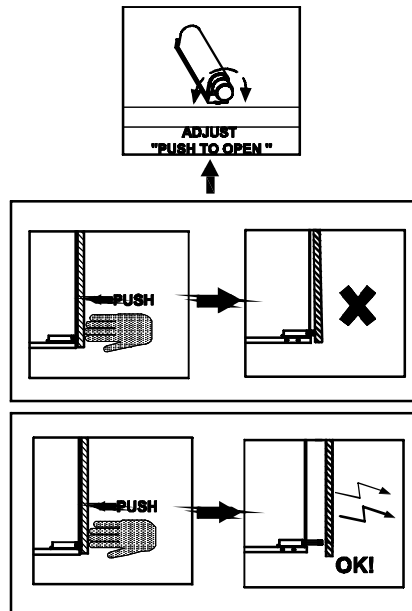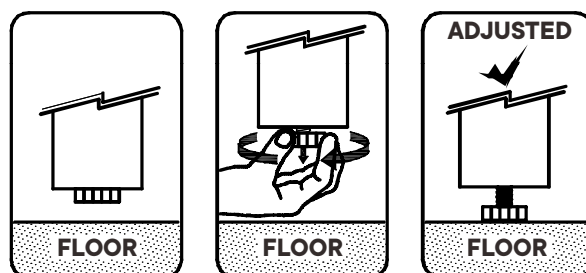**ADJUSTABLE FEET**

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

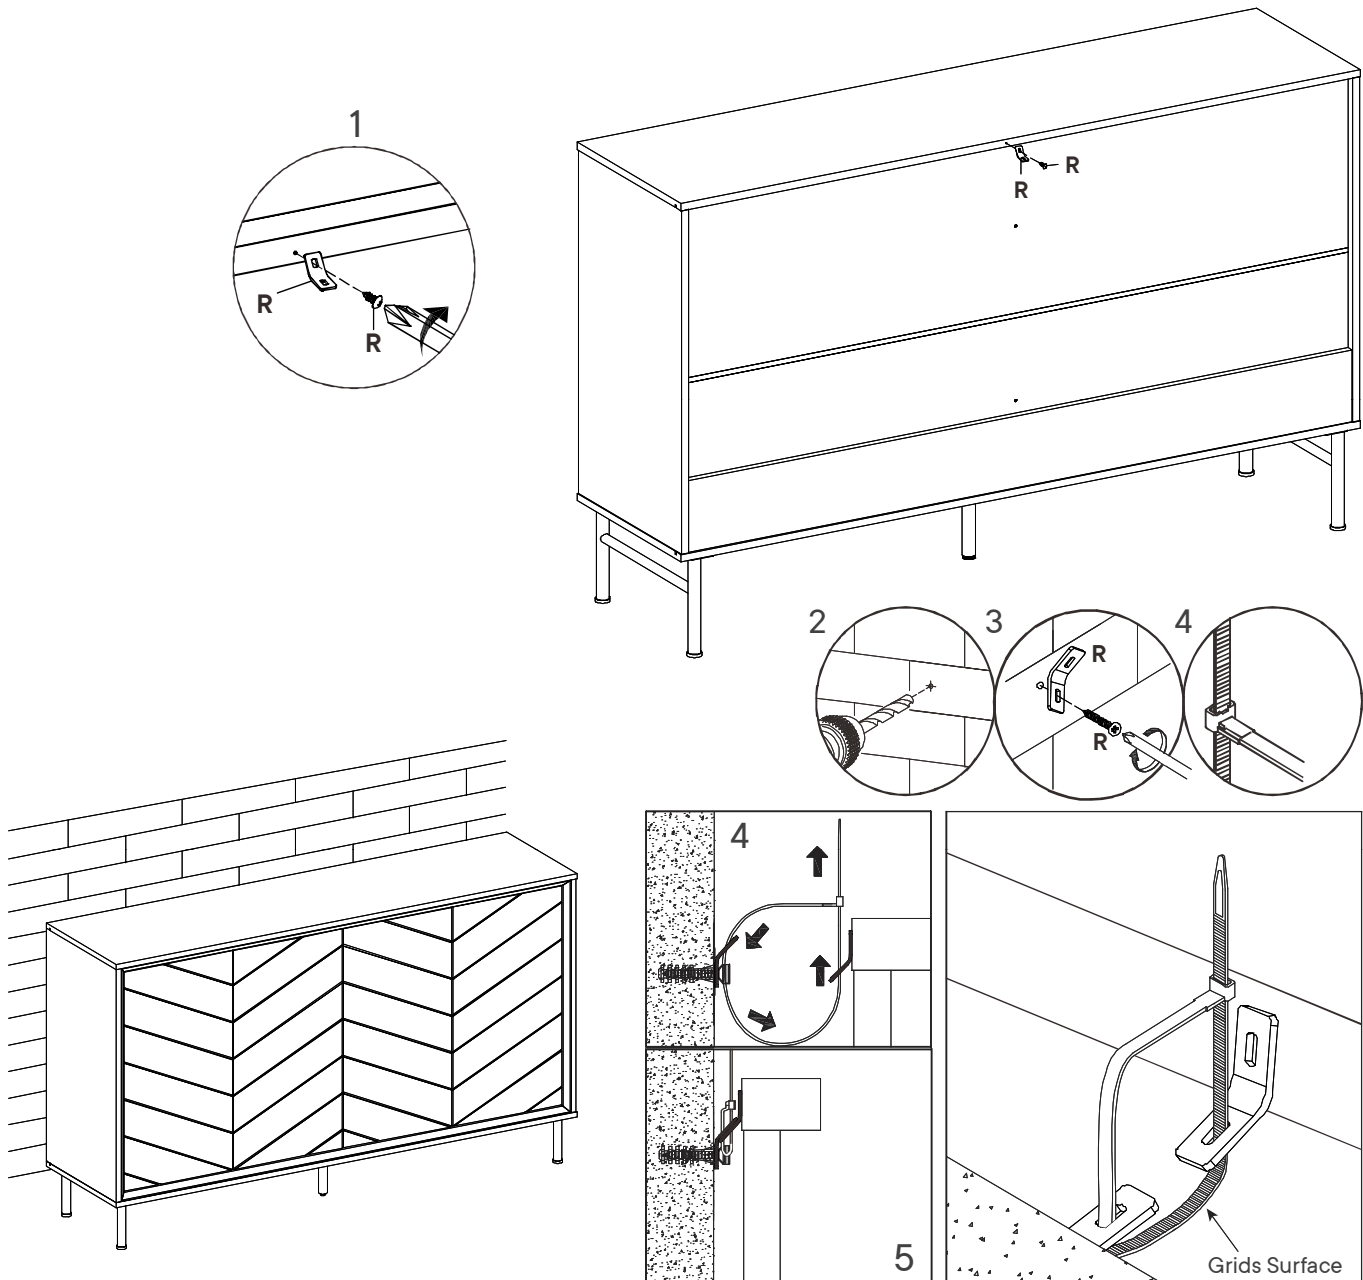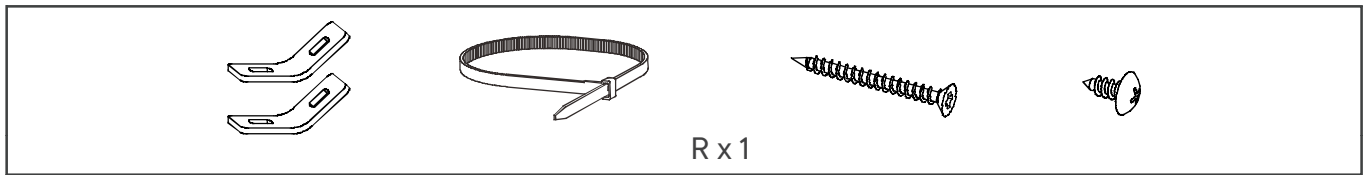

Installation Instructions :


1. Attach bracket (R) securely to the back top of the furniture using short screw (R) provided.
2. Please make a hole on the wall for attach the bracket (R) to the back of unit.
3. Attach bracket (R) on the wall using long screw (R) as shown.
Locate the other bracket (R) on the wall. Place furniture into position so both brackets (R) as shown.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.

Great job!

Sideboard assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

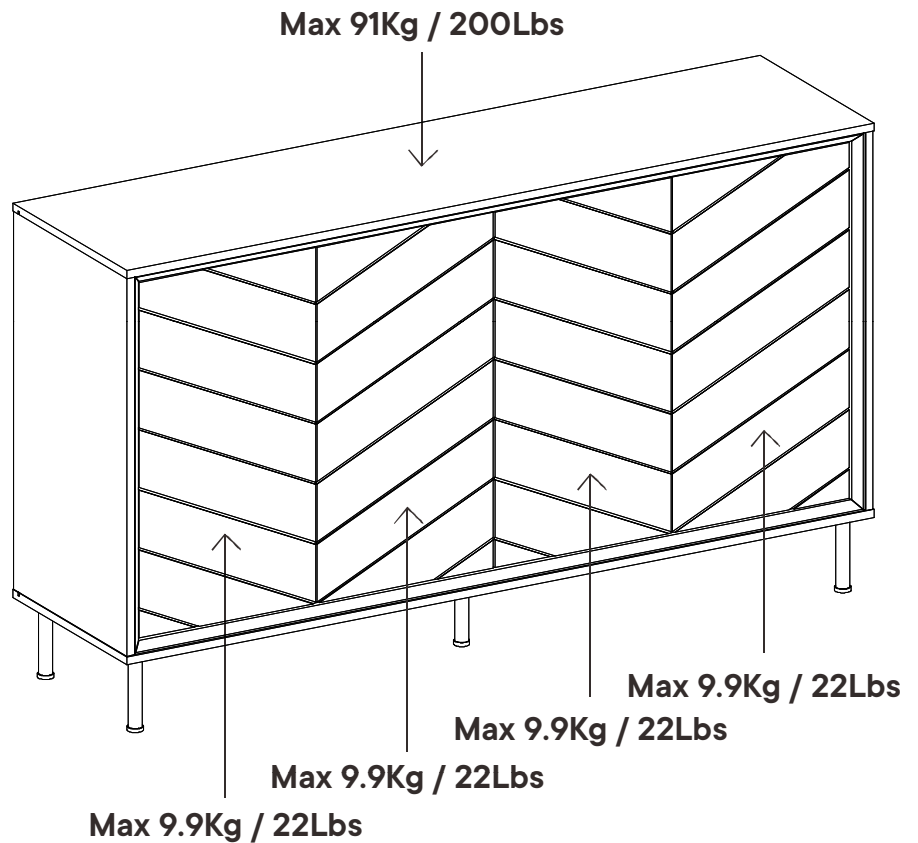

CONNECT WITH US!

Tag us @modway_furniture and #modway for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com