


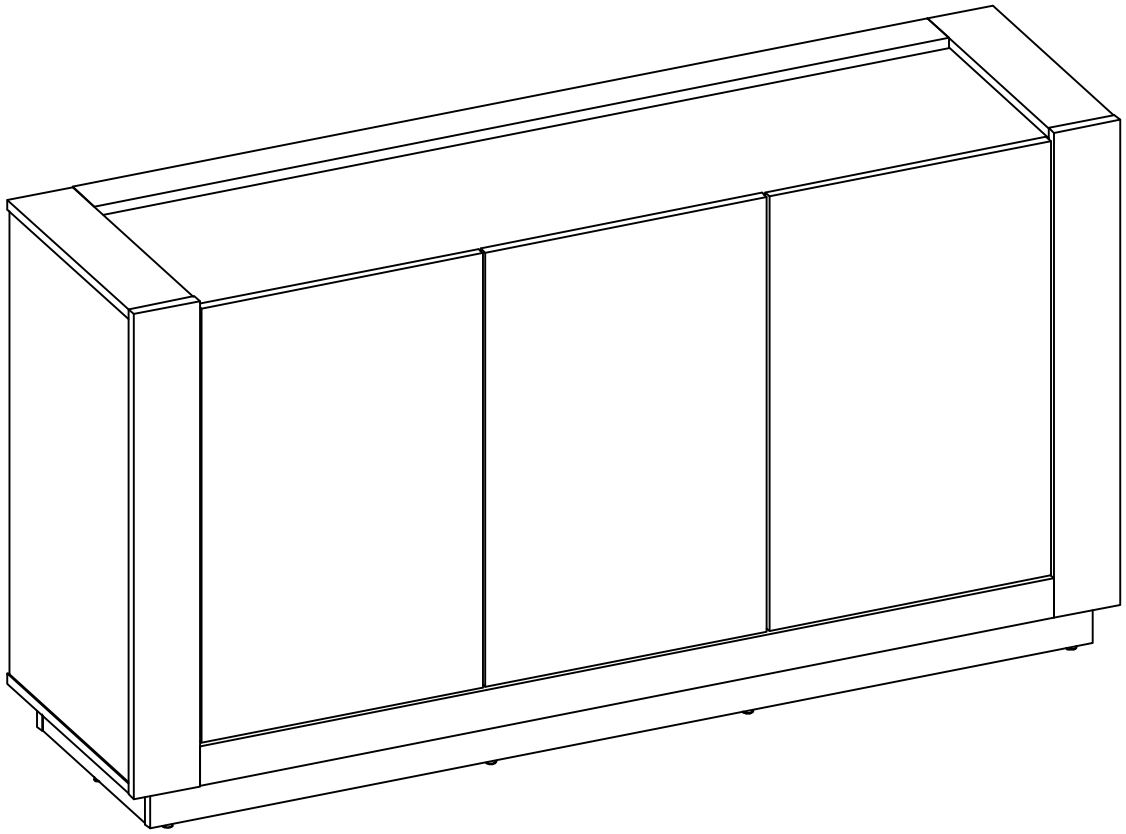

ASSEMBLY INSTRUCTIONS

Sideboard

EEI-6906 / V1.01.05.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.


Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A.		Cam Bolt Ø6 x 32 mm	x42
B.		Cam Lock	x44
C.		Sticker	x4
D.		Dowel Ø7.8 x 32 mm	x41
E.		Dowel Ø7.8 x 18 mm	x4
F.		Connecting Bolt	x2
G.		Burr Nut	x2
H.		Assembly screw	x8
I.		Side Hinge	x4
J.		Middle Hinge	x2
K.		Screw Ø7 x 14 mm	x12
L.		Bolt M6 x 25mm	x8
M.		Washer	x8
N.		Screw Ø6 x 19 mm	x14
O.		Wedge	x14
P.		Screw Ø6 x 12 mm	x4
Q.		Shelf pin	x12
R.		Rear Clamp	x1
S.		Screw Ø4 x 13 mm	x8
T.		Wall Fixing	x2


WHAT YOU NEED:



Phillips



Phillips Head Screwdriver




Flat Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 15

All parts are numbered with a sticker according to this list.

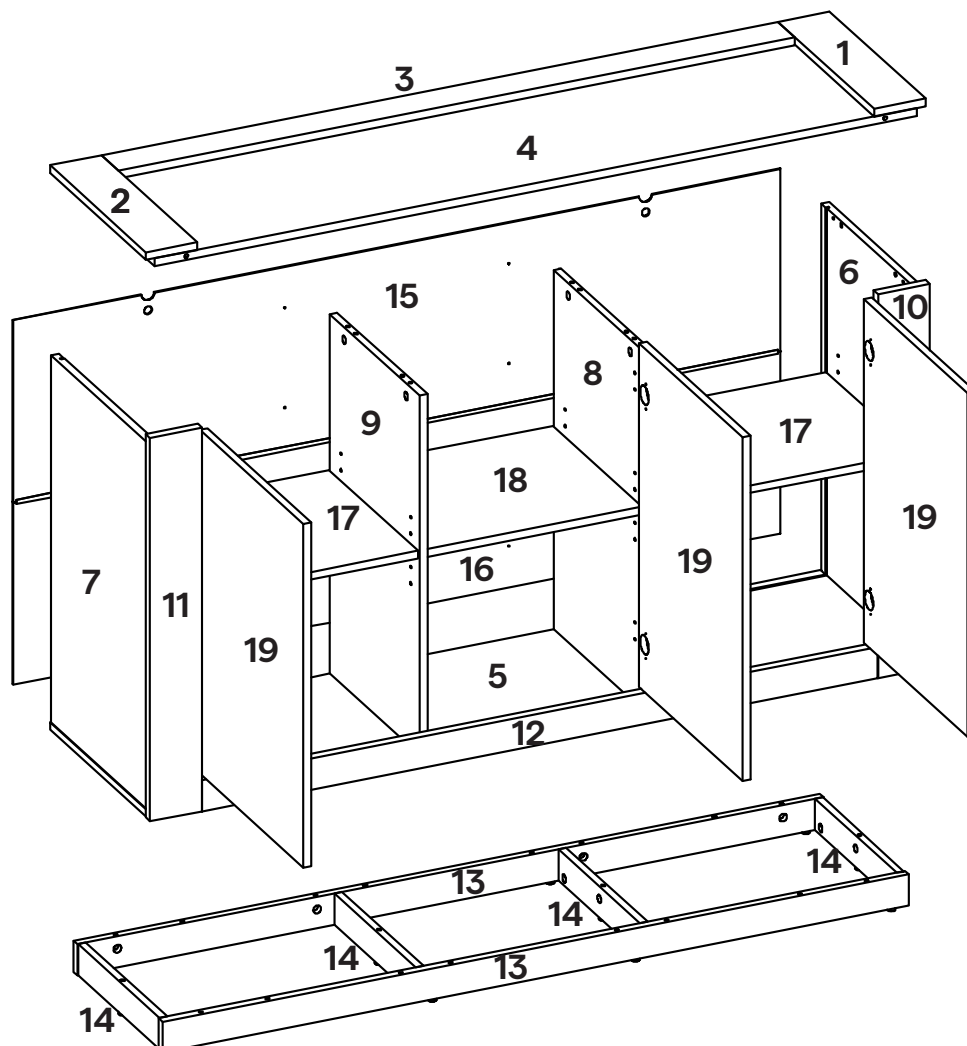

1	Right side top panel	x1	11	Left vertical panel	x1
2	Left side top panel	x1	12	Middle horizontal panel	x1
3	Middle Top panel	x1	13	Front support panel	x2
4	Top panel	x1	14	Side support panel	x4
5	Bottom panel	x1	15	Top Back panel	x1
6	Right side panel	x1	16	Bottom Back panel	x1
7	Left side panel	x1	17	Side adjustable shelf	x2
8	Right middle panel	x1	18	Middle adjustable shelf	x1
9	Left middle panel	x1	19	Door	x3
10	Right vertical panel	x1			

HARDWARE

A	Cam Bolt Ø6 x 32 mm	x8
D	Dowel Ø7.8 x 32 mm	x12
P	Screw Ø6 x 12 mm	x2
T	Wall Fixing	x2

COMPONENTS

4	Top panel	x1
6	Right side panel	x1
7	Left side panel	x1

1.1 Insert 4x **Dowels (D)** into the holes of the **Top Panel (1)**.


1.2 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Top Panel (1)**.

1.3 Fasten 2x **Wall Fixings (T)** onto the **Top Panel (1)** with 2x **Screws (P)**.

1.4 Insert 4x **Dowels (D)** into the holes of the **Left side Panel (7)**.

1.5 Insert and screw 2x **Cam Bolts (A)** into the bottom hole of the **Left side Panel (7)**.

1.6 Insert 4x **Dowels (D)** into the holes of the **Right side Panel (6)**.

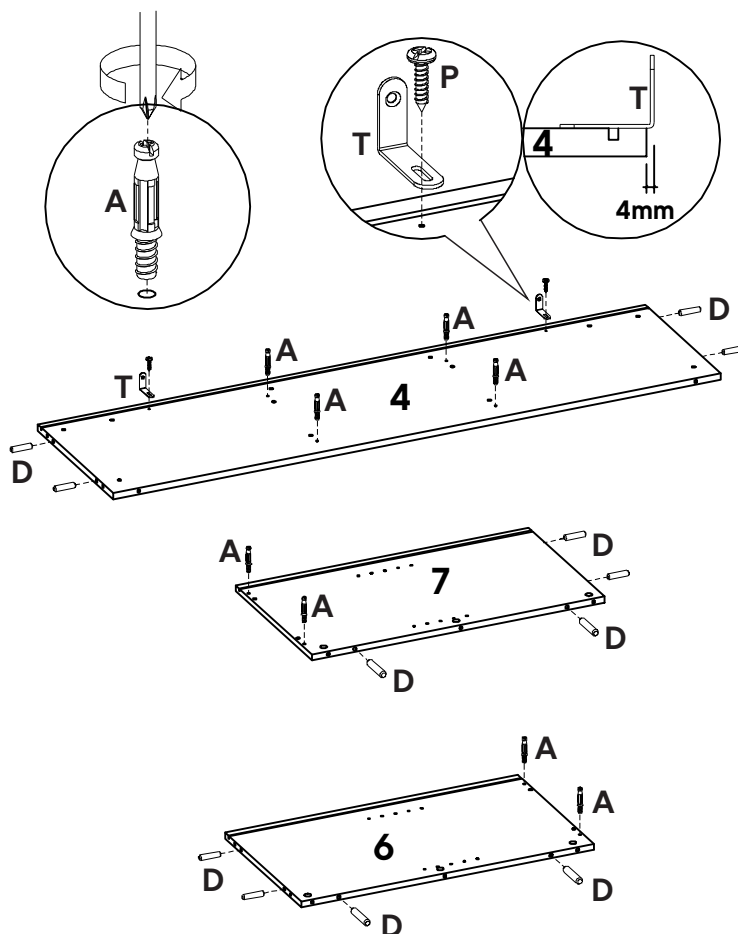

1.7 Insert and screw 2x **Cam Bolts (A)** into the bottom hole of the **Right side Panel (6)**.

STEP 02

HARDWARE


D	Dowel Ø7.8 x 32 mm	x8
----------	--------------------	----


COMPONENTS

8	Right middle panel	x1
9	Left middle panel	x1

2.1 Insert 4x **Dowels (D)** into the holes of the **Right middle Panel (8)**.

2.2 Insert 4x **Dowels (D)** into the holes of the **Left middle Panel (9)**.

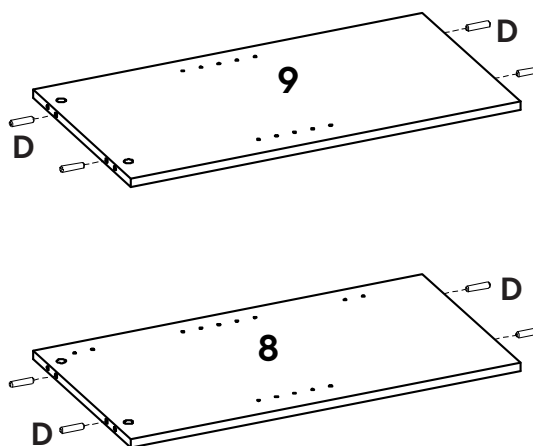

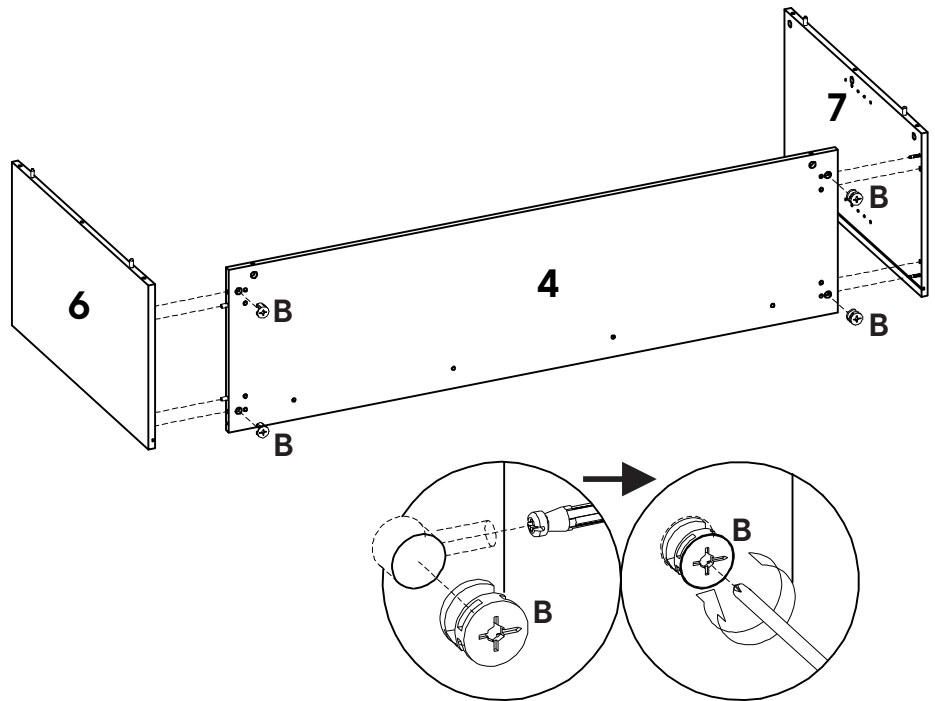HARDWARE**(B)** Cam Lock x4**COMPONENTS****(4)** Top panel x1**(6)** Right side panel x1**(7)** Left side panel x1


3.1 Connect **Right side panel (6)** & **Left side panel (7)** onto the **Top Panel (4)**, by inserting 4x **Cam Locks (B)** to the corresponding holes.

STEP 04

HARDWARE**(B)** Cam Lock x4**(C)** Sticker x4**COMPONENTS****(8)** Right middle panel x1**(9)** Left middle panel x1

4.1 Connect **Right middle panel (8)** & **Left middle panel (9)** onto the **Top Panel (4)**, by inserting 4x **Cam Locks (B)** to the corresponding holes.

4.2 Place 4x **Stickers (C)** onto the Cam Lock.

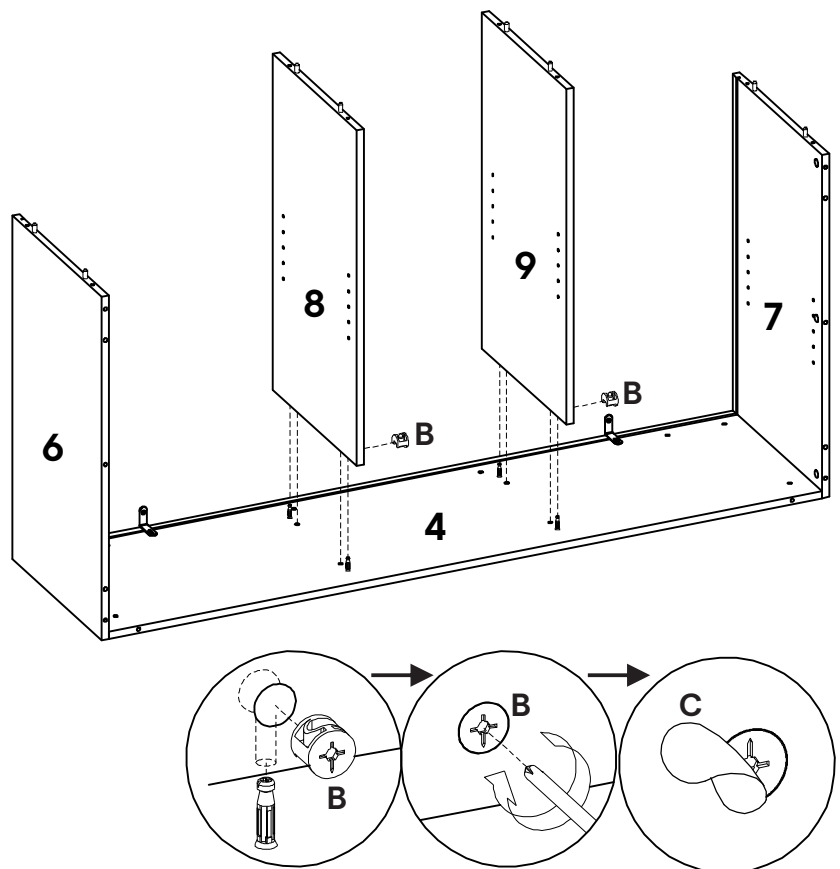



HARDWARE

(R) Rear Clamp x1

COMPONENTS

(15) Top back panel x1

(16) Bottom back panel x1

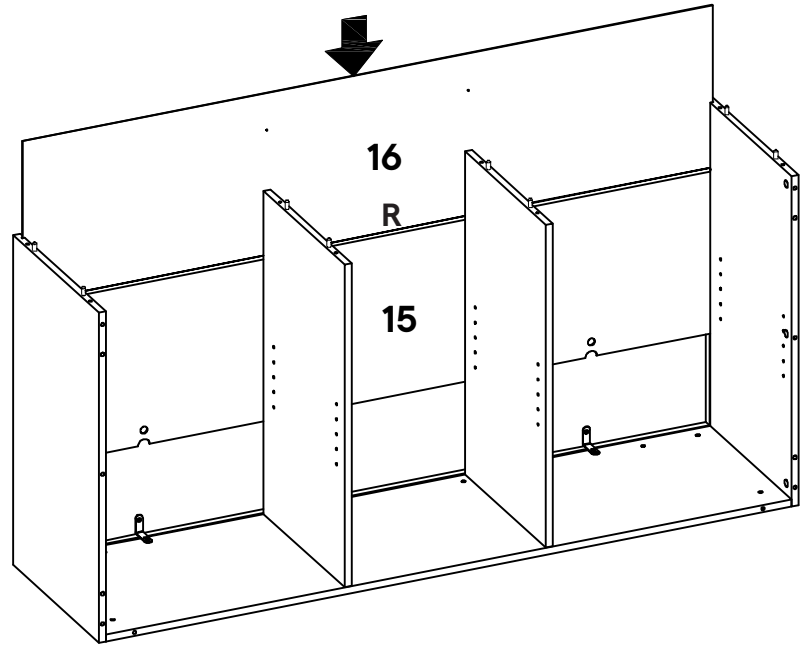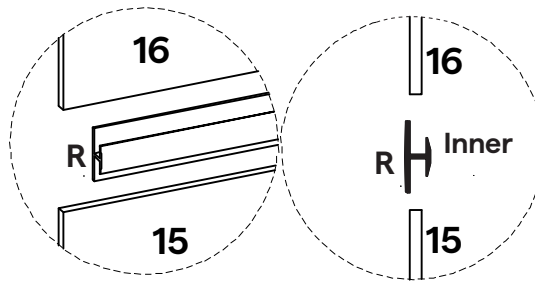

5.1 Slide **Top back panel (15)** into the Assembled unit as shown.

5.2 Slide **Rear Clamp (R)** onto the **Top back panel (15)**.

5.3 Slide **Bottom back panel (16)** into the Assembled unit and Rear clamp as shown.

STEP 06

HARDWARE

(A) Cam Bolt $\varnothing 6 \times 32$ mm x20


(D) Dowel $\varnothing 7.8 \times 32$ mm x19

COMPONENTS

(5) Bottom panel x1

(13) Front support panel x2

(14) Side support panel x4

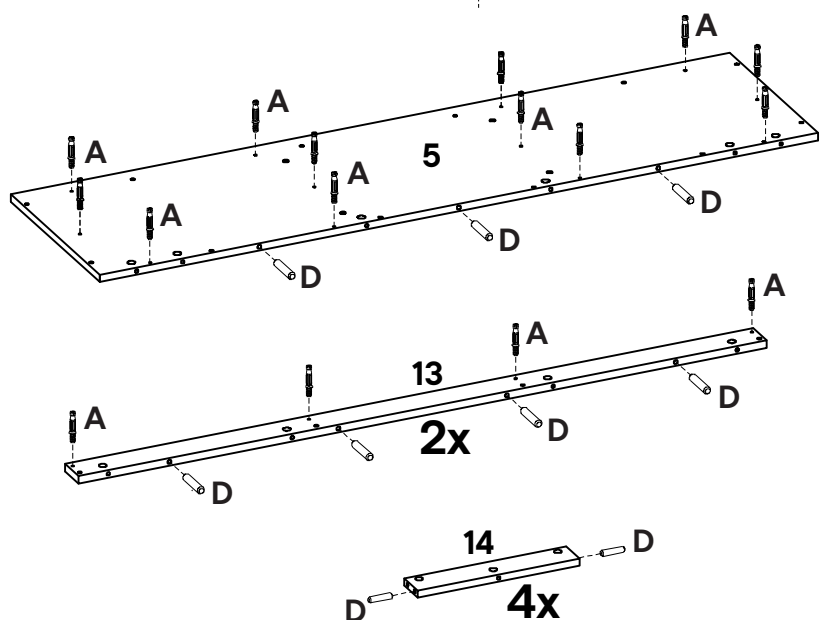

6.1 Insert 3x **Dowels (D)** into the holes of the **Bottom panel (5)**.

6.2 Insert and screw 12x **Cam Bolts (A)** into the bottom hole of the **Bottom panel (5)**.

6.3 Insert 4x **Dowels (D)** into the holes of the **Front support panel (13)**. Repeat this step on the same components.

6.4 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Front support panel (13)**. Repeat this step on the same components.

6.5 Insert 2x **Dowels (D)** into the holes of the **Side support panel (14)**. Repeat this step on the same components.


HARDWARE

H Assembly screw x8

COMPONENTS

5 Bottom Panel x1

7.1 Connect **Bottom Panel (5)** onto the Assembled unit, and secure it by tightening 8x **Assembly Screws (H)**.

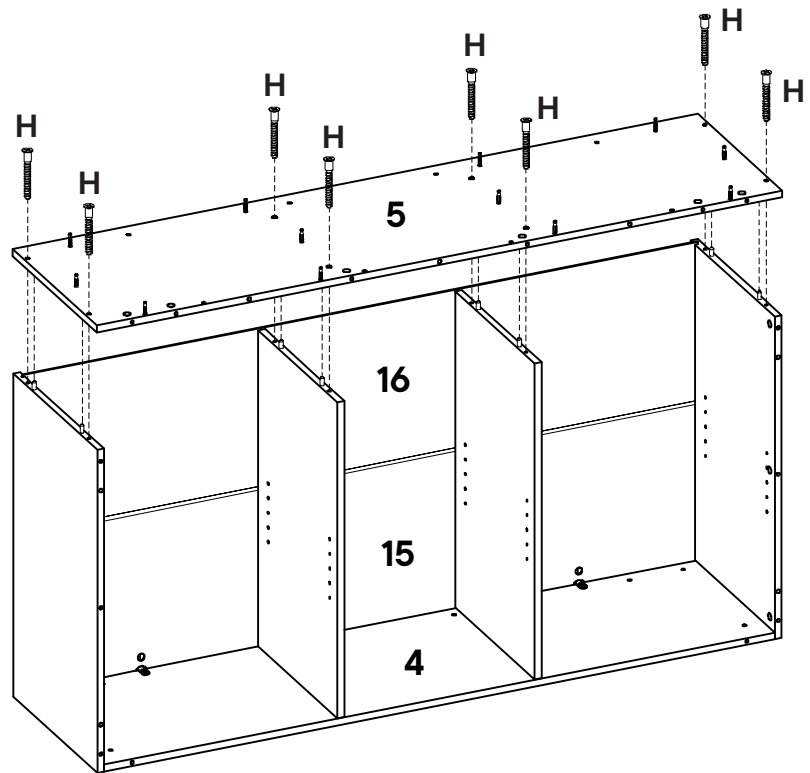

STEP 08

HARDWARE


A Cam Bolt Ø6 x 32 mm x8

COMPONENTS

13 Front support panel x2

14 Side support panel x4



8.1 Connect 4x **Side support panel (14)** onto the 2x **Front support panel (13)**, by inserting 8x **Cam Locks (B)** to the corresponding holes.

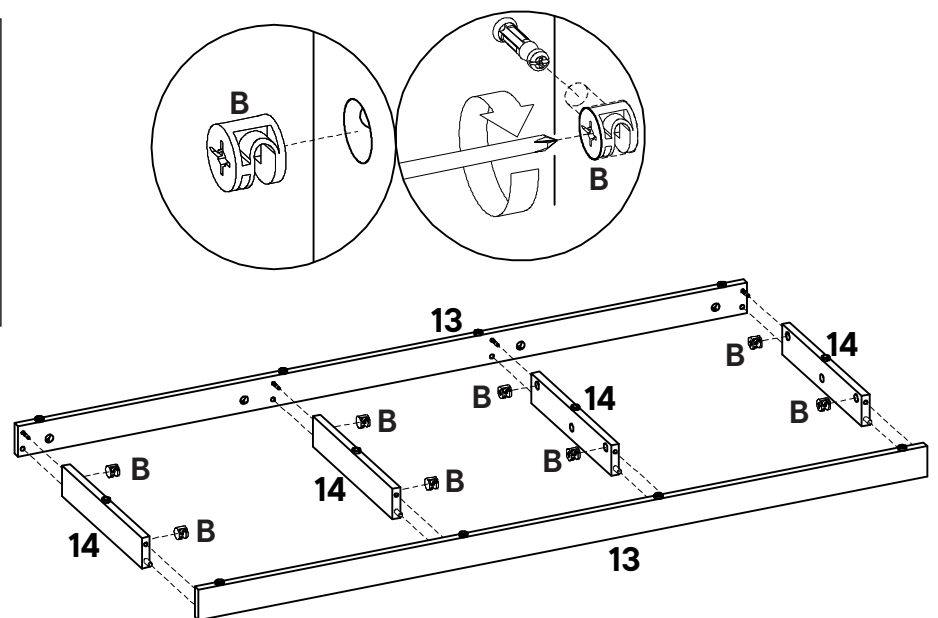

HARDWARE

(B) Cam Lock x12

9.1 Connect **Bottom assembled** onto Top Assembled by inserting 12x **Cam Locks (B)** to the corresponding holes.

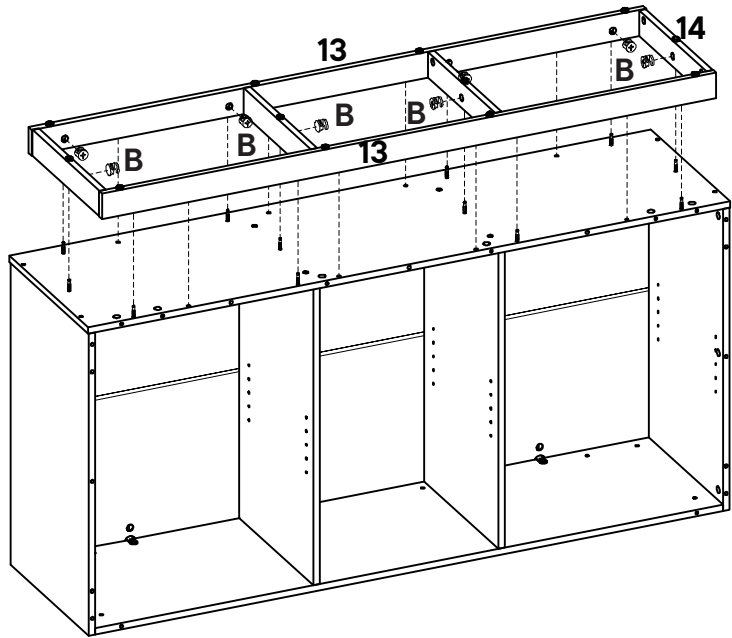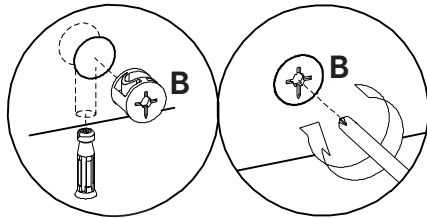


STEP 10

HARDWARE

(A) Cam Bolt Ø6 x 32 mm x14
(D) Dowel Ø7.8 x 32 mm x2
(F) Connecting Bolt x2
(G) Burrel Nut x2

COMPONENTS

(10) Right vertical panel x1
(11) Left vertical panel x1
(12) Middle horizontal panel x1

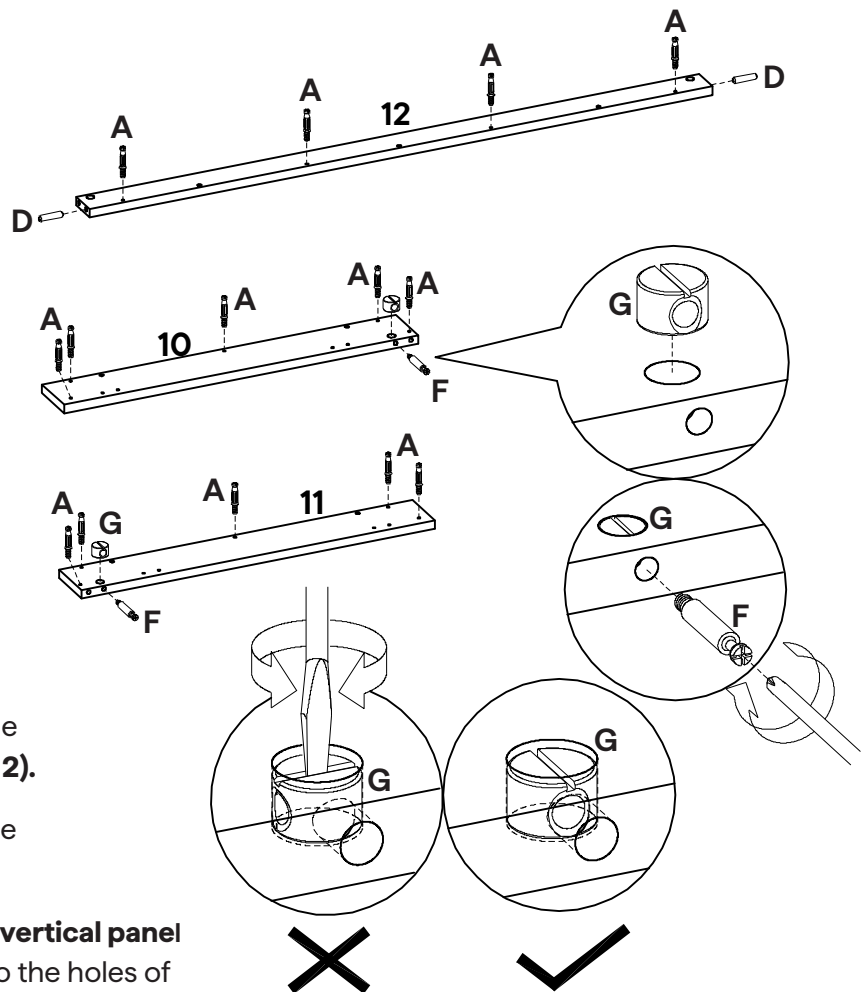

10.1 Insert 2x **Dowels (D)** into the holes of the **Middle horizontal panel (12)**.


10.2 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Middle horizontal panel (12)**.

10.3 Insert and screw 5x **Cam Bolts (A)** into the bottom hole of the **Right vertical panel (10)**.


10.4 Insert **Connecting Nut (G)** Into the **Right vertical panel (10)**. Insert and rotate **Connecting Bolt (F)** into the holes of **Connecting Nut (G)**.

10.5 Insert and screw 5x **Cam Bolts (A)** into the bottom hole of the **Left vertical panel (11)**.

10.6 Insert **Connecting Nut (G)** Into the **Left vertical panel (11)**. Insert and rotate **Connecting Bolt (F)** into the holes of **Connecting Nut (G)**.

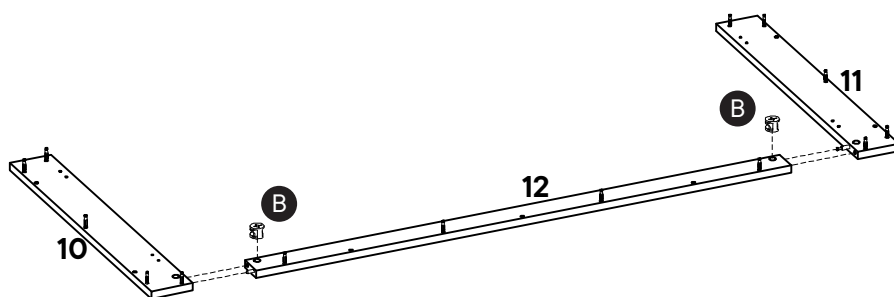HARDWARE**(B)** Cam Lock x2**COMPONENTS****(10)** Right vertical panel x1**(11)** Left vertical panel x1**(12)** Middle horizontal panel x1

11.1 Connect **Right vertical panel (10)** & **Left vertical panel (11)** to the **Middle horizontal panel (12)**.by inserting 2x **Cam Locks (B)** to the corresponding holes.

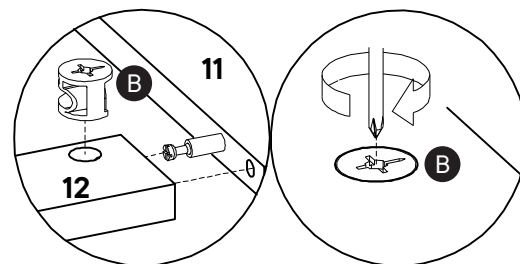


STEP 12

HARDWARE**(I)** Side Hinge x4

12.1 Separate the 4x **Side Hinges (I)** by pressing back side of the Hinge and then lifting it up.


12.2 Attach the bottom part of the hinges to Assembled unit.

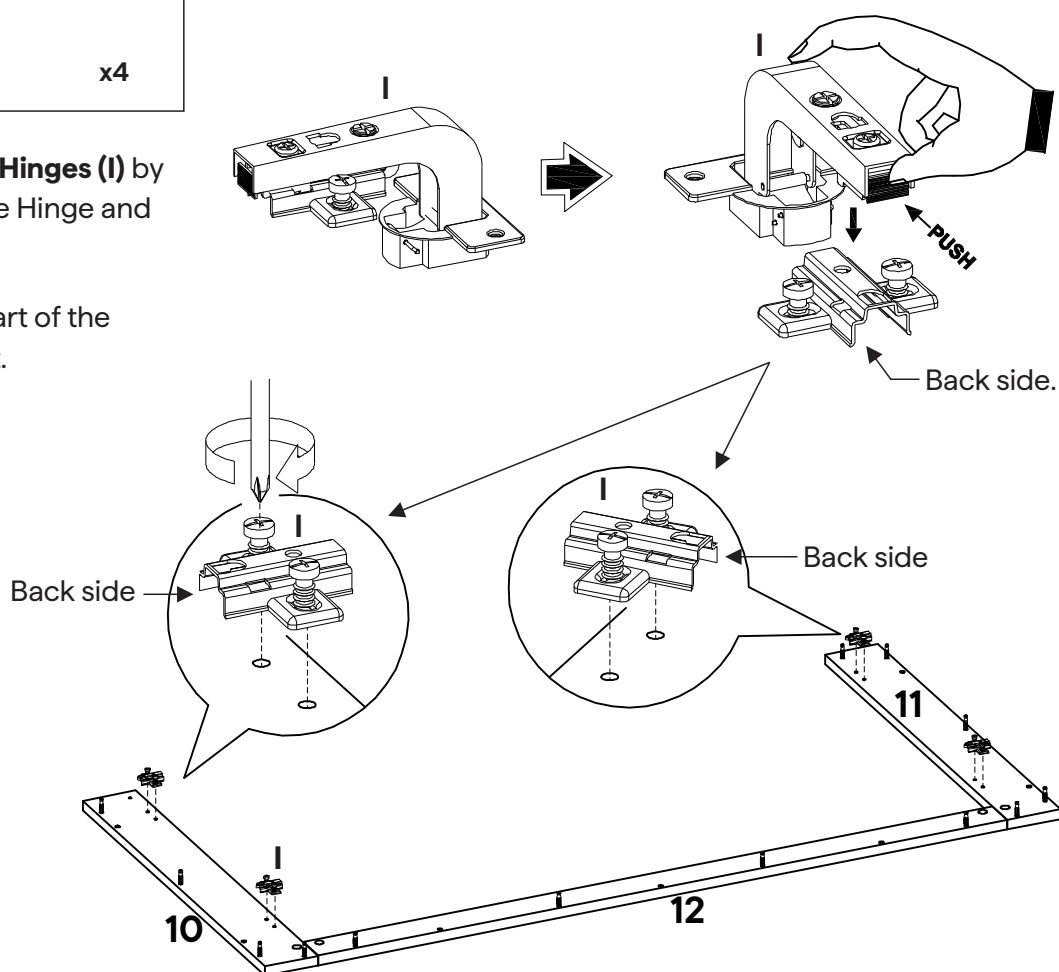

HARDWARE

(B) Cam Lock x12

13.1 Connect **Assembled frame** to the **Assembled unit**, by inserting 12x **Cam Locks (B)** to the corresponding holes.

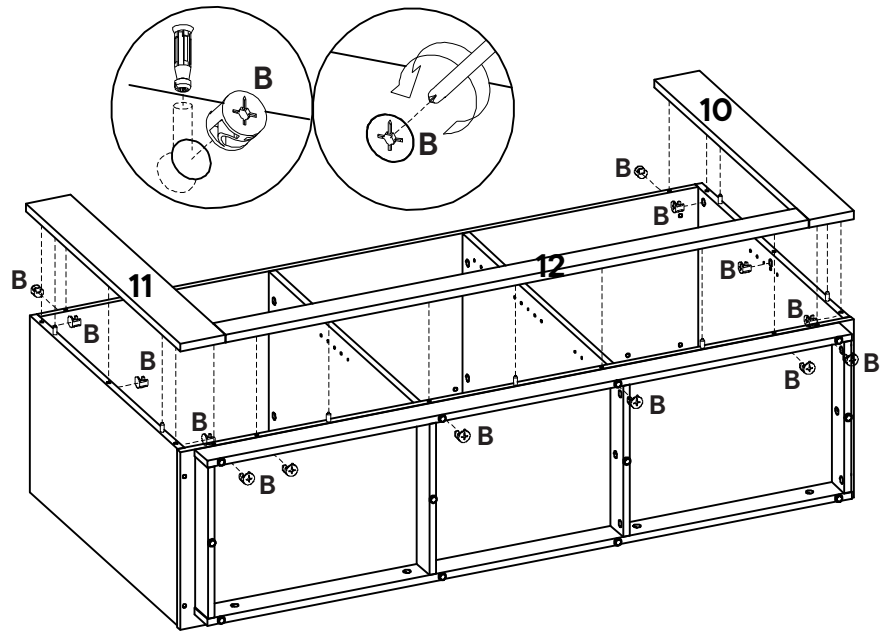

STEP 14

HARDWARE

(E) Dowel Ø7.8 x 18 mm x4

(L) Bolt M6 x 25mm x8

(M) Washer x8

COMPONENTS




(1) Right side top panel x1

(2) Left side top panel x1

(3) Middle Top panel x1

14.1 Insert 4x **Dowels (E)** into the holes of the **Right side top panel (1)** & **Left side top panel (2)**.

14.2 Connect **Right side top panel (1)**, **Left side top panel (2)** & **Middle top panel (3)** to the Assembled unit, by inserting with 8x **Bolts (L)** and 8x **Washer (M)**. For Correct installation positioning, see (Figure 1) & (Figure 2).

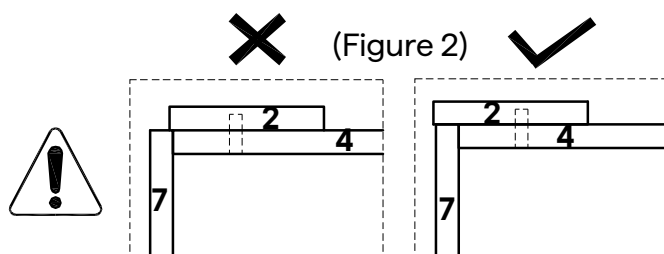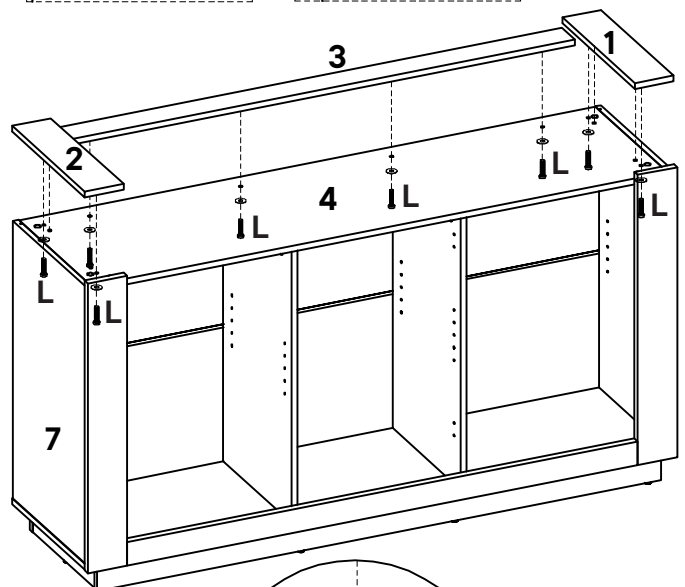
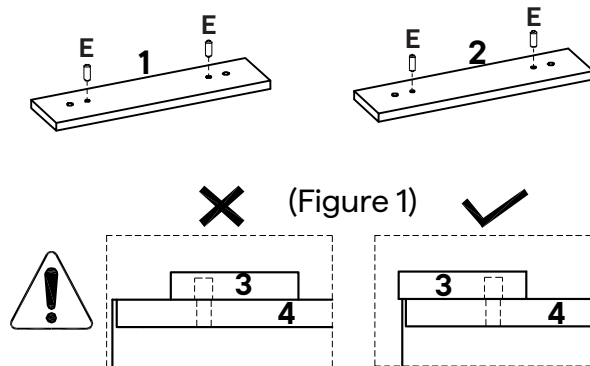


HARDWARE

(N) Screw Ø6 x 19 mm	x14
(O) Wedge	x14
(S) Screw Ø4 x 13 mm	x8

15.1 Gently adjust the top panel sideways in either direction until the diagonal measurements of the frame are equal. Holding the assembly in place, fix the 14x **Wedge (O)** with 14x **Screws (N)** as shown.

15.2 Connect Back Panel onto the Assembled Unit. with secure it by tightening 8x **Screws (S)**.

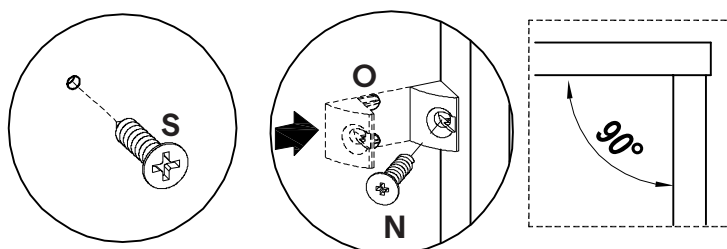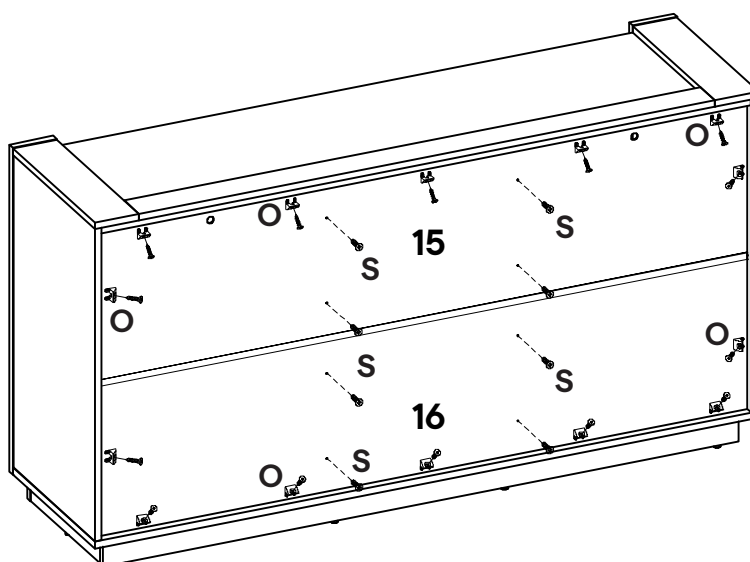

STEP 16

HARDWARE


(I) Side Hinge	x4
(J) Middle Hinge	x2
(K) Screw Ø7 x 13 mm	x12

COMPONENTS

(19) Door	x3
------------------	----




16.1 Fasten 4x **Side Hinges (I)** with 8x **Screws (K)** onto the 2x **Door (19)**.

16.2 Fasten 2x **Middle Hinges (J)** with 4x **Screws (K)** onto the **Door (19)**.


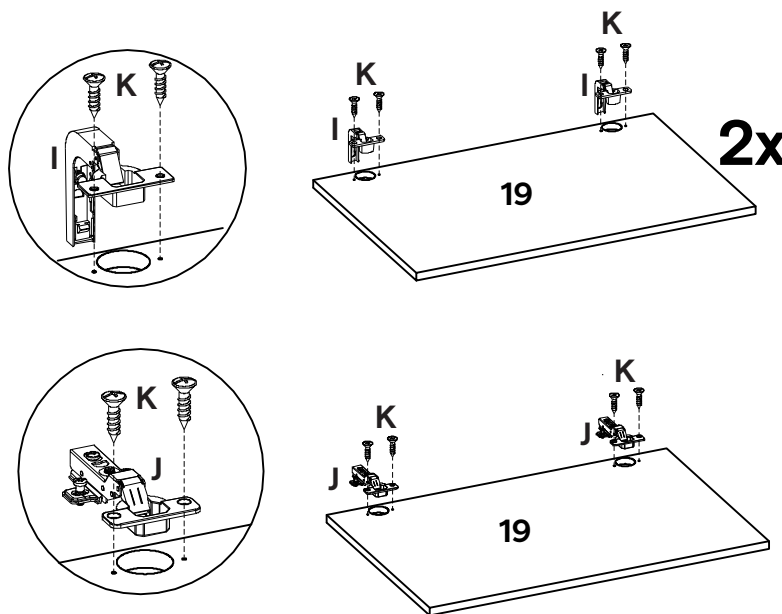


COMPONENTS**19** Door**x2**




17.1 Install the **Doors (19)** onto the Cabinet by connecting the doors hinge to the Cabinet hinge. Make sure the alignment is correct. Then press firmly until hear a “click”.

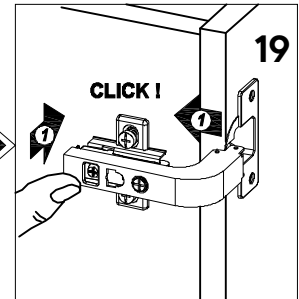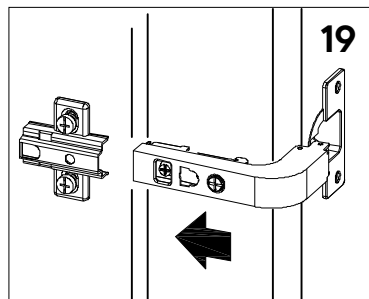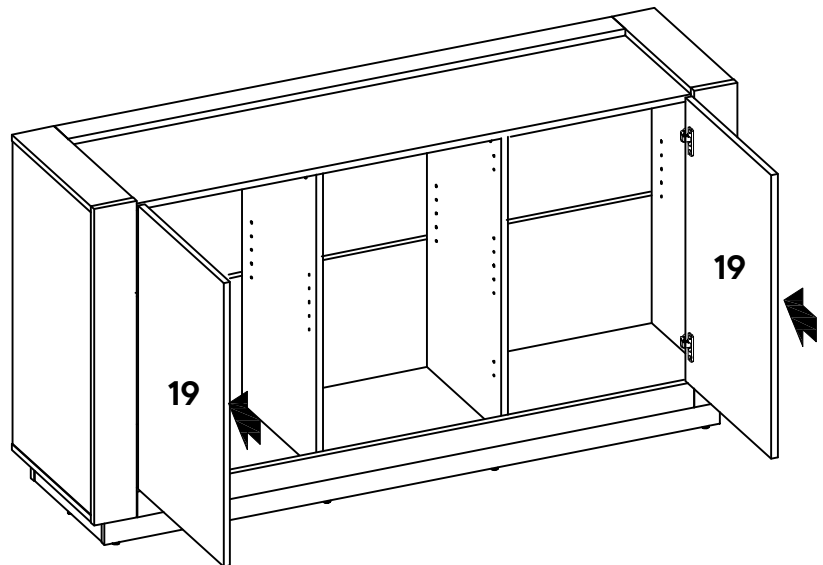**STEP 18****COMPONENTS****19** Door**x1**

18.1 Install the **Door (19)** to the assembled unit, and secure each **Door Hinges**.

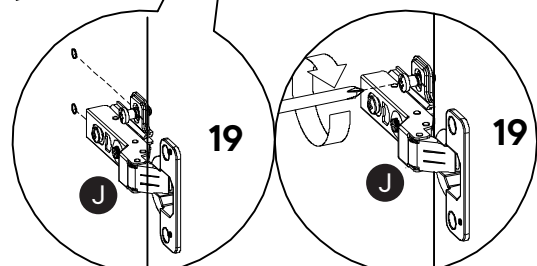
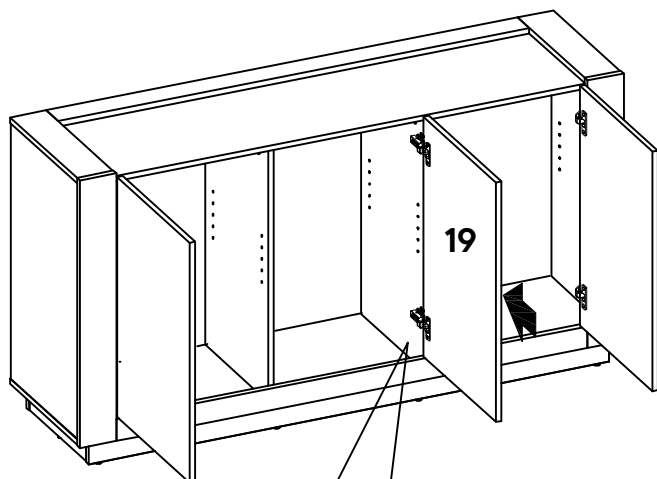


Sideboard Door alignment

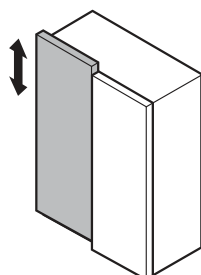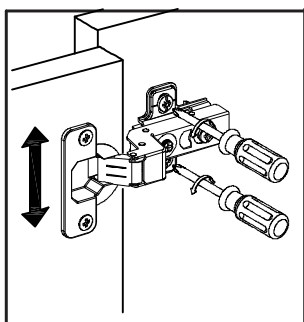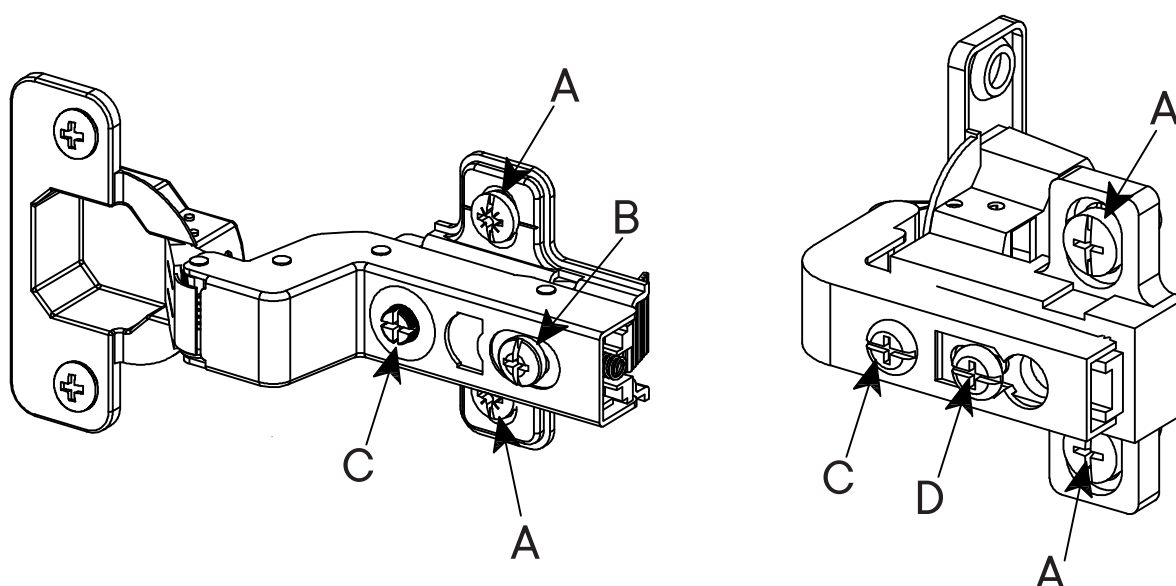



To adjust the vertical height.

Loosen the two screws A on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

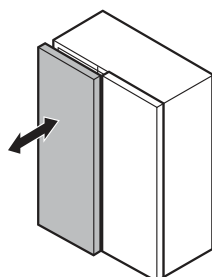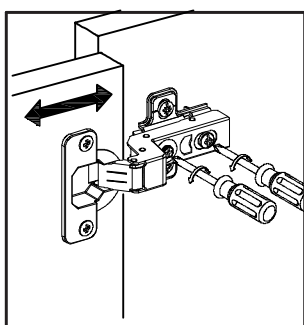

To adjust depth.

Loosen screw B and adjust door, if the door can not be adjusted, please loosen screw C, then try again. Tighten screw B and C.

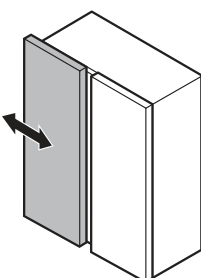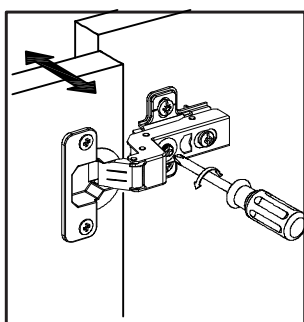

To adjust side ways.

Turn screw C on BOTH hinges on each door.

HARDWARE

Q Shelf pin x12

COMPONENTS


17 Side adjustable shelf x2

18 Middle adjustable shelf x1

19.1 Insert 12x **Shelf Pins (Q)** Into Side and middle in the desired positions.

19.2 Slide 2x **Side Adjustable shelf (17)** and diagonally in and rest on the **Shelf Pins**.


19.3 Slide **Middle adjustable shelf (18)** and rest on the **Shelf Pins**.

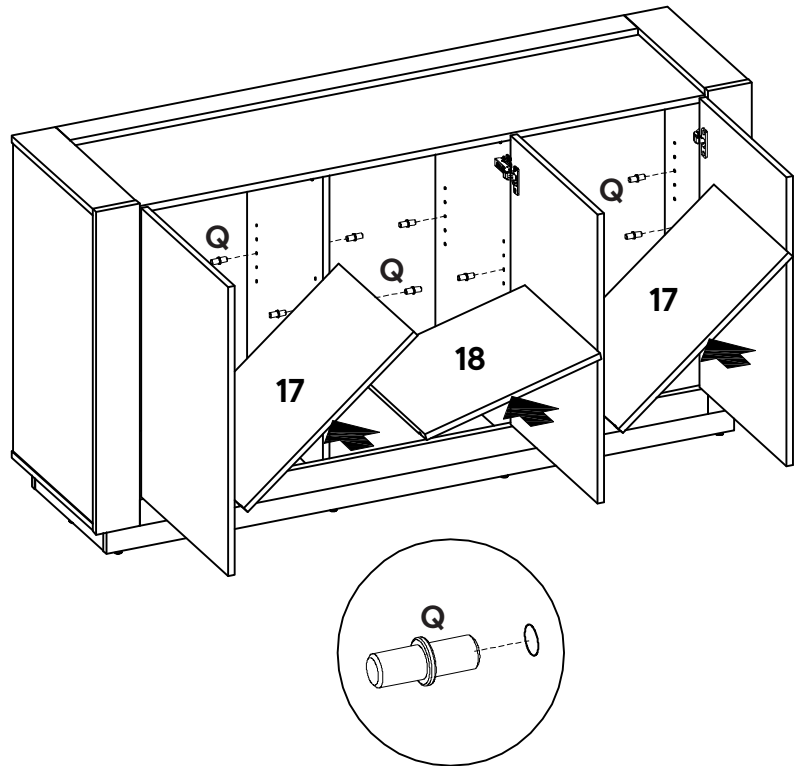

STEP 20

Important : For your safety it is imperative to fix your furniture to the wall.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

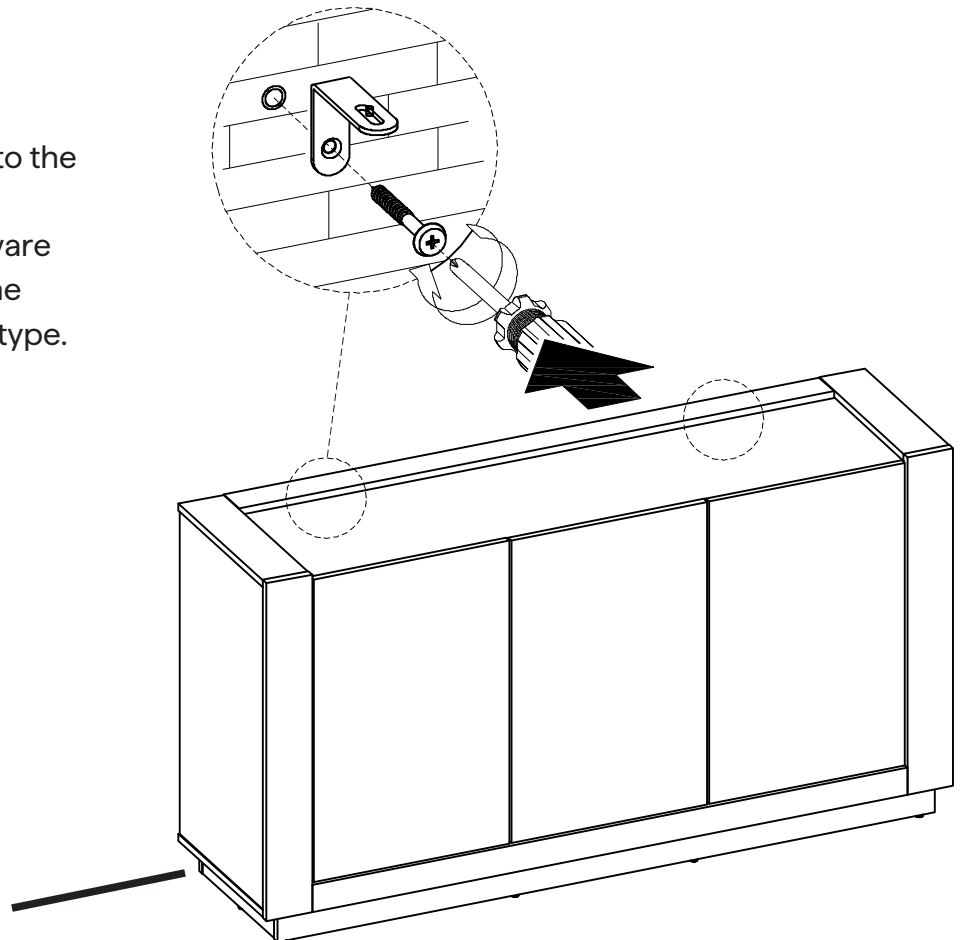


Great job!

Sideboard assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

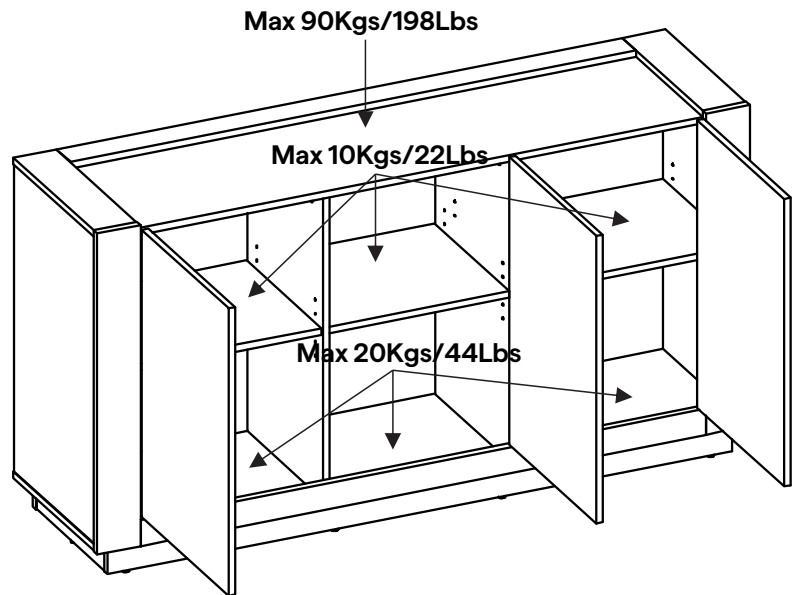

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

modway



Questions? Contact us!

609.256.9000

cs@modway.com