


ASSEMBLY INSTRUCTIONS

EEI-7166

VO.13.08.24

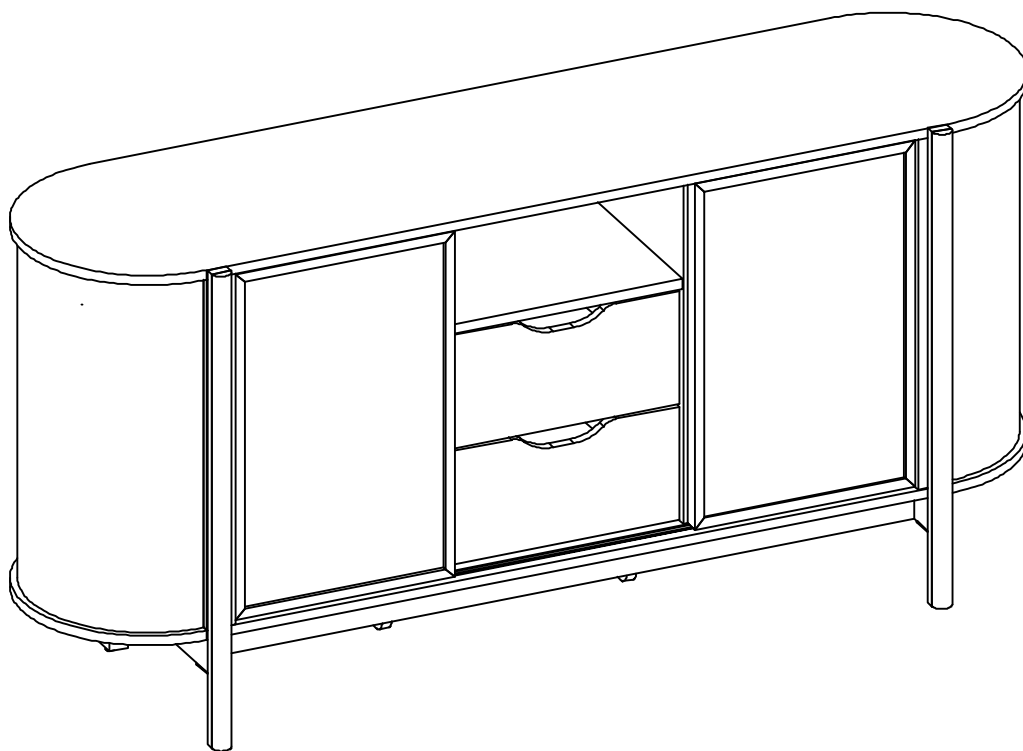

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.



Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:


1	Top panel	x1
2	Bottom panel	x1
3	Side panel	x2
4	Right divider panel	x1
5	Left divider panel	x1
6	Right shelf panel	x1
7	Left shelf panel	x1
8	Fix shelf	x1
9	Horizontal panel	x1
10	Right vertical panel	x1
11	Left vertical panel	x1
12	Back vertical panel	x2
13	Side support panel	x4
14	Bottom apron panel	x1
15	Back support bottom panel	x1
16	Right support bottom panel	x1
17	Left support bottom panel	x1
18	Vertical front panel	x2
19	Front leg	x2
20	Right bottom leg	x1
21	Left bottom leg	x1
22	Middle bottom leg	x2
23	Top back panel	x1
24	Bottom back panel	x1
25	Sliding door	x2
26	Front drawer panel	x2
27	Right side drawer panel	x2
28	Left side drawer panel	x2
29	Back drawer panel	x2
30	Bottom drawer panel	x2

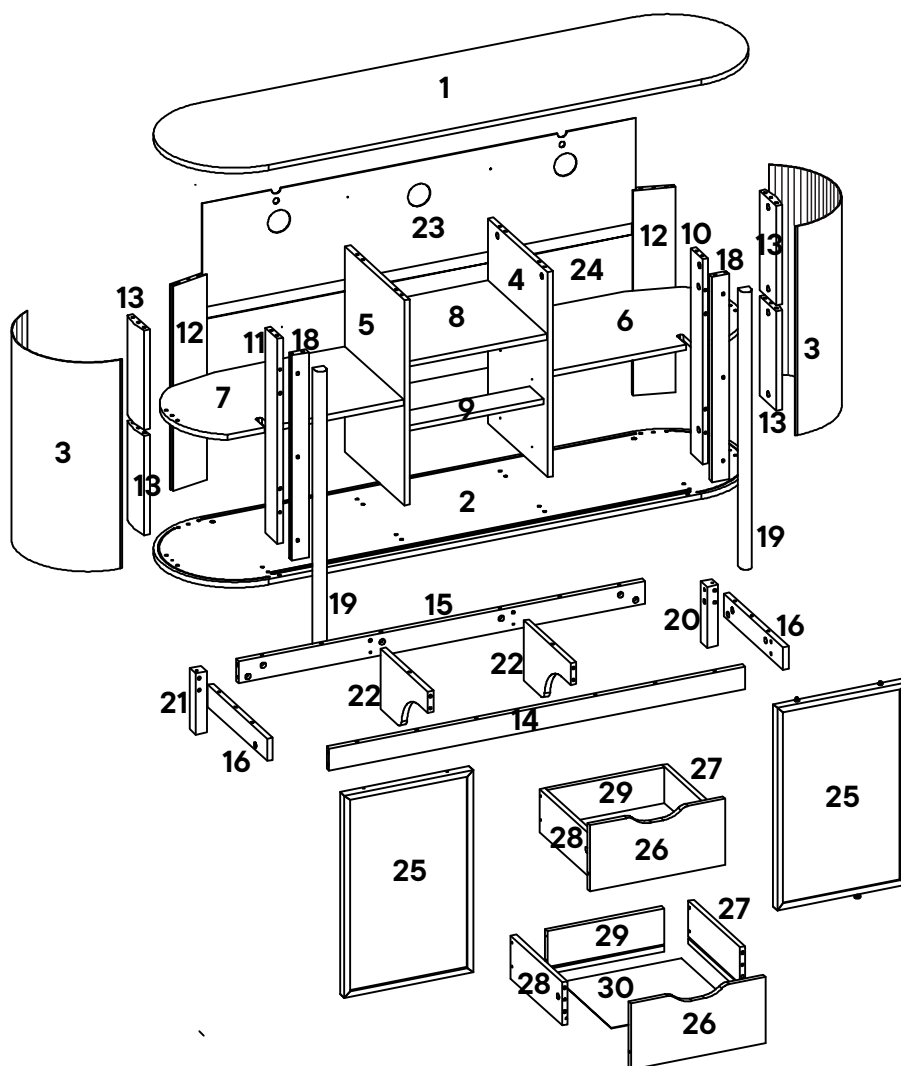


Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A.		Cam bolt Ø6 x 32 mm	x48
B.		Cam lock Ø15 x 12 mm	x54
C.		Cover cap	x14
D.		Dowel Ø7.8 x 32 mm	x74
E.		Connecting bolt	x2
F.		Connecting nut	x4
G.		Assembly screw	x12
H.		Screw Ø8 x 37 mm	x8
I.		Screw Ø6 x 12 mm	x28
J.		Screw Ø4 x 12 mm	x8
K.		Allen key	x1
L.		Adjustable leveller Ø15 x 12mm	x2
M.		Barrel nut	x2
N.		Bolt M6 x 25 mm	x6
O.		Bolt M6 x 60 mm	x2
P.		Bolt M6 x 50 mm	x2
Q.		Pin	x8
R.		Bumper	x6

S.		L Bracket	x2
T.		Rear Clamp	x1
U.		Wall Fixing	x2
V.		Screw Ø6 x 12 mm	x2
W.		Minifix double end	x2
X.		Wooden Dowel Ø7.8 x 57 mm	x4
Y.		Drawer runner A (L/R) 300 mm	x2
Z.		Drawer runner B (L/R) 300 mm	x2
Aa.		Screw Ø6 x 19 mm	x18
Ab.		Wedge	x18
Ac.		Sticker	x4
Ad.		Camlock key plate	x1

What you need:



 Phillips Head Screwdriver

You may also need:

+ Level

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

COMPONENTS

4	Right divider panel	x1
5	Left divider panel	x1
8	Fix shelf	x1
9	Horizontal panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x6
D	Dowel Ø7.8 x 32 mm	x14
I	Screw Ø6 x 12 mm	x8
Y	Drawer runner A (L/R)	x2

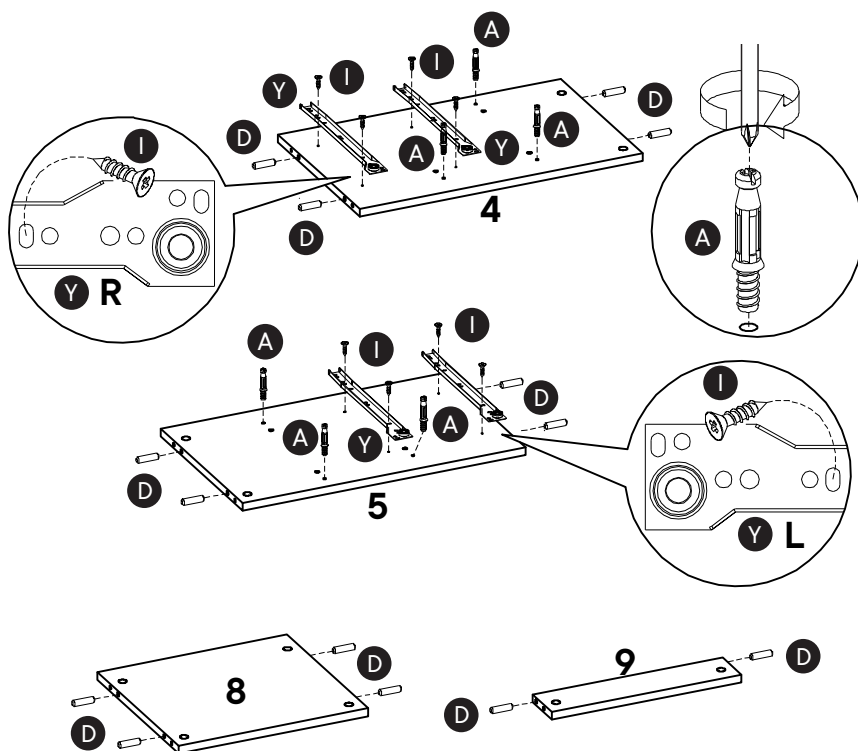


Step 2

COMPONENTS

4	Right divider panel	x1
5	Left divider panel	x1
8	Fix shelf	x1
9	Horizontal panel	x1

HARDWARE

B	Camlock Ø15 x 12 mm	x6
Ad	Camlock key plate	x1

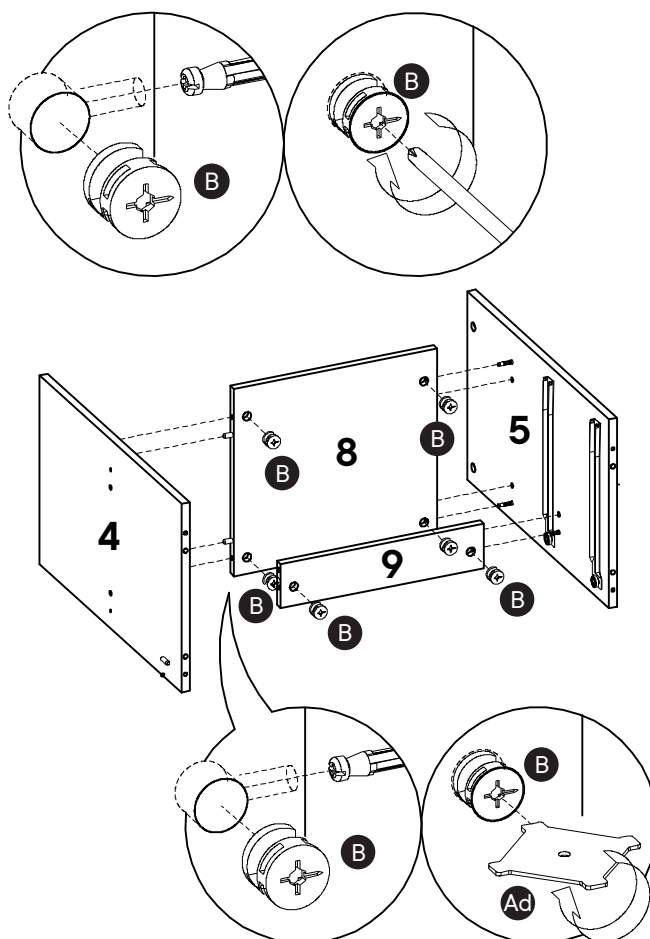


Step 3

COMPONENTS

6	Right shelf panel	x1
7	Left shelf panel	x1
12	Back vertical panel	x2

HARDWARE

A	Cambolt Ø6 x 32 mm	x4
D	Dowel Ø7.8 x 32 mm	x16

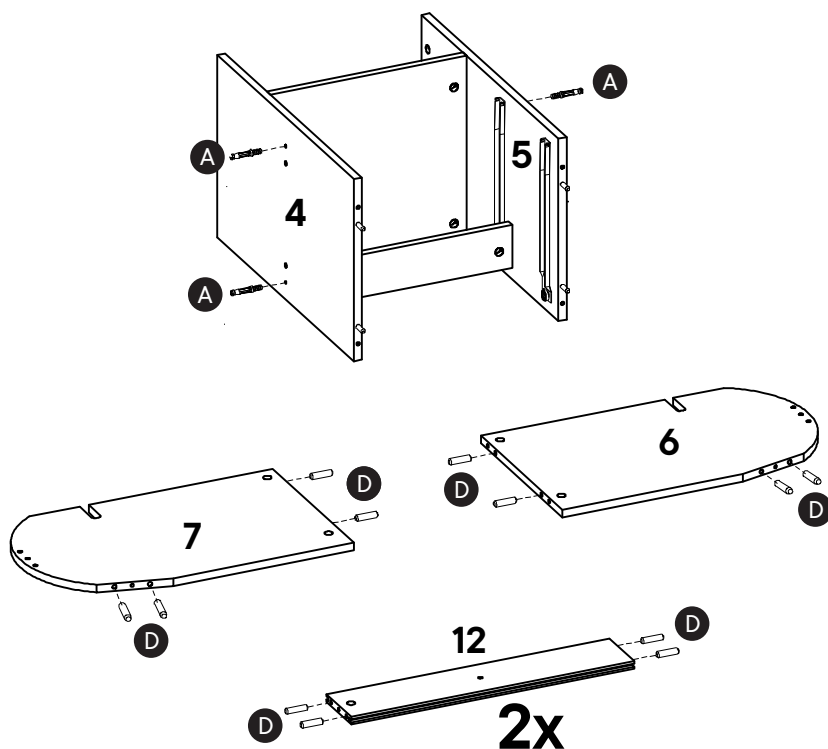


Step 4

COMPONENTS

6	Right shelf panel	x1
7	Left shelf panel	x1
12	Back vertical panel	x2

HARDWARE

B	Camlock Ø15 x 12 mm	x4
G	Assembly screw	x2

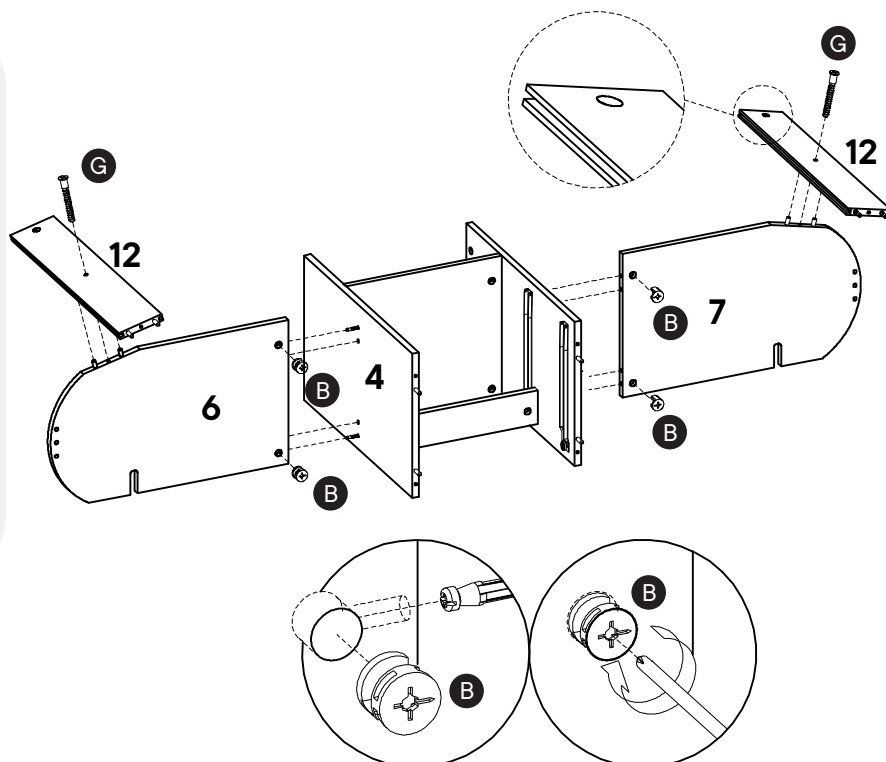

Step 5

COMPONENTS


13 Side support panel x2

HARDWARE

D Dowel Ø7.8 x 32 mm x4

X Wooden dowel Ø7.8 x 57 mm x2

W Minifix double end x2

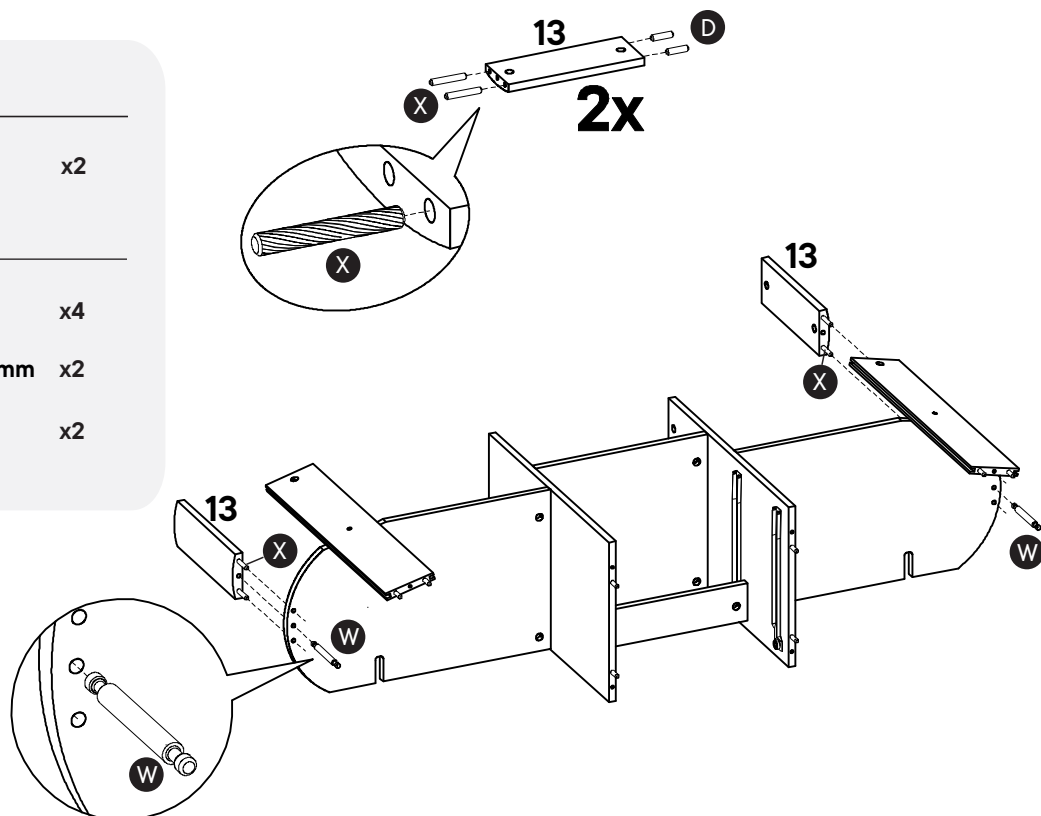

Step 6

COMPONENTS


13 Side support panel x2

HARDWARE

B Camlock Ø15 x 12 mm x4

C Cover cap x4

D Dowel Ø7.8 x 32 mm x4

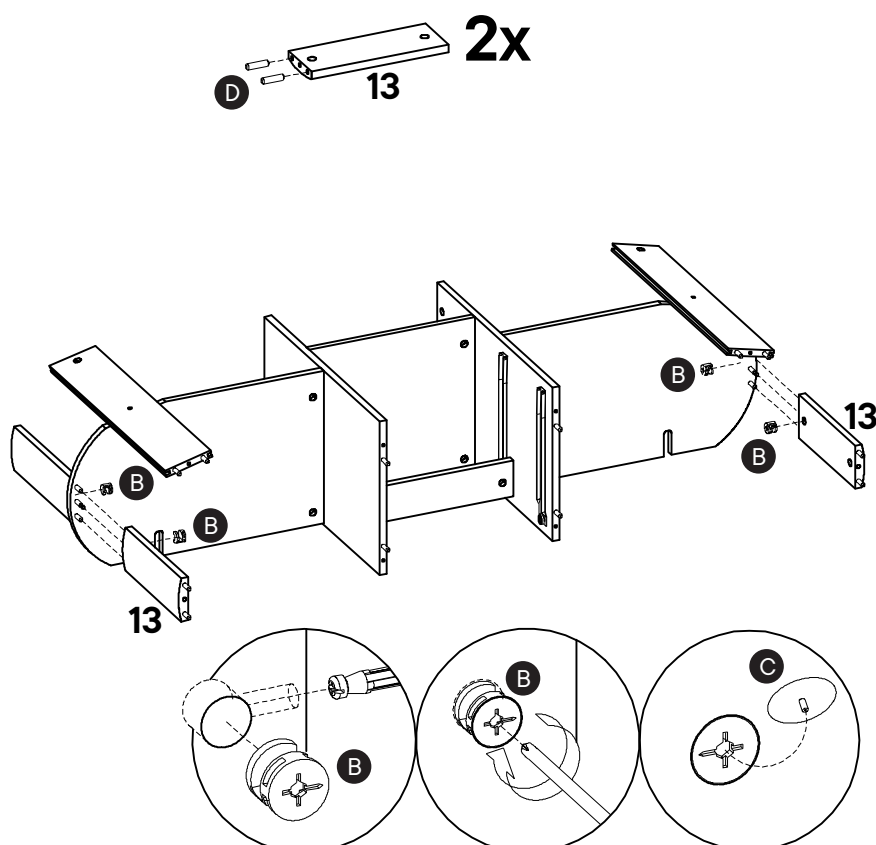

Step 7

COMPONENTS


1 Top panel x1

HARDWARE

A Cambolt Ø6 x 32 mm x10

U Wall Fixing x2

V Screw Ø6 x 12 mm x2

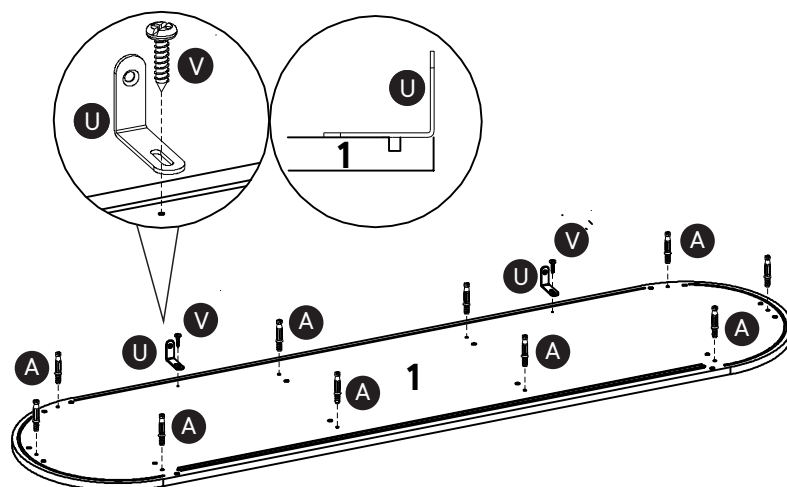

Step 8


COMPONENTS

1 Top panel x1

HARDWARE

B Camlock Ø15 x 12 mm x6


C Cover cap x4

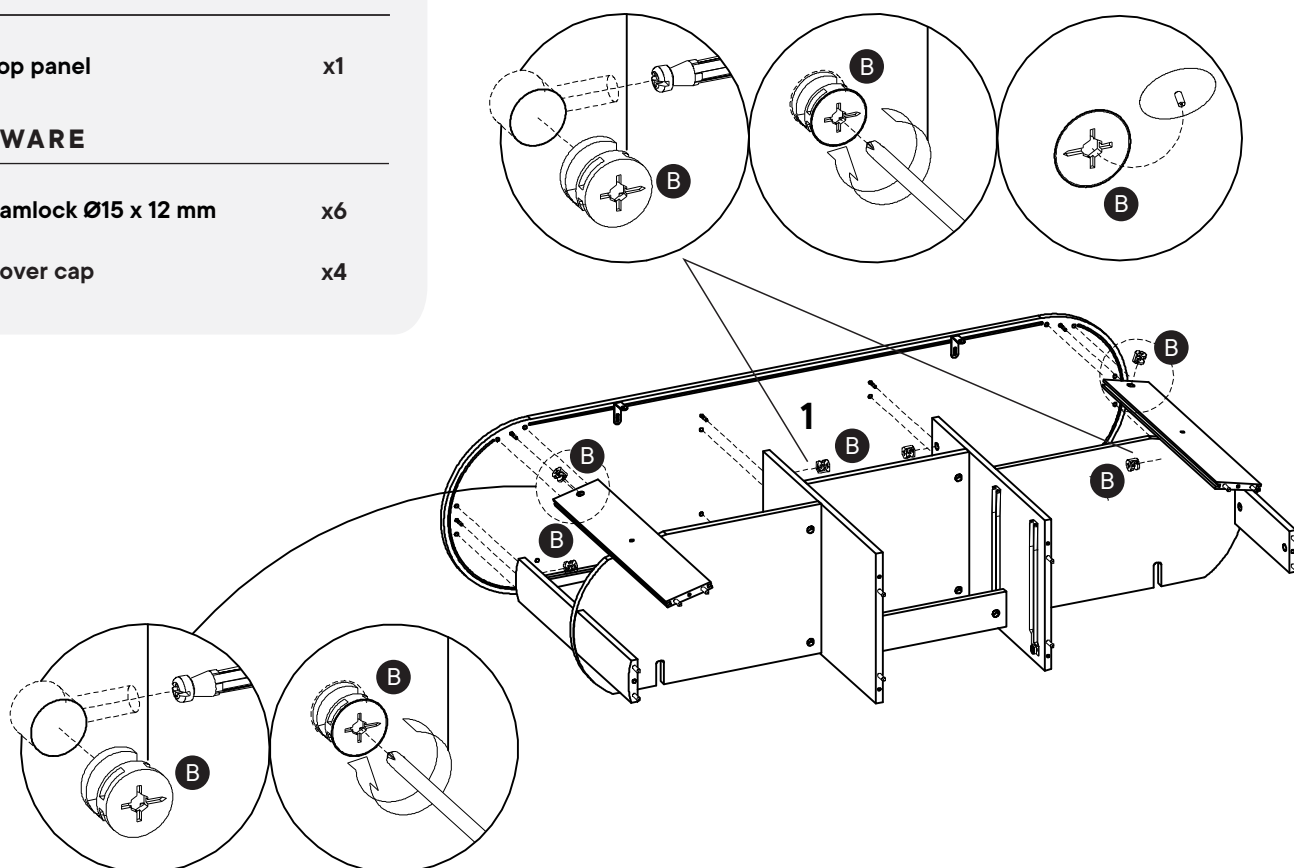

Step 9

HARDWARE

- | | | |
|----------|---------------------|----|
| B | Camlock Ø15 x 12 mm | x2 |
| C | Cover cap | x2 |

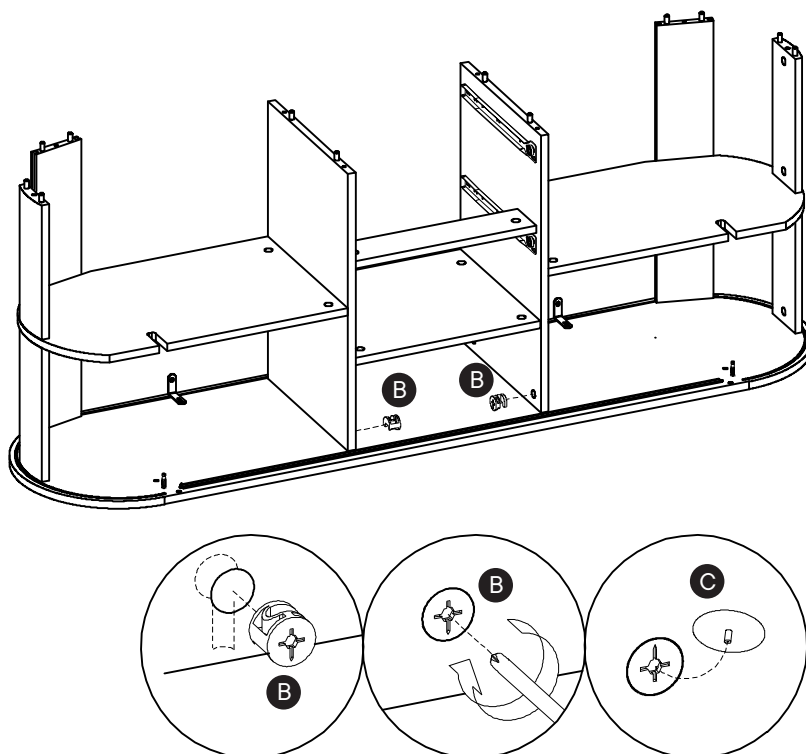


Step 10

COMPONENTS

- | | | |
|-----------|----------------------|----|
| 10 | Right vertical panel | x1 |
| 11 | Left vertical panel | x1 |
| 18 | Vertical front panel | x2 |

HARDWARE

- | | | |
|----------|--------------------|-----|
| A | Cambolt Ø6 x 32 mm | x4 |
| D | Dowel Ø7.8 x 32 mm | x12 |

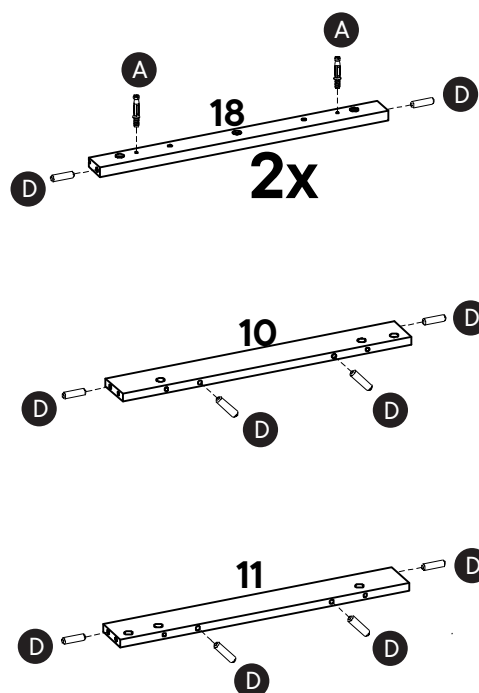



Step 11

COMPONENTS

10	Right vertical panel	x1
11	Left vertical panel	x1
18	Vertical front panel	x2
19	Front leg	x2

HARDWARE



B	Camlock Ø15 x 12 mm	x4
C	Cover cap	x4
N	Bolt M6 x 25 mm	x6
K	Allen key	x1

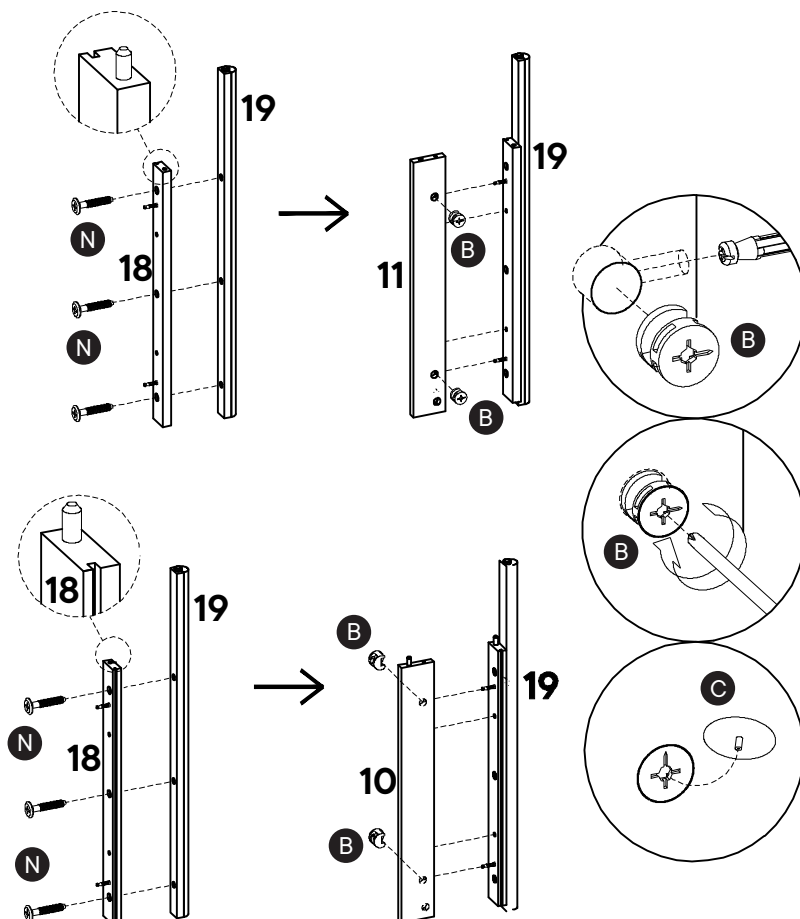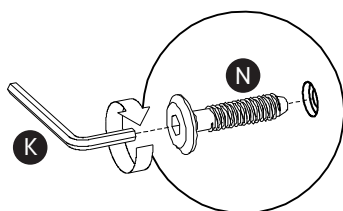

Step 12

HARDWARE


B	Camlock Ø15 x 12 mm	x2
C	Cover cap	x2

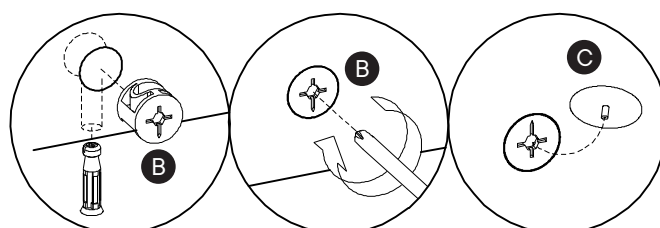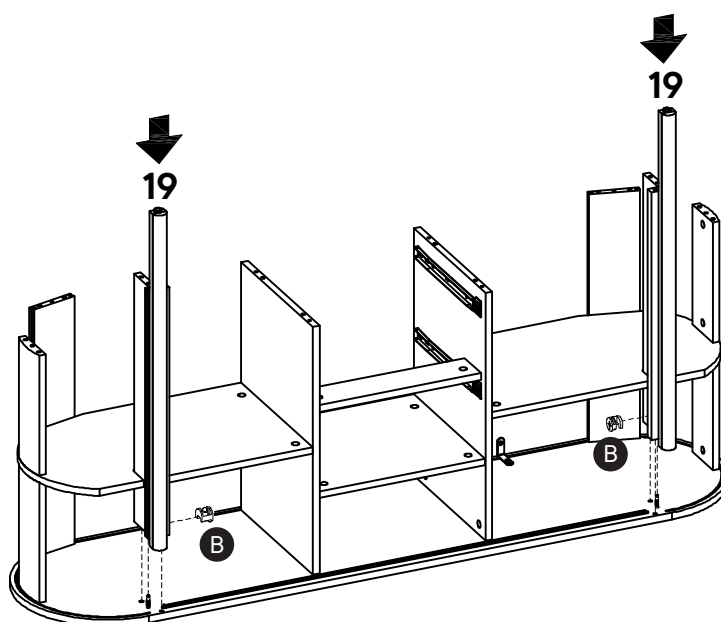

Step 13

COMPONENTS

- ③ Side panel x2

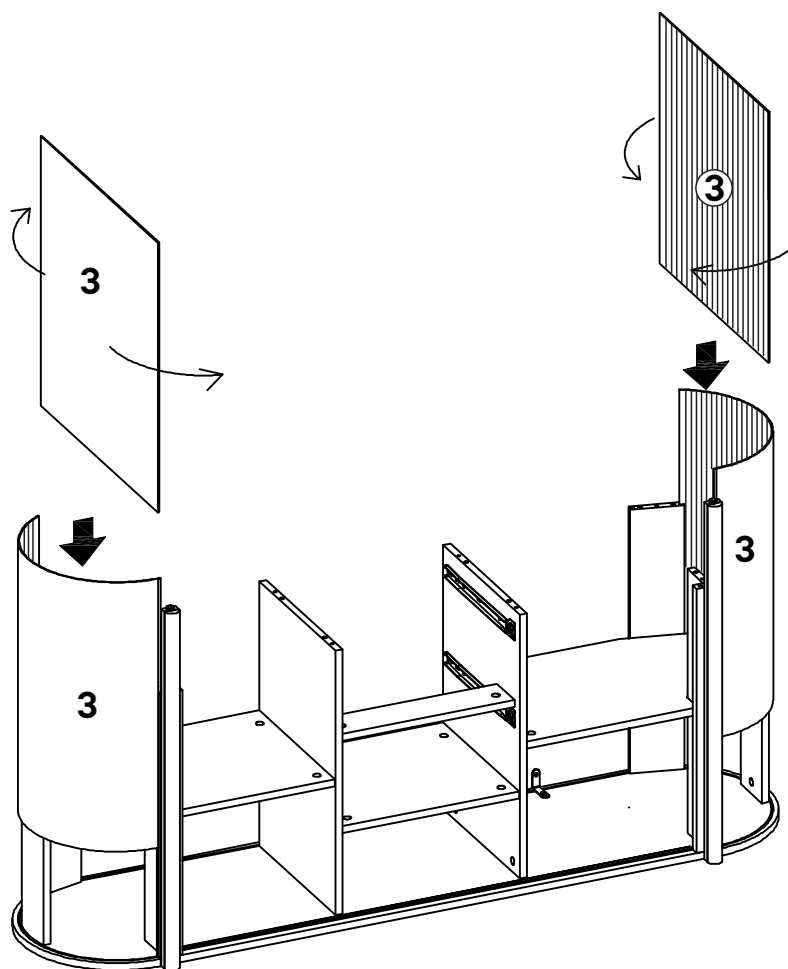


Step 14

COMPONENTS

- ②③ Top back panel x1
②④ Bottom back panel x1

HARDWARE

- Ⓣ Rear Clamp x1

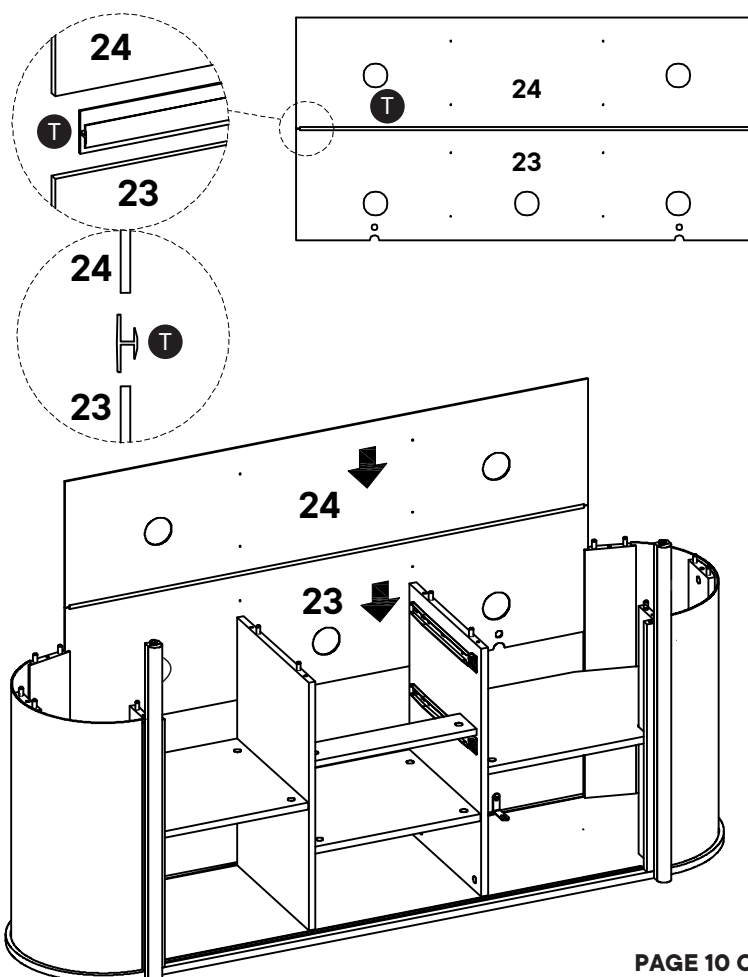


Step 15

COMPONENTS

2	Bottom panel	x1
25	Sliding door	x2

HARDWARE

A	Cambolt Ø6 x 32 mm	x16
Q	Pin	x8

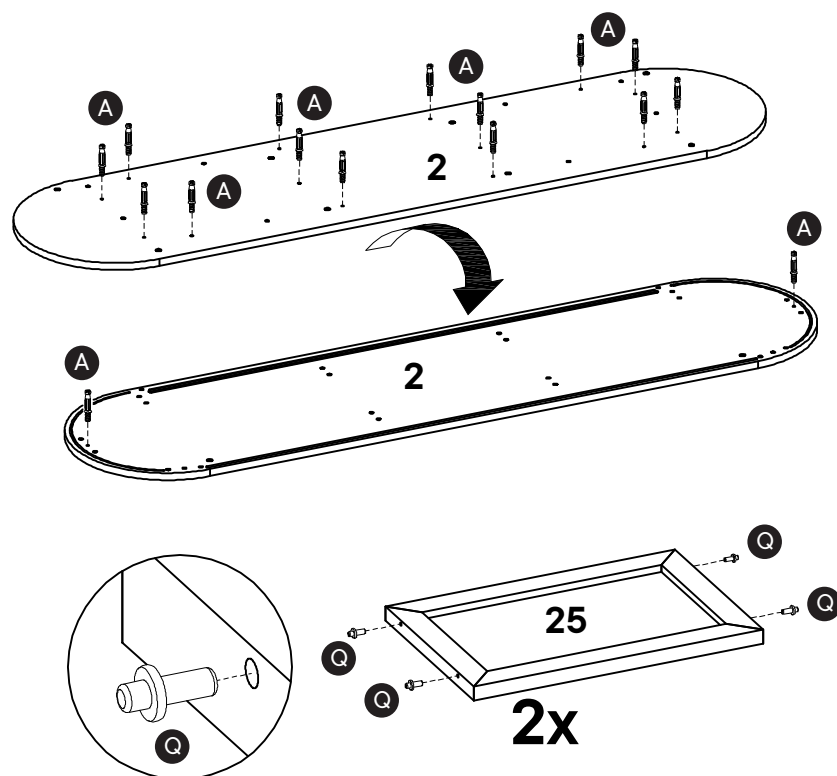


Step 16

COMPONENTS

2	Bottom panel	x1
25	Sliding door	x2

HARDWARE


B	Camlock Ø15 x 12 mm	x2
---	---------------------	----

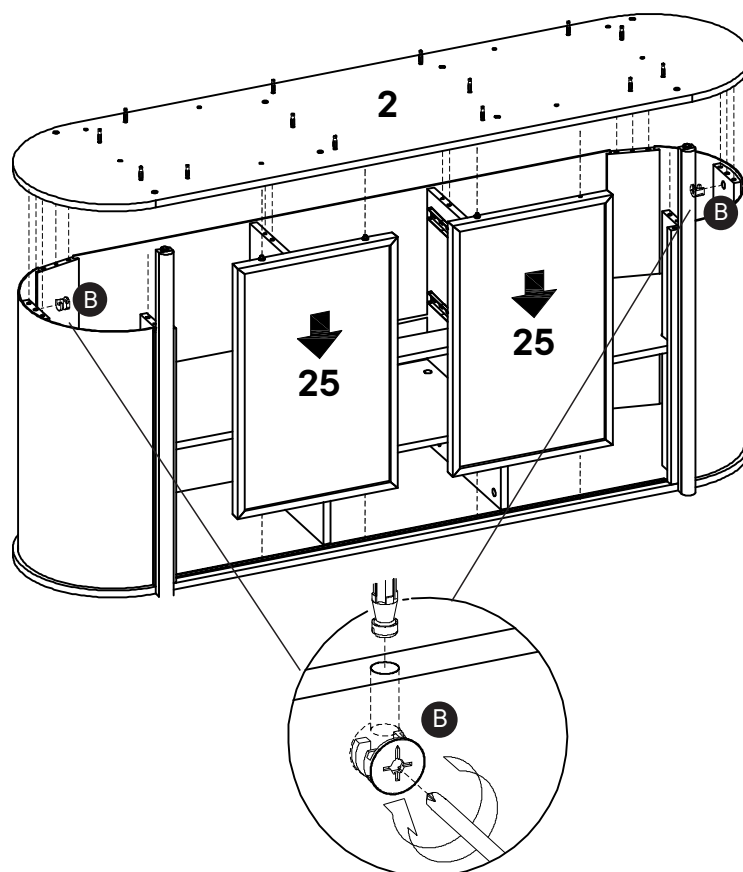

Step 17

HARDWARE

- G** Cambolt Ø6 x 32 mm x8

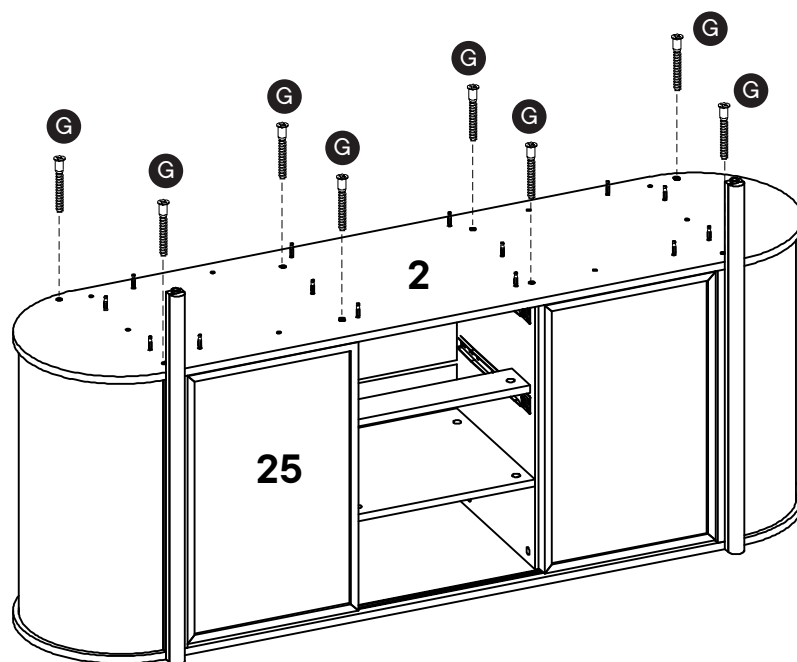


Step 18

COMPONENTS

- 14** Bottom apron panel x1
15 Back support bottom panel x1
16 Right support bottom panel x1
17 Left support bottom panel x1
20 Right bottom leg x1
21 Left bottom leg x1
22 Middle bottom leg x2

HARDWARE

- A** Cambolt Ø6 x 32 mm x4
D Dowel Ø7.8 x 32 mm x16
E Connecting bolt x2
L Adjustable leveller x2
M Barrel nut x2

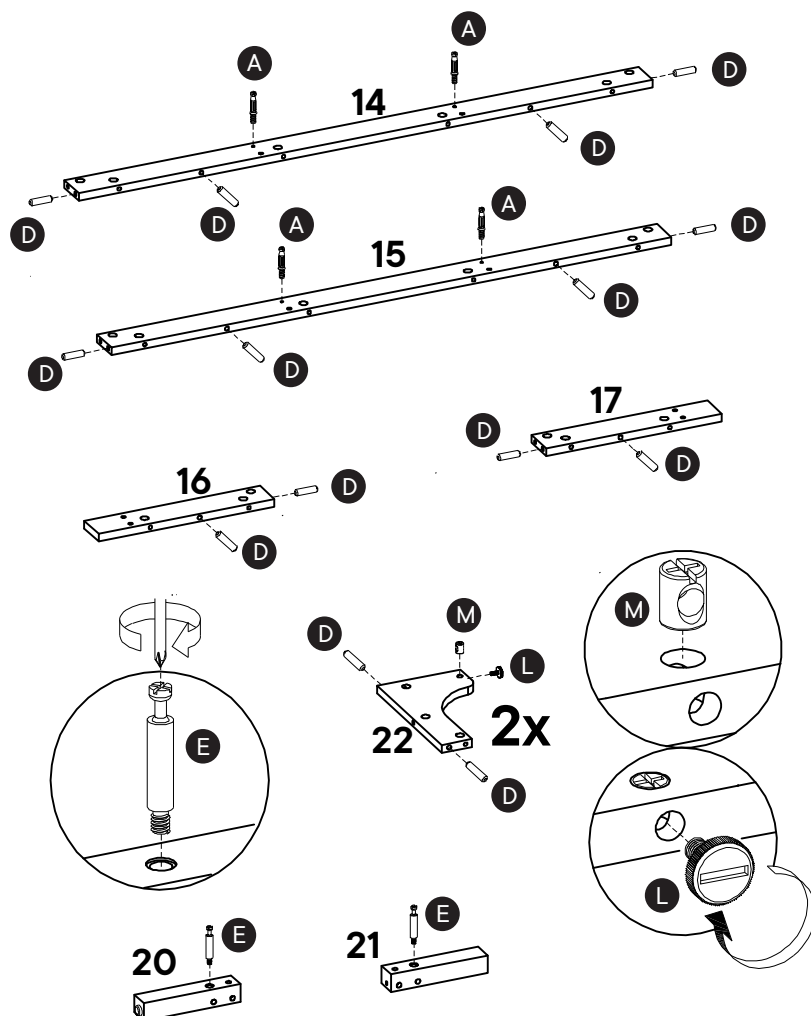


Step 19

COMPONENTS

16	Right support bottom panel	x1
17	Left support bottom panel	x1
20	Right bottom leg	x1
21	Left bottom leg	x1

HARDWARE

F	Connecting nut	x2
O	Bolt M6 x 60 mm	x2
K	Allen key	x2

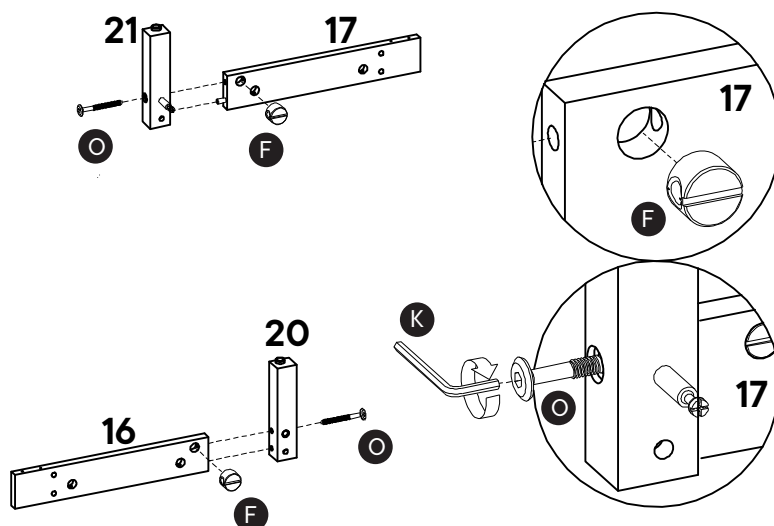


Step 20

COMPONENTS

14	Bottom apron panel	x1
15	Back support bottom panel	x1
22	Middle bottom leg	x1

HARDWARE


B	Camlock Ø15 x 12 mm	x4
---	---------------------	----

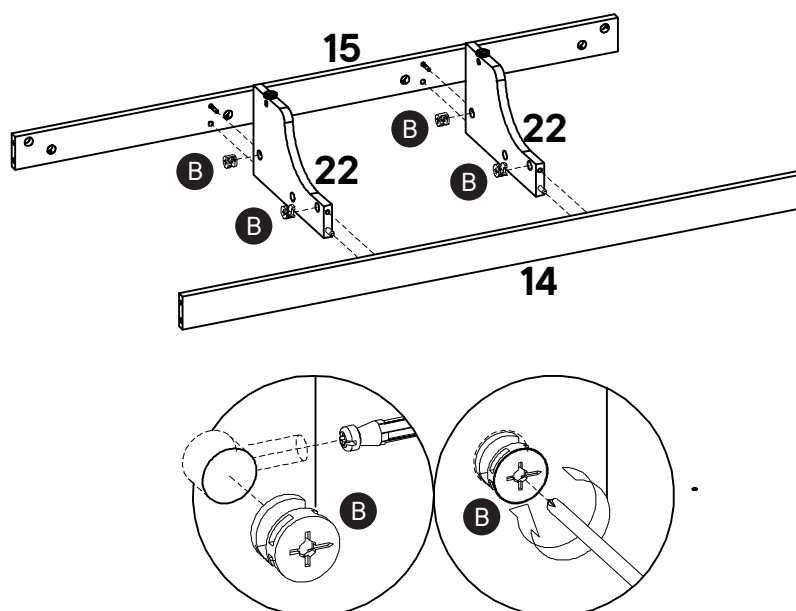

Step 21

HARDWARE


B	Camlock Ø15 x 12 mm	x2
F	Connecting nut	x2
K	Allen key	x1
P	Bolt M6 x 50 mm	x2
Ac	Sticker	x2

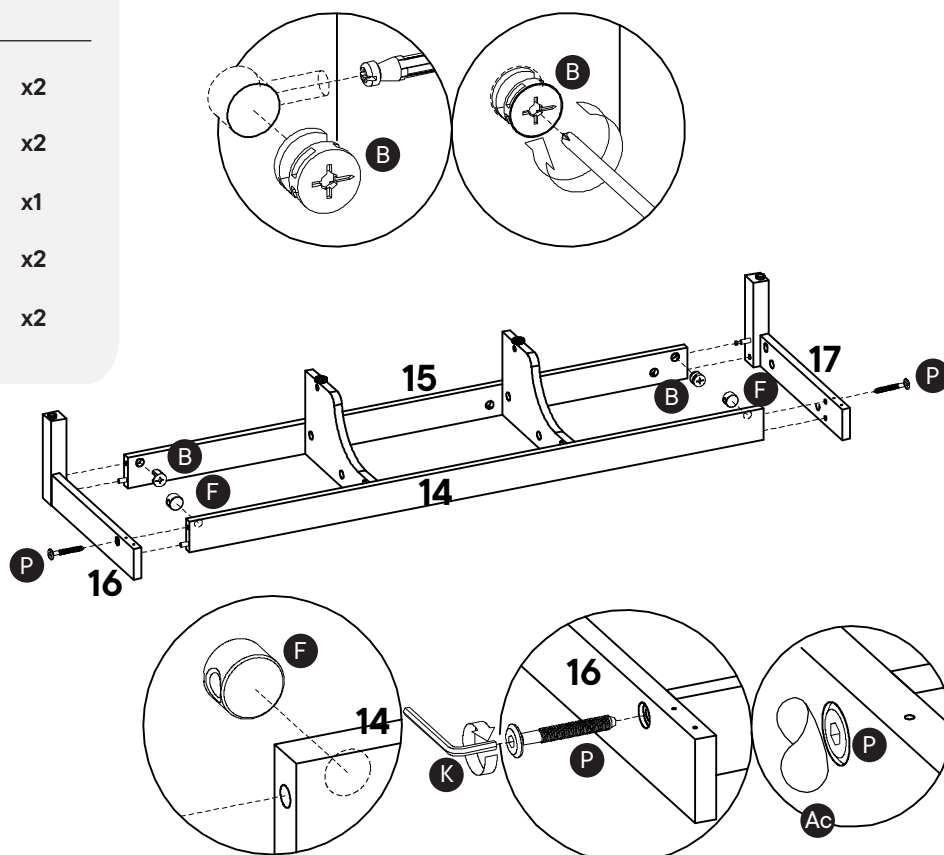

Step 22

HARDWARE


B	Camlock Ø15 x 12 mm	x14
----------	---------------------	-----

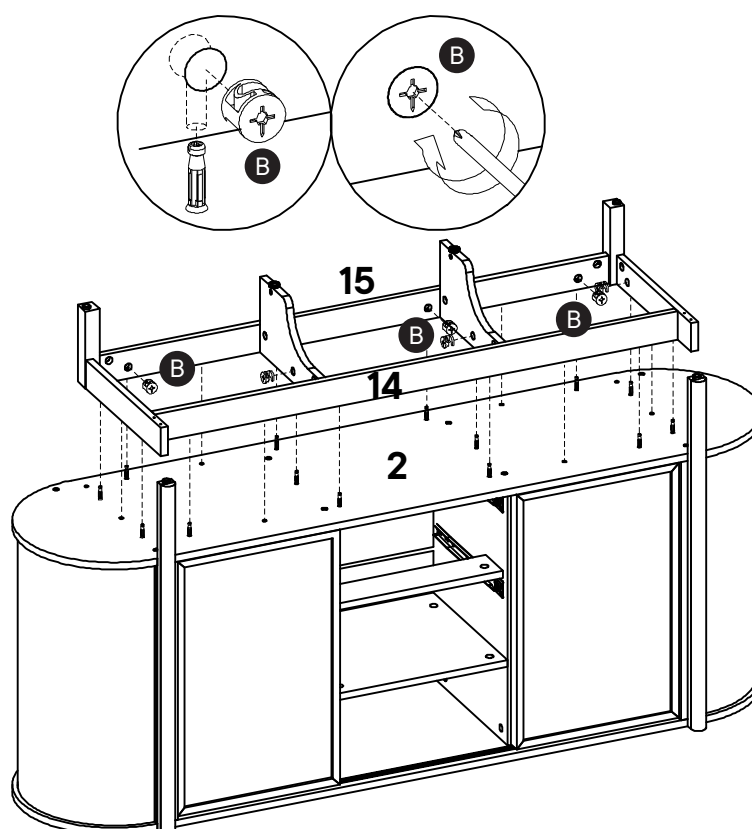

Step 23

HARDWARE



- | | | |
|----------|------------------|----|
| I | Screw Ø6 x 12 mm | x8 |
| S | Plat support | x2 |

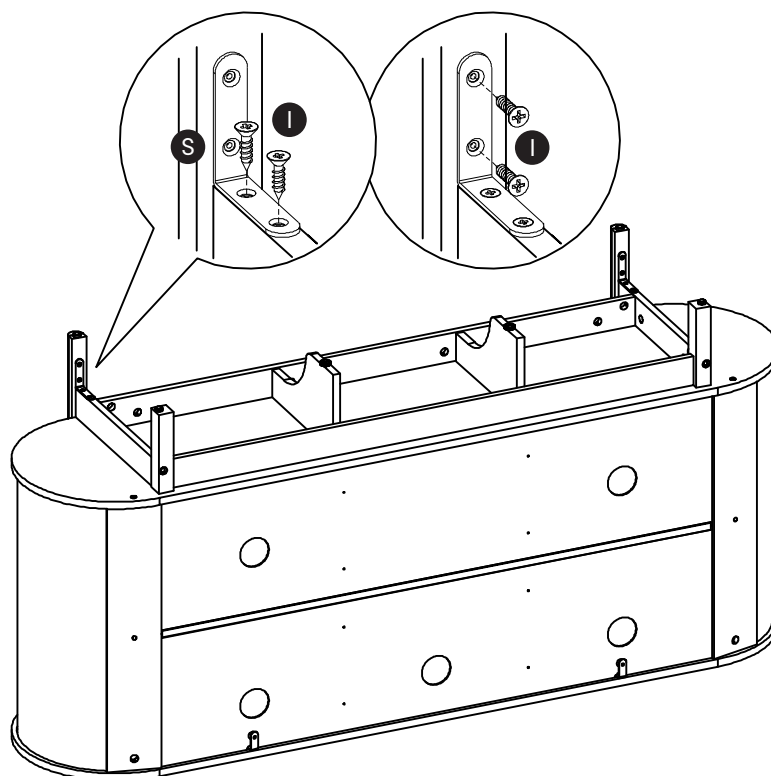

Step 24

HARDWARE


- | | | |
|-----------|------------------|-----|
| J | Screw Ø4 x 12 mm | x8 |
| Aa | Screw Ø6 x 19 mm | x12 |
| Ab | Wedge | x12 |

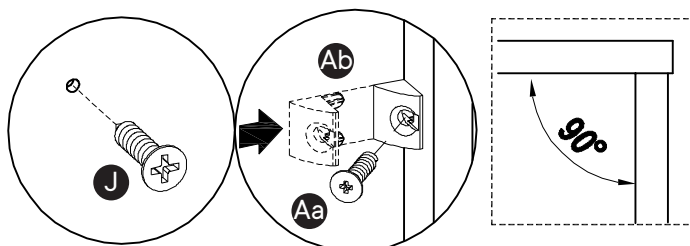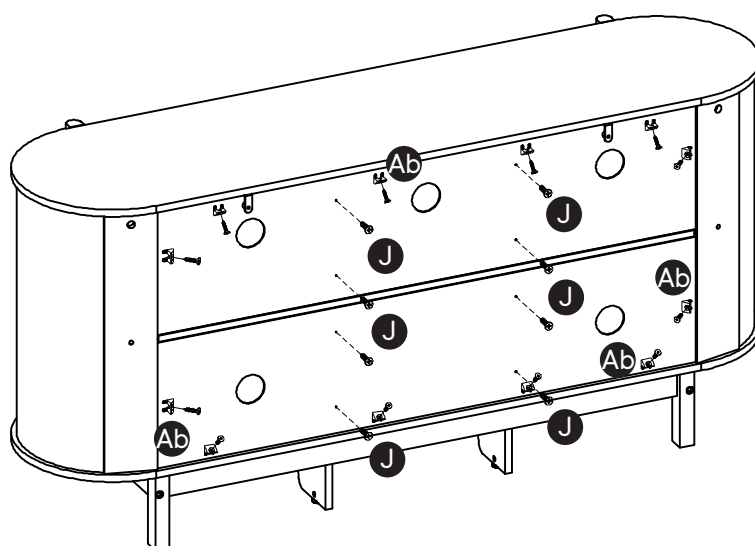

Step 25

HARDWARE

G	Assembly screw	x2
Ac	Sticker	x2

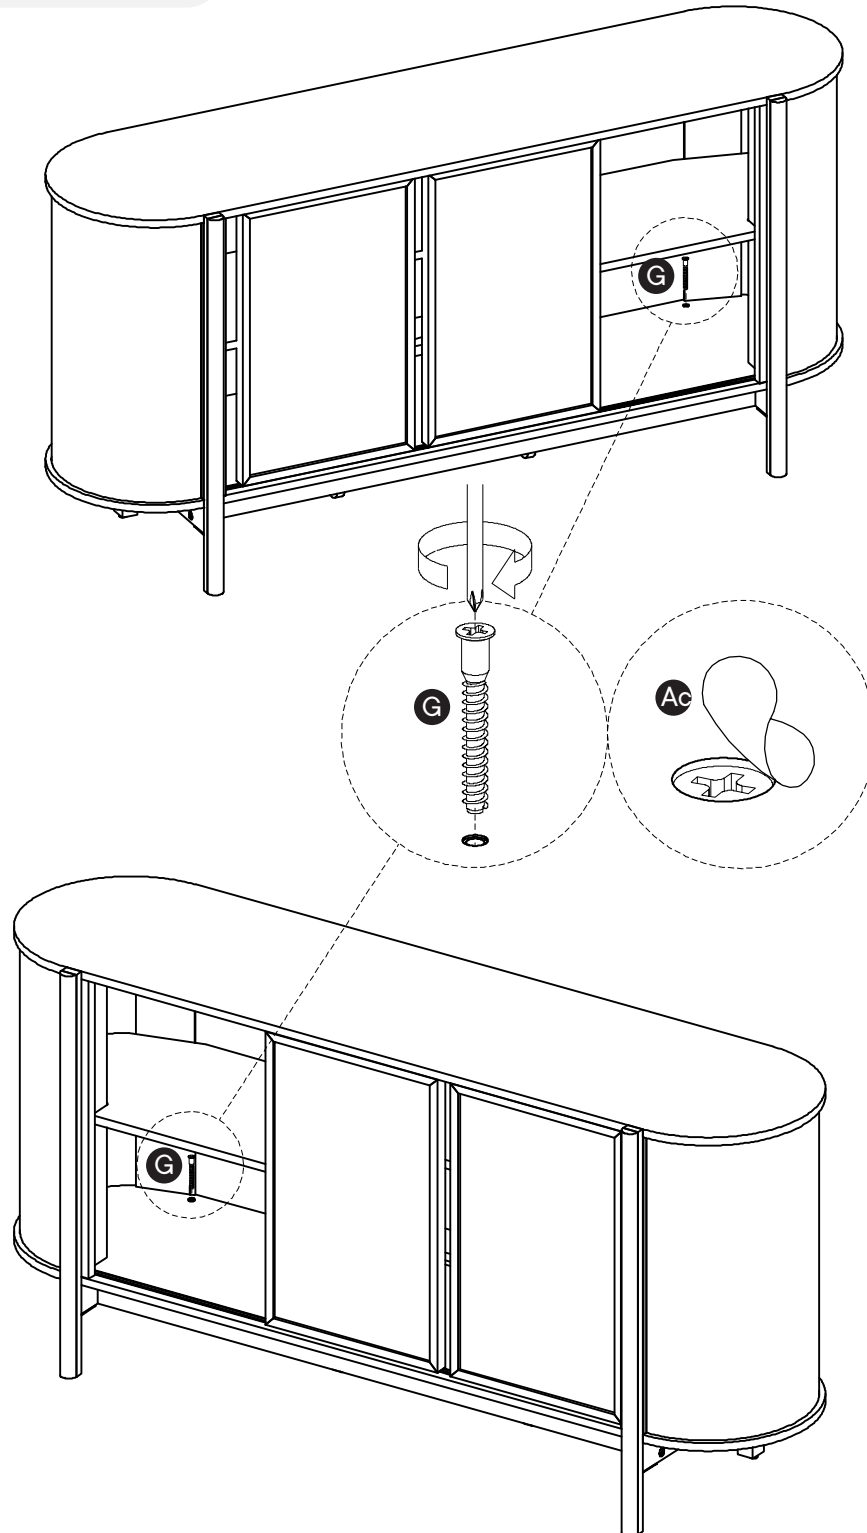

Step 26


COMPONENTS

26	Front drawer panel	x2
27	Right side drawer panel	x2
28	Left side drawer panel	x2

HARDWARE

A	Cambolt Ø6 x 32 mm	x4
D	Dowel Ø7.8 x 32 mm	x8

2x

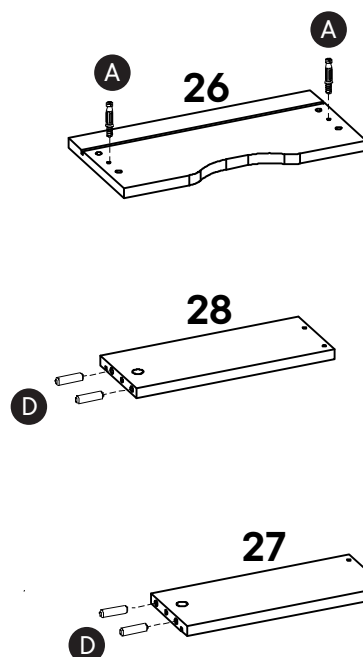

Step 27


COMPONENTS

27	Right side drawer panel	x2
28	Left side drawer pane	x2
29	Back drawer panel	x2
30	Bottom drawer panel	x2

HARDWARE

B	Camlock Ø15 x 12 mm	x4
C	Cover cap	x4
H	Screw Ø7 x 37 mm	x8

2x

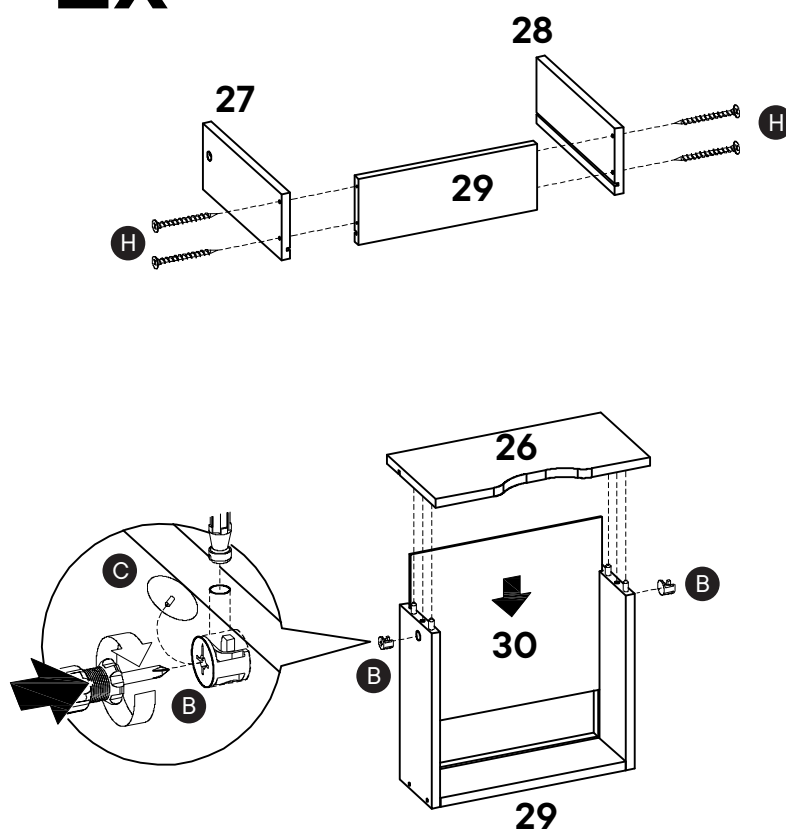


Step 28

HARDWARE

I	Screw Ø6 x 12 mm	x8
Z	Drawer runner B (L/R)	x2
Aa	Screw Ø6 x 19 mm	x4
Ab	Wedge	x4



2x

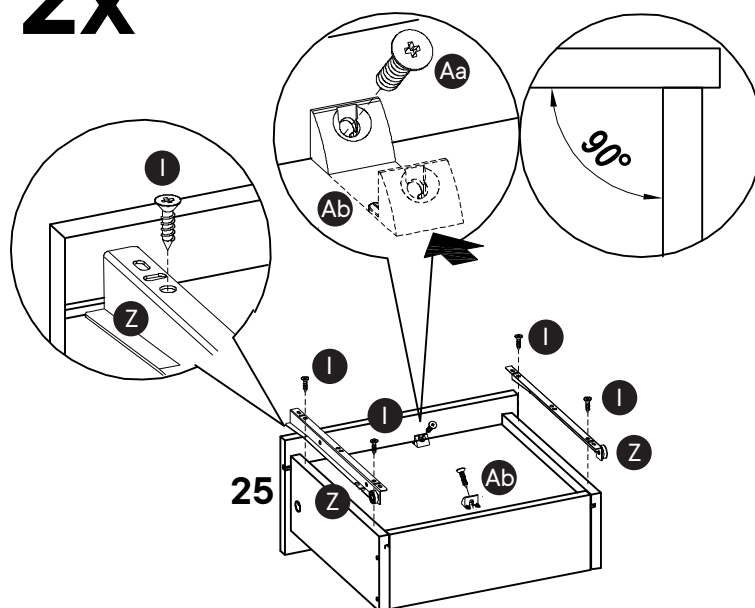

Step 29

HARDWARE


I	Screw Ø6 x 12 mm	x4
----------	------------------	----

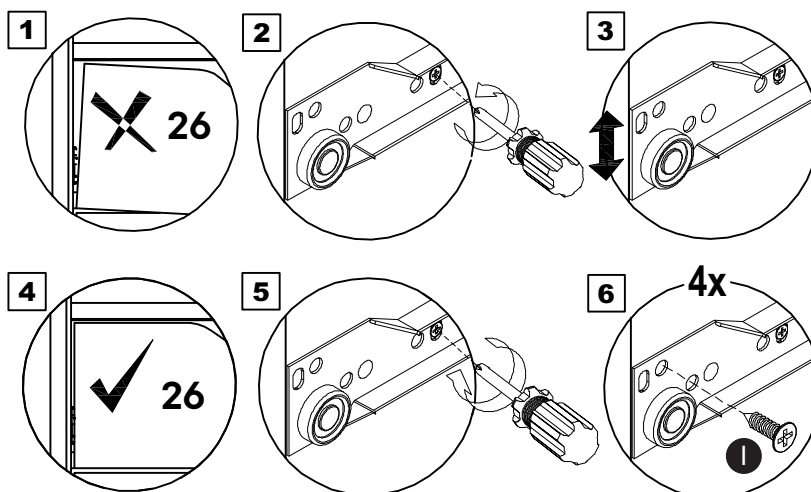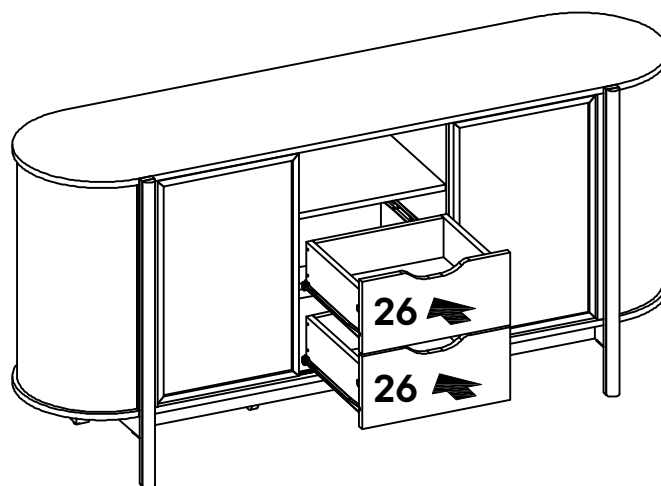

Step 30

HARDWARE

R Bumper x6

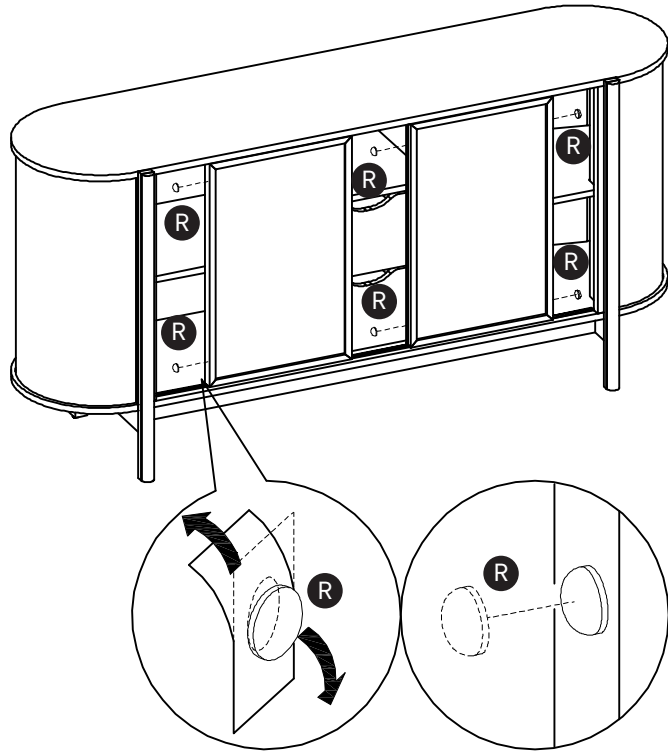


Step 31

ATTENTION

For your safety it is imperative to fix your furniture to the wall.

Please source the right wall mounting hardware according to the nature of wall.

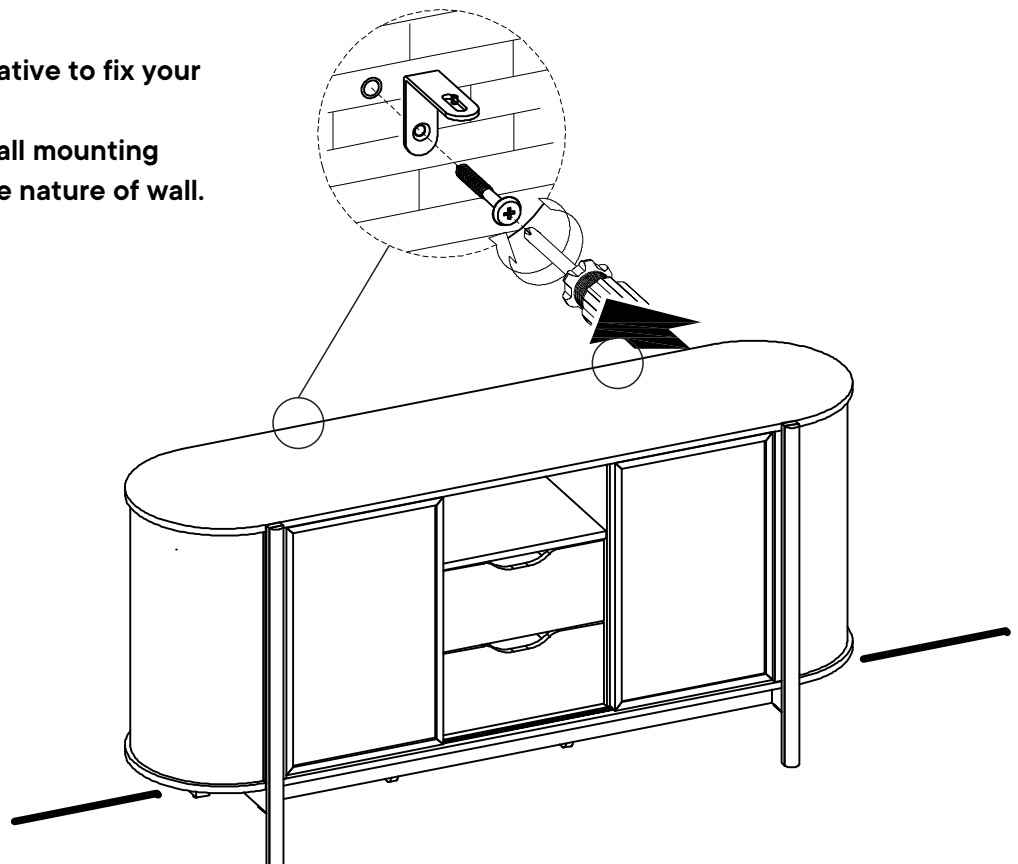

Great job!

Your Sideboard is complete.



CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway** for a chance to be featured.

