


ASSEMBLY INSTRUCTIONS

EEI-6892

VO.15.05.24

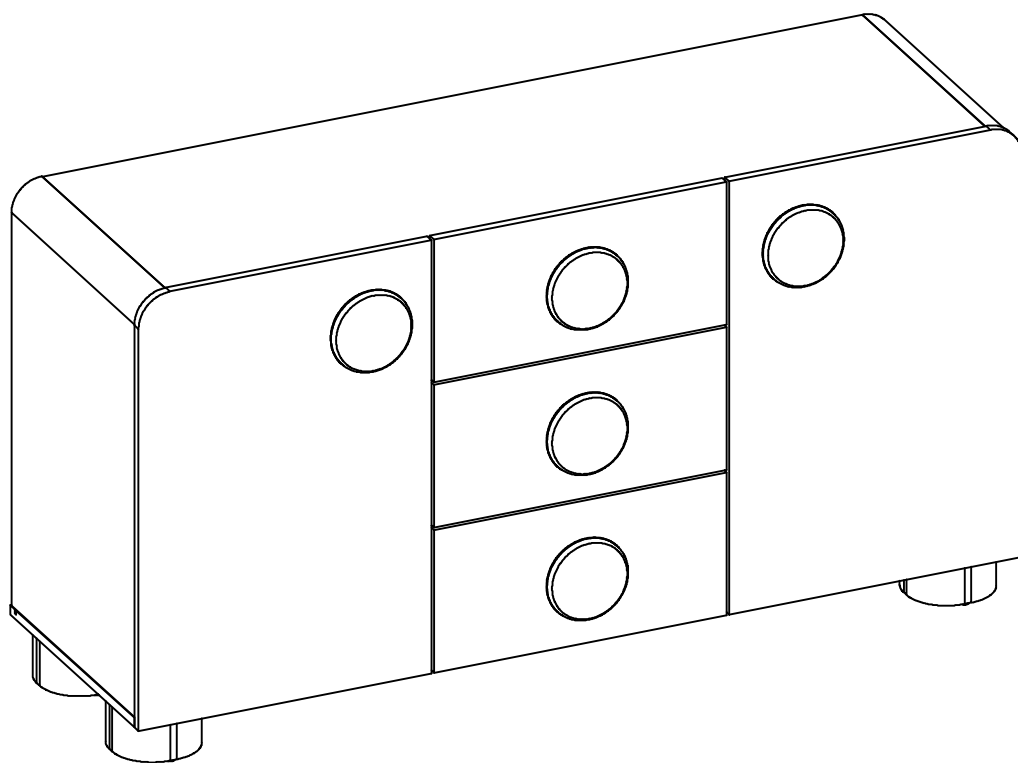

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top panel	x1
2	Bottom panel	x1
3	Right side panel	x1
4	Left side panel	x1
5	Right middle panel	x1
6	Left middle panel	x1
7	Adjustable shelf	x2
8	Front horizontal panel	x2
9	Back horizontal panel	x1
10	Leg	x4
11	Center support	x2
12	Top back panel	x1
13	Bottom back panel	x1
14	Right door panel	x1
15	Left door panel	x1
16	Front drawer panel	x3
17	Right drawer side panel	x3
18	Left drawer side panel	x3
19	Drawer back panel	x3
20	Drawer Bottom Panel	x3
21	Handle	x5

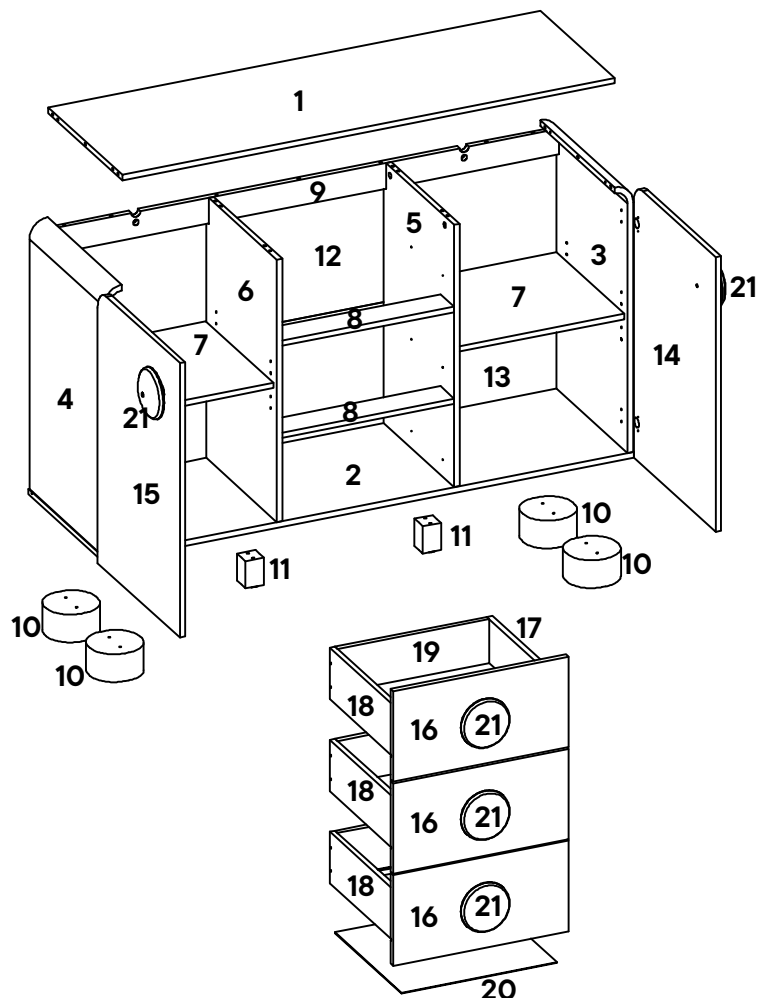


Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A.		Cam bolt Ø6 x 32 mm	x30
B.		Cam lock Ø15 mm	x30
C.		Cover Cap	x16
D.		Dowel Ø7.8 x 32 mm	x31
E.		Assembly Screw	x8
F.		Hinge	x4
G.		Screw Ø7 x 14 mm	x8
H.		Screw Ø8 x 37 mm	x12
I.		Screw Ø8 x 25 mm	x8
J.		Wood screw Ø6 x 12 mm	x30
K.		Screw Ø4 x 12 mm	x15
L.		Screw Ø6 x 19 mm	x16
M.		Wedge	x16
N.		Bolt M6 x 30 mm	x7
O.		Shelf Pin	x8
P.		Adjustable Leveller	x2
Q.		Floor Glide	x16
R.		Rear Clamp	x1
S.		Drawer Runner A (L/R)	x3
T.		Drawer Runner B (L/R)	x3
U.		Wall Fixing	x2
V.		Screw Ø6 x 12 mm	x4
W.		Burrel Nut	x2
X.		Allen key	x1
Y.		Sticker	x5

What you need:



Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

COMPONENTS

1	Top Panel	x1
8	Front Horizontal Panel	x2
9	Back Horizontal Panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x8
D	Dowel Ø7.8 x 32 mm	x13
V	Screw Ø6 x 12 mm	x2
U	Wall Fixing	x2

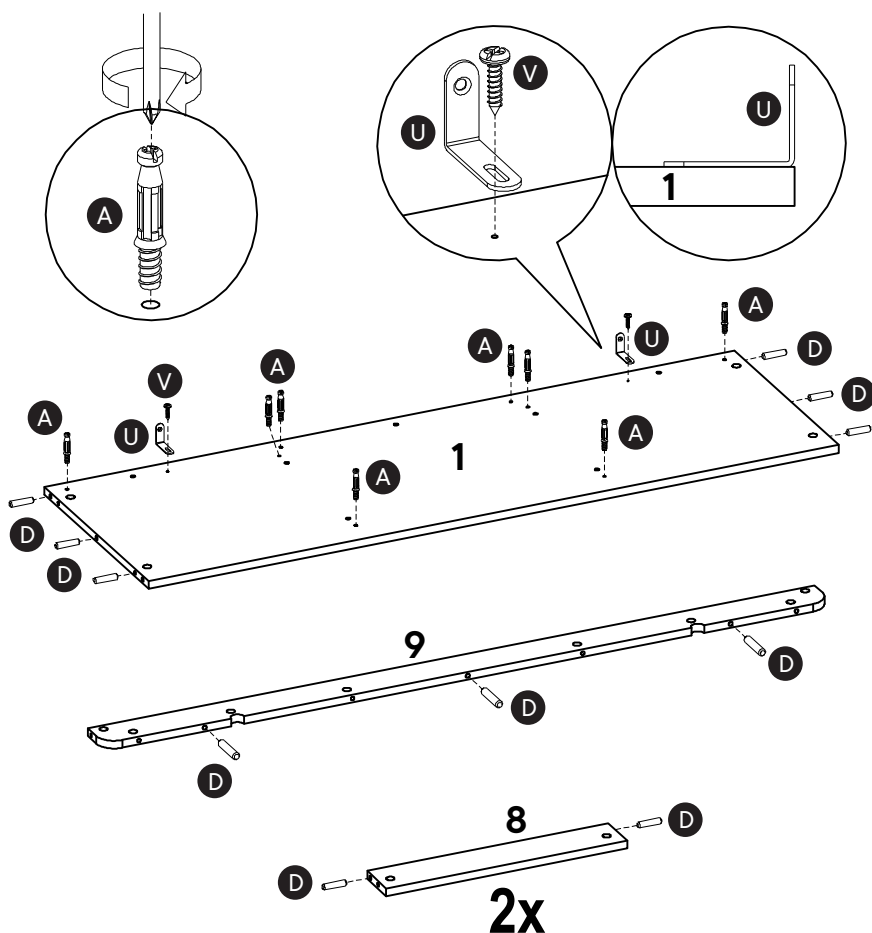


Step 2

COMPONENTS

5	Right middle Panel	x1
6	Left middle Panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x4
D	Dowel Ø7.8 x 32 mm	x8
J	Wood screw Ø6 x 12 mm	x12
S	Drawer runner A (L/R)	x3

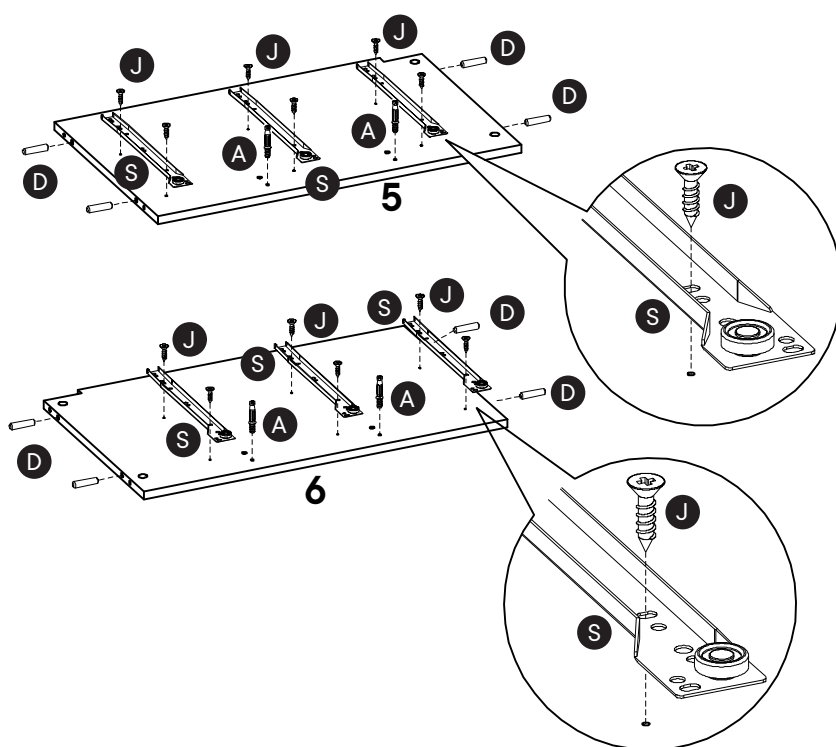


Step 3

COMPONENTS

1	Top Panel	x1
9	Back Horizontal Panel	x1

HARDWARE

B	Camlock Ø15 mm	x4
---	----------------	----

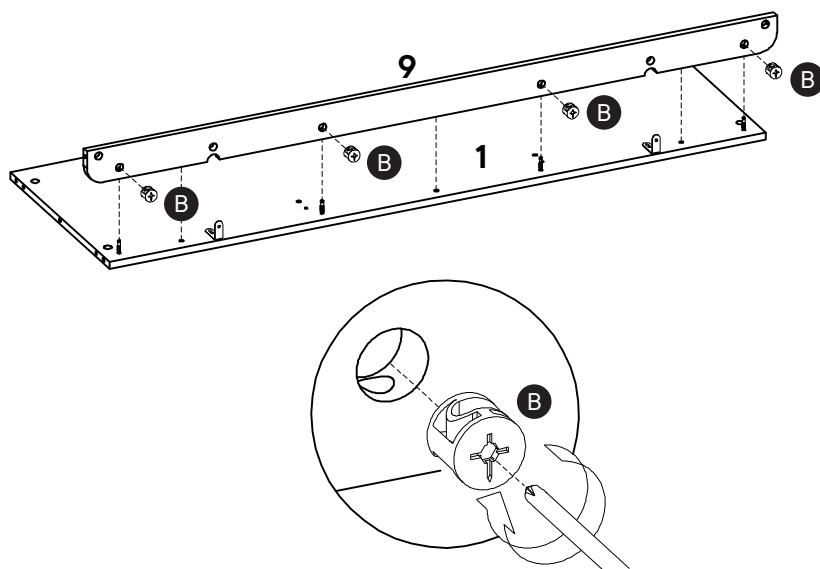


Step 4

COMPONENTS

5	Right middle panel	x1
6	Left middle panel	x1
8	Front horizontal panel	x2

HARDWARE

B	Camlock Ø15 mm	x4
---	----------------	----

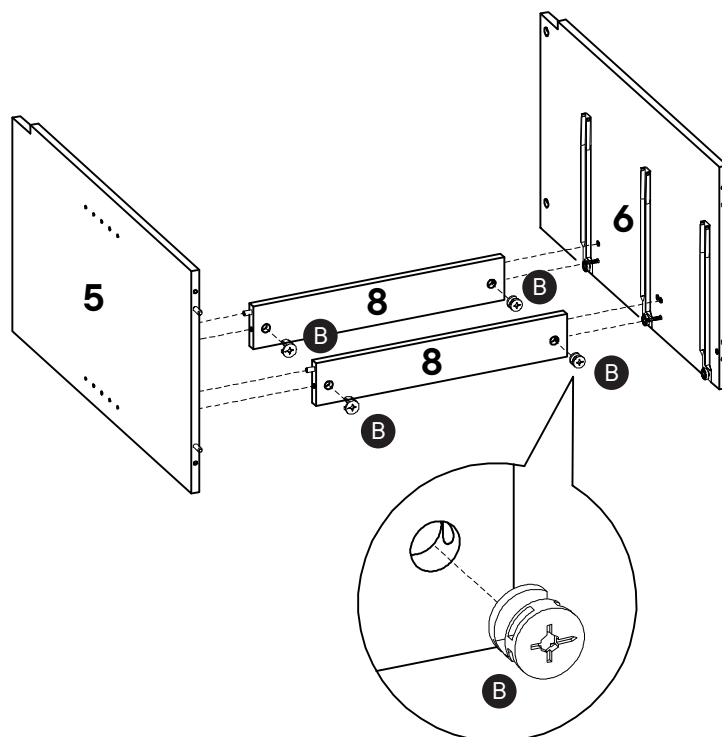


Step 5

COMPONENTS

1 Top Panel x1

HARDWARE

B Camlock Ø15 mm x4

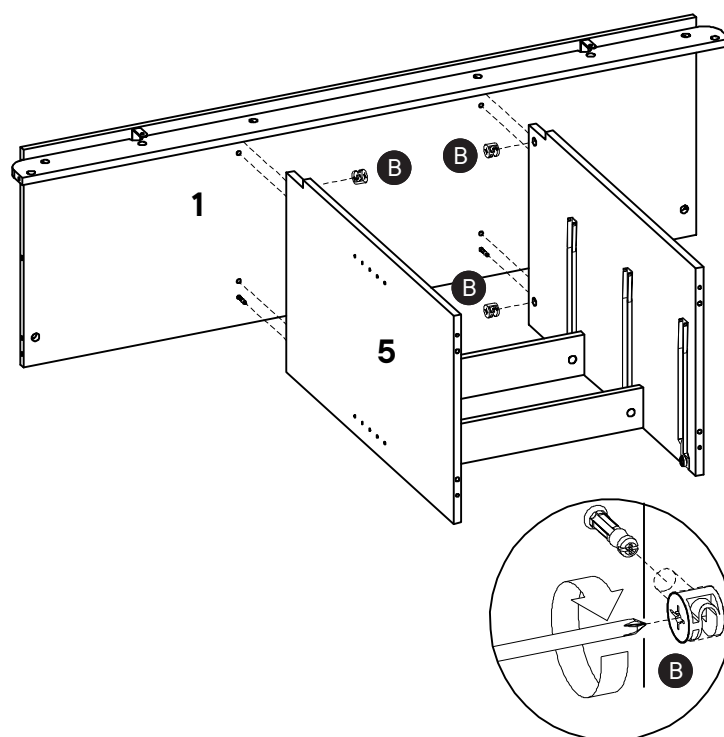

Step 6

COMPONENTS

3 Right side panel x1

4 Left side panel x1

11 Center support x2





HARDWARE

A Cambolt Ø6 x 32 mm x6

D Dowel Ø7.8 x 32 mm x4

P Adjustable leveller x2

W Barrel Nut x2

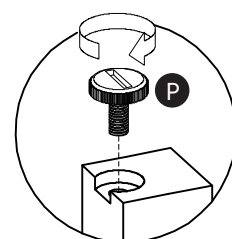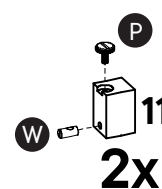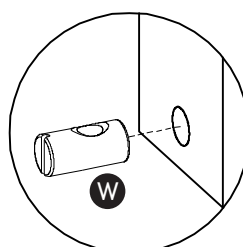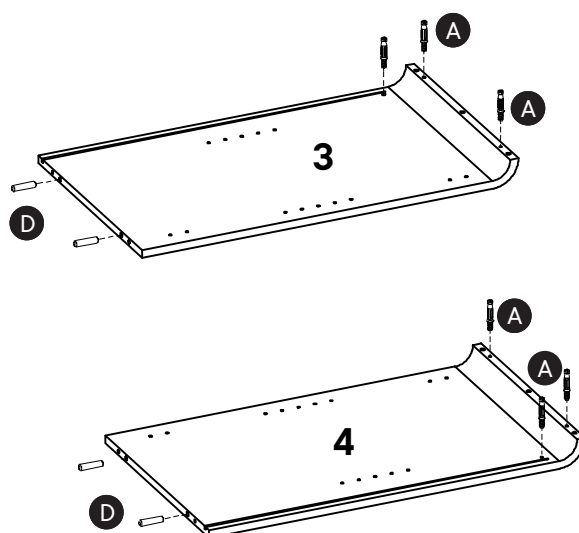


Step 7

COMPONENTS

3	Right side panel	x1
4	Left side panel	x1

HARDWARE

B	Camlock Ø15 mm	x6
C	Cover cap	x4

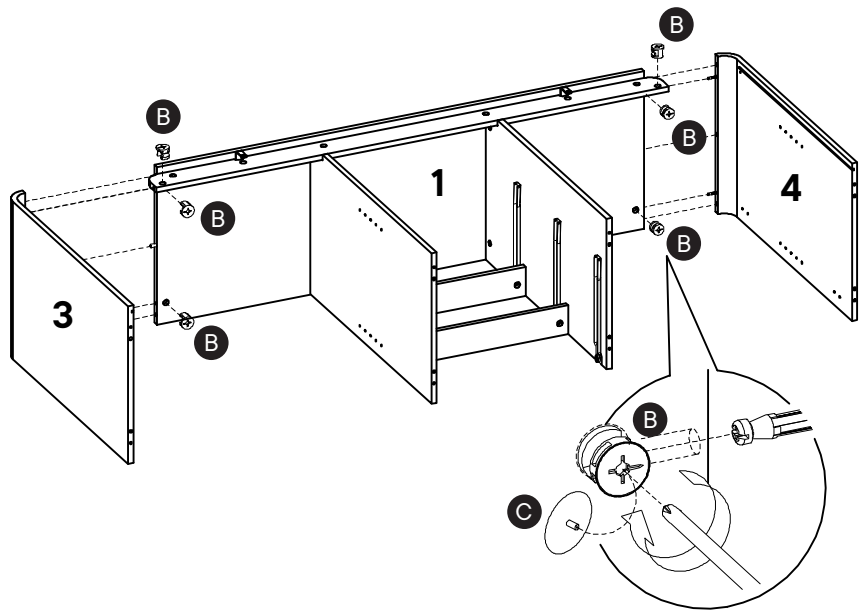

Step 8



COMPONENTS

2	Bottom panel	x1
11	Center support	x2

HARDWARE

N	Bolt M6 x 30 mm	x2
X	Allen key	x1

Adjustable Leveller to be in back

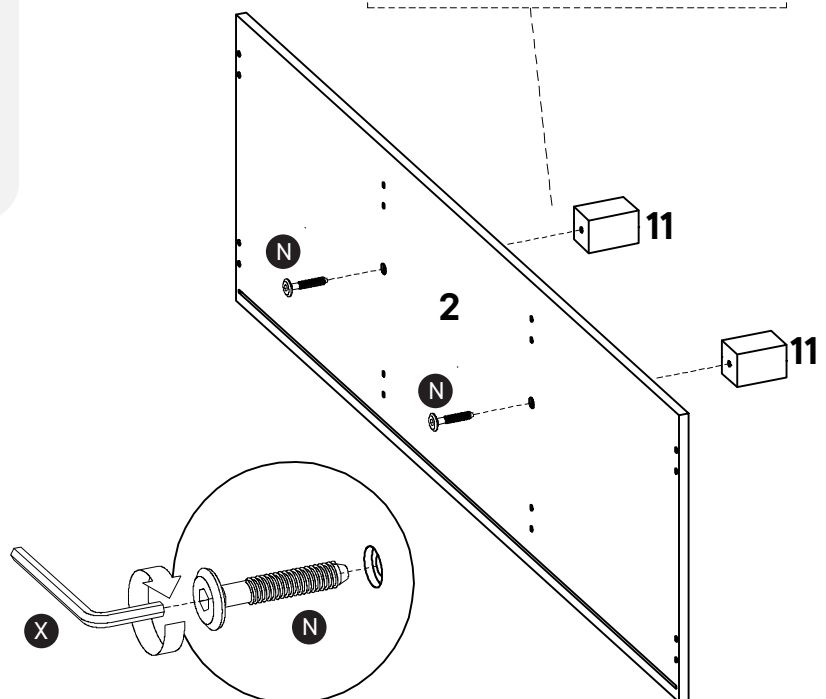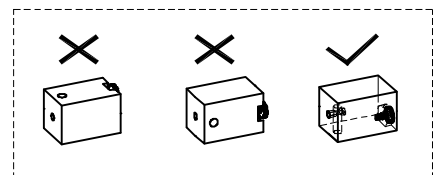


Step 9

COMPONENTS

12	Top back panel	x1
13	Bottom back panel	x1

HARDWARE


R	Rear Clamp	x1
---	------------	----

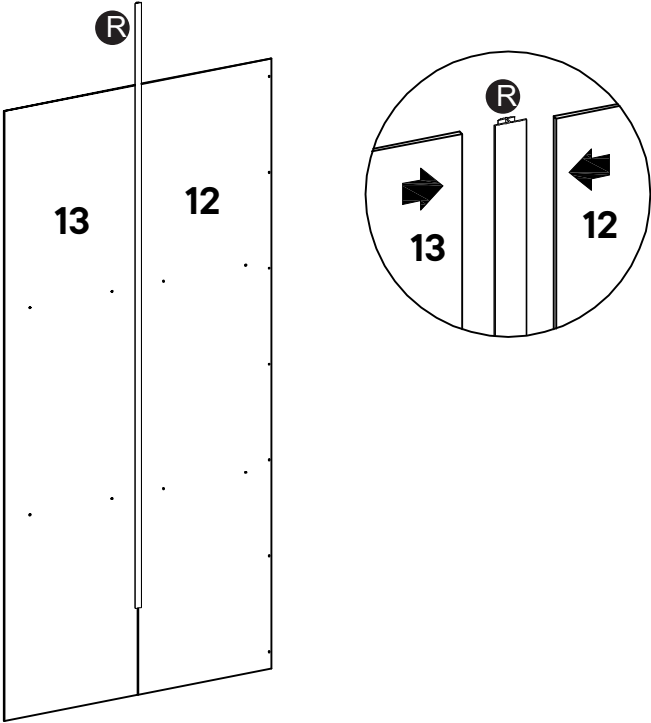

Step 10

COMPONENTS

12	Top back panel	x1
13	Bottom back panel	x1

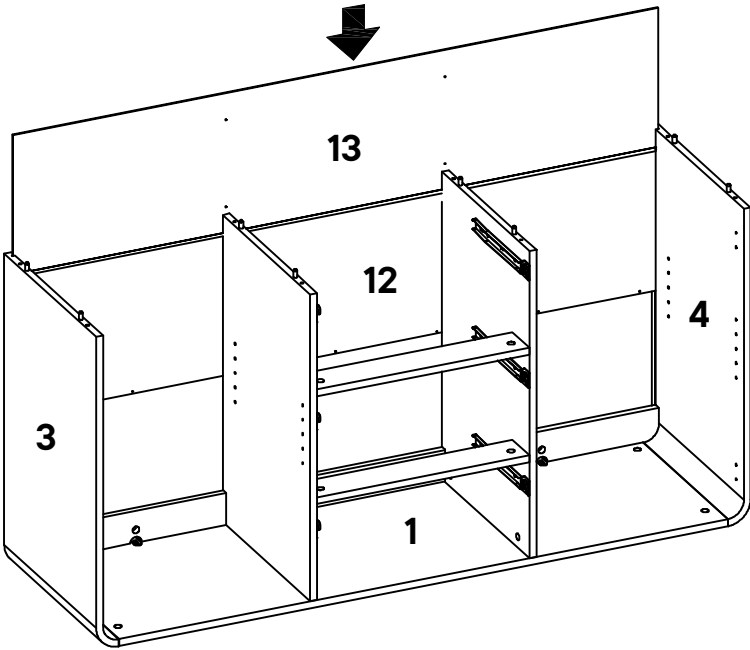


Step 11

COMPONENTS

2 Bottom panel x1

HARDWARE

E Assembly screw x8

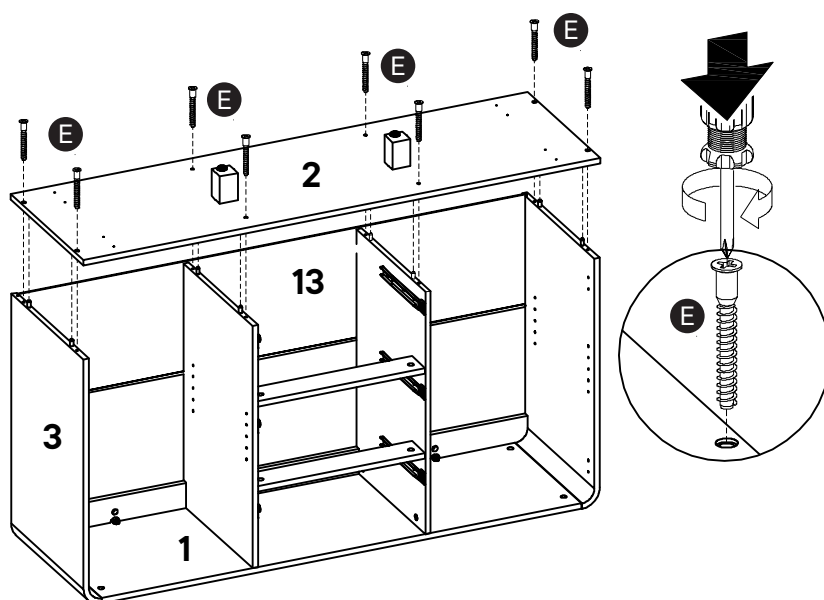

Step 12


COMPONENTS

10 Leg x4

HARDWARE

I Screw Ø8 x 25 mm x8


Q Floor glide x16

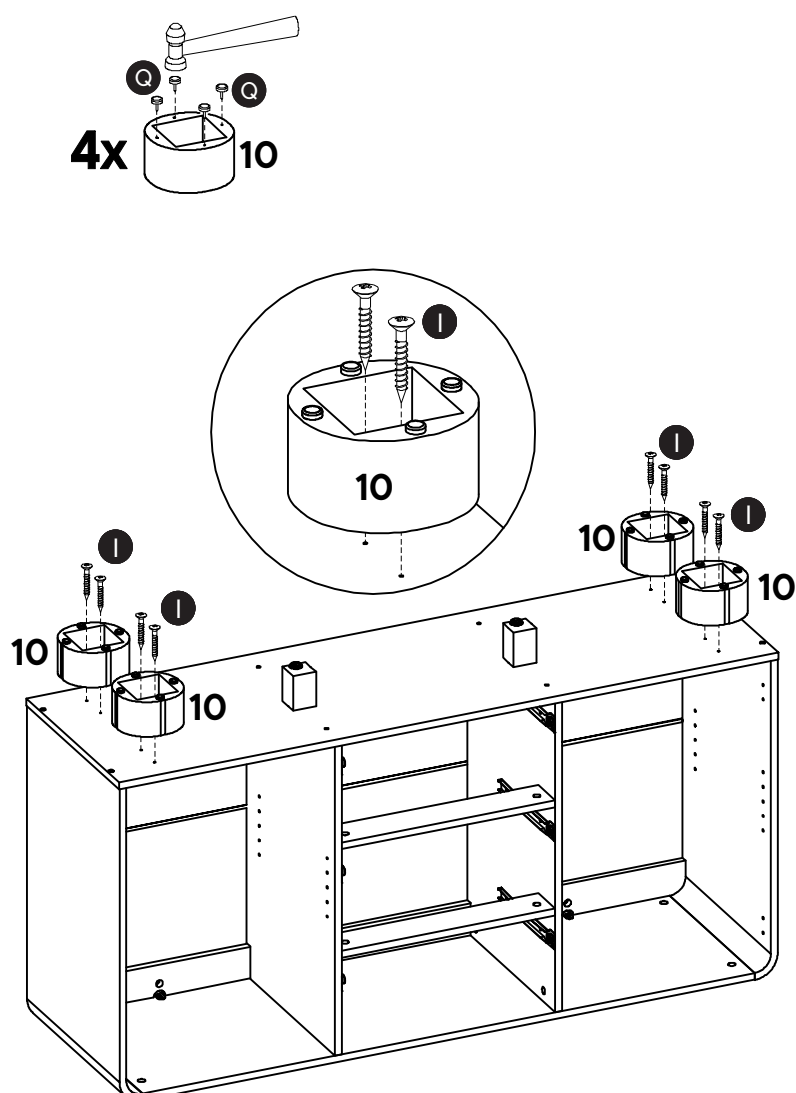

Step 13

HARDWARE

K	Screw Ø4 x 12 mm	x15
L	Wedge	x10
M	Screw Ø6 x 19 mm	x10

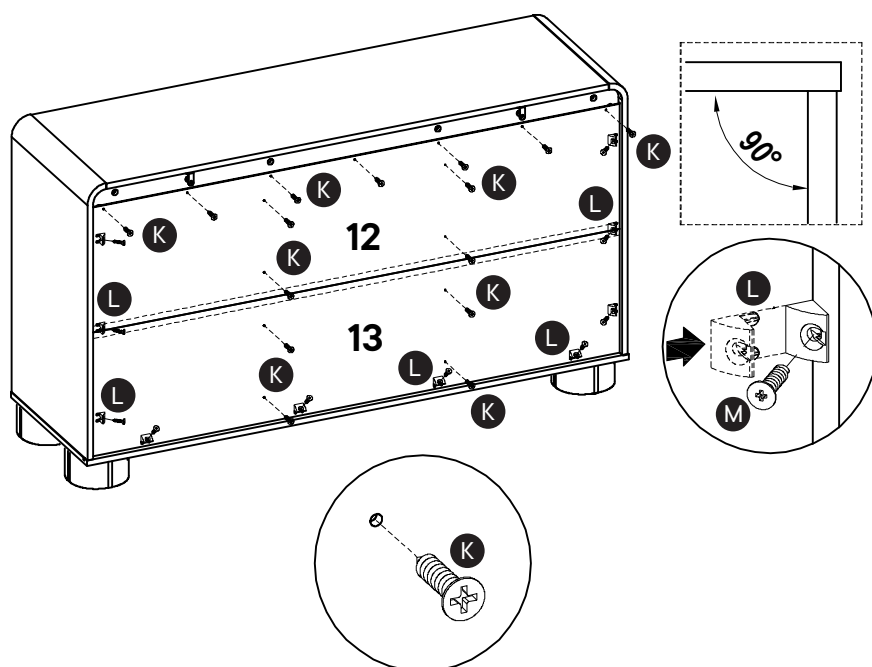


Step 14

COMPONENTS

14	Right door panel	x1
15	Left door panel	x1

HARDWARE


F	Hinge	x4
G	Screw Ø7 x 14 mm	x8

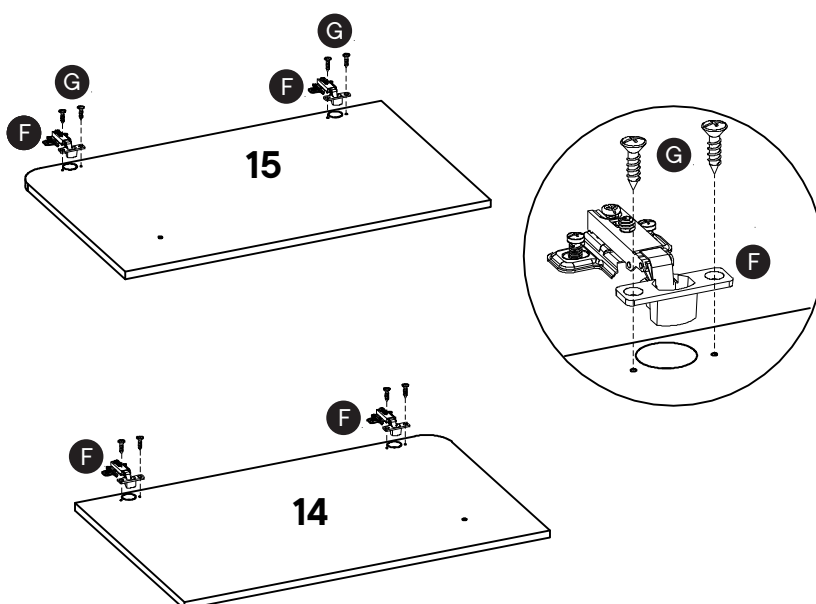


Step 15

COMPONENTS


- | | | |
|----|------------------|----|
| 14 | Right door panel | x1 |
| 15 | Left door panel | x1 |

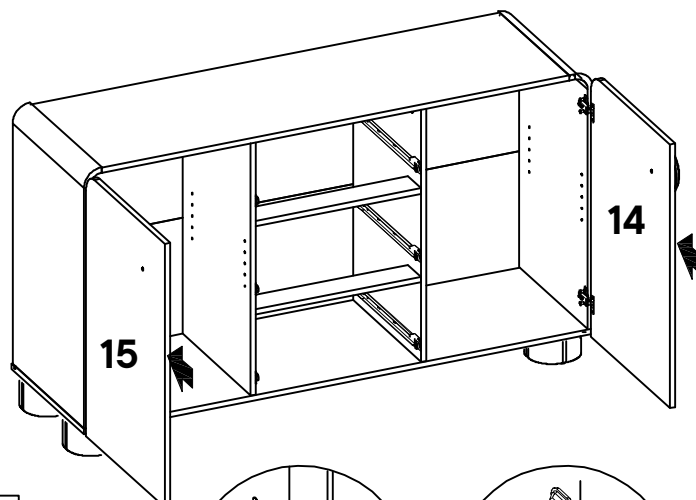


Adjust the hinges, if required.

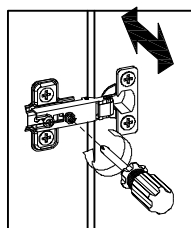


Adjust Laterally

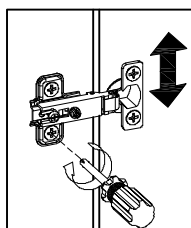

Adjust Vertically

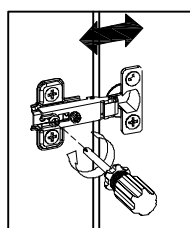

Adjust Depth

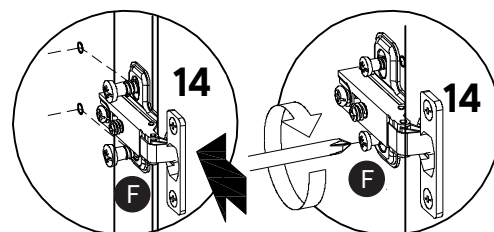

Step 16



COMPONENTS

- | | | |
|----|--------|----|
| 21 | Handle | x2 |
|----|--------|----|

HARDWARE

- | | | |
|---|-----------------|----|
| N | Bolt M6 x 30 mm | x2 |
| X | Allen key | x1 |
| Y | Sticker | x2 |

The handle's grain direction

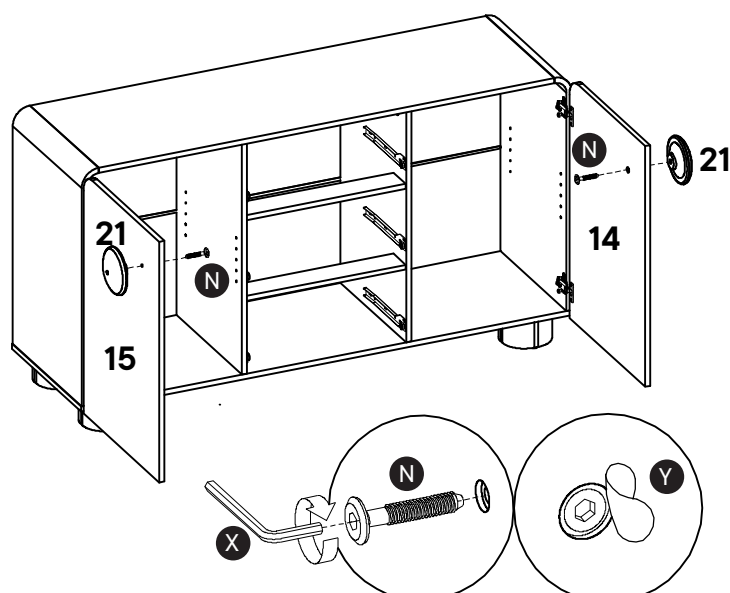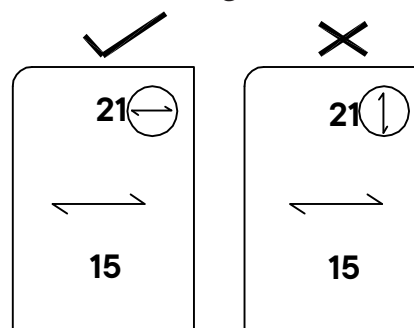


Step 17

COMPONENTS

7 Adjustable shelf x2

HARDWARE

0 Shelf pin x8

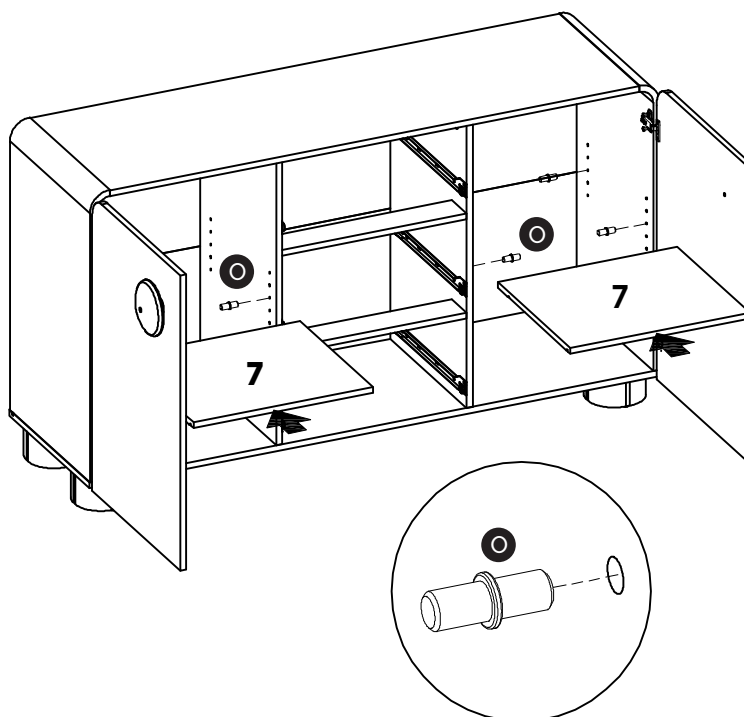

Step 18

COMPONENTS

16 Front drawer panel x3

17 Right side drawer panel x3




18 Left side drawer panel x3

HARDWARE

A Cambolt Ø6 x 32 mm x12

D Dowel Ø7.8 x 32 mm x6

3x

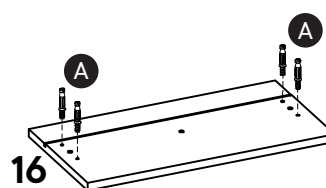


Step 19

COMPONENTS

16	Front drawer panel	x3
17	Right side drawer panel	x3
18	Left side drawer panel	x3
19	Back drawer panel	x3
20	Bottom drawer panel	x3

HARDWARE


B	Camlock Ø15 mm	x12
C	Cover Cap	x12
H	Screw Ø8 x 37 mm	x12

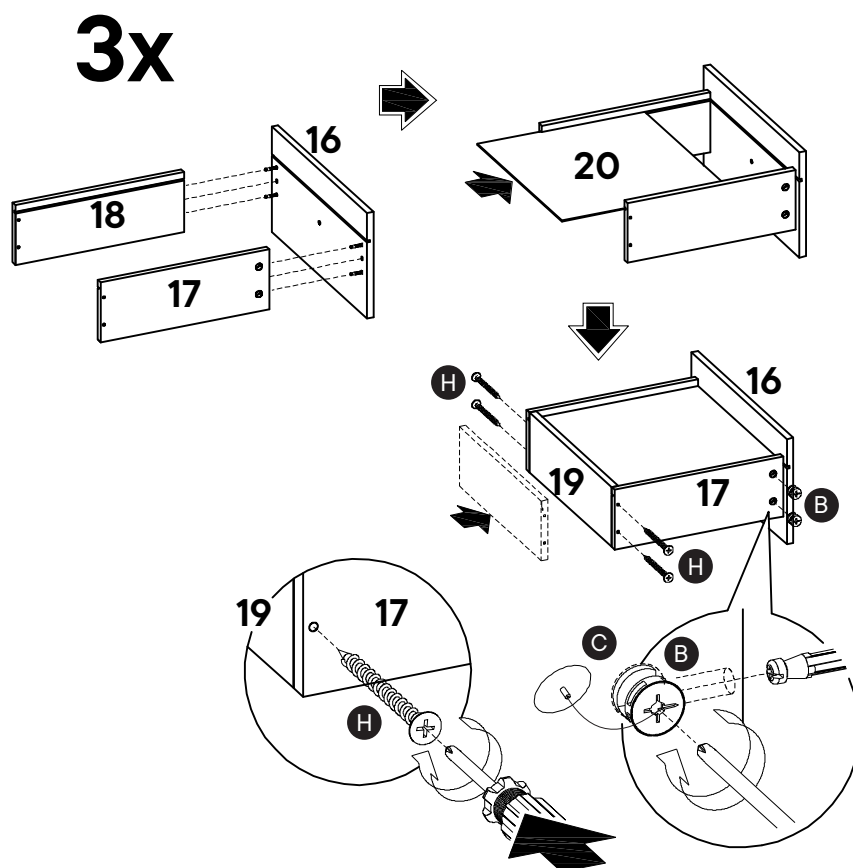

Step 20

HARDWARE

L	Screw Ø6 x 19 mm	x6
M	Wedge	x6
J	Wood screw Ø6 x 12 mm	x12
T	Running drawer B (L/R)	x3

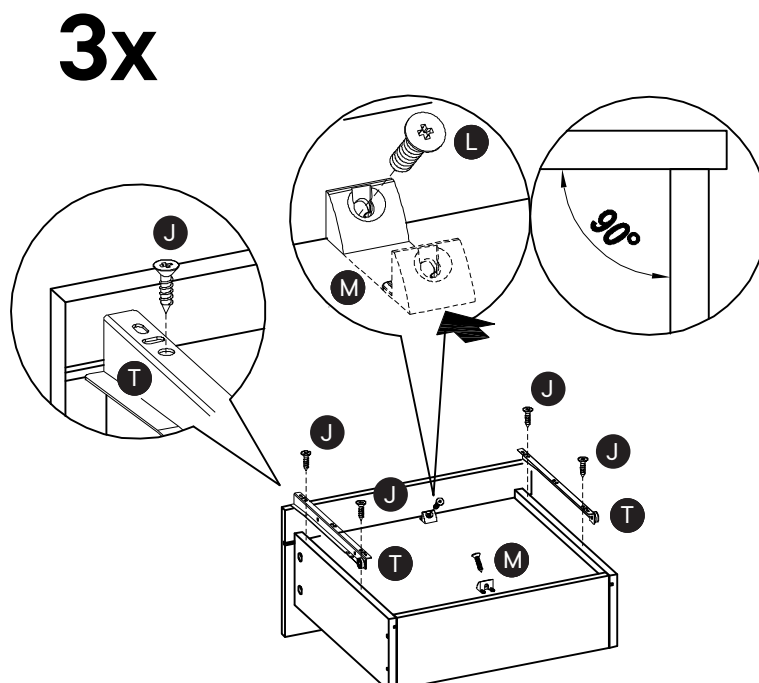

Step 21

COMPONENTS

21 Handle x3



HARDWARE

N Bolt M6 x 30 mm x3

X Allen key x1

Y Sticker x3

The handle's grain direction

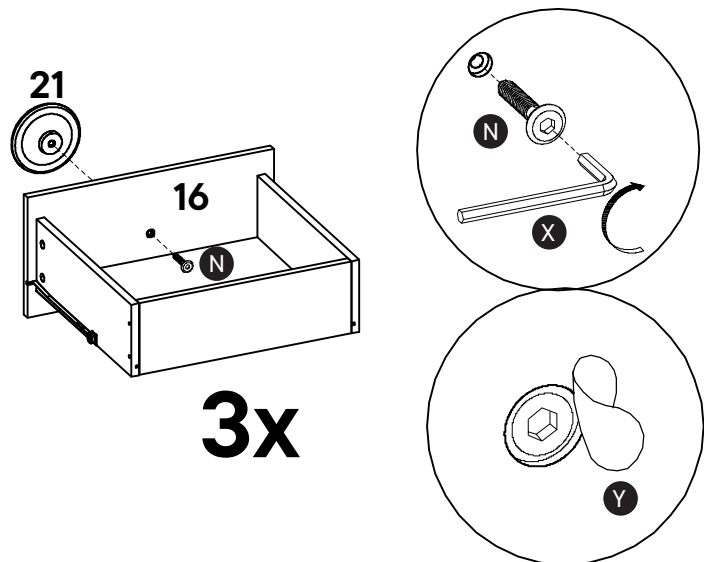
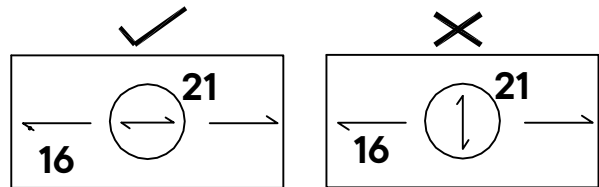


3x


Step 22

HARDWARE

J Wood screw Ø6 x 12 mm x6

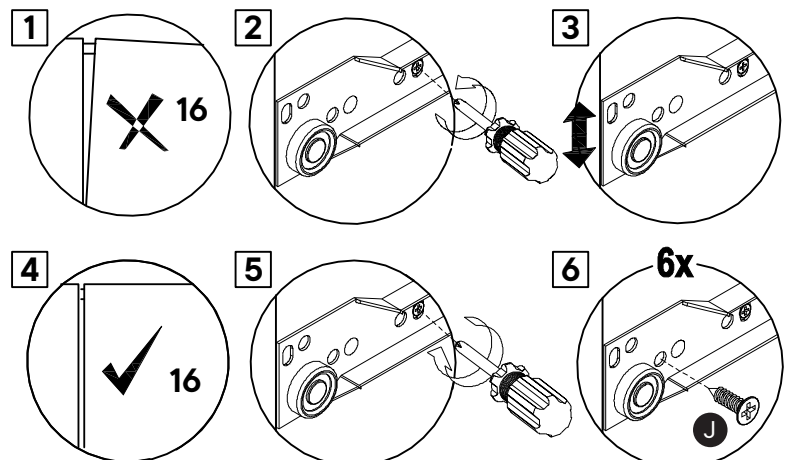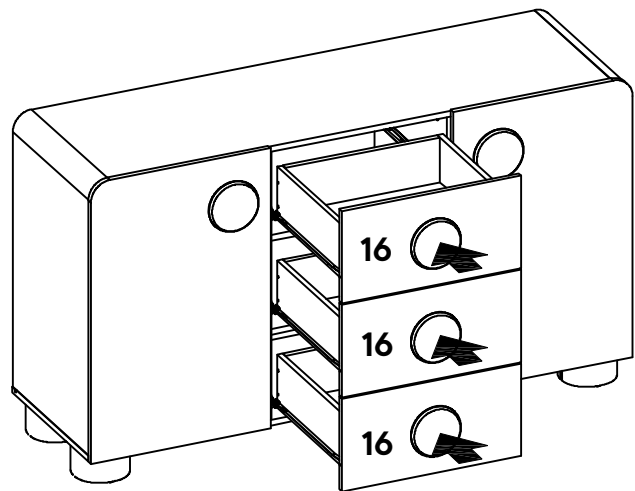


Step 21

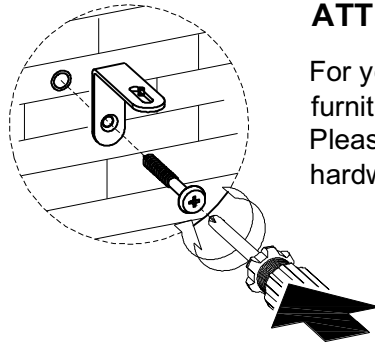

ATTENTION

For your safety it is imperative to fix your furniture to the wall.
Please source the right wall mounting hardware according to the nature of wall.

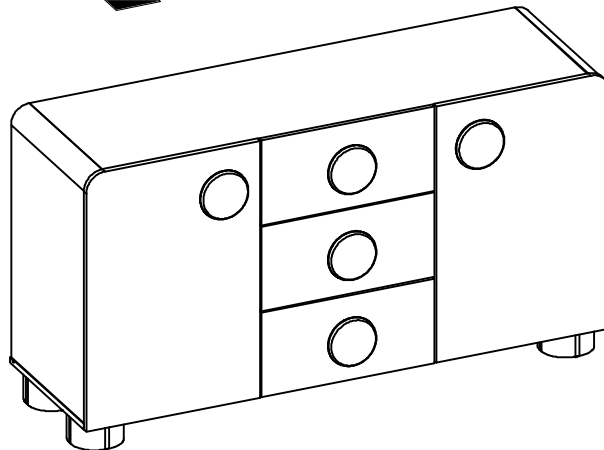

Great job!

Your Sideboard is complete.




CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

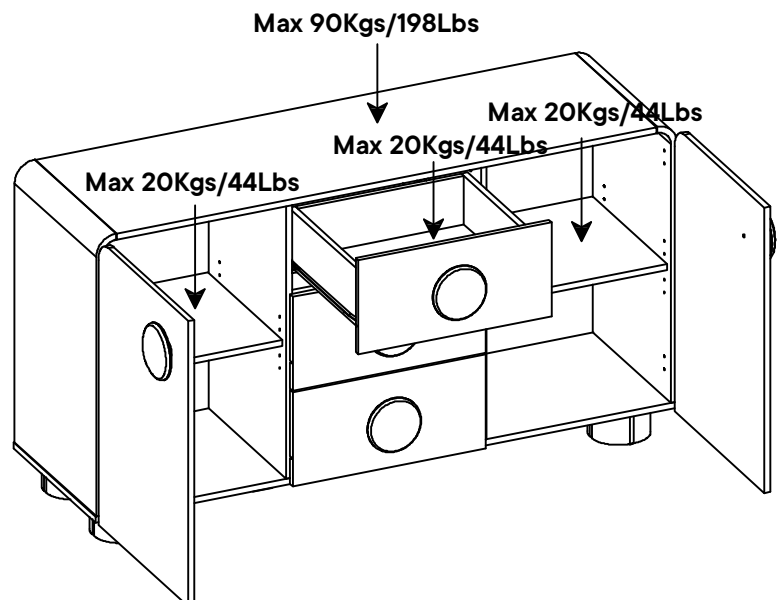

CONNECT WITH US!   

Tag us @modway_furniture and #modway for a chance to be featured.