


ASSEMBLY INSTRUCTIONS

EEI-6309

V4.08.28.24

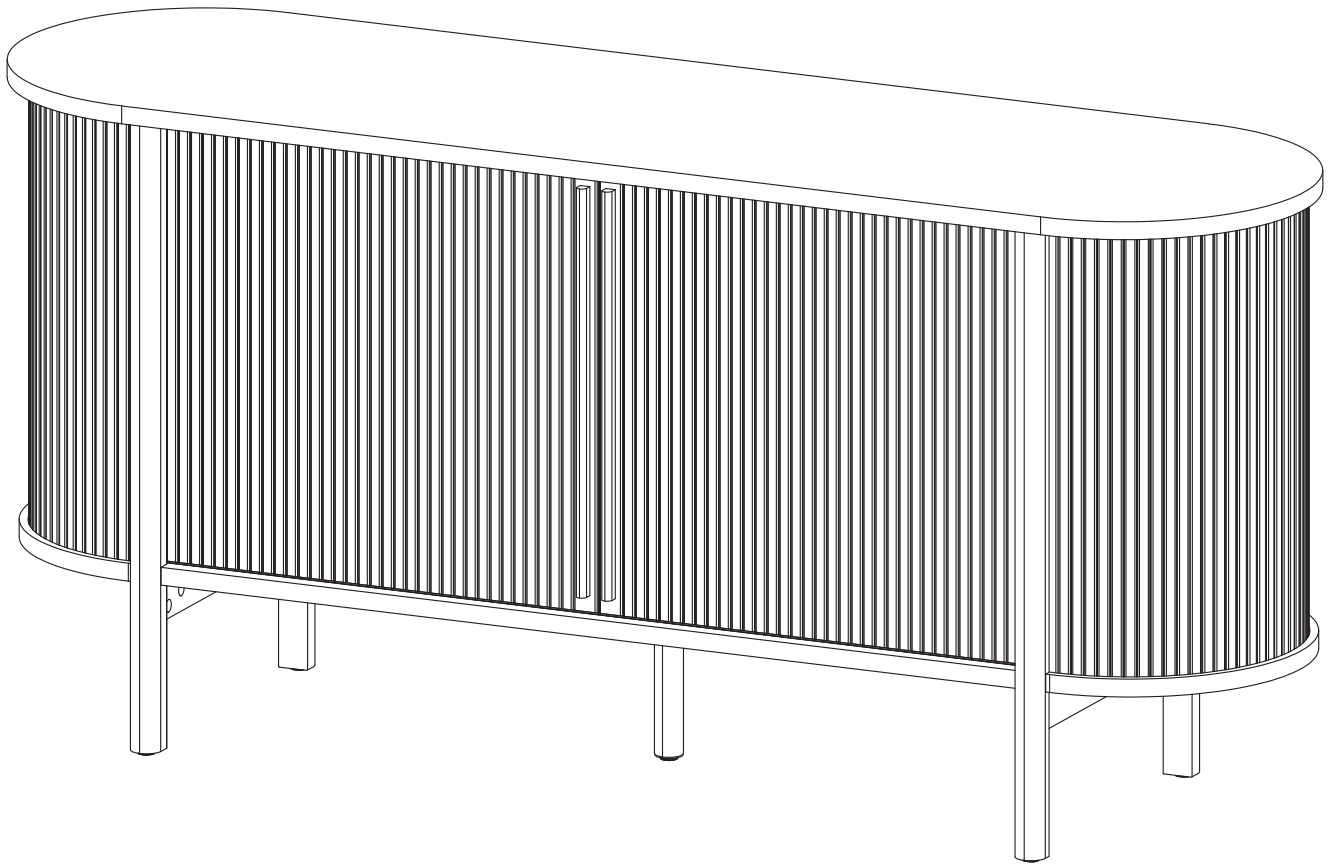

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1	11	Bar Side	x2
2	Bottom Board	x1	12	Front Leg Left	x1
3	Center Board	x1	13	Front Leg Right	x1
4	Fixed Shelf	x2	14	Pillar 1	x2
5	Back Board Center	x1	15	Pillar 2	x2
6	Bottom Skirt Left	x1	16	Sliding Door	x2
7	Bottom Skirt Right	x1	17	Handle	x2
8	Back Leg	x2	18	Back Board Left	x1
9	Back Board Right	x1	LC18A1	Center Leg	x1
10	Bottom Skirt Center	x1			

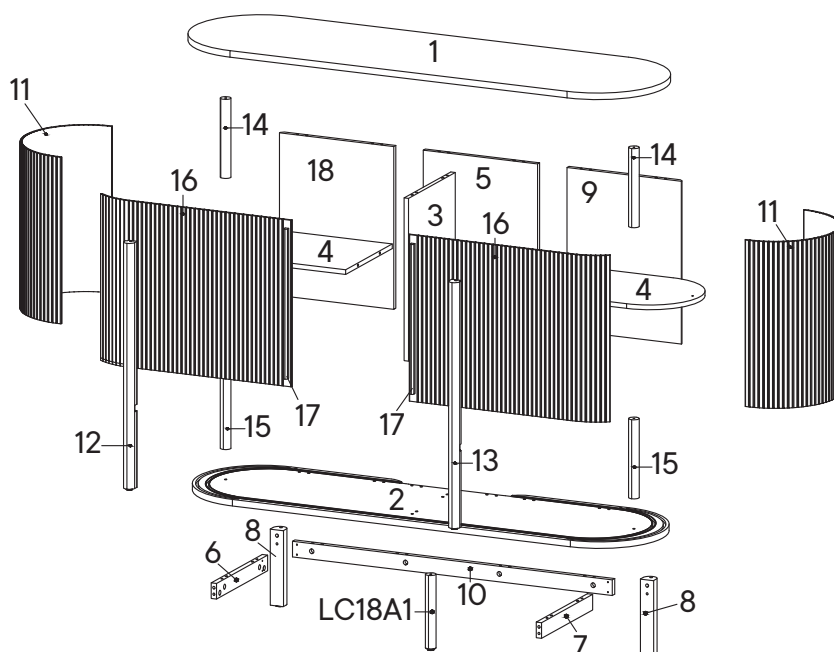


Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x22
B		Cam Lock Ø15 mm	x22
C		Screw Cap Ø15 mm	x2
D		Wood Dowel Ø8 x 30 mm	x28
E		Screw M 7 x 50 mm	x10
F		Allen Key	x2
G		Screw M 6 x 30 mm	x2
H		Screw M 5 x 10 mm	x8
I		Screw M 4.5 x 12.5 mm	x12

J		Bracket	x2
K		Stopper	x2
L		Screw Cap Ø15 mm	x10
M		Wood Dowel Ø8 x 50 mm	x2
PM2		Mounting Plate	x1

What you need:



Components Carton Placement

Carton 1 of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
4	Fixed Shelf	x2
6	Bottom Skirt Left	x1
7	Bottom Skirt Right	x1
10	Bottom Skirt Center	x1
12	Front Leg Left	x1
13	Front Leg Right	x1

Carton 2 of 2

Label	Description	Qty
3	Center Board	x1
5	Back Board Center	x1
8	Back Leg	x2
9	Back Board Right	x1
11	Bar Side	x2
14	Pillar 1	x2
15	Pillar 2	x2
16	Sliding Door	x2
17	Handle	x2
18	Back Board Left	x1
LC18A1	Center Leg	x1
	Hardware Pack	x1

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x10
- D** Wood Dowel Ø8 x 30 mm x4

COMPONENTS

- 1** Top Board x1
- 3** Center Board x1

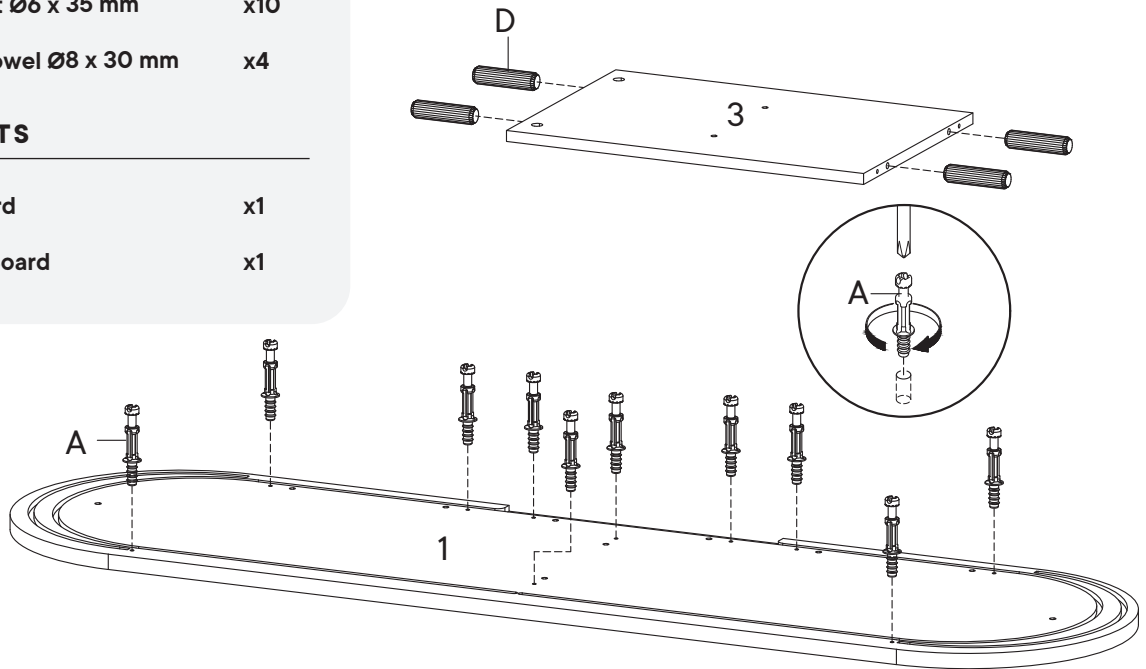


Step 2

HARDWARE

- D** Wood Dowel Ø8 x 30 mm x12

COMPONENTS

- 5** Back Board Center x1
- 9** Back Board Right x1
- 18** Back Board Left x1

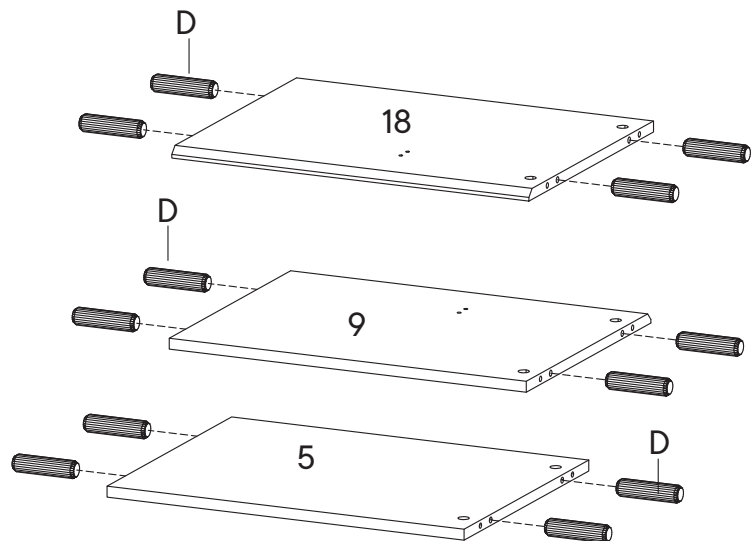





Step 3

HARDWARE

- B** Cam Lock Ø15 mm x2
- C** Screw Cap Ø15 mm x2

COMPONENTS




- 1** Top Board x1
- 3** Center Board x1
- 14** Pillar 1 x2

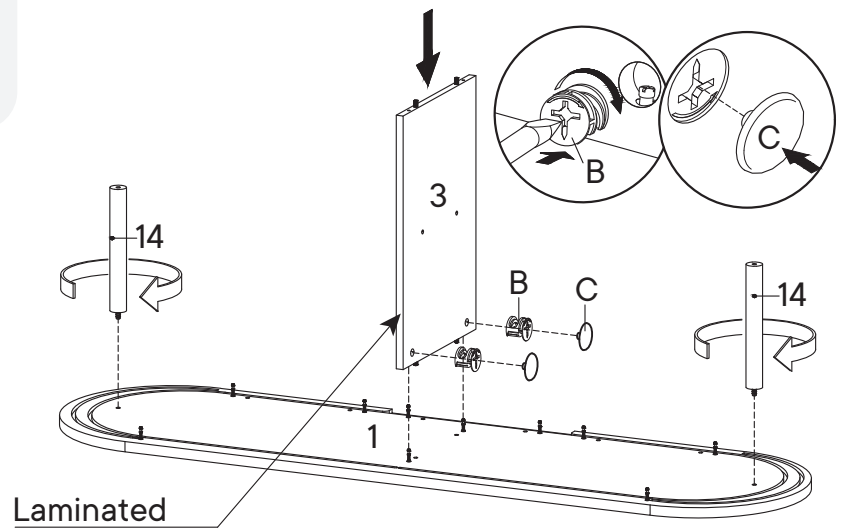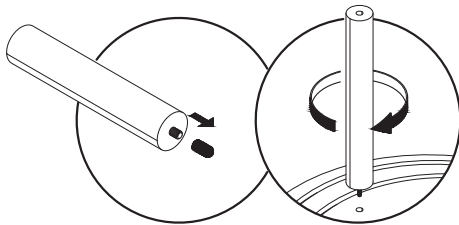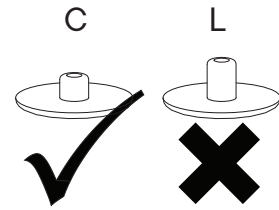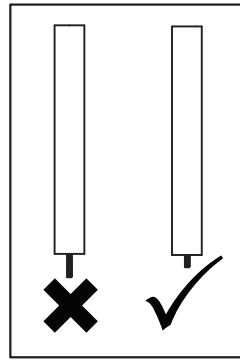

Step 4

HARDWARE


- M** Wood Dowel Ø8 x 50 mm x2

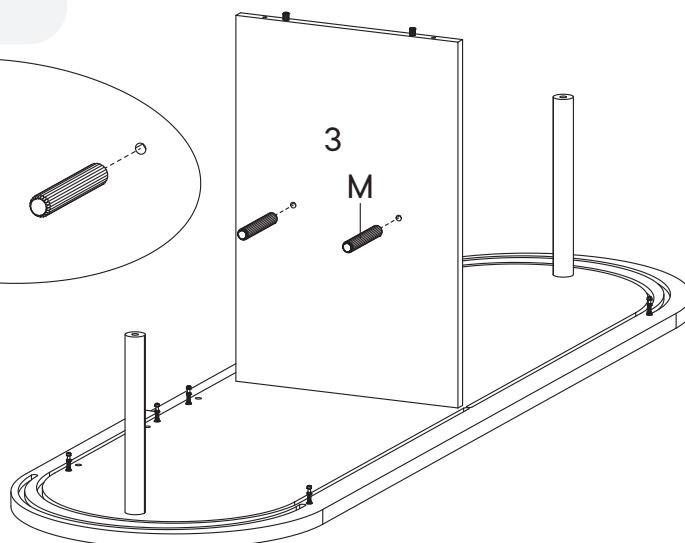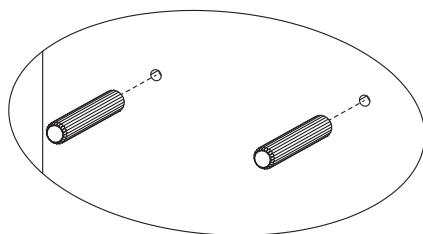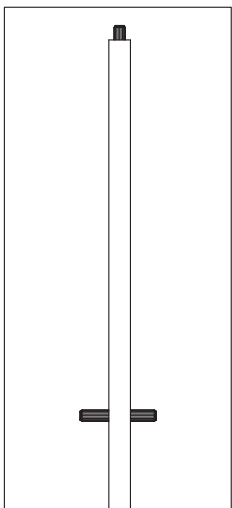

Step 5

COMPONENTS

- 4** Fixed Shelf x2

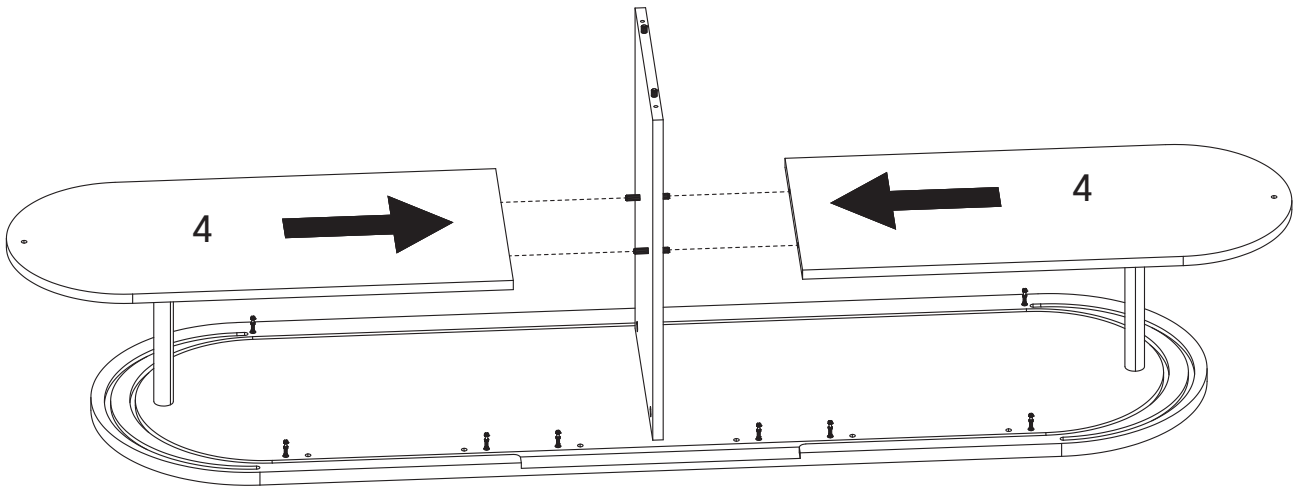


Step 6

HARDWARE

- B** Cam Lock Ø15 mm x6

COMPONENTS


- 5** Back Board Center x1
9 Back Board Right x1
18 Back Board Left x1

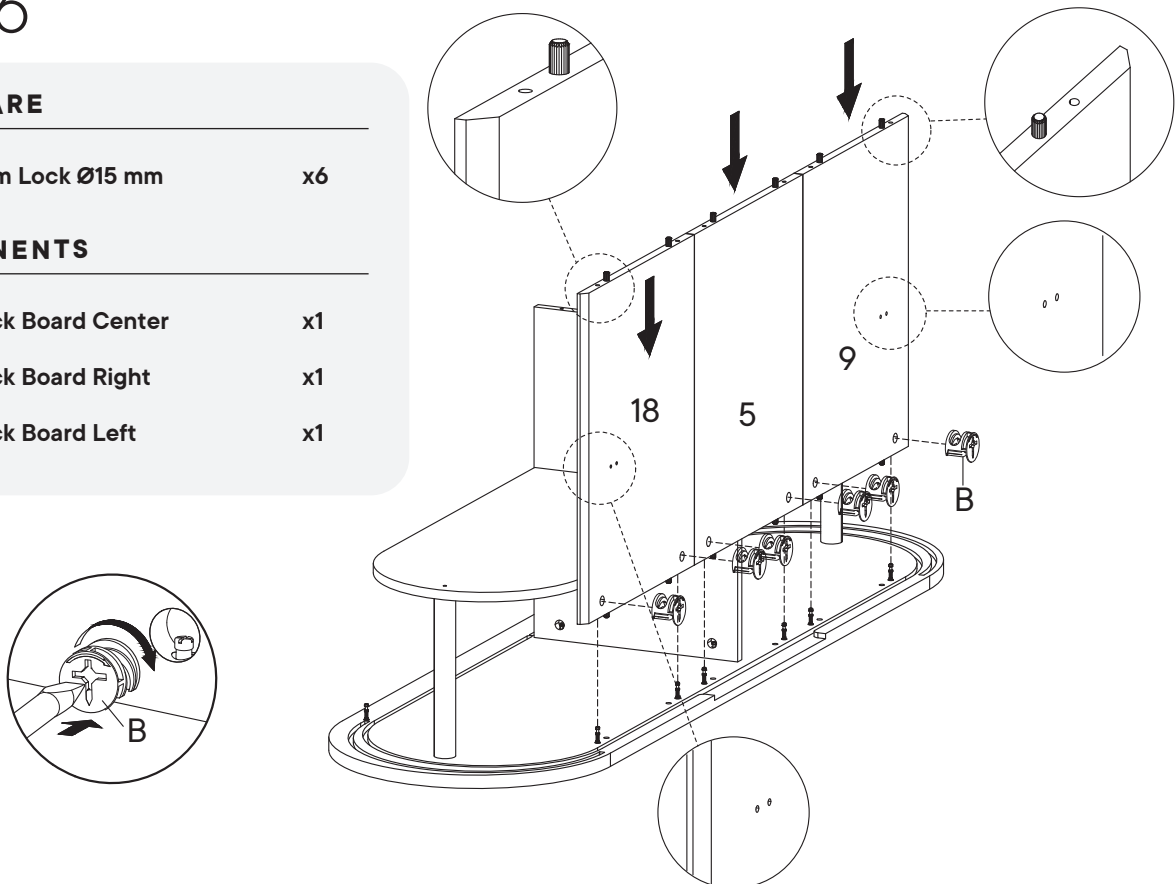

Step 7

COMPONENTS



15 Pillar 2 x2

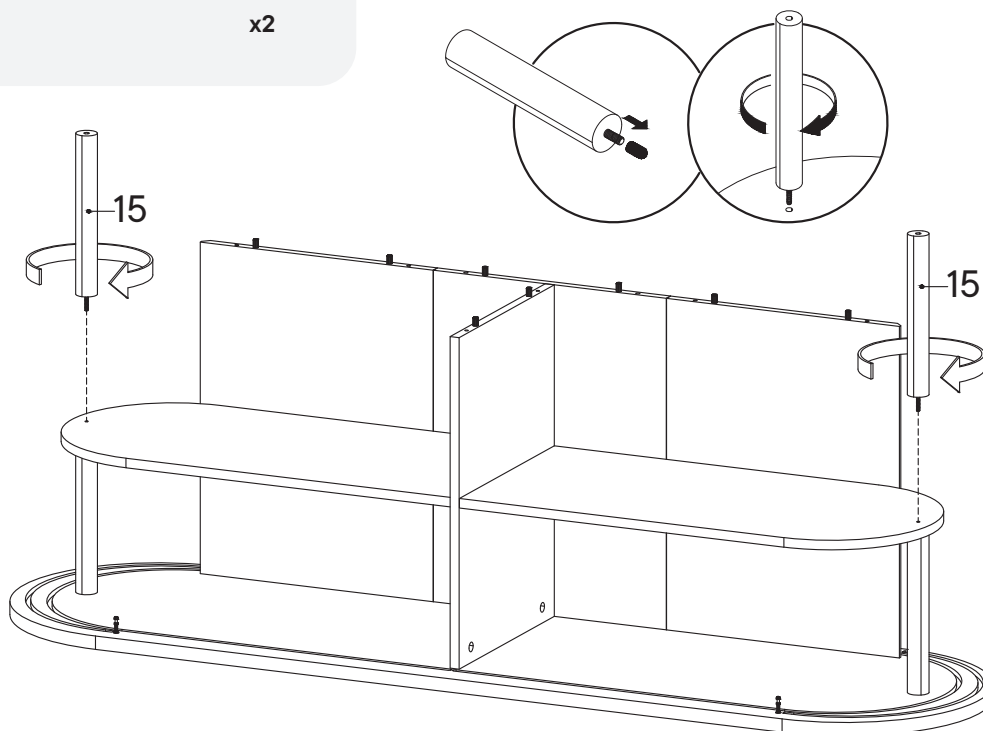

Step 8

COMPONENTS



11 Bar Side x1

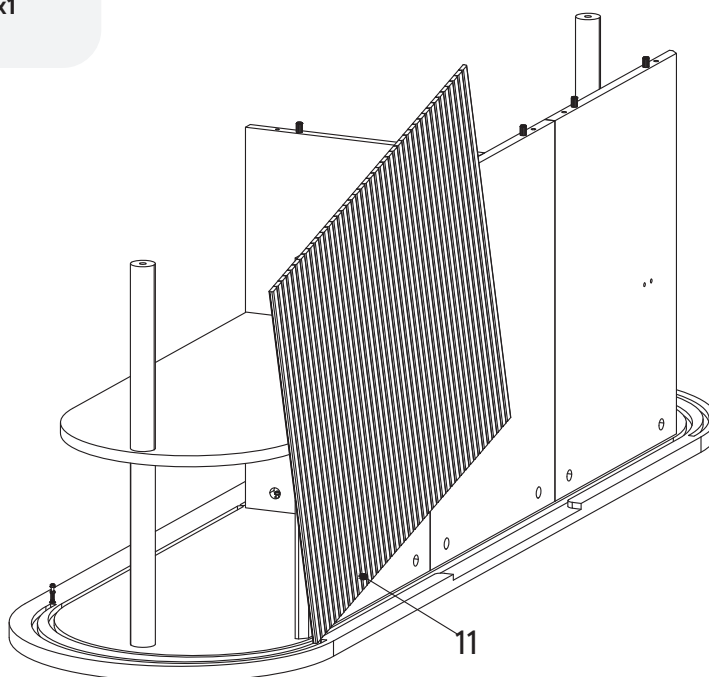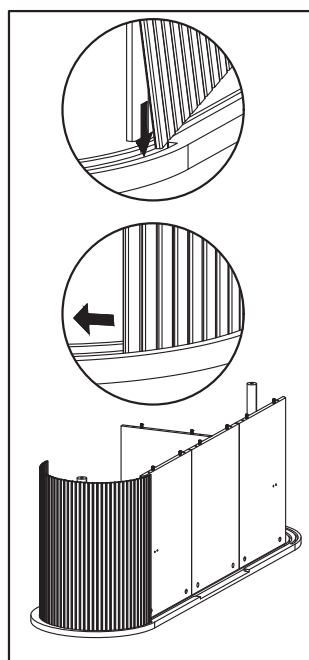

Step 9

COMPONENTS

- 11 Bar Side x1

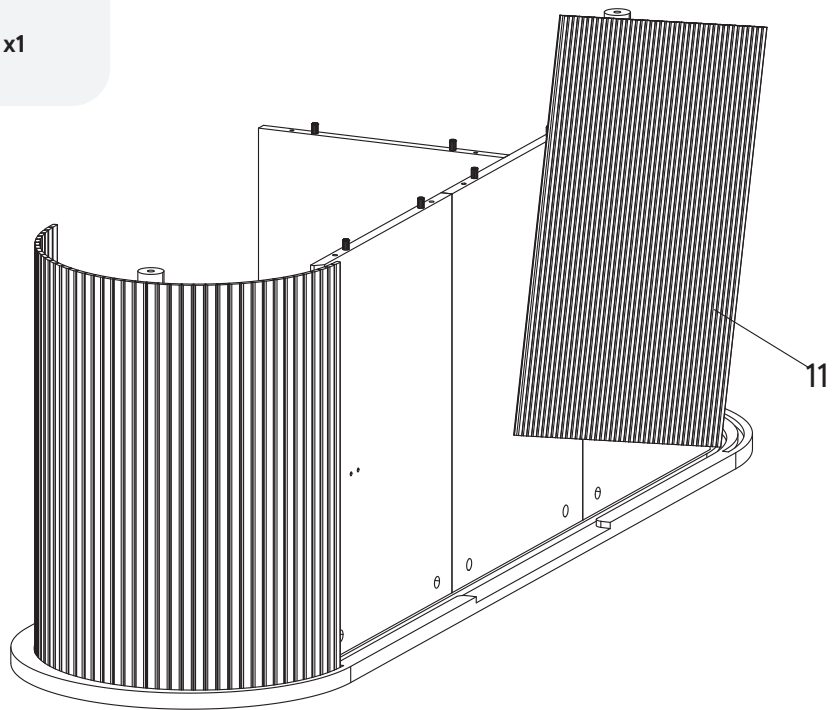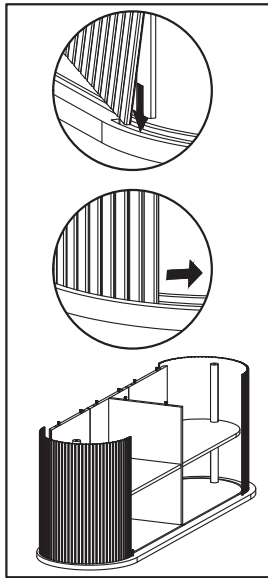



Step 10

HARDWARE

- E Screw M 7 x 50 mm x8
F Allen Key x1
G Screw M 6 x 30 mm x2

COMPONENTS


- 2 Bottom Board x1

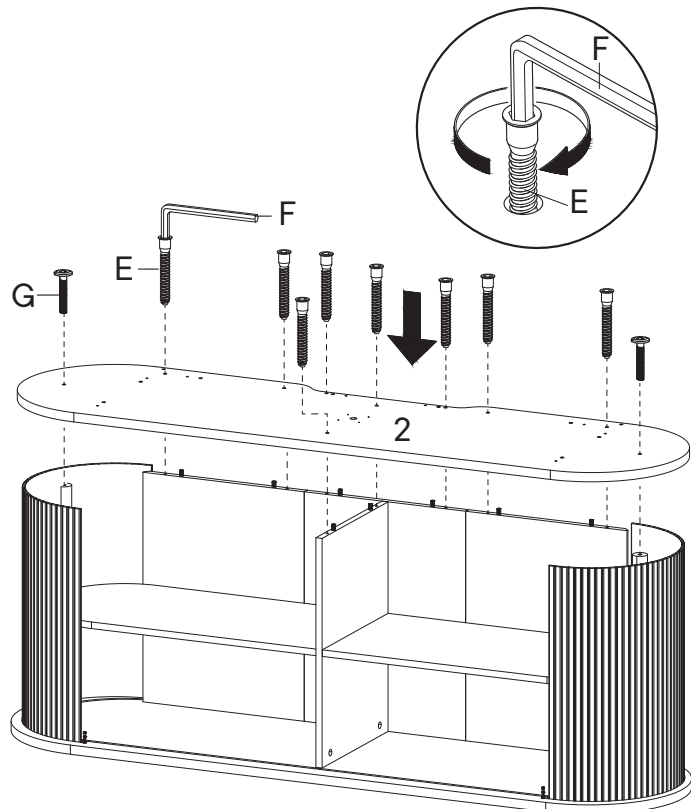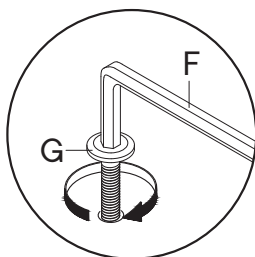

Step 11

HARDWARE

A Cam Bolt Ø6 x 35 mm x8

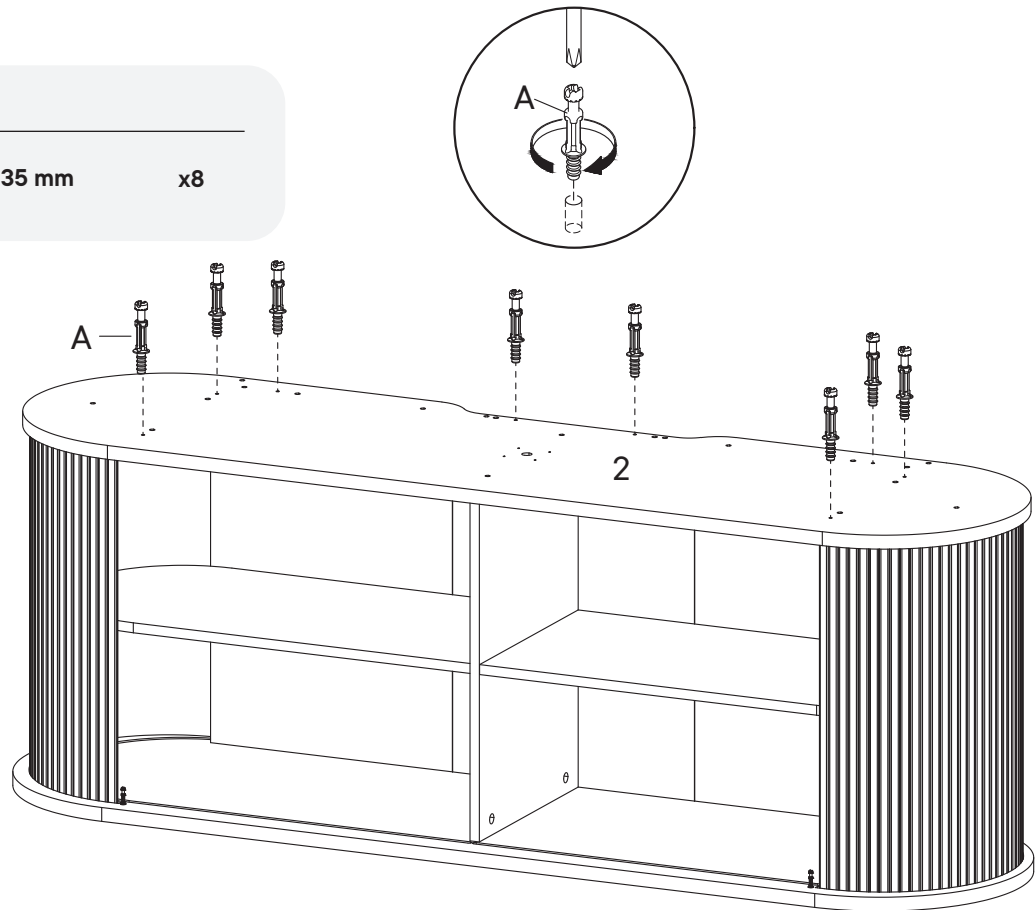


Step 12

HARDWARE

I Screw M 4.5 x 12.5 mm x4

PM2 Mounting Plate x1

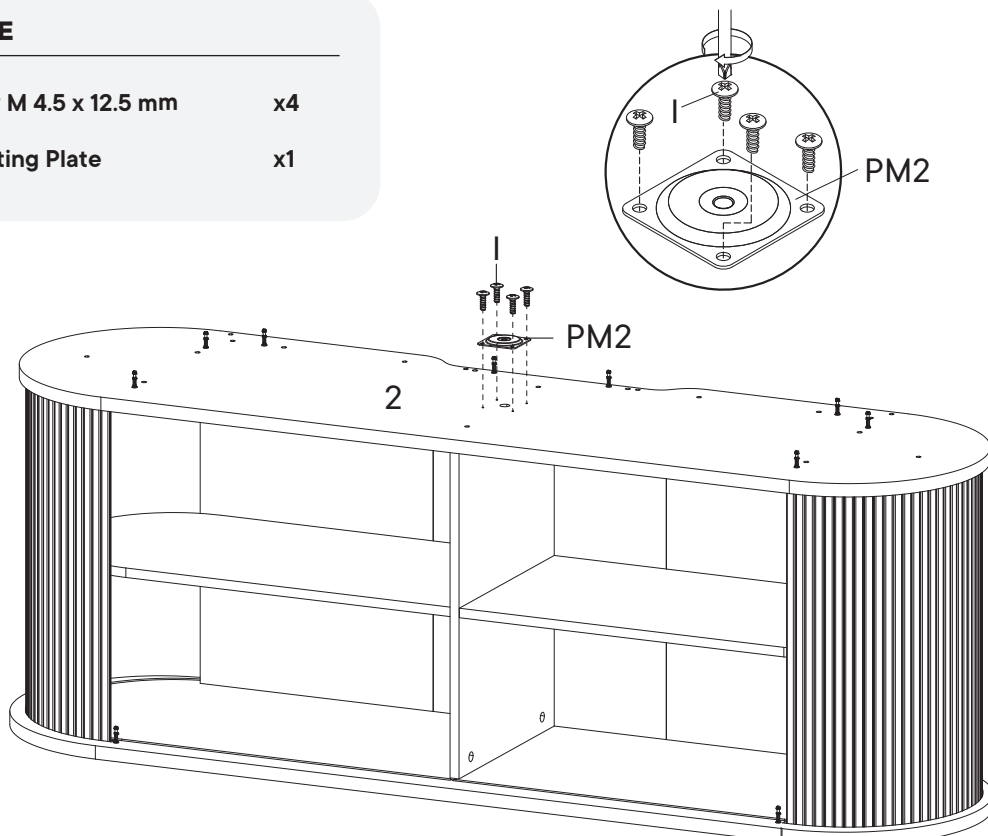


Step 13

HARDWARE

- D** Wood Dowel Ø8 x 30 mm x4
- I** Screw M 4.5 x 12.5 mm x4
- J** Bracket x2

COMPONENTS


- 10** Bottom Skirt Center x1

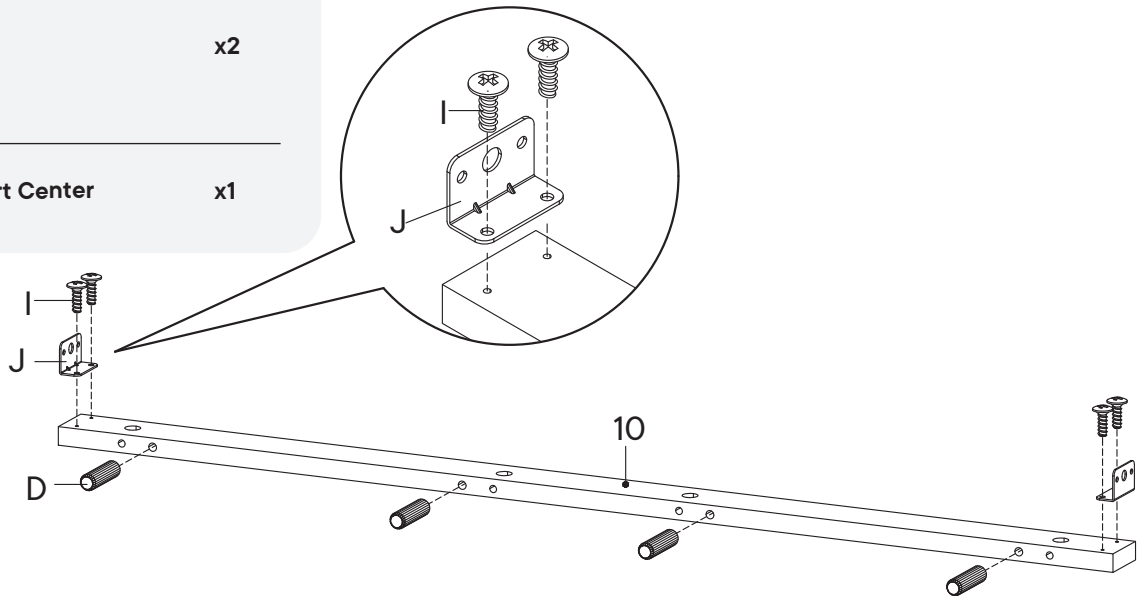

Step 14

COMPONENTS

- 10** Bottom Skirt Center x1

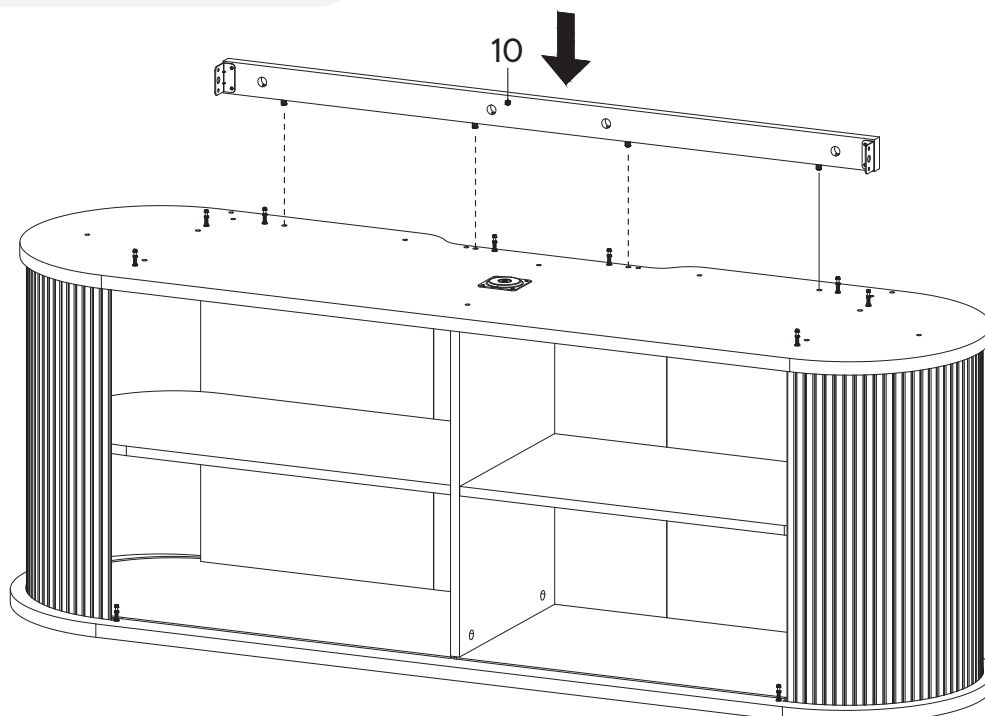


Step 15

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2
- D** Wood Dowel Ø8 x 30 mm x8

COMPONENTS

- 6** Bottom Skirt Left x1
- 7** Bottom Skirt Right x1
- 8** Back Leg x2

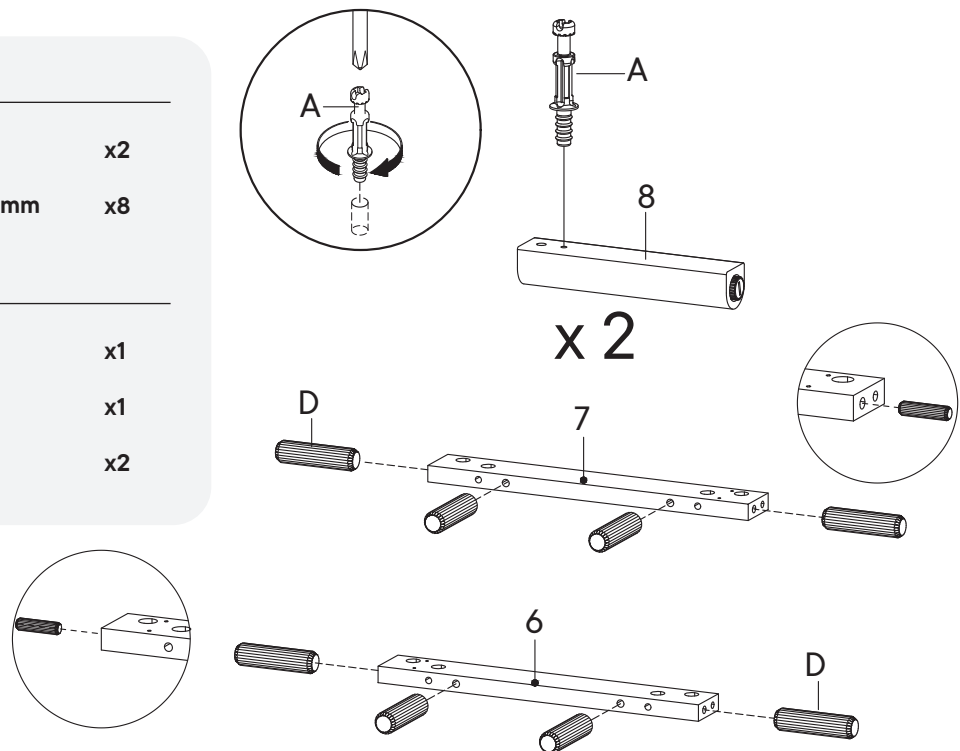



Step 16

HARDWARE

- B** Cam Lock Ø15 mm x2

COMPONENTS


- 6** Bottom Skirt Left x1
- 7** Bottom Skirt Right x1
- 8** Back Leg x2

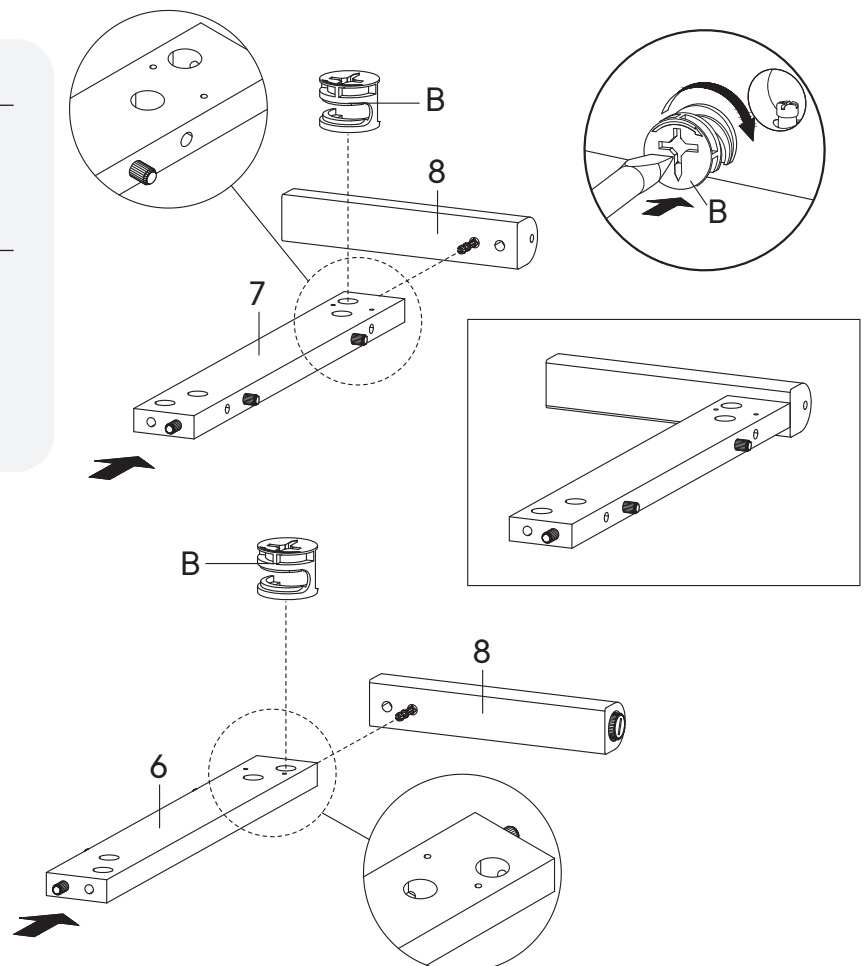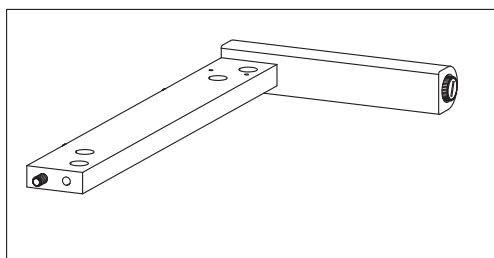

Step 17

COMPONENTS

- | | | |
|---|--------------------|----|
| 6 | Bottom Skirt Left | x1 |
| 7 | Bottom Skirt Right | x1 |
| 8 | Back Leg | x2 |

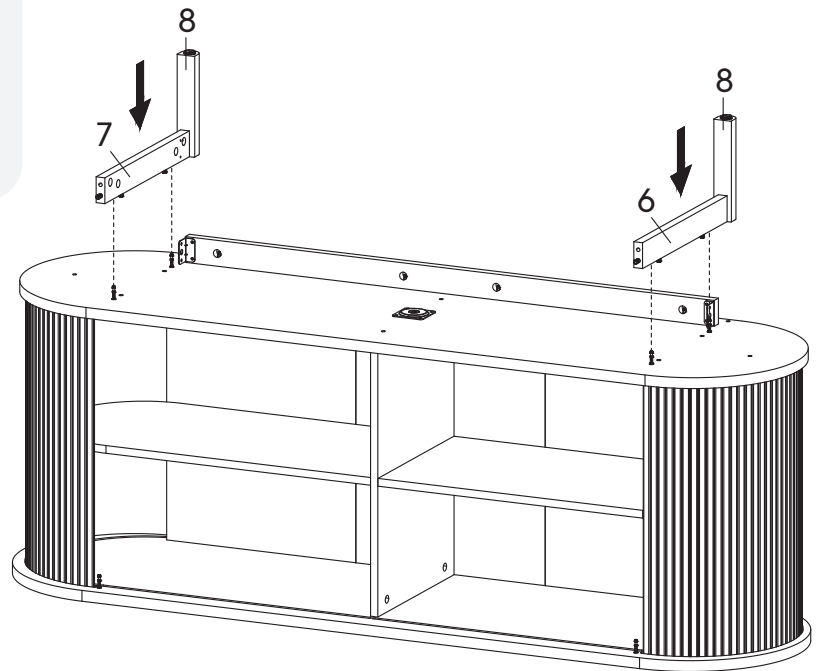



Step 18

HARDWARE

- | | | |
|---|---------------------|----|
| A | Cam Bolt Ø6 x 35 mm | x2 |
|---|---------------------|----|

COMPONENTS

- | | | |
|----|-----------------|----|
| 12 | Front Leg Left | x1 |
| 13 | Front Leg Right | x1 |

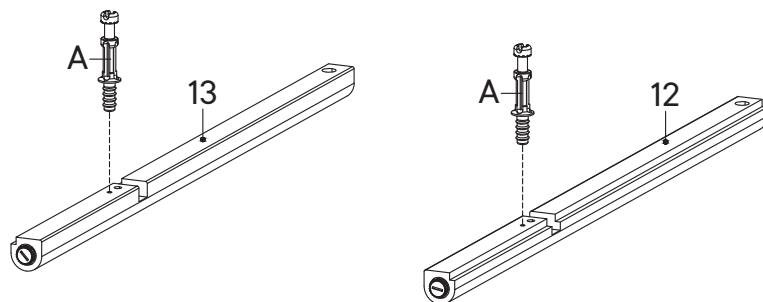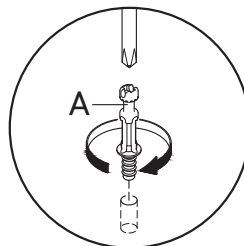



Step 19

HARDWARE

- B** Cam Lock Ø15 mm x4
- I** Screw M 4.5 x 12.5 mm x4
- L** Screw Cap Ø15 mm x2

COMPONENTS

- 12** Front Leg Left x1
- 13** Front Leg Right x1

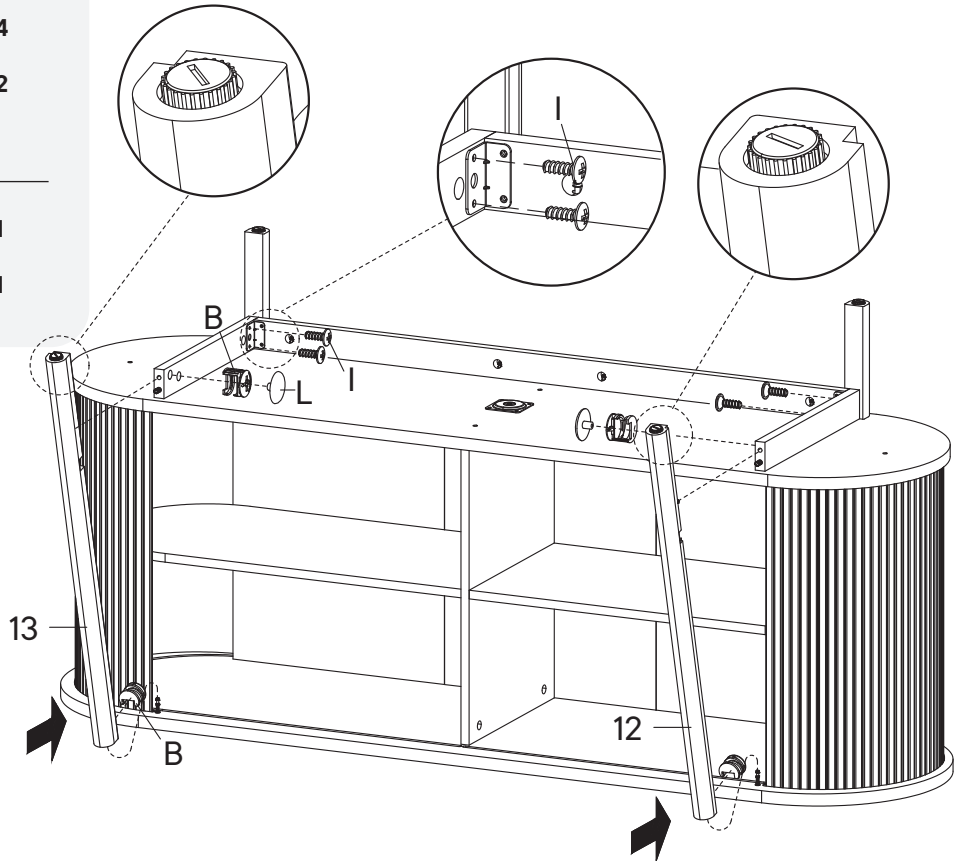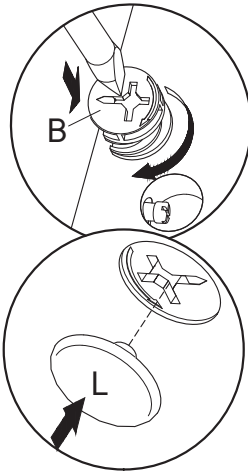



Step 20

HARDWARE

- B** Cam Lock Ø15 mm x8
- L** Screw Cap Ø15 mm x8

COMPONENTS


- LC18A1** Center Leg x1

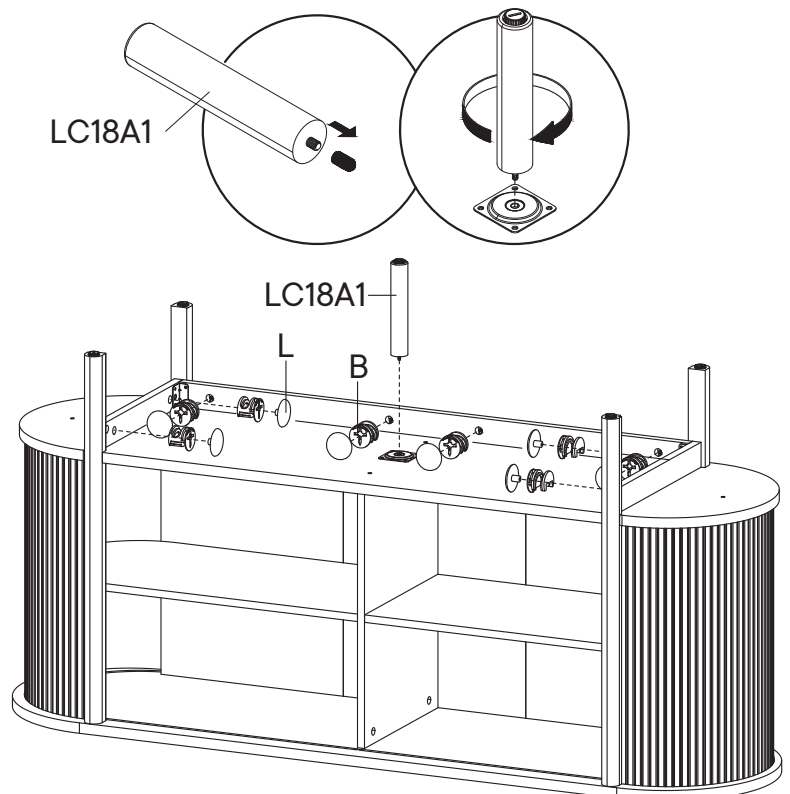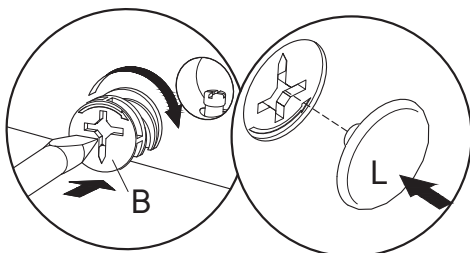

Step 21

HARDWARE


- E** Screw M 7 x 50 mm x2
- F** Allen Key x1

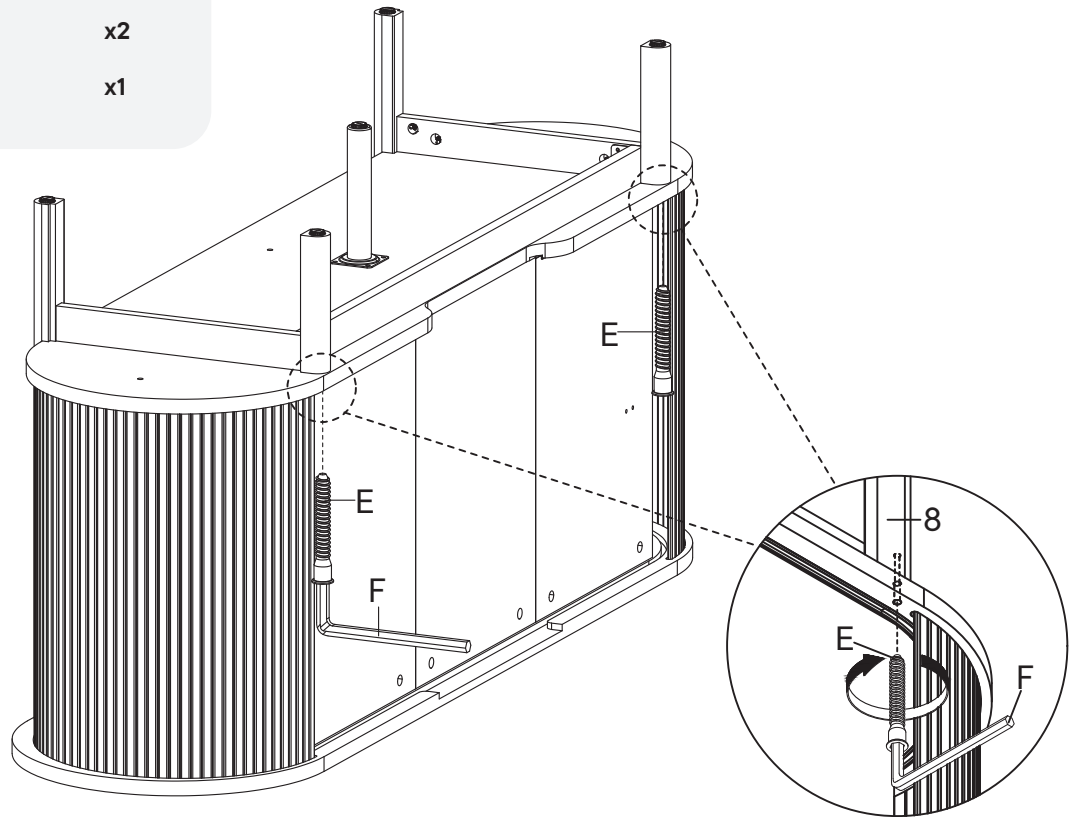

Step 22

COMPONENTS


- 16** Sliding Door x1

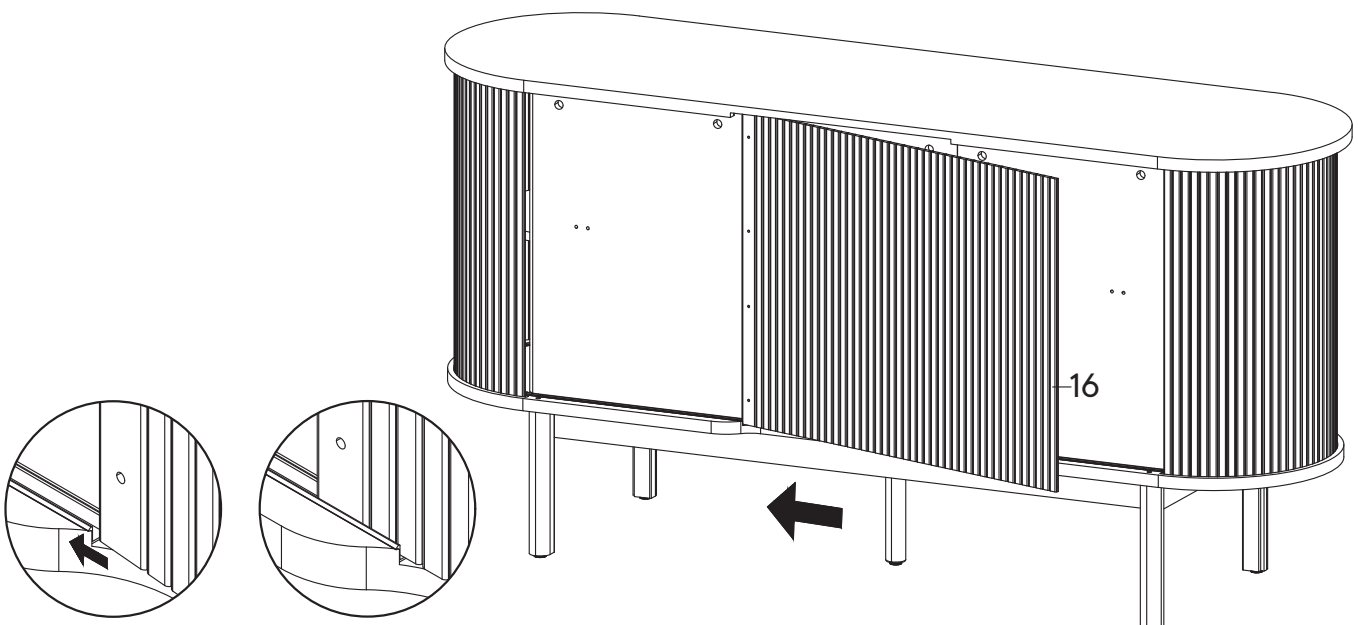

Step 23

COMPONENTS

- 16** Sliding Door x1

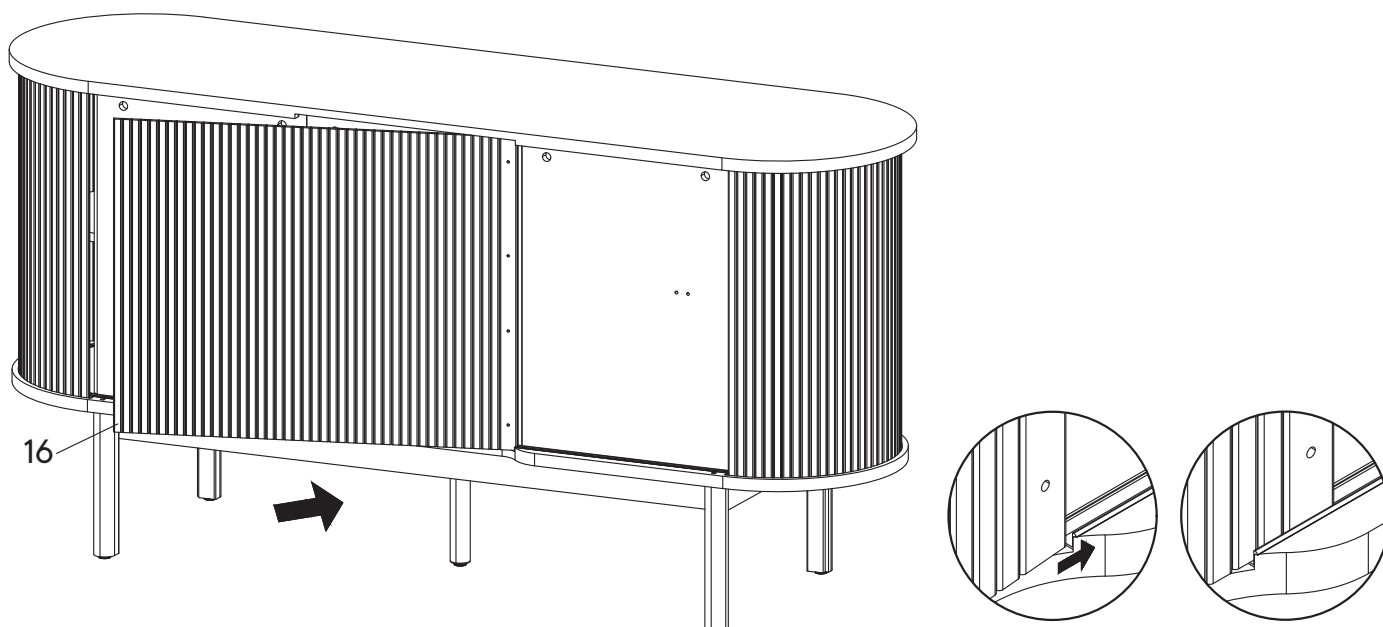




Step 24

HARDWARE

- H** Screw M 5 x 10 mm x8

COMPONENTS

- 17** Handle x2

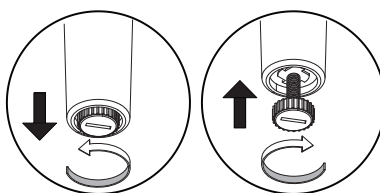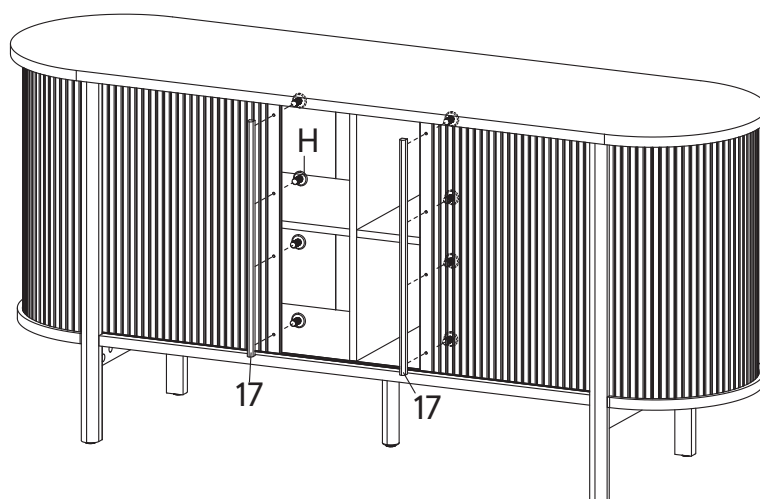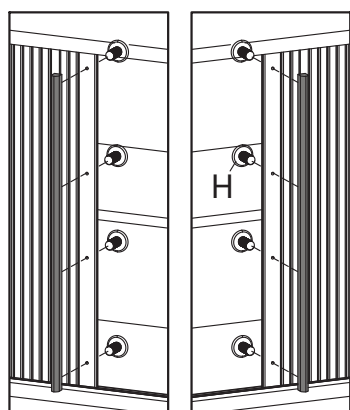


Step 25

HARDWARE

K Stopper

x2

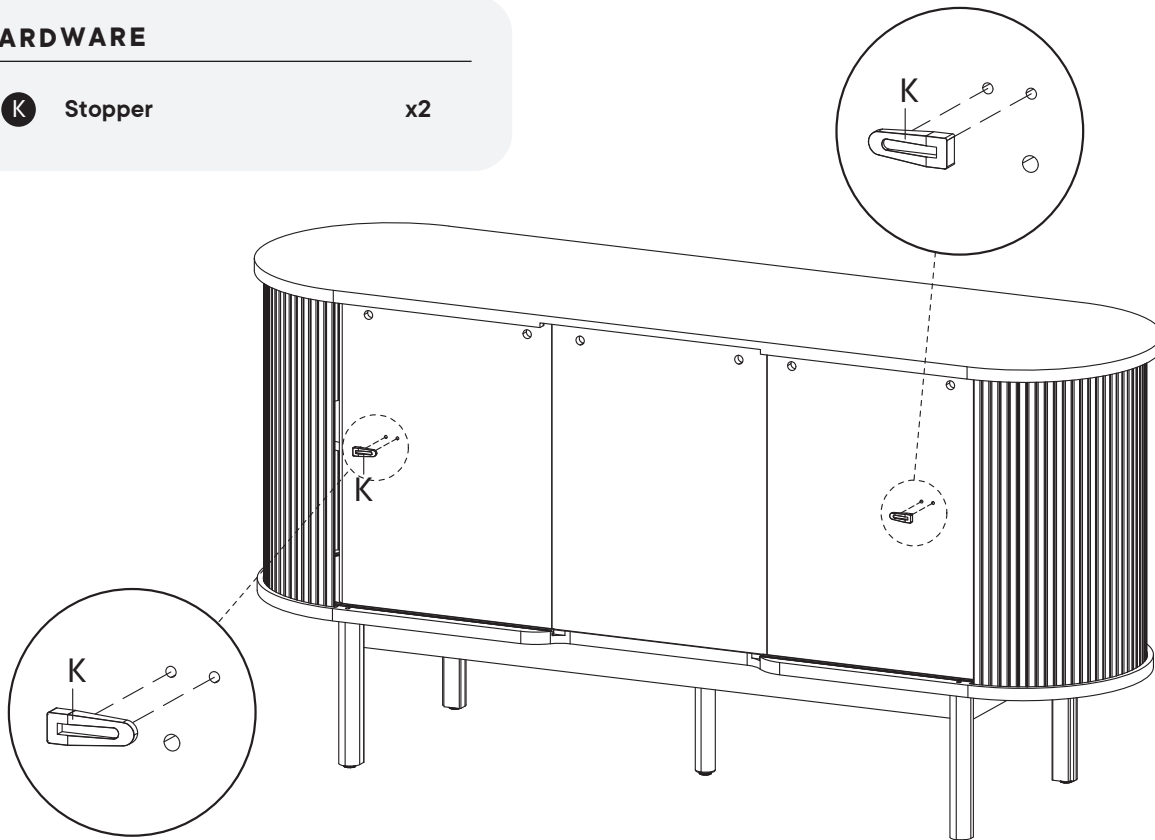

Great job!

Sideboard assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

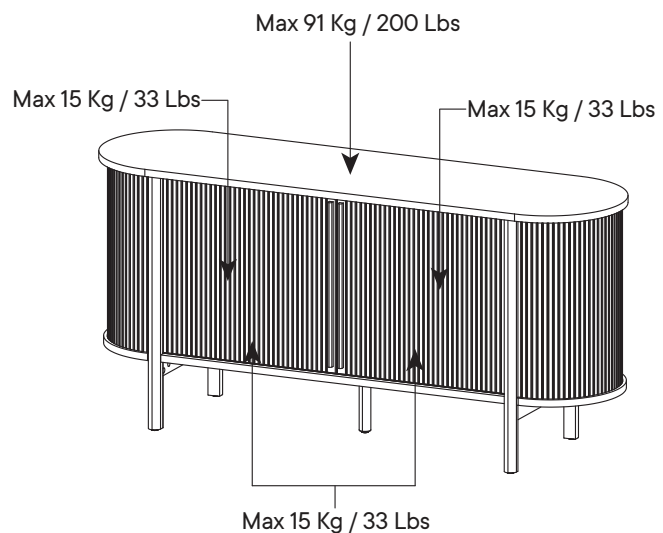

CONNECT WITH US!   








Tag us @modway_furniture and #modway for a chance to be featured.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

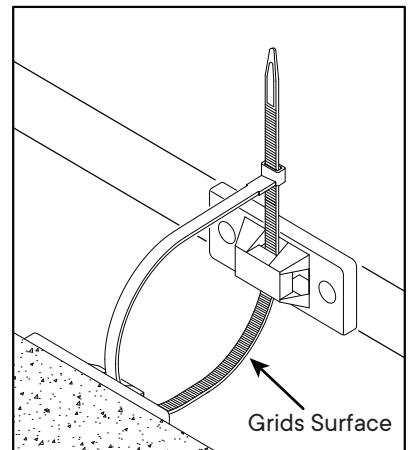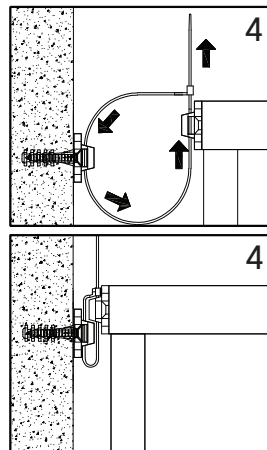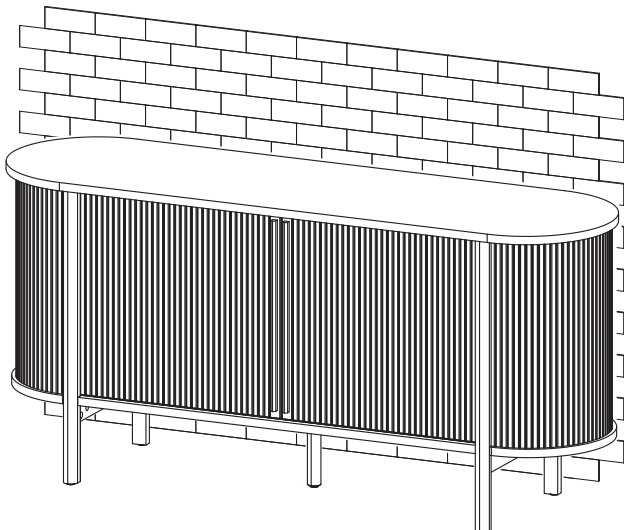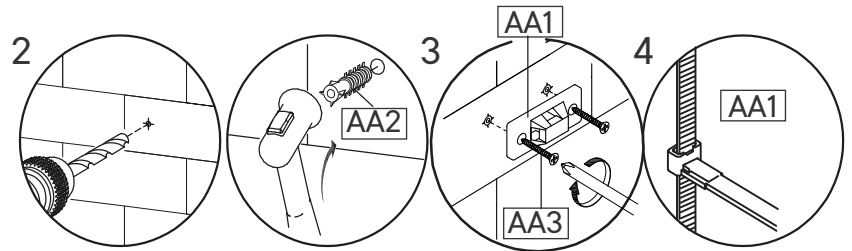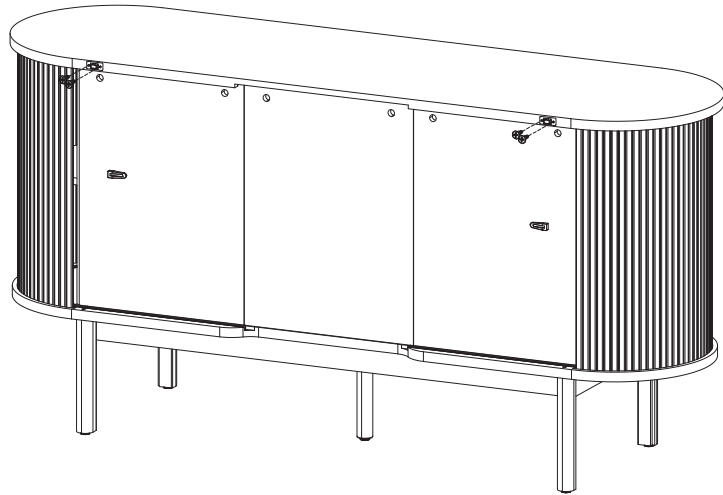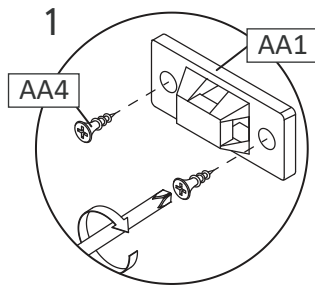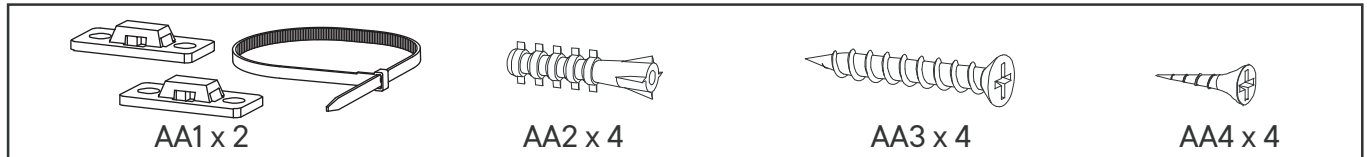

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.