


ASSEMBLY INSTRUCTIONS

EEI-7050

V0.02.29.24

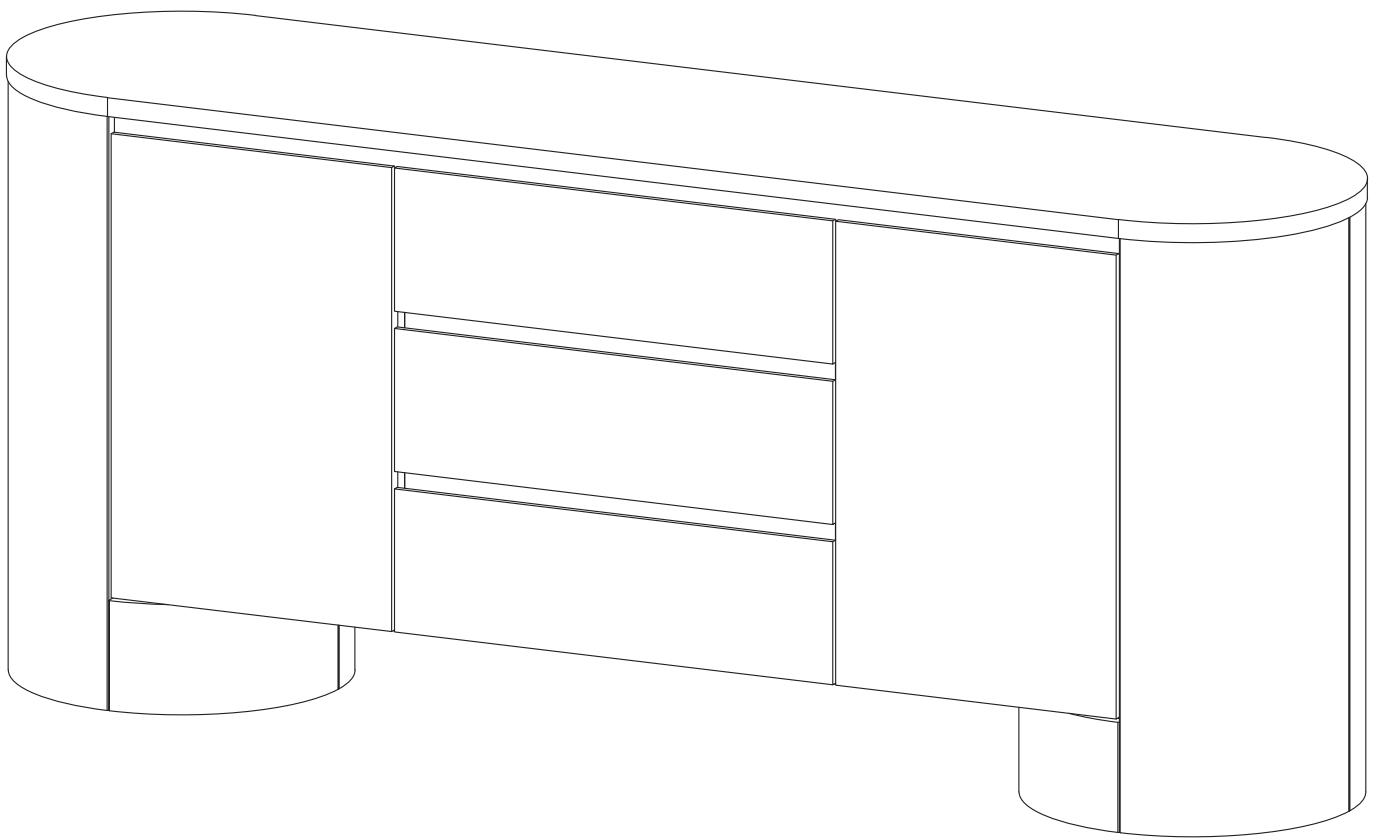

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 120 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1	11	Side Drawer Left	x3	21	Support Board 2	x1
2	Bottom Board	x1	12	Side Drawer Right	x3	22	Support Board 4	x1
3	Center Board Left	x1	13	Back Drawer	x3			
4	Center Board Right	x1	14	Bottom Drawer	x3			
5	Side Board	x4	15	Front Skirt 1	x1			
6	Bottom Skirt	x4	16	Wooden Door 1	x1			
7	Adjustable Shelf 1	x1	17	Wooden Door 2	x1			
8	Adjustable Shelf 2	x1	18	Back Board	x3			
9	Front Skirt 2	x2	19	Support Board 1	x1			
10	Front Drawer	x3	20	Support Board 3	x1			

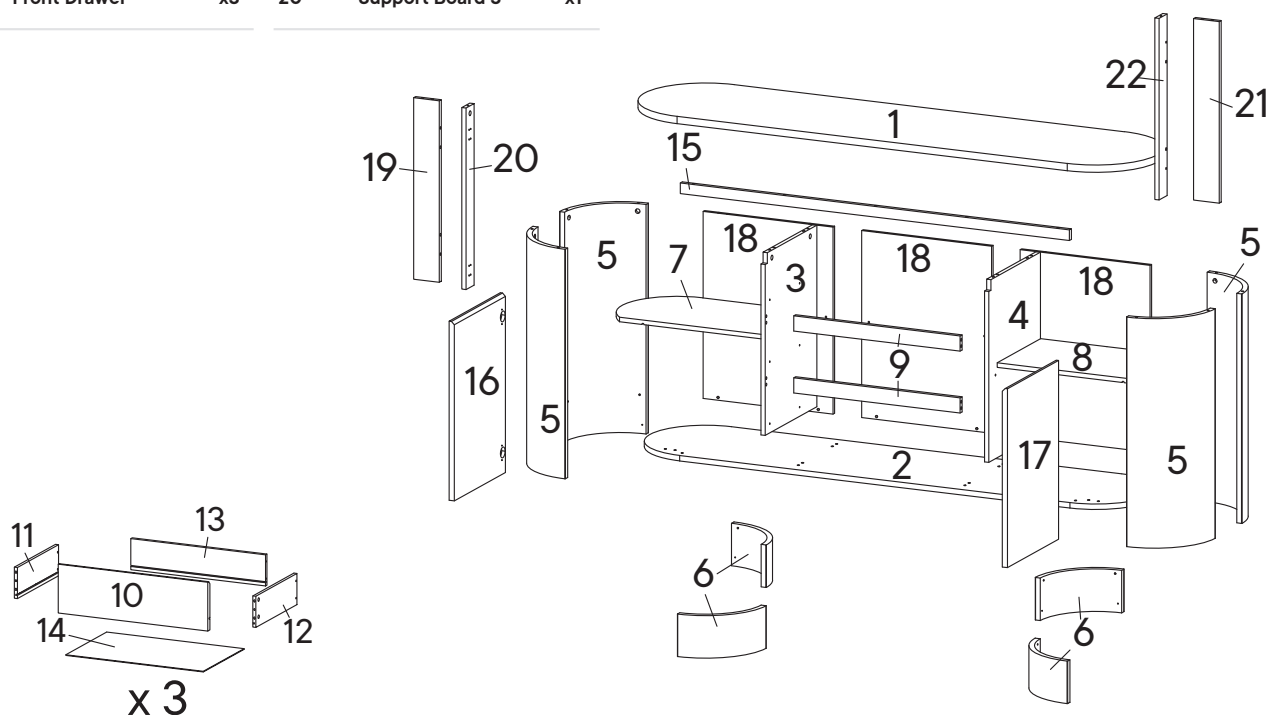

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x38	J		Screw M 3.5 x 13 mm	x18	HS35C		Hinge	x4
B		Cam Lock Ø15 mm	x20	K		Screw M 6 x 10.5 mm	x12	What you need:			
C		Cam Lock Ø12 mm	x18	L		Shelf Pin	x8	⊕		Phillips Head Screwdriver	
D		Wood Dowel Ø8 x 30 mm	x28	M		Plate Hook	x8	Phillips			
E		Wood Dowel Ø6 x 30 mm	x12	N		Screw M 3.5 x 15.5 mm	x12				
F		Screw M 7 x 50 mm	x17	O		Wedge	x12				
G		Allen Key	x2	P		Bracket	x8				
H		Screw M 4.5 x 12.5 mm	x64	Q		Floor Protector	x16				
I		Screw M 8 x 39 mm	x12	RM35A		Drawer Runner	x3				

Components Carton Placement

Carton 1 of 3

Label	Description	Qty
3	Center Board Left	x1
4	Center Board Right	x1
10	Front Drawer	x3
11	Side Drawer Left	x3
12	Side Drawer Right	x3
13	Back Drawer	x3
14	Bottom Drawer	x3
16	Wooden Door 1	x1
17	Wooden Door 2	x1
18	Back Board	x3
	Hardware Pack	x2

Carton 2 of 3

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
7	Adjustable Shelf 1	x1
8	Adjustable Shelf 2	x1
9	Front Skirt 2	x2
15	Front Skirt 1	x1
19	Support Board 1	x1
20	Support Board 3	x1
21	Support Board 2	x1
22	Support Board 4	x1

Carton 3 of 3

Label	Description	Qty
5	Side Board	x4
6	Bottom Skirt	x4

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x12
- E** Wood Dowel Ø6 x 30 mm x6

COMPONENTS

- 10** Front Drawer x3
- 11** Side Drawer Left x3
- 12** Side Drawer Right x3

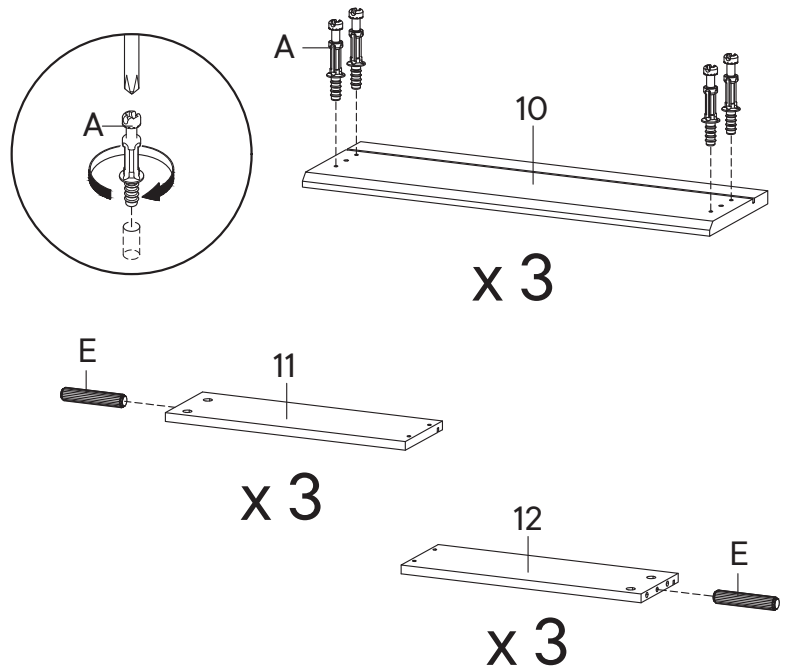


Step 2

HARDWARE

- C** Cam Lock Ø12 mm x12
- I** Screw M 8 x 39 mm x12

COMPONENTS


- 10** Front Drawer x3
- 11** Side Drawer Left x3
- 12** Side Drawer Right x3
- 13** Back Drawer x3
- 14** Bottom Drawer x3

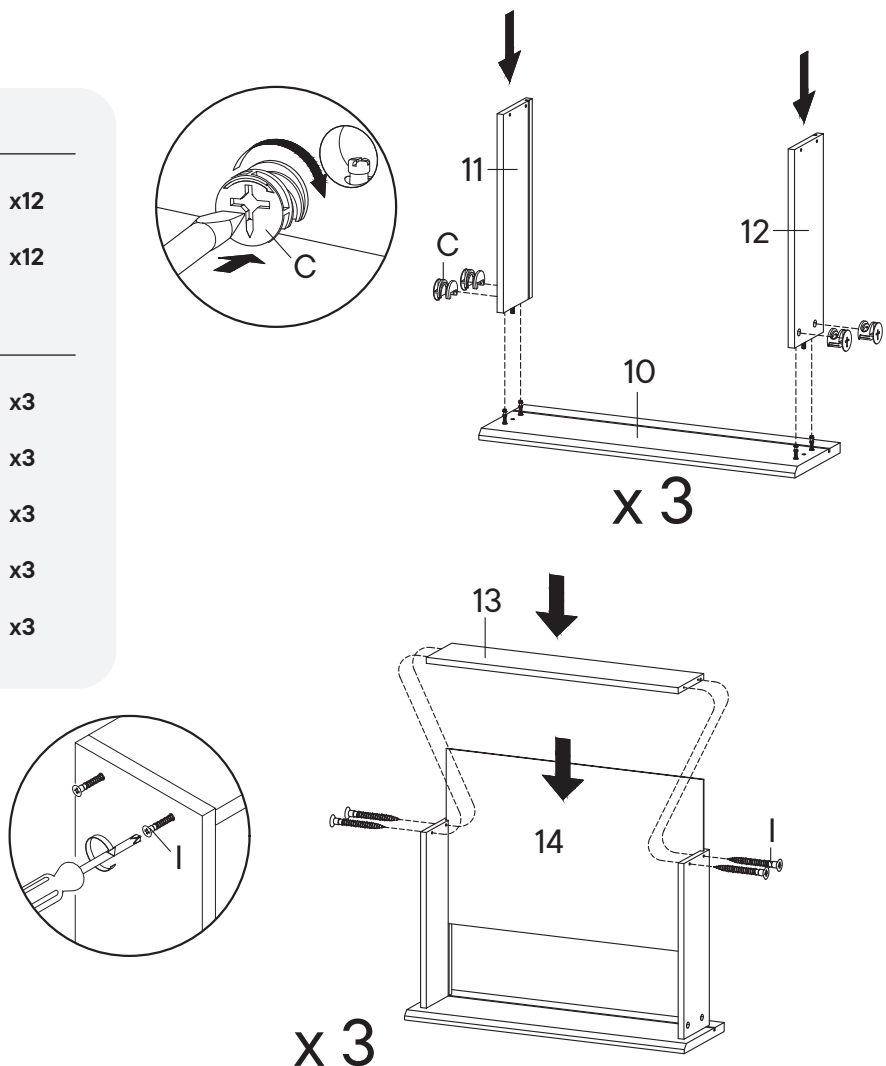

Step 3

HARDWARE

J	Screw M 3.5 x 13 mm	x18
N	Screw M 3.5 x 15.5 mm	x12
O	Wedge	x12
RM35A	Drawer Runner	x3

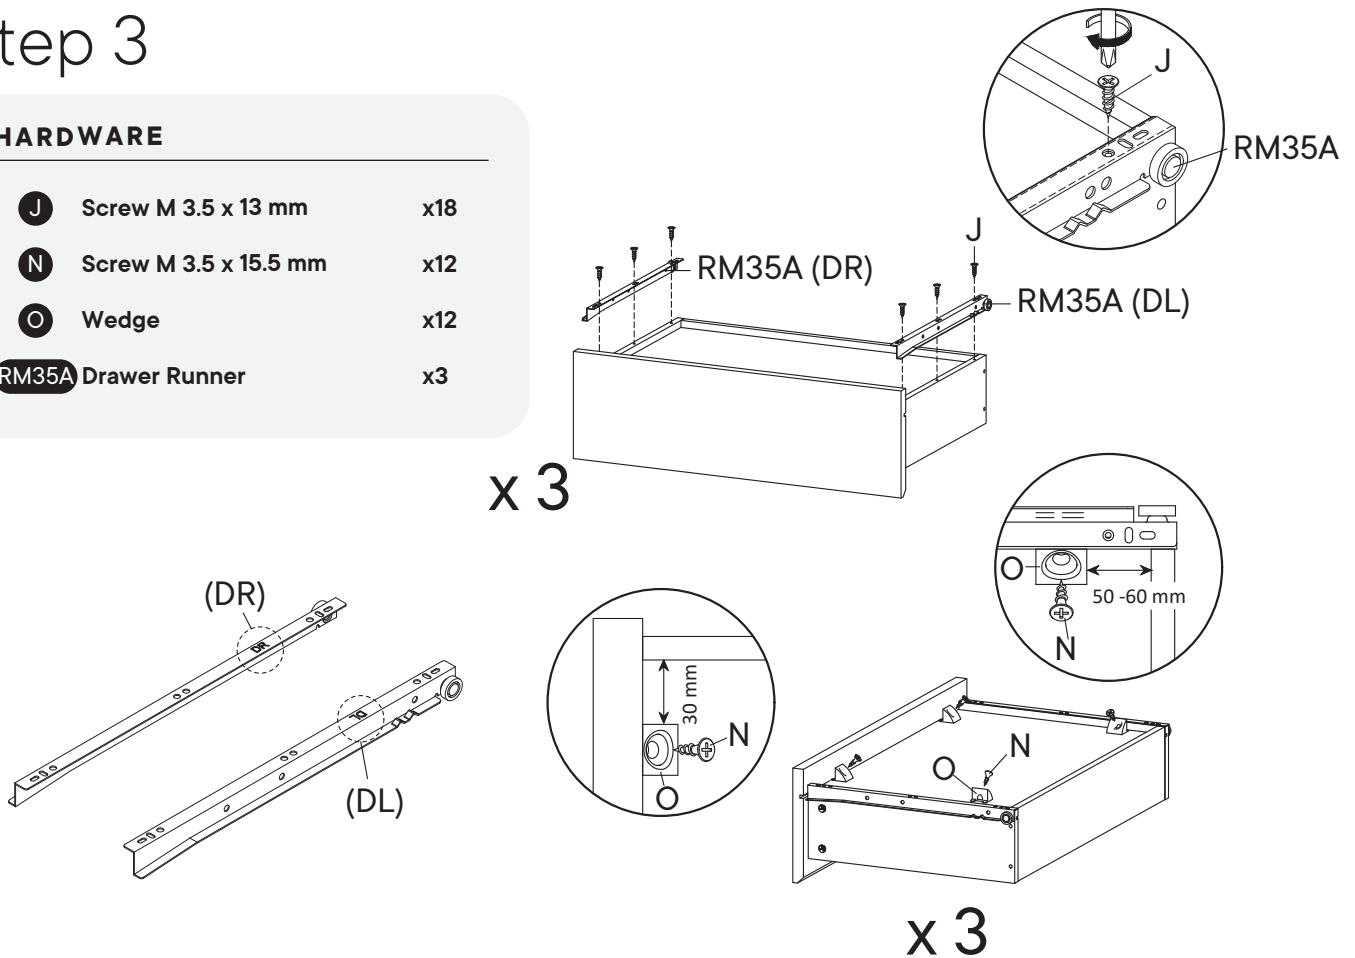


Step 4

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x22
D	Wood Dowel Ø8 x 30 mm	x2

COMPONENTS

1	Top Board	x1
15	Front Skirt 1	x1

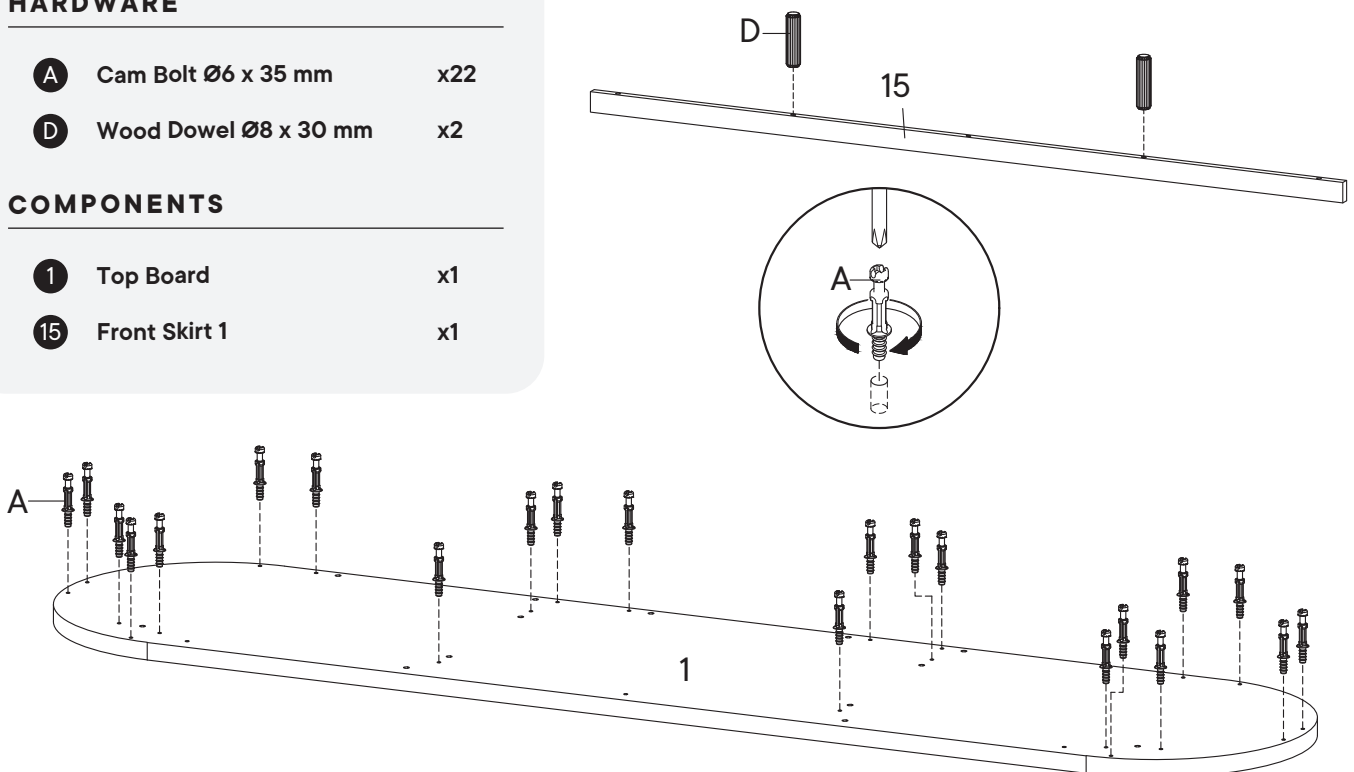




Step 5

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x4
D	Wood Dowel Ø8 x 30 mm	x26
E	Wood Dowel Ø6 x 30 mm	x6
K	Screw M 6 x 10.5 mm	x12
RM35A	Drawer Runner	x3

COMPONENTS

3	Center Board Left	x1
4	Center Board Right	x1
9	Front Skirt 2	x2
18	Back Board	x3
19	Support Board 1	x1
20	Support Board 3	x1
21	Support Board 2	x1
22	Support Board 4	x1

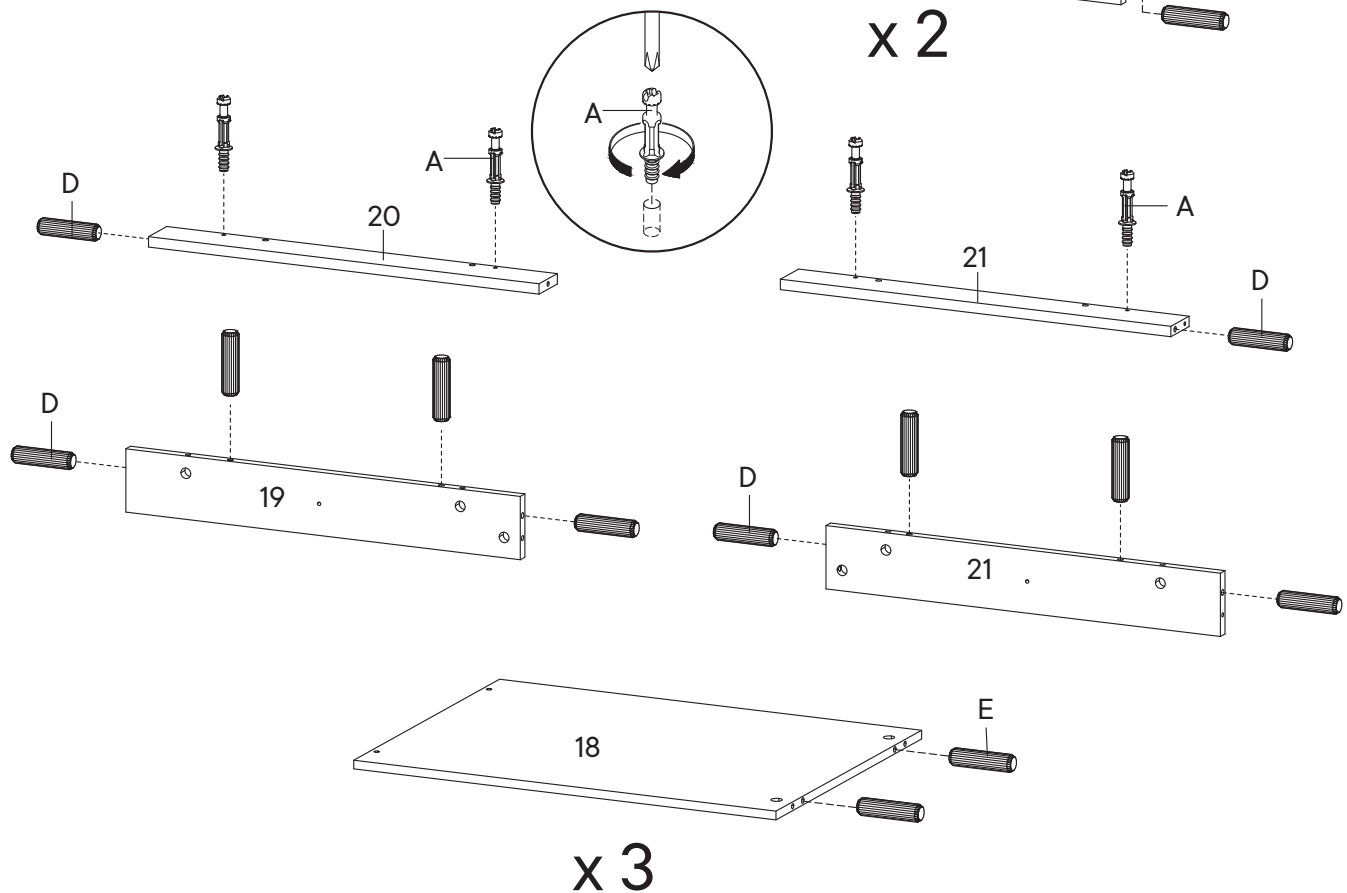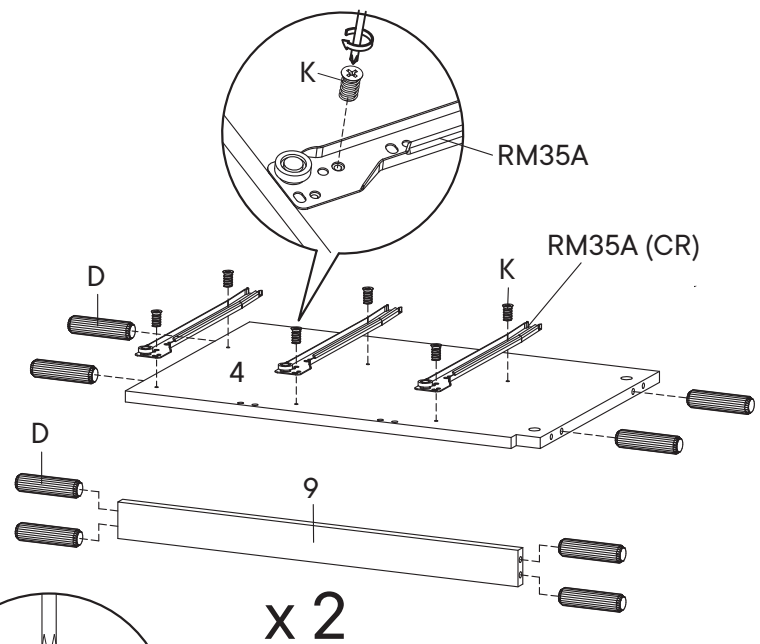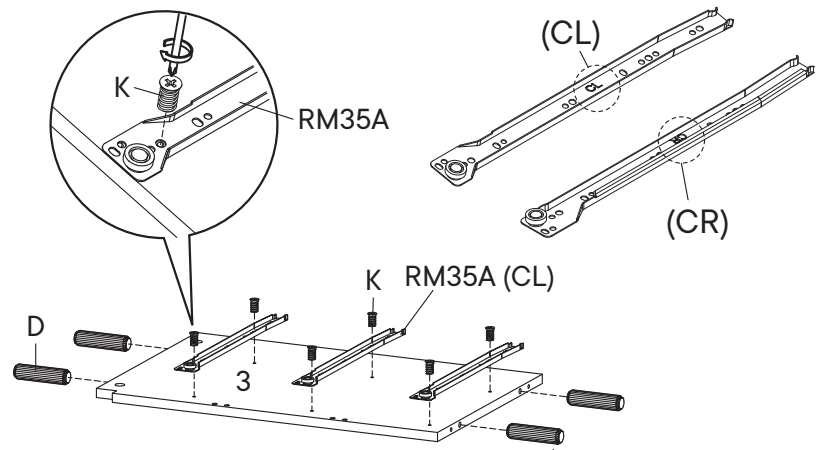

Step 6

Pre - Assembly

HARDWARE

B Cam Lock Ø15 mm x4




COMPONENTS

19 Support Board 1 x1

20 Support Board 3 x1

21 Support Board 2 x1

22 Support Board 4 x1

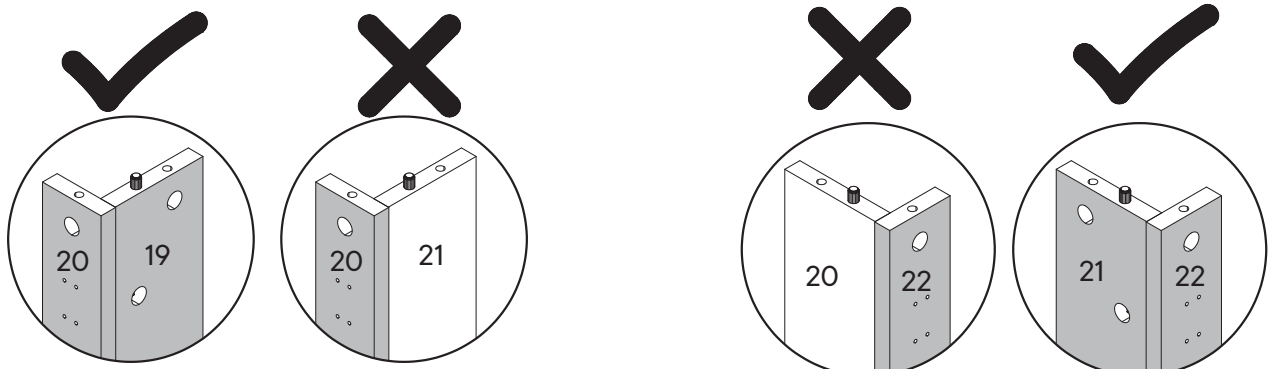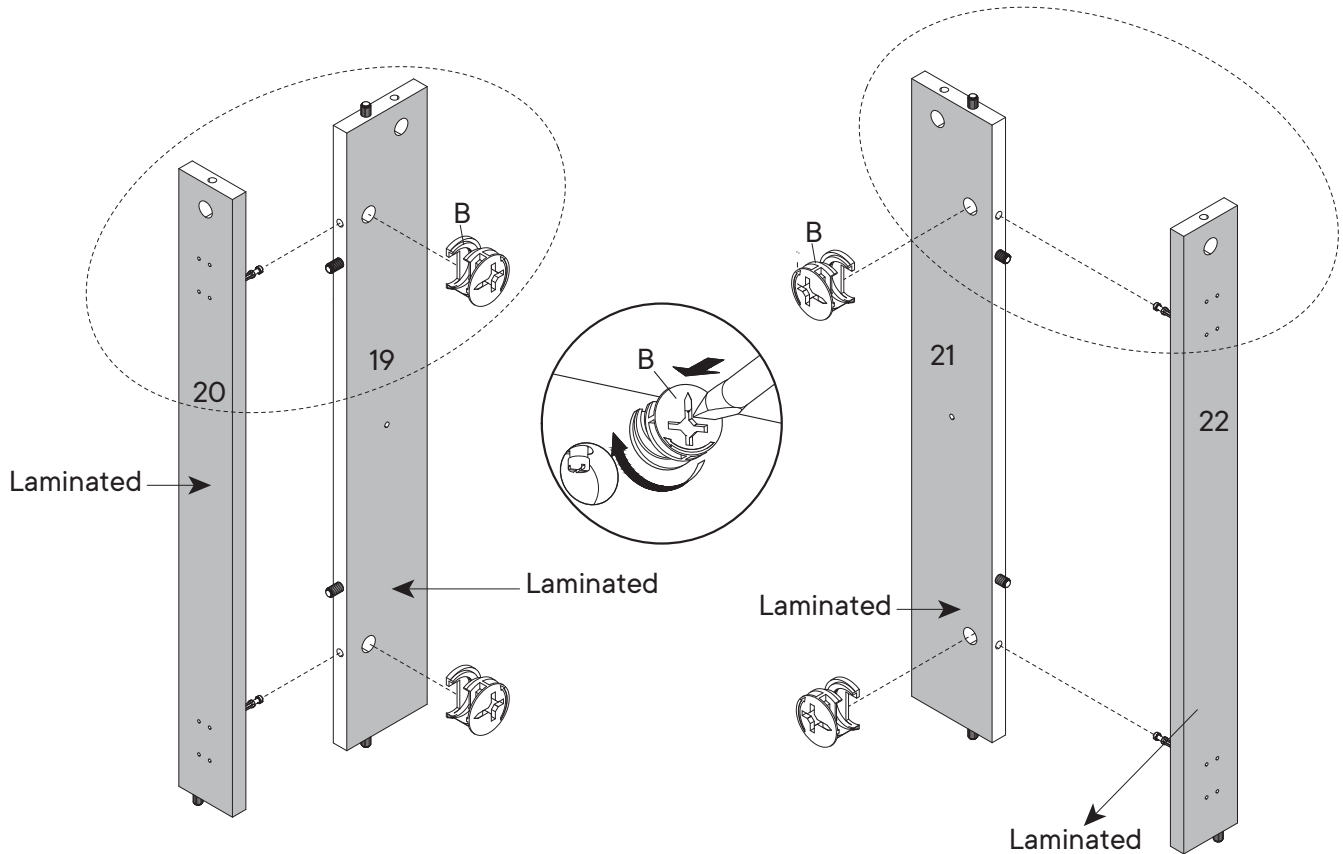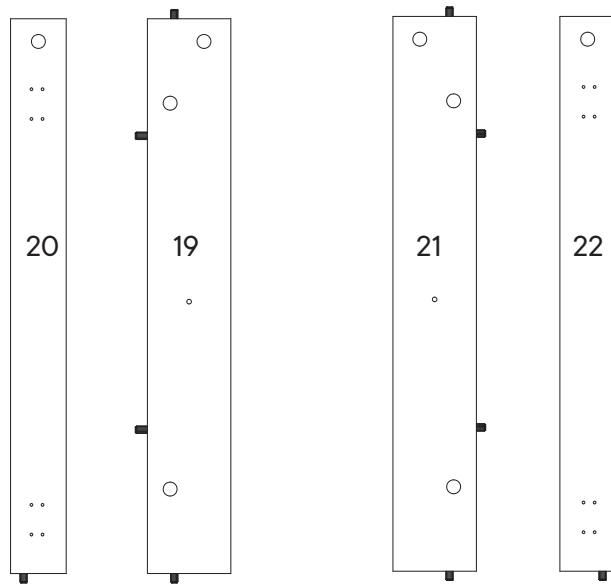


Step 7

HARDWARE

H	Screw M 4.5 x 12.5 mm	x16
HS35C	Hinge	x4

COMPONENTS

20	Support Board 3	x1
22	Support Board 4	x1

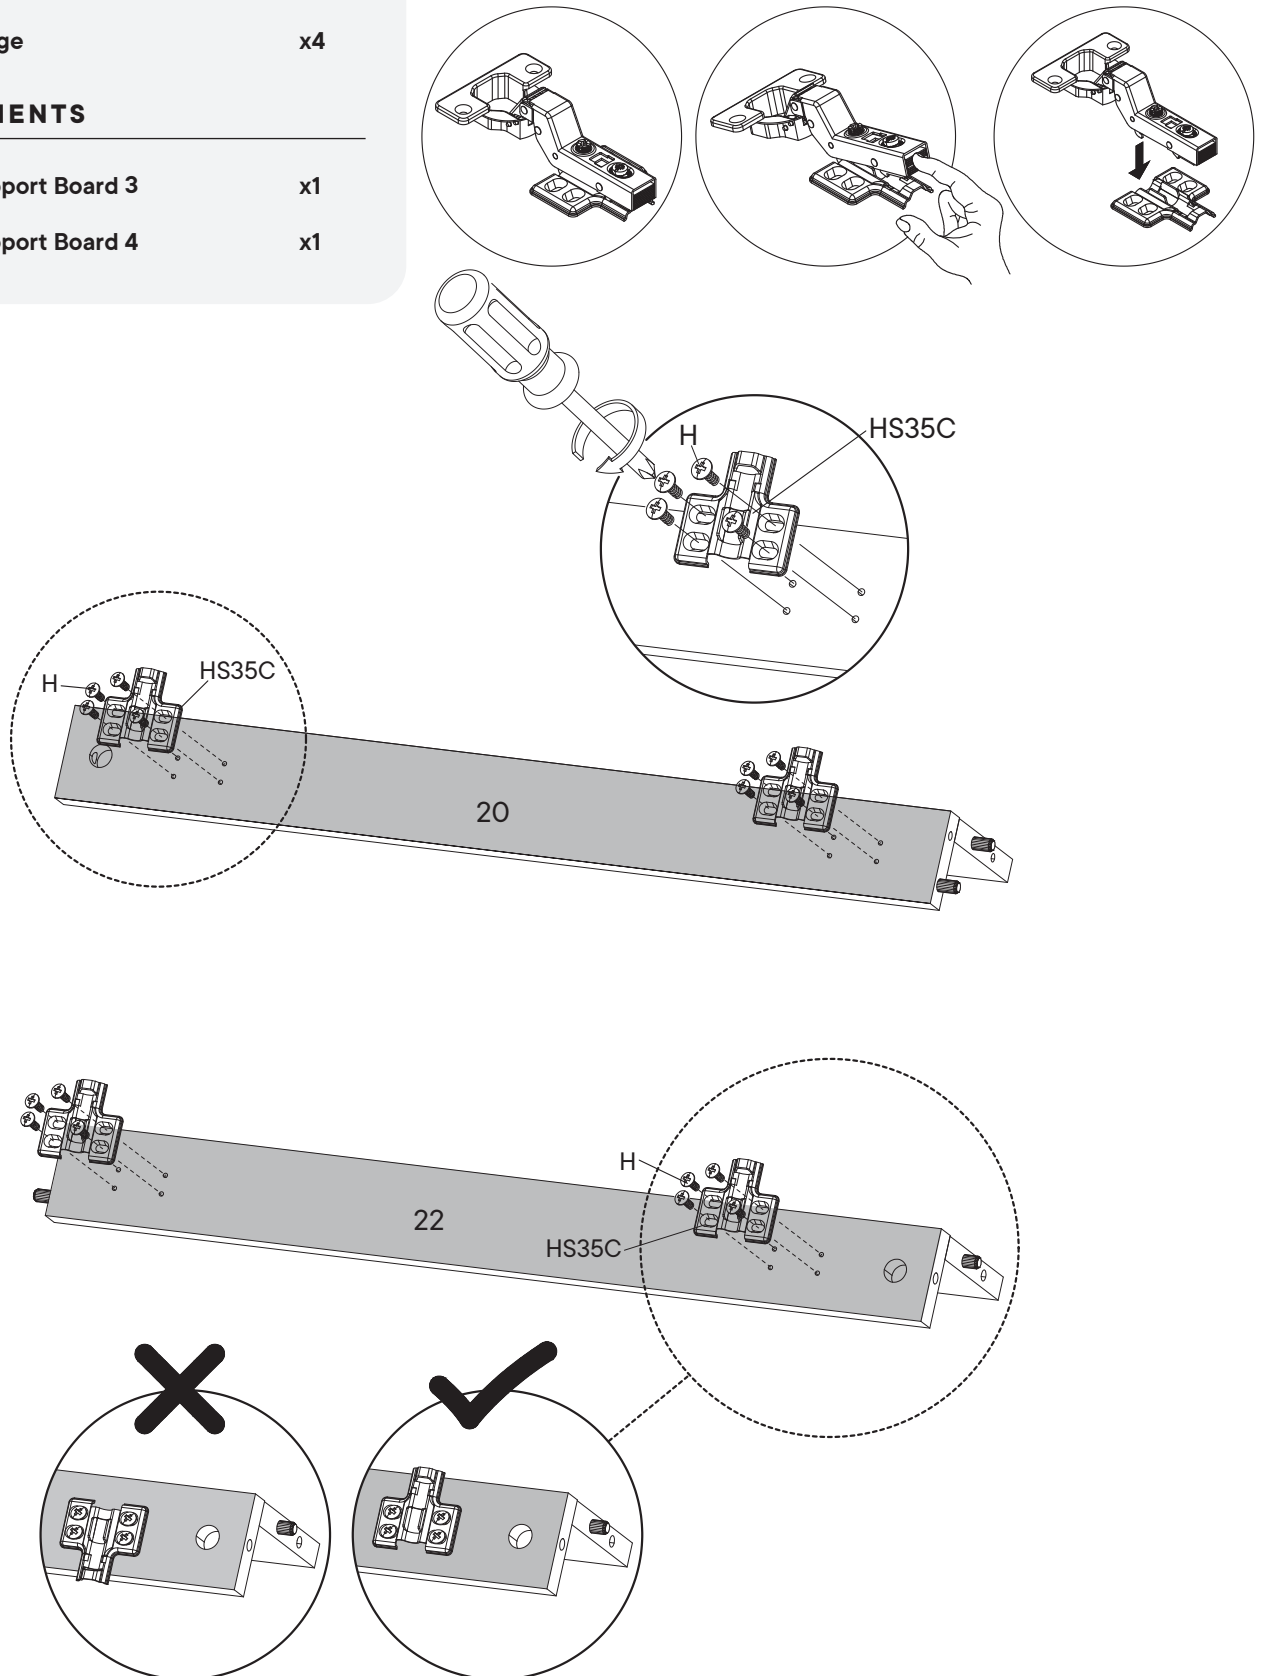


Step 8

HARDWARE

- F** Screw M 7 x 50 mm x3
- G** Allen Key x1

COMPONENTS


- 1** Top Board x1
- 15** Front Skirt 1 x1

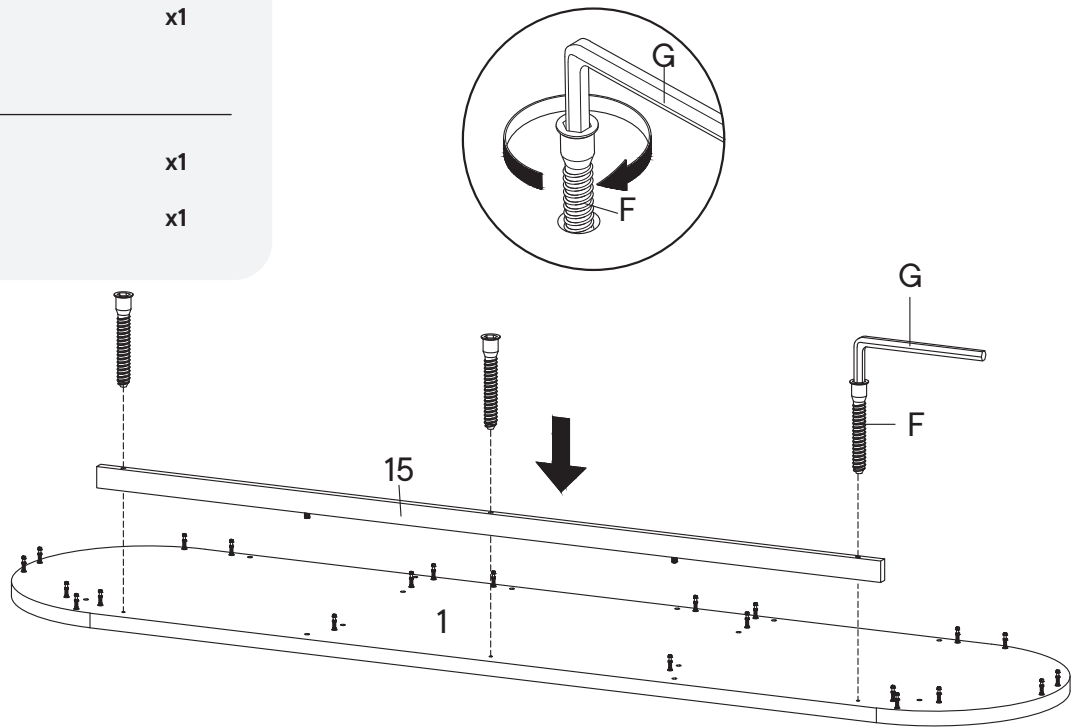

Step 9

COMPONENTS


- 3** Center Board Left x1
- 4** Center Board Right x1

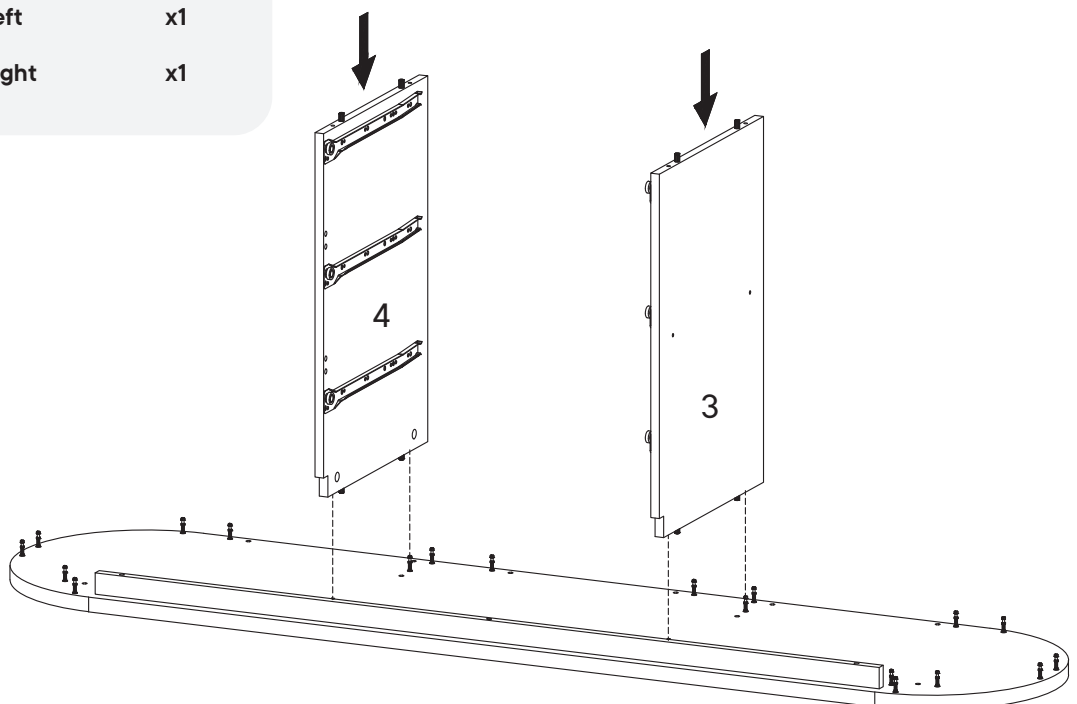

Step 10

COMPONENTS


9 Front Skirt 2 x2

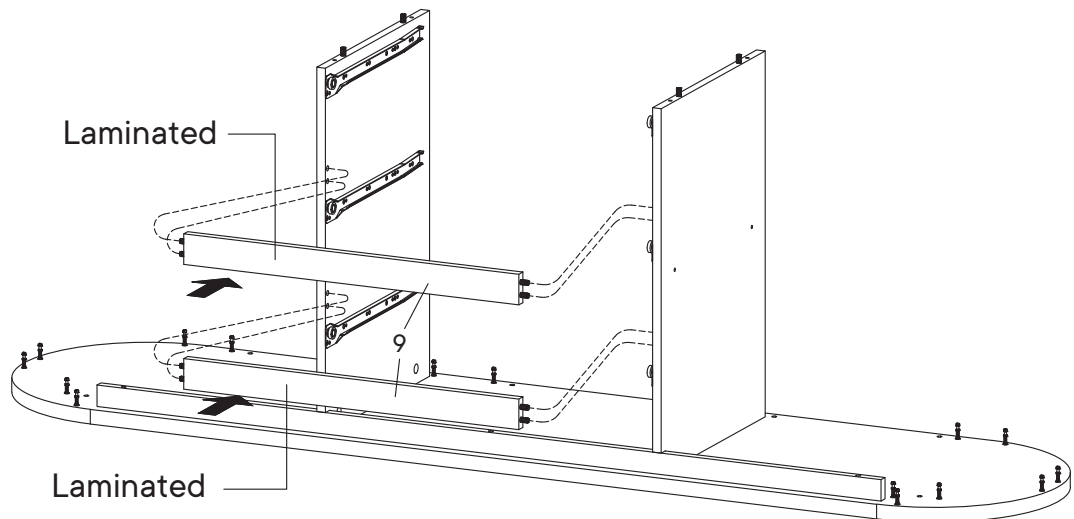

Step 11

HARDWARE

B Cam Lock Ø15 mm x4

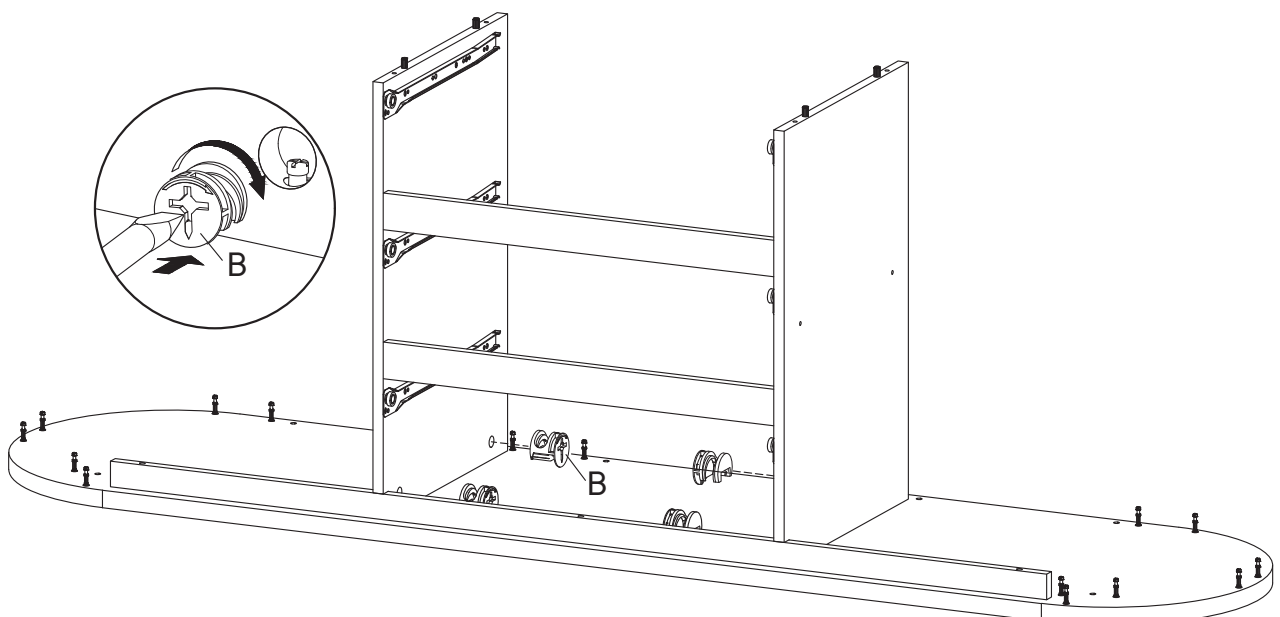



Step 12

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

5 Side Board x2

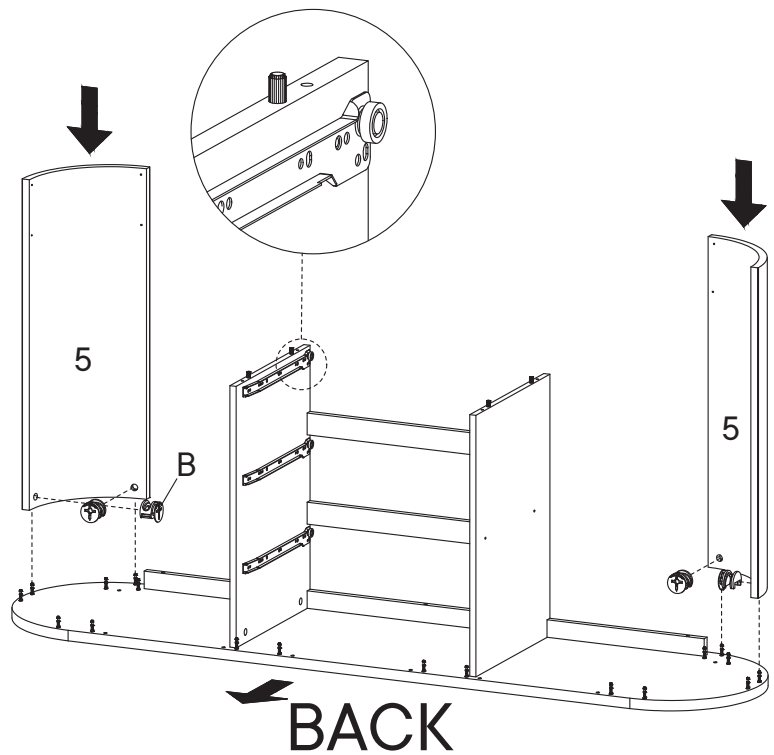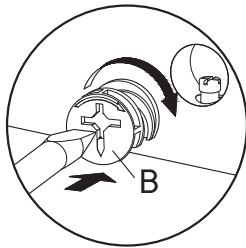

Step 13

HARDWARE

B Cam Lock Ø15 mm x4

L Shelf Pin x2



COMPONENTS

19 Support Board 1 x1

20 Support Board 3 x1

21 Support Board 2 x1

22 Support Board 4 x1

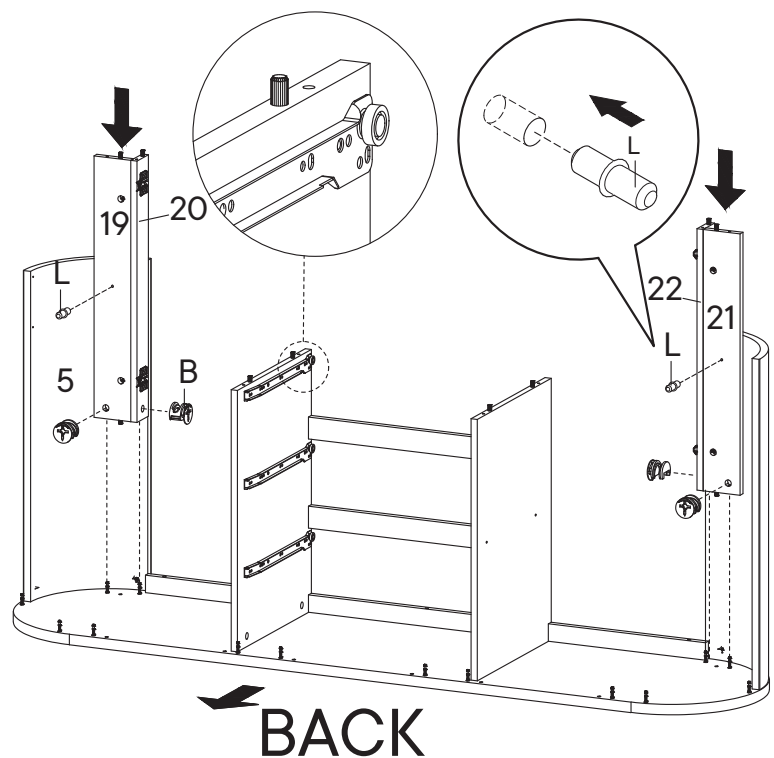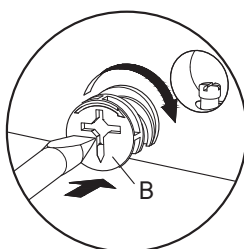



Step 14

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

5 Side Board x2

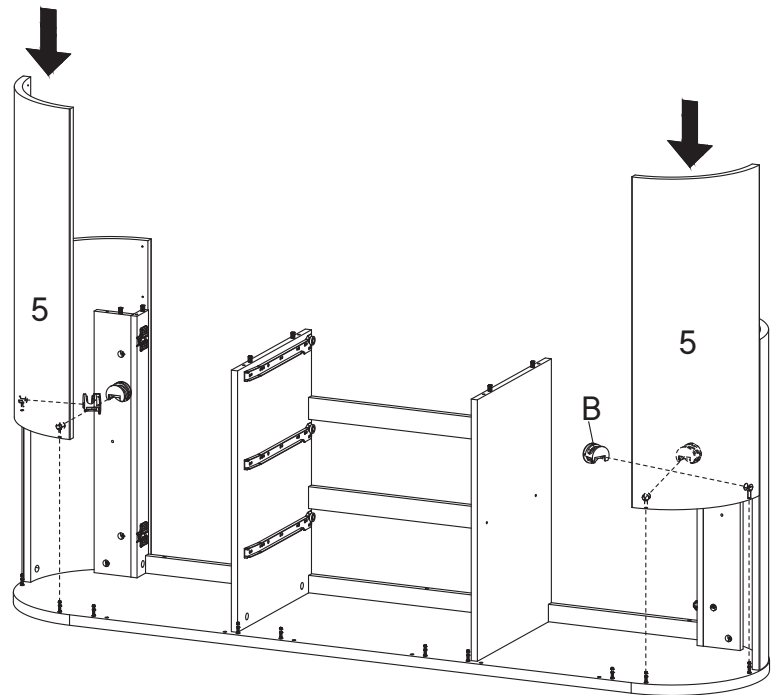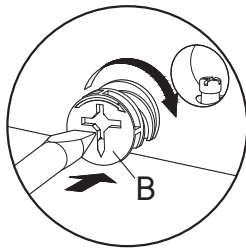



Step 15

HARDWARE

C Cam Lock Ø12 mm x6

COMPONENTS

18 Back Board x3

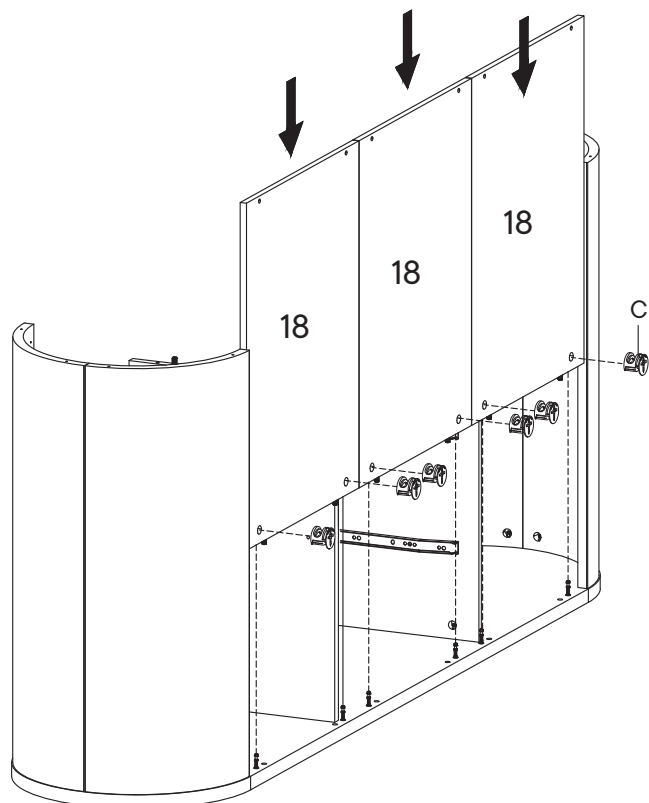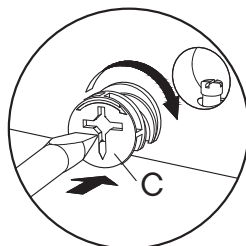

Step 16



HARDWARE

F Screw M 7 x 50 mm x8

G Allen Key x1

COMPONENTS

2 Bottom Board x1

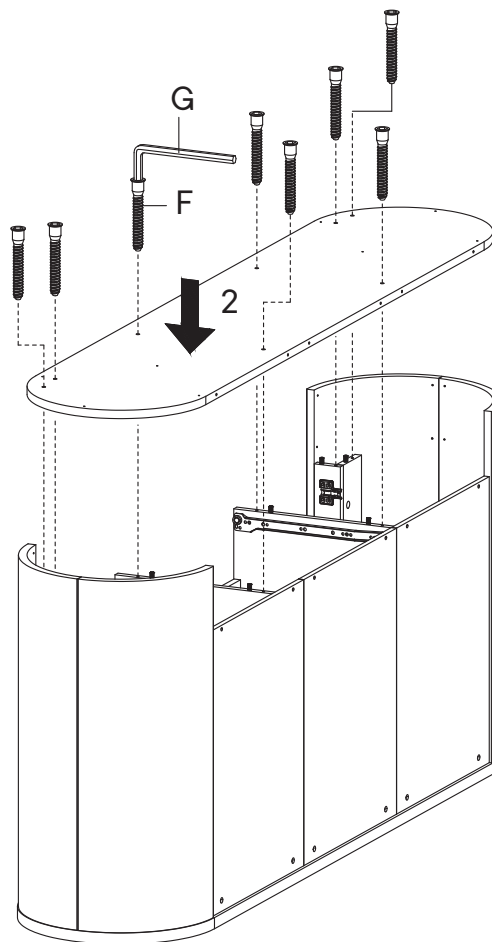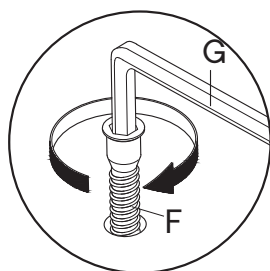







Step 17

HARDWARE

F Screw M 7 x 50 mm x6

G Allen Key x1



H Screw M 4.5 x 12.5 mm x16

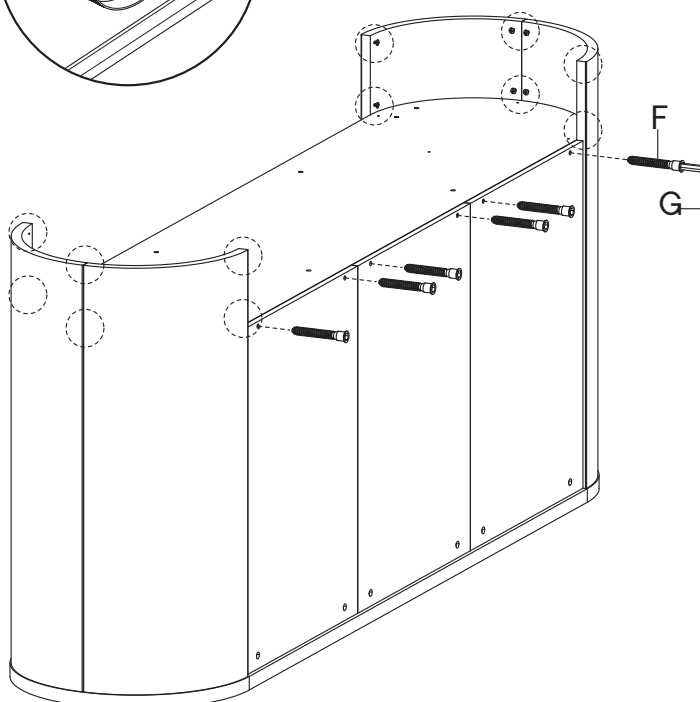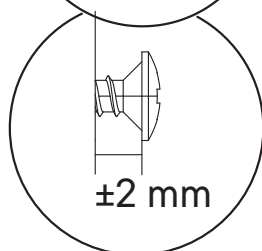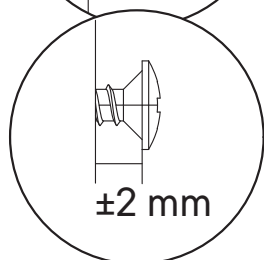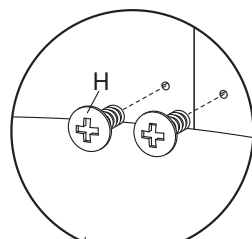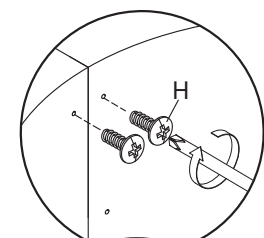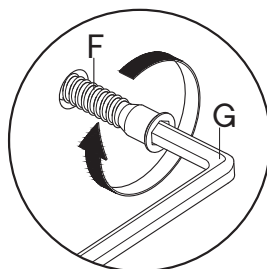

Step 18

COMPONENTS




- 6** Bottom Skirt x4

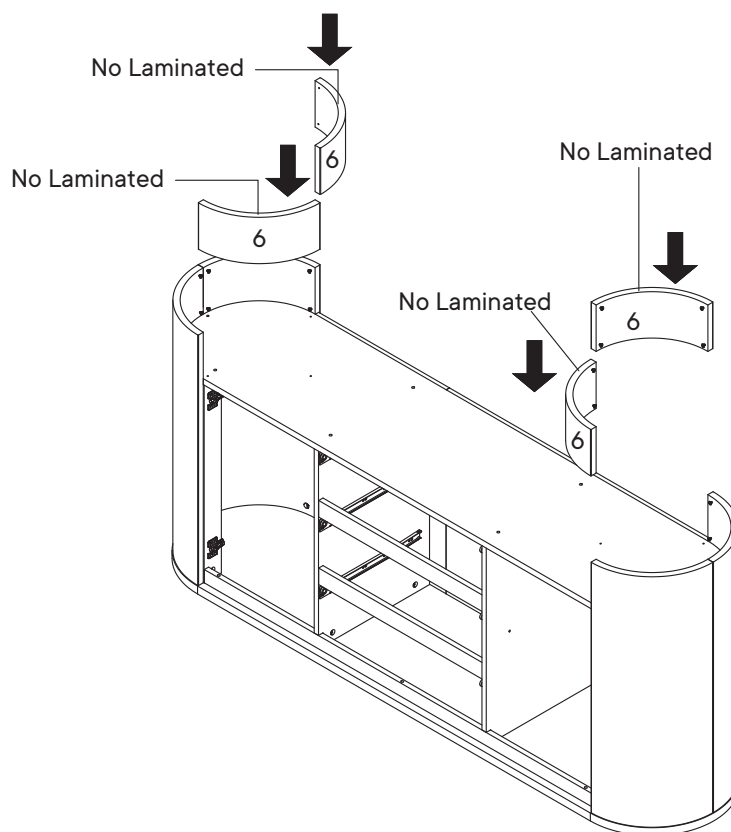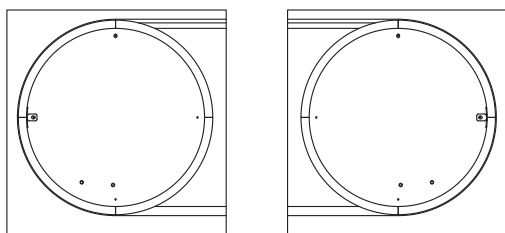

Step 19

HARDWARE



- H** Screw M 4.5 x 12.5 mm x8
P Bracket x8

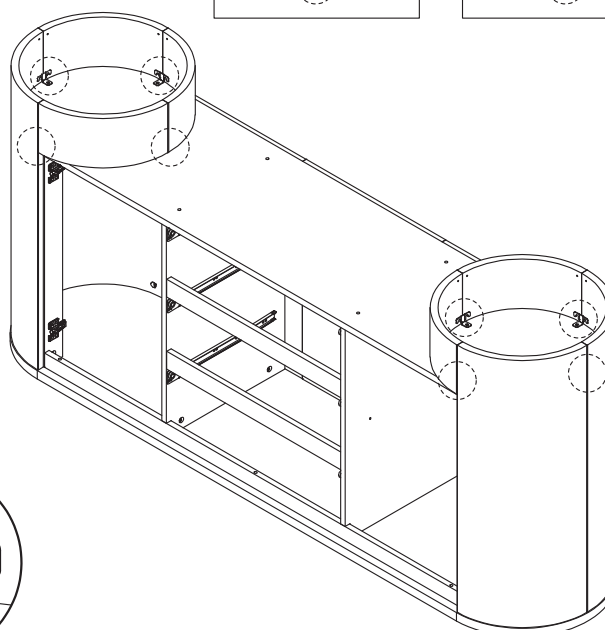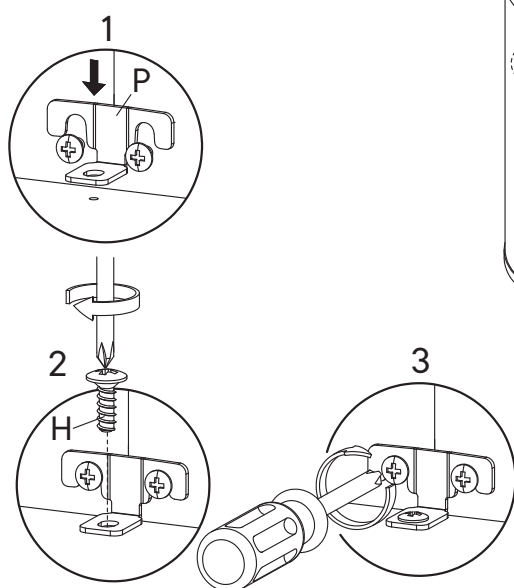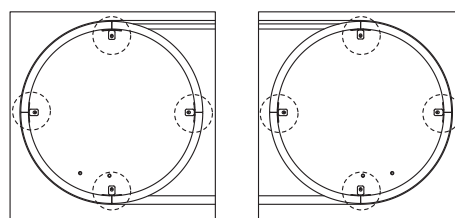

Step 20

HARDWARE


M Plate Hook x8

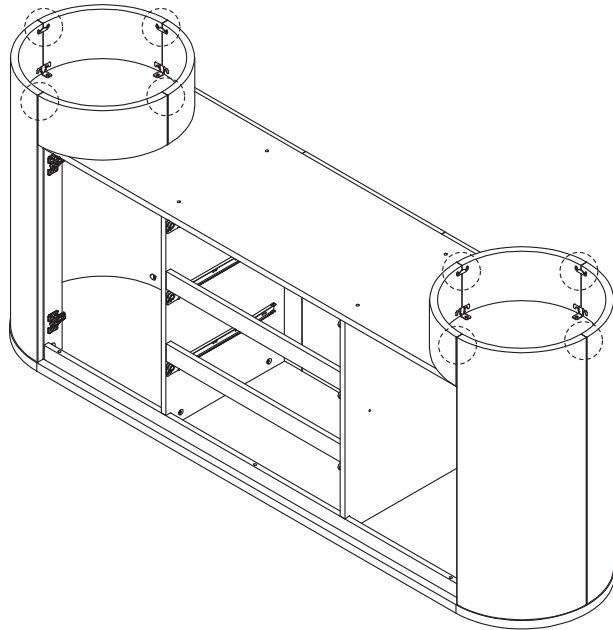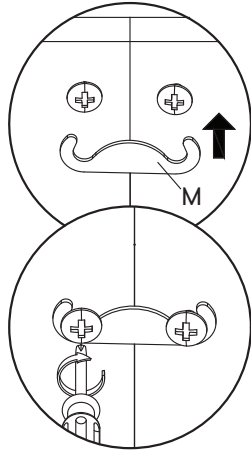



Step 21

HARDWARE

Q Floor Protector x16

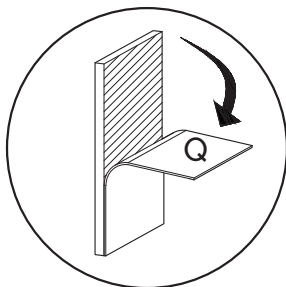

TOP VIEW

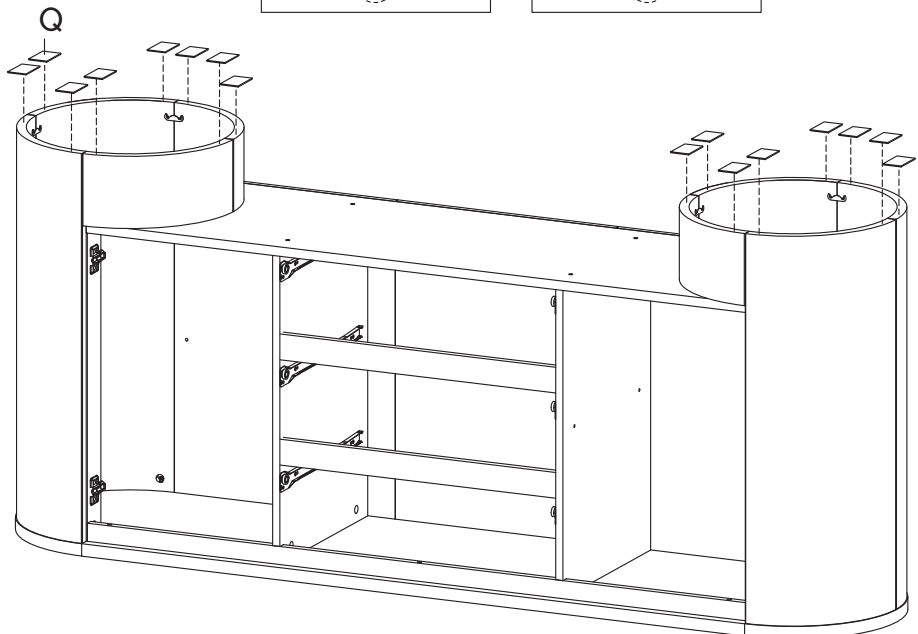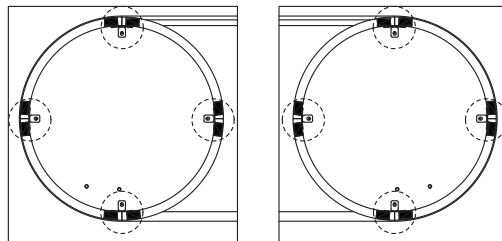

Step 22


HARDWARE

L Shelf Pin x6

COMPONENTS

7 Adjustable Shelf 1 x1

8 Adjustable Shelf 2 x1

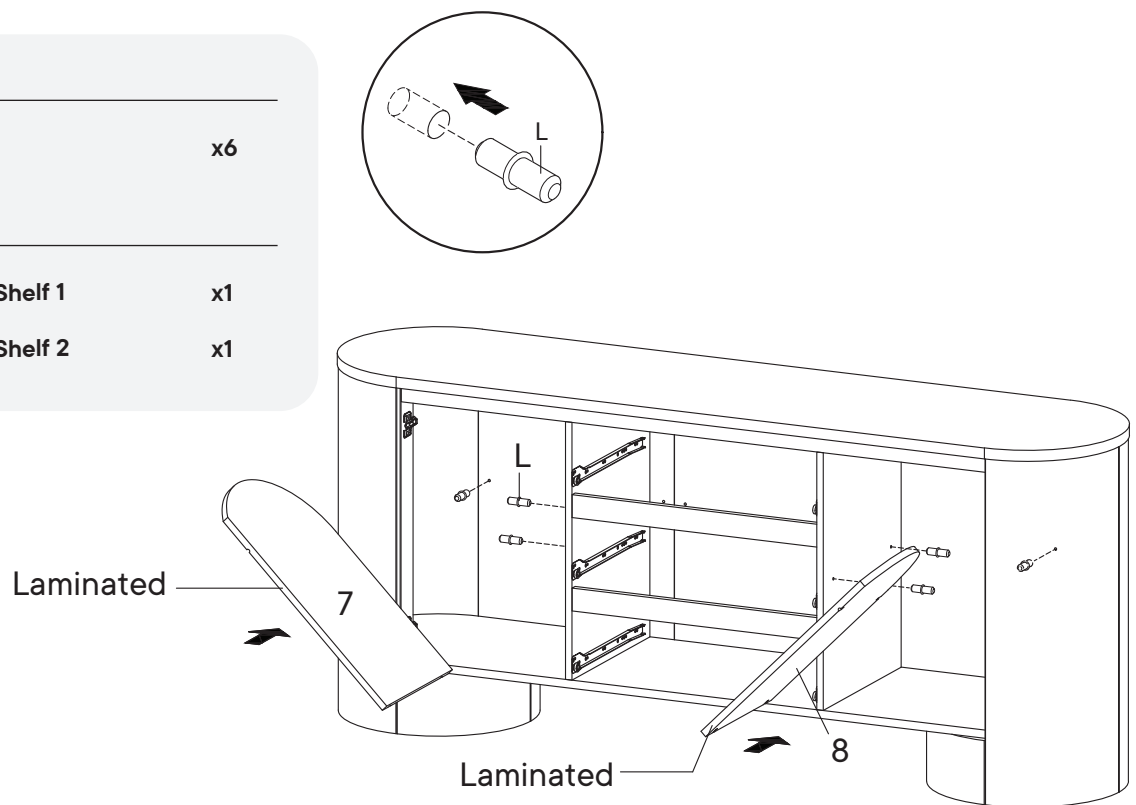

Step 23

HARDWARE


H Screw M 4.5 x 12.5 mm x8

HS35C Hinge x4

COMPONENTS

16 Wooden Door 1 x1


17 Wooden Door 2 x1

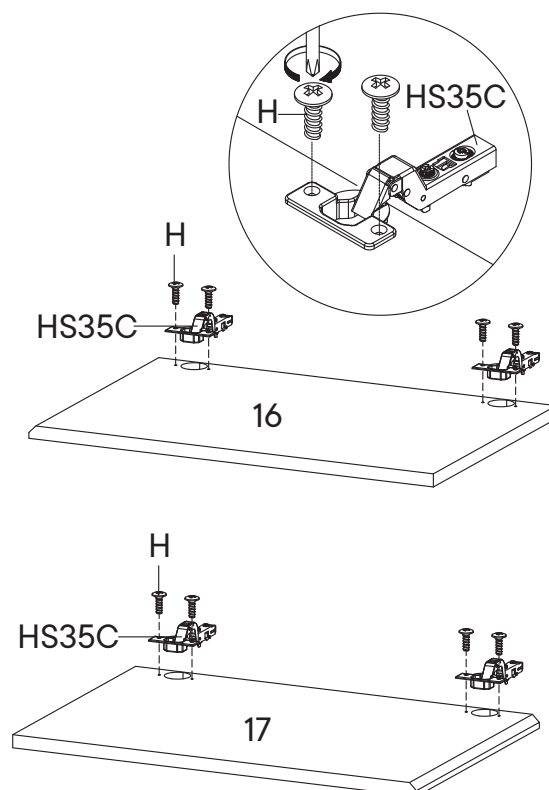



Step 24

COMPONENTS

- | | | |
|----|---------------|----|
| 16 | Wooden Door 1 | x1 |
| 17 | Wooden Door 2 | x1 |

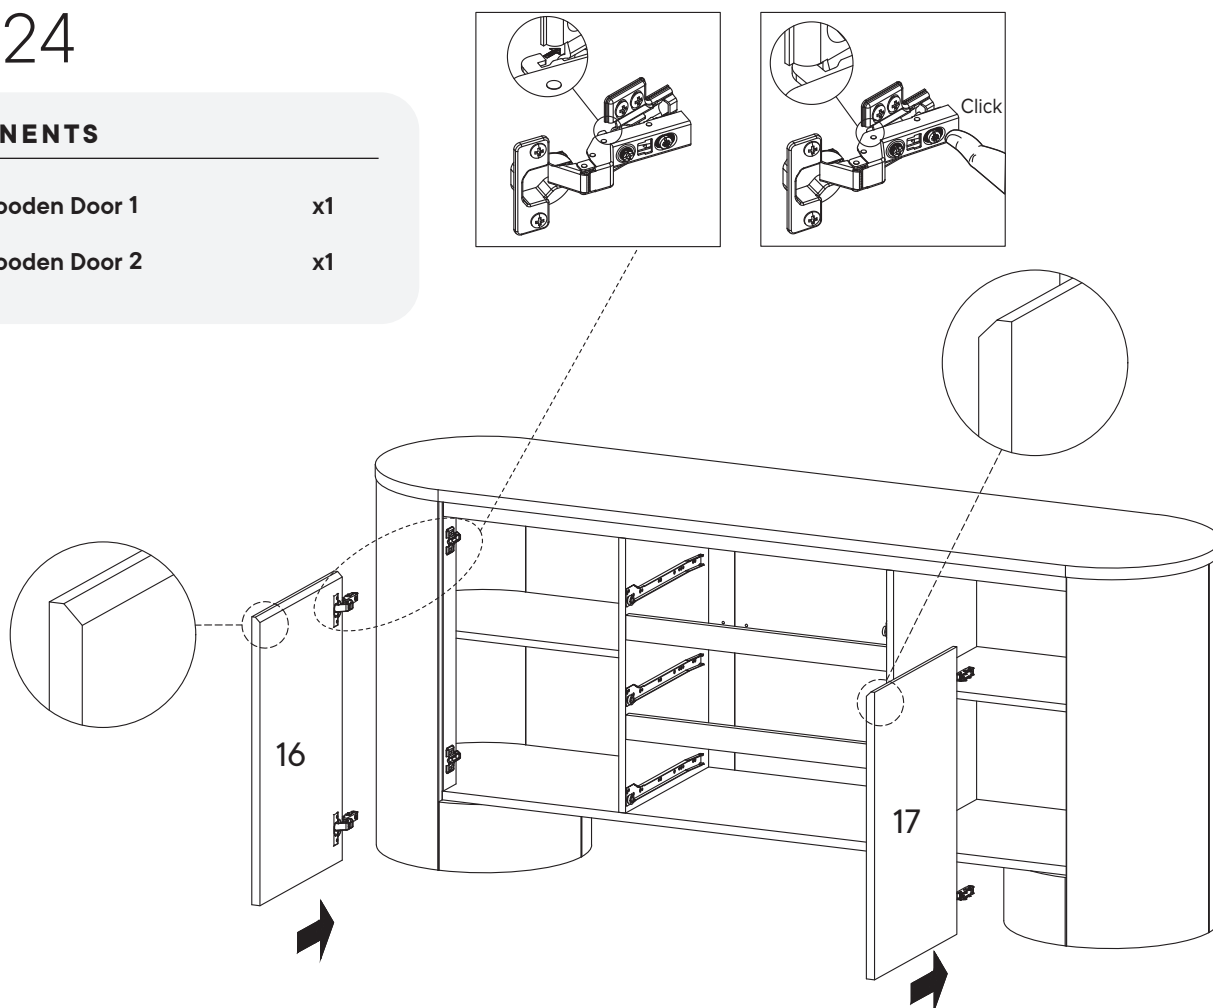

Step 25

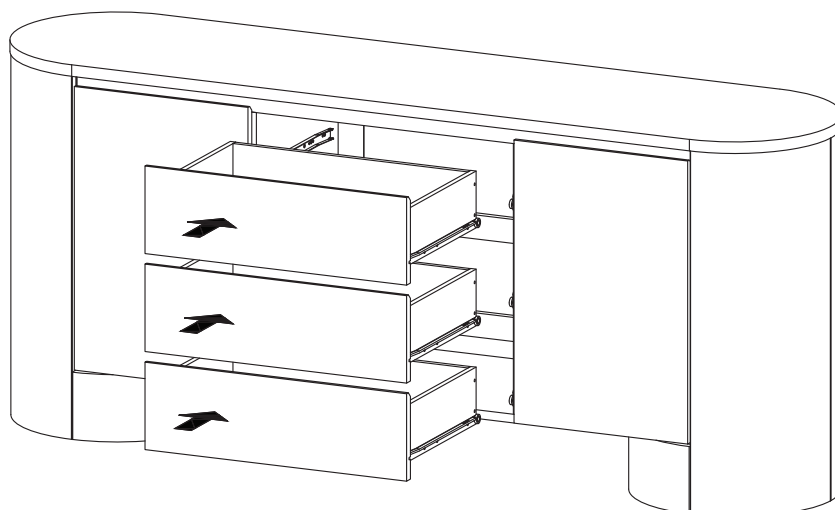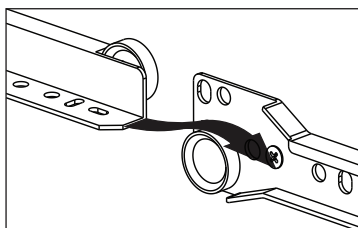

Great job!

Sideboard assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.




Never use harsh chemicals, as they could damage the finish or integrity of the item.

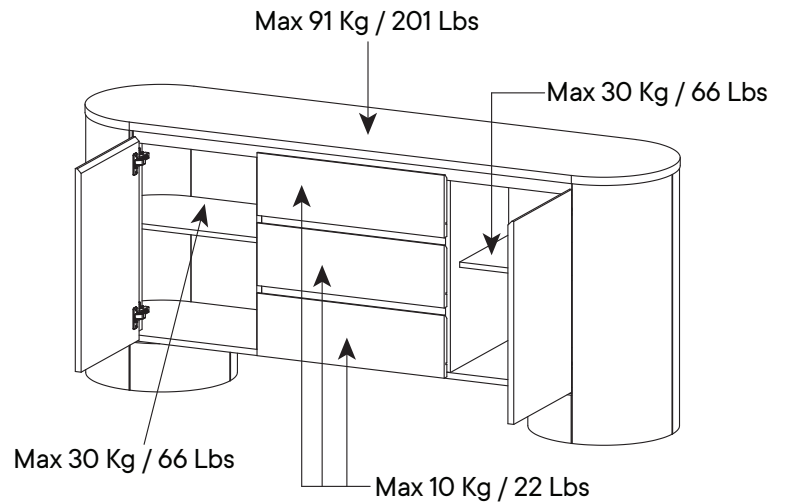

CONNECT WITH US!



Tag us @modway_furniture and #modway for a chance to be featured.

Cabinet Door Alignment

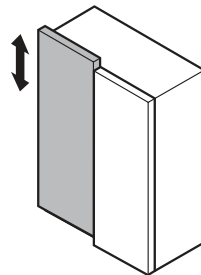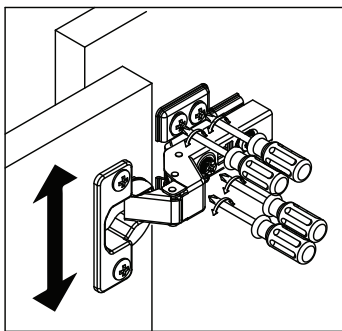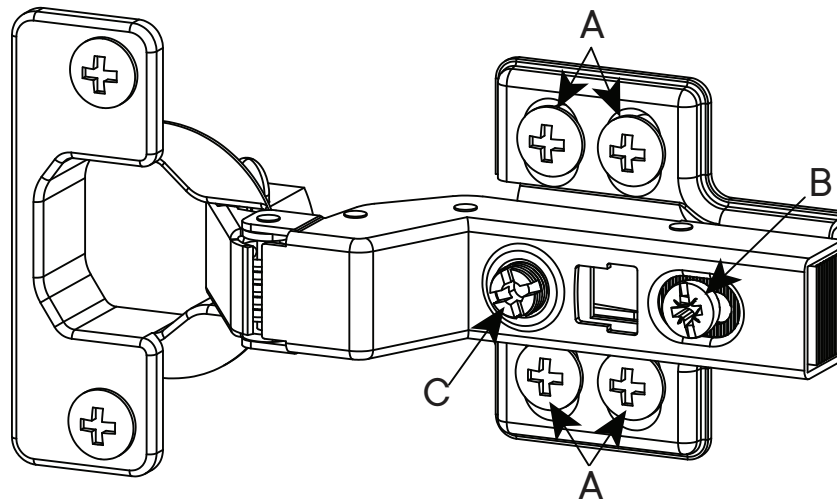



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

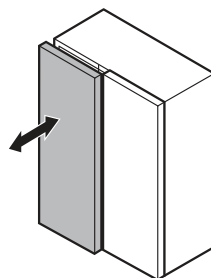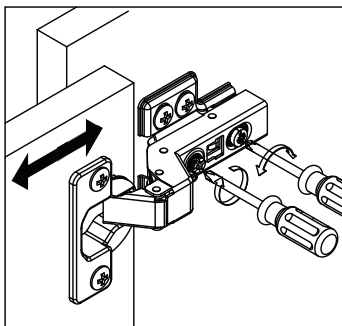

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

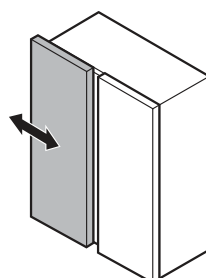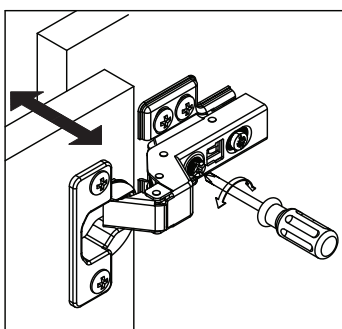

To adjust side ways.








Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

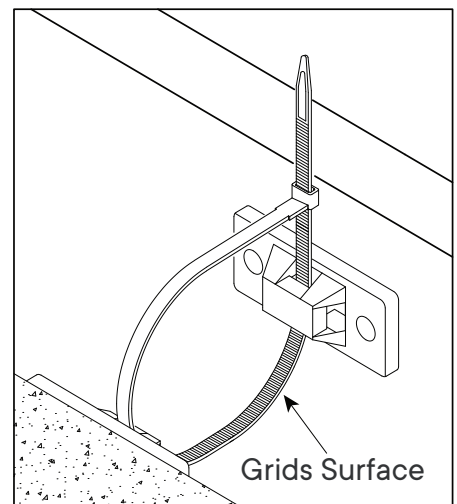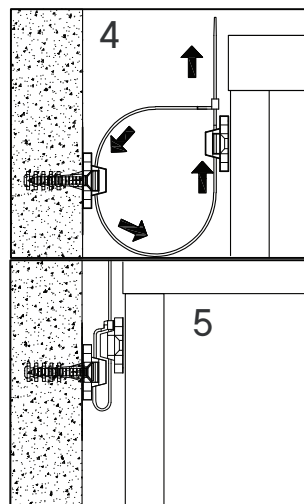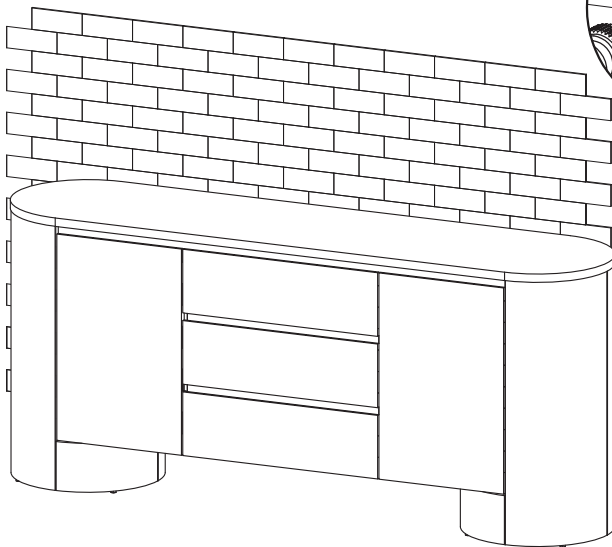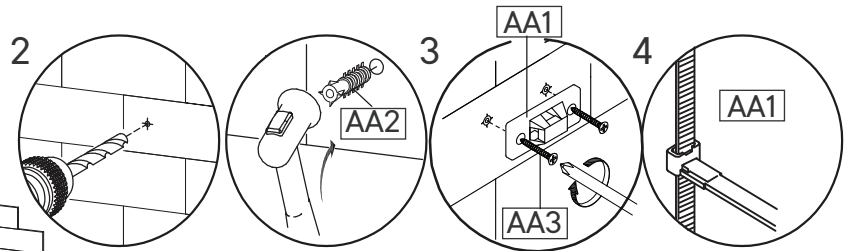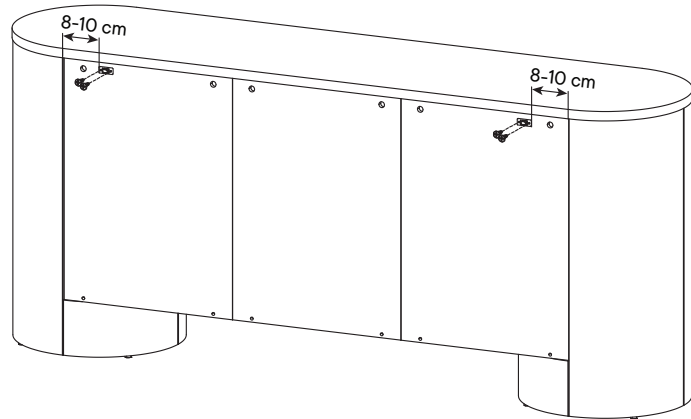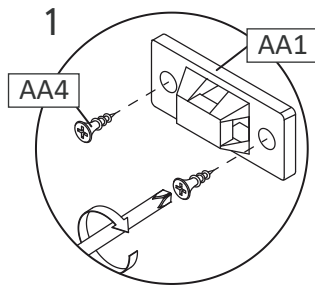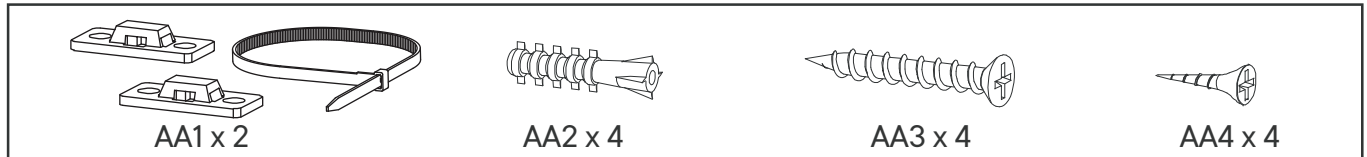

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.