


ASSEMBLY INSTRUCTIONS

EEI-6590

VO.08.07.23

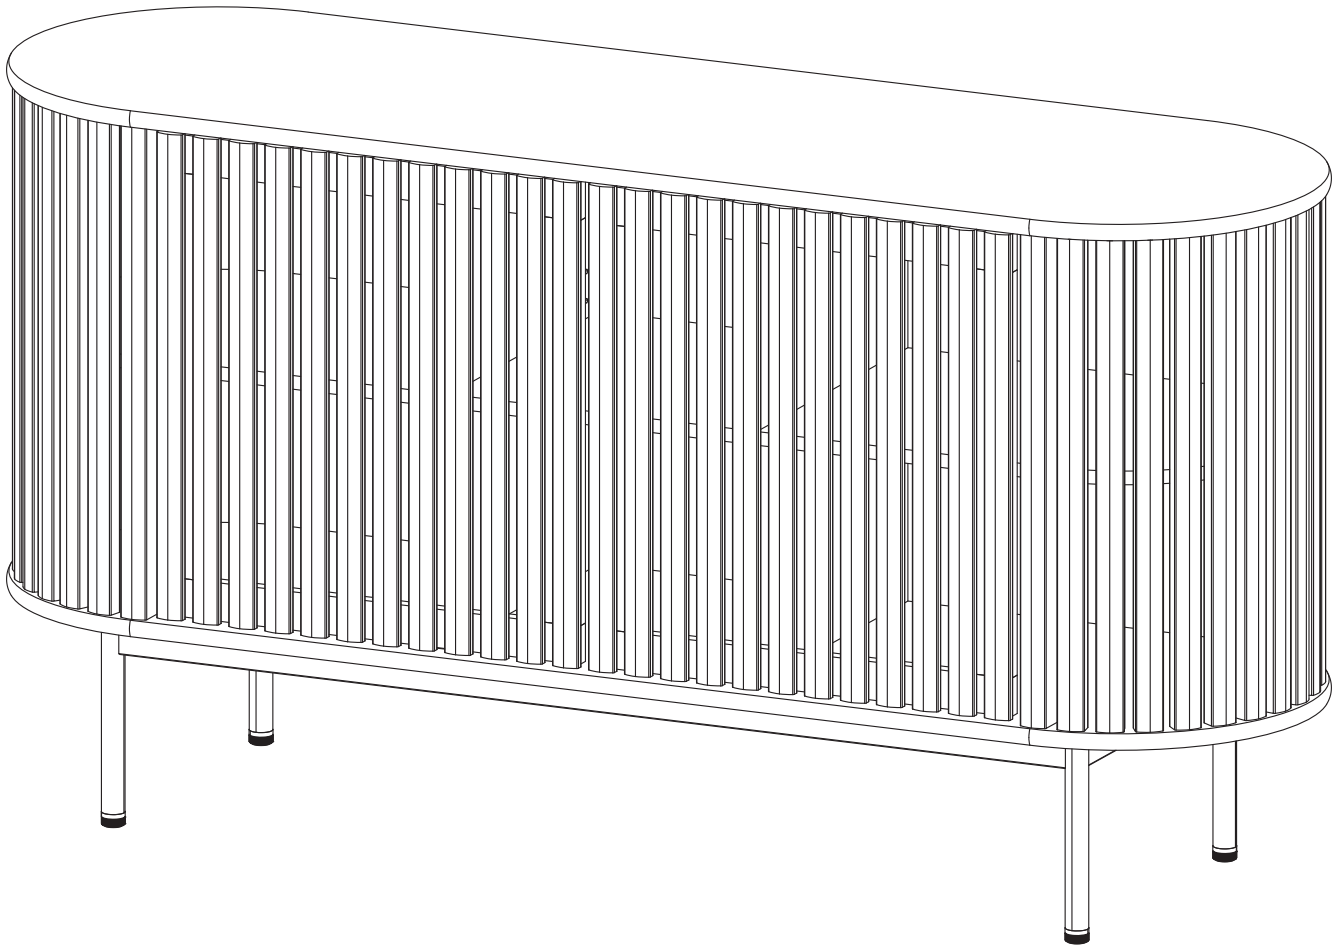

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:



1	Top Board	x1	11	Door Right	x1
2	Bottom Board	x1	12	Back Board 1	x2
3	Center Board Left	x1	13	Back Board 2	x1
4	Center Board Right	x1			
5	Adjustable Shelf	x1			
6	Fixed Shelf 1	x1			
7	Fixed Shelf 2	x1			
8	Bar Side 2	x30			
9	Bar Side 1	x2			
10	Door Left	x1			

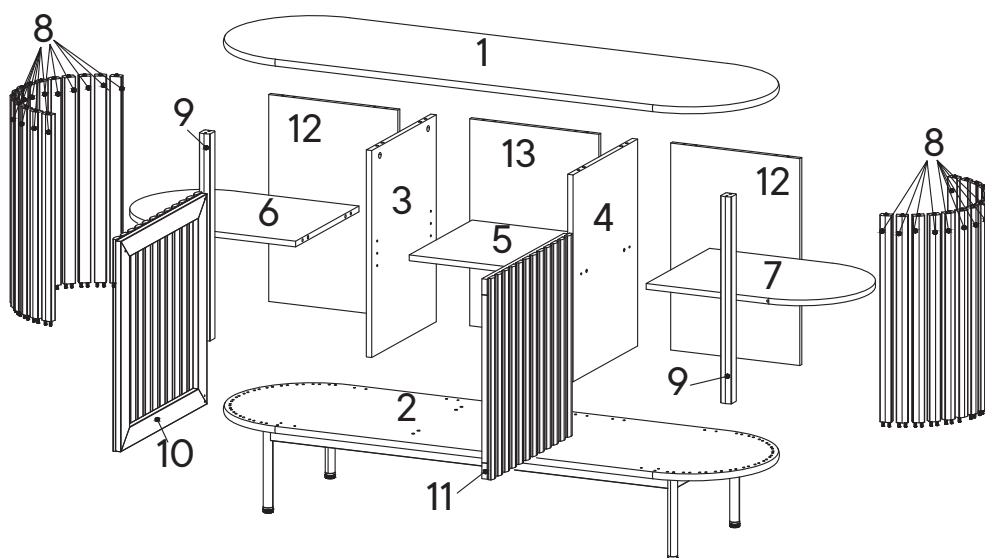

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x26
B		Cam Lock Ø15 mm	x14
C		Cam Lock Ø12 mm	x12
D		Wood Dowel Ø8 x 30 mm	x12
E		Wood Dowel Ø6 x 30 mm	x16
F		Screw M 7 x 50 mm	x6
G		Allen Key	x2
H		Screw M 6.4 x 45 mm	x12
I		Support Corner Brace	x4
J		Corner Brace	x4
K		Metal Leg	x4
L		Support Metal Leg 1	x2
M		Support Metal Leg 2	x2
N		Shelf Pin	x4
O		Screw M 6 x 12.5 mm	x10
P		Screw M 3.5 x 13 mm	x4
Q		Plate for Push to Open Latch	x2
R		Screw M 6 x 40 mm	x4
S		PVC Sheet	x2
T		Screw Cap Ø15 mm	x4
U		Push to Open Latch	x2
V		Screw M 4.5 x 12.5 mm	x10
W		Pivot Hinge Bottom Set	x2
X		Pivot Hinge Top	x2
US90		Anti-Deflection Bar	x1

What you need:

 Phillips Head Screwdriver

Components Carton Placement

Carton 1 of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
5	Adjustable Shelf	x1
6	Fixed Shelf 1	x1
7	Fixed Shelf 2	x1
	Hardware Pack	x1

Carton 2 of 2

Label	Description	Qty
3	Center Board Left	x1
4	Center Board Right	x1
8	Bar Side 2	x30
9	Bar Side 1	x2
10	Door Left	x1
11	Door Right	x1
12	Back Board 1	x2
13	Back Board 2	x1
	Leg Pack	x1
	Hardware Pack	x1

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com



Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x20
- P** Screw M 3.5 x 13 mm x4
- U** Push to Open Latch x2

COMPONENTS

- 1** Top Board x1
- 2** Bottom Board x1

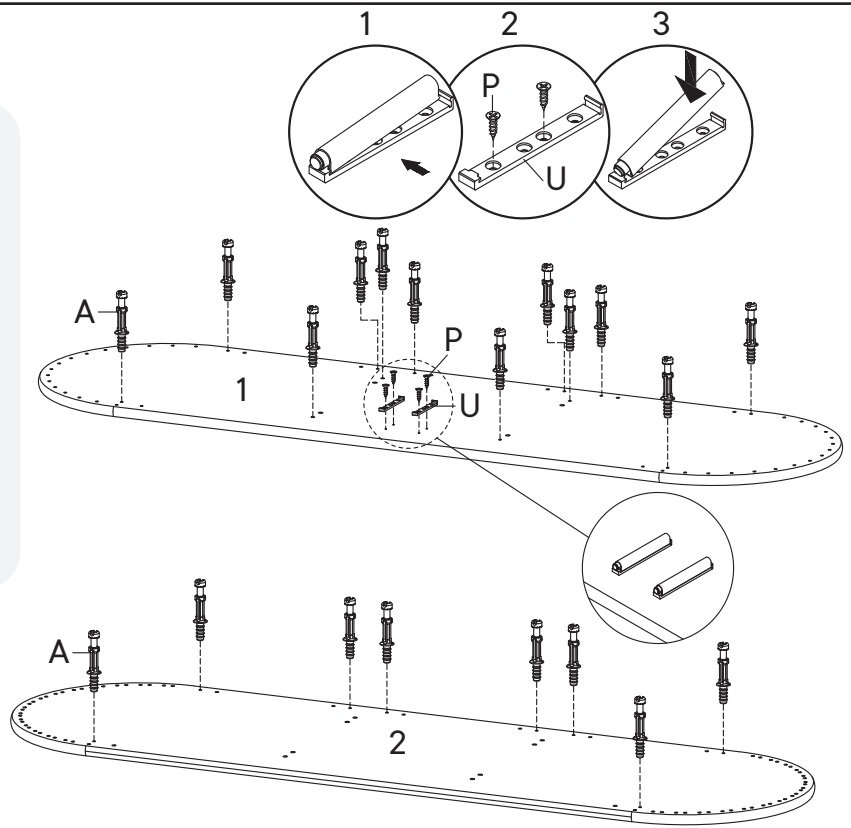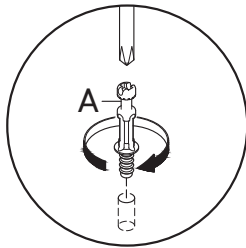


Step 2

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4
- D** Wood Dowel Ø8 x 30 mm x12

COMPONENTS

- 3** Center Board Left x1
- 4** Center Board Right x1
- 6** Fixed Shelf 1 x1
- 7** Fixed Shelf 2 x1

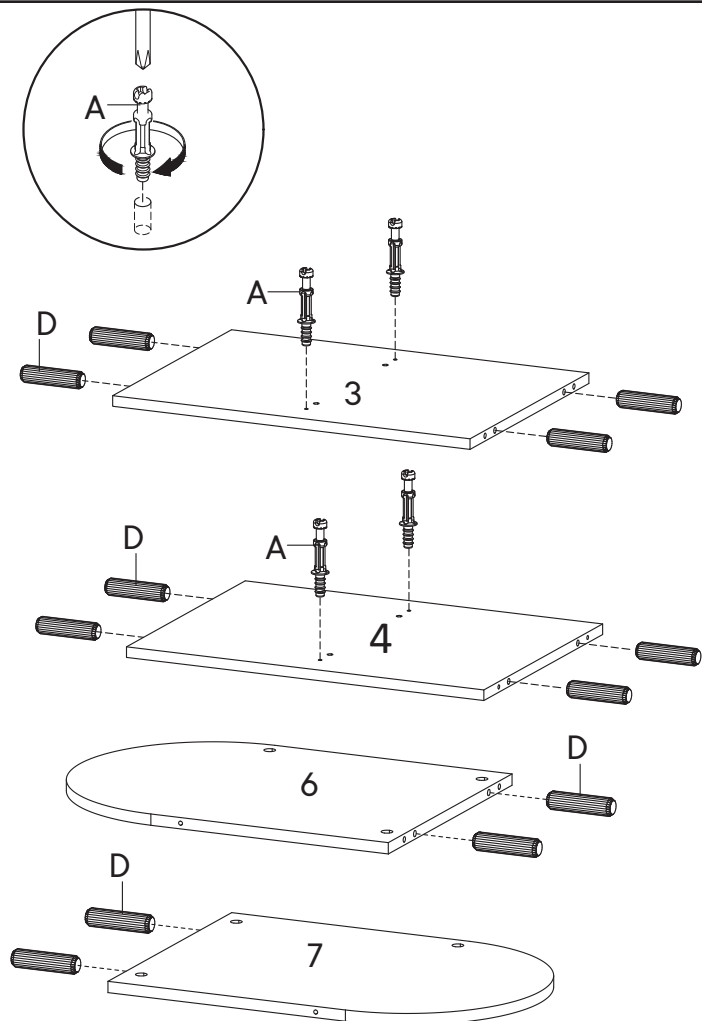


Step 3

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2
- E** Wood Dowel Ø6 x 30 mm x16

COMPONENTS

- 9** Bar Side 1 x2
- 12** Back Board 1 x2
- 13** Back Board 2 x1

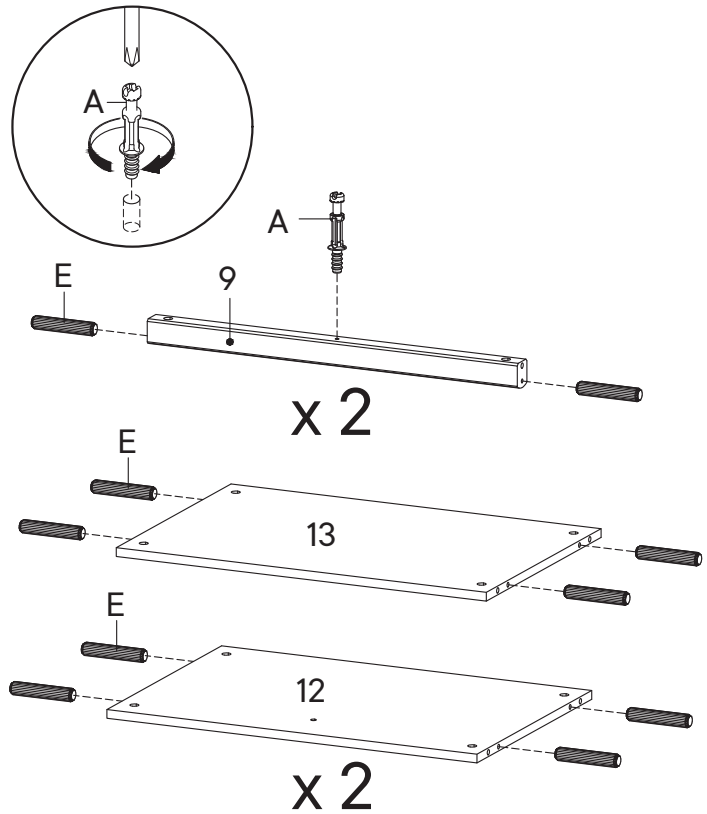


Step 4

HARDWARE

- B** Cam Lock Ø15 mm x4

COMPONENTS

- 3** Center Board Left x1
- 4** Center Board Right x1
- 6** Fixed Shelf 1 x1
- 7** Fixed Shelf 2 x1

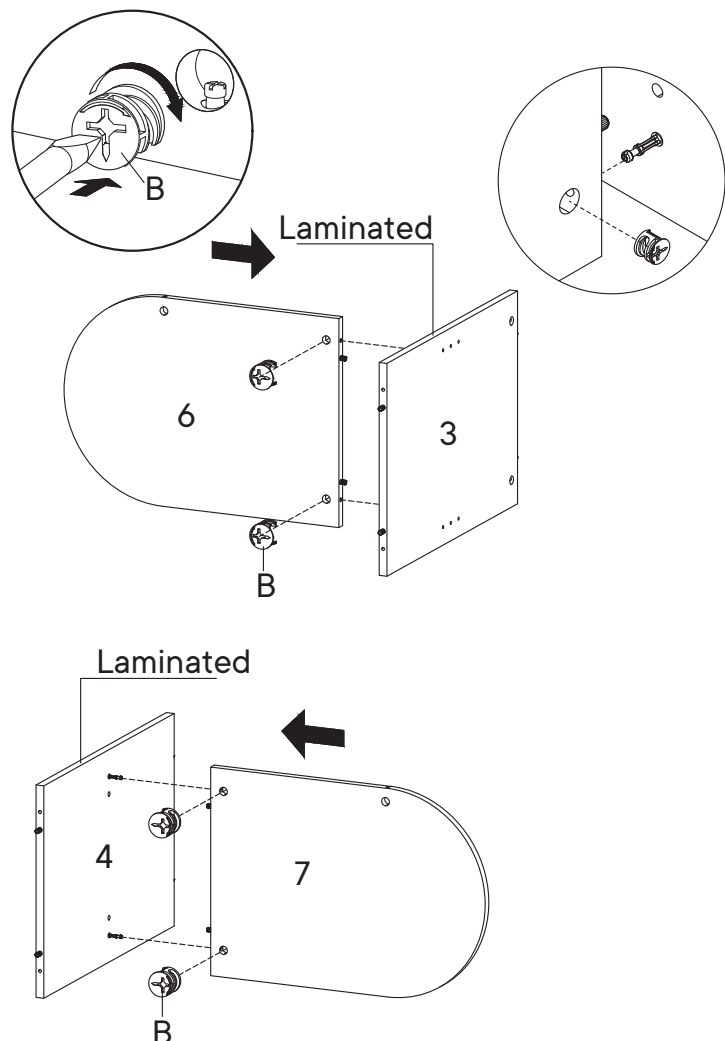


Step 5

HARDWARE

B Cam Lock Ø15 mm x2

COMPONENTS

9 Bar Side 1 x2

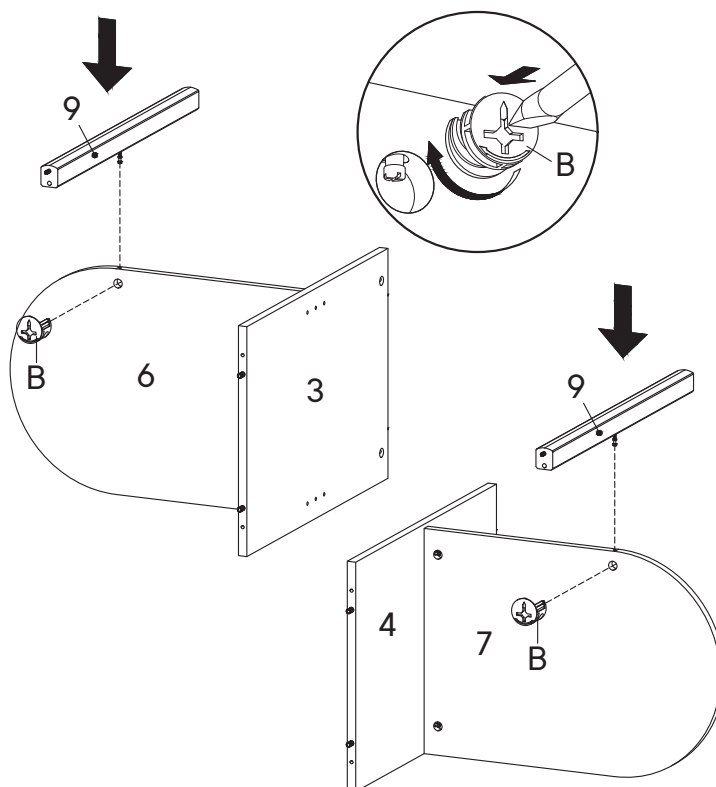

Step 6



HARDWARE

B Cam Lock Ø15 mm x6

T Screw Cap Ø15 mm x4

COMPONENTS

1 Top Board x1

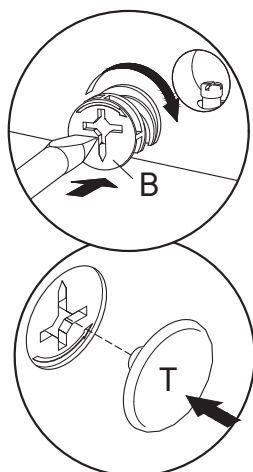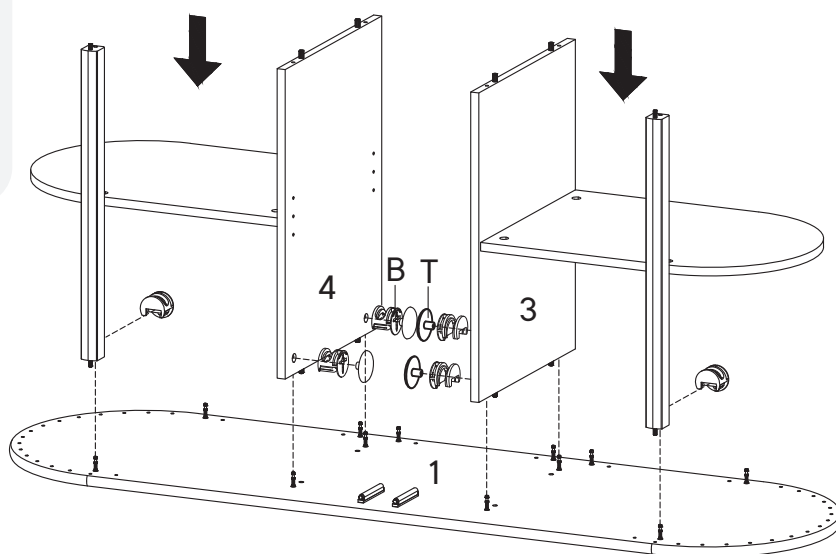



Step 7

HARDWARE

C Cam Lock Ø12 mm x2

COMPONENTS

13 Back Board 2 x1

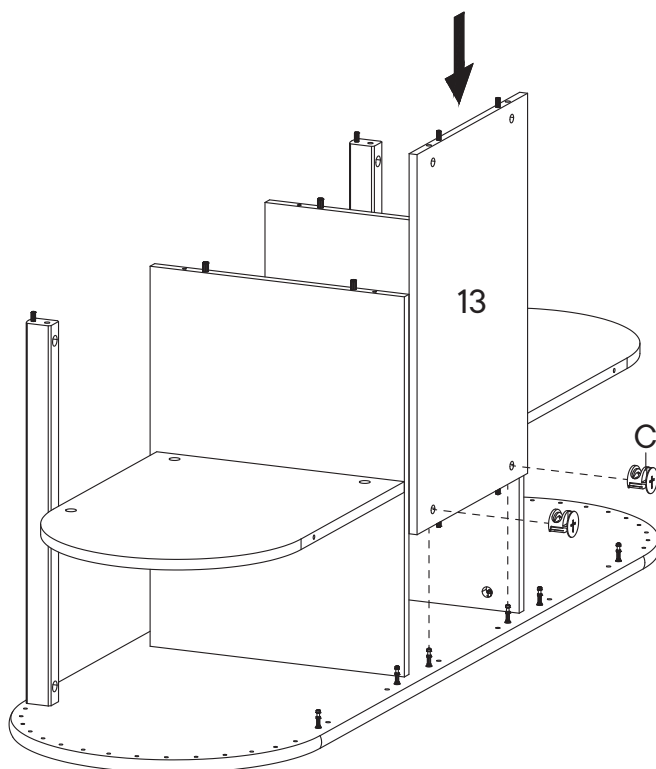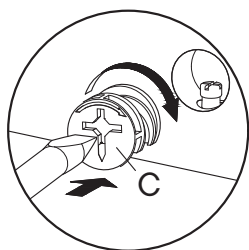



Step 8

HARDWARE

C Cam Lock Ø12 mm x4

COMPONENTS



12 Back Board 1 x2

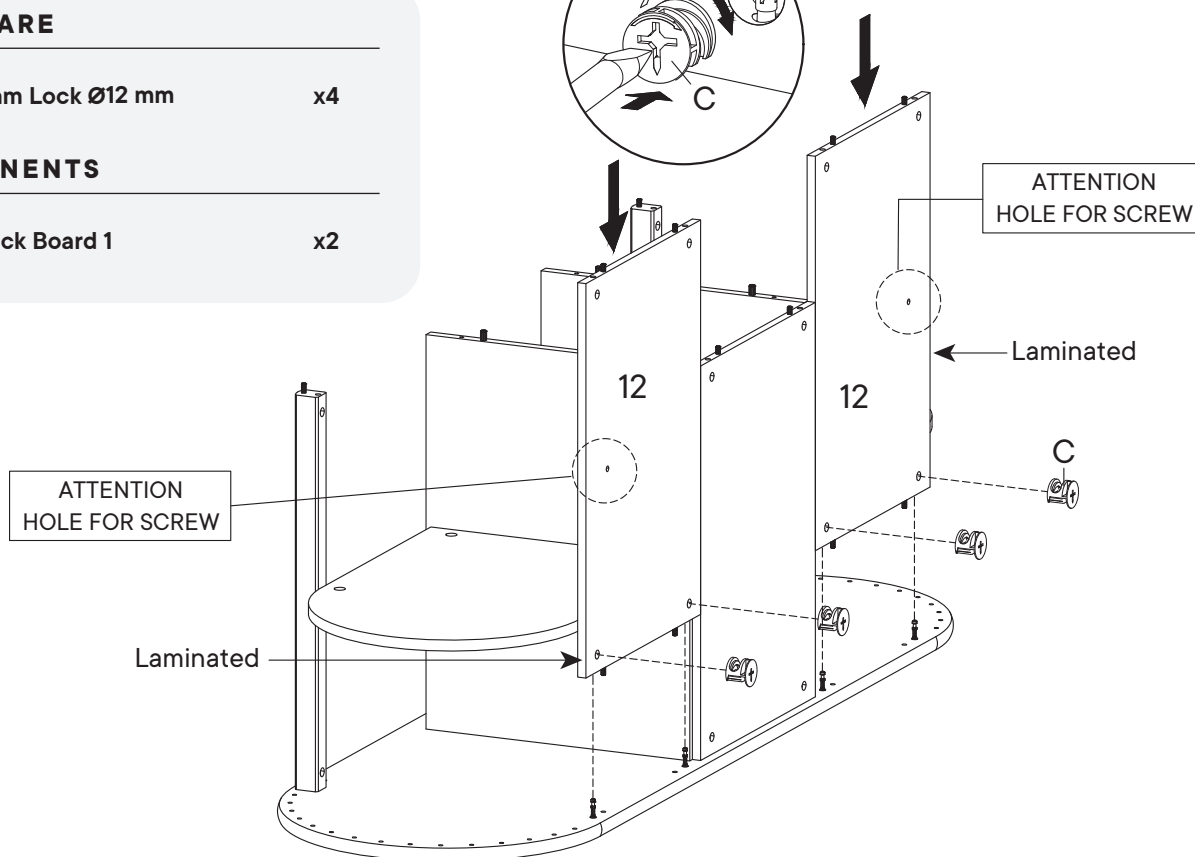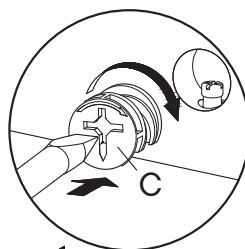

Step 9

HARDWARE

- F** Screw M 7 x 50 mm x2
- G** Allen Key x1

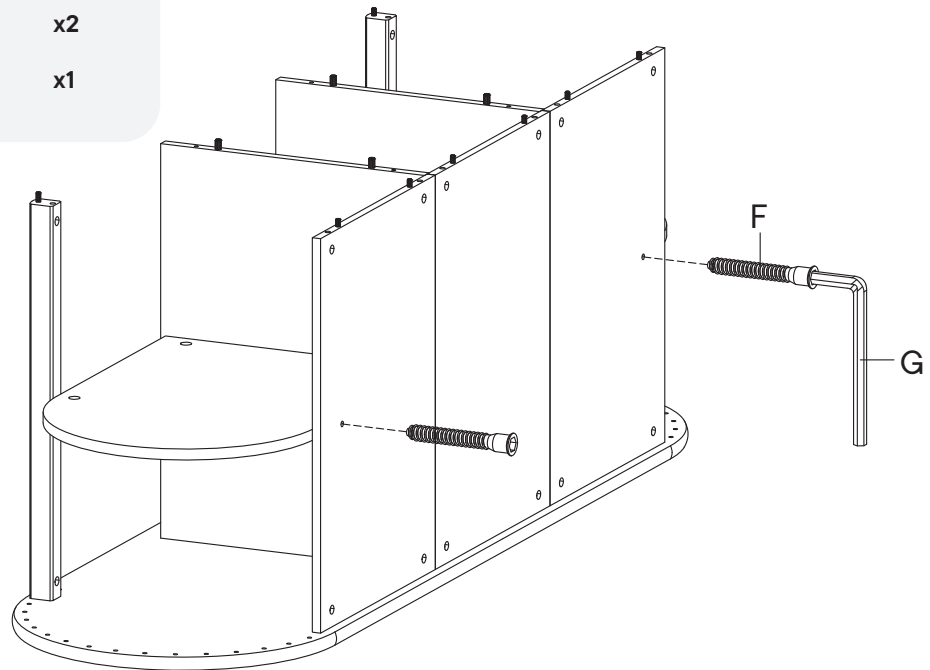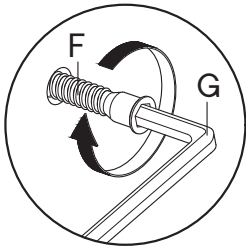



Step 10

HARDWARE

- B** Cam Lock Ø15 mm x2
- C** Cam Lock Ø12 mm x6
- F** Screw M 7 x 50 mm x4
- G** Allen Key x1

COMPONENTS



- 2** Bottom Board x1

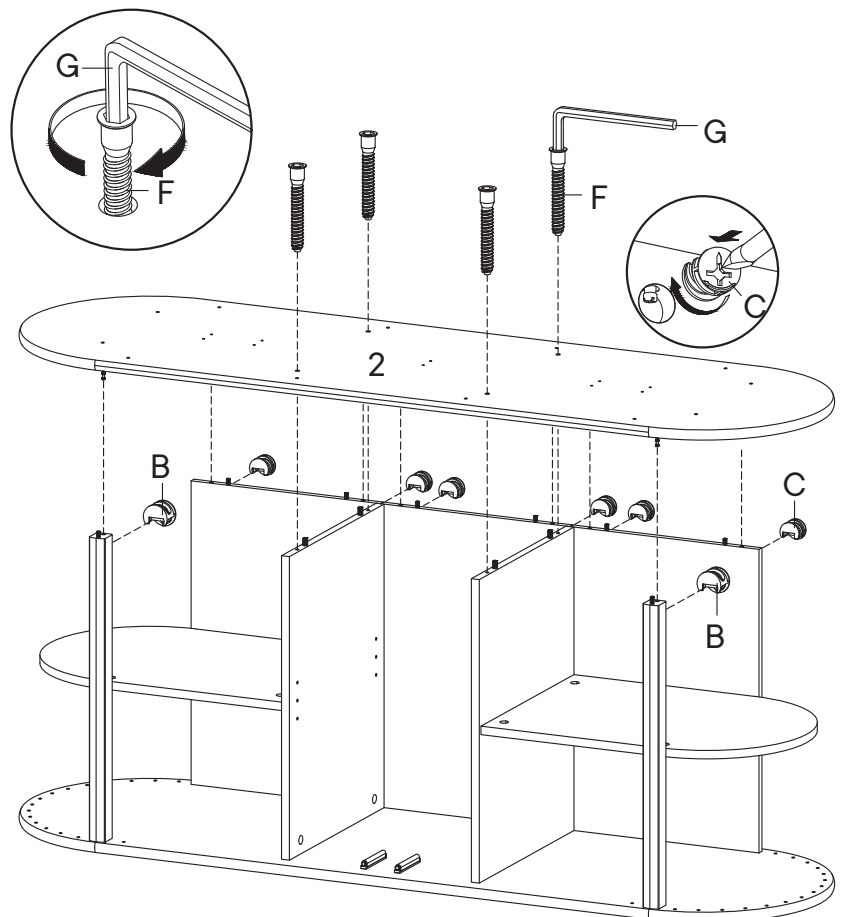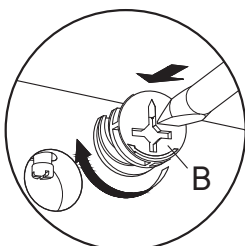

Step 11

HARDWARE



G	Allen Key	x1
I	Support Corner Brace	x4
J	Corner Brace	x4
K	Metal Leg	x4
L	Support Metal Leg 1	x2
M	Support Metal Leg 2	x2
R	Screw M 6 x 40 mm	x4

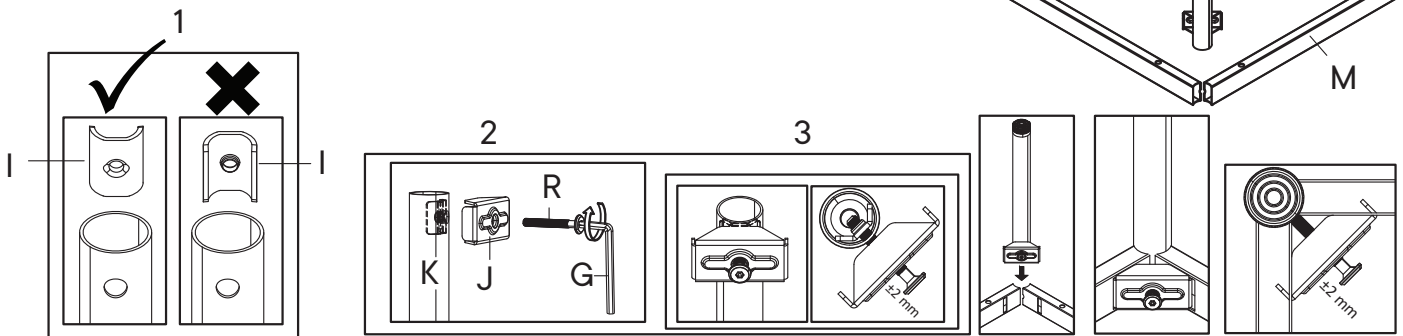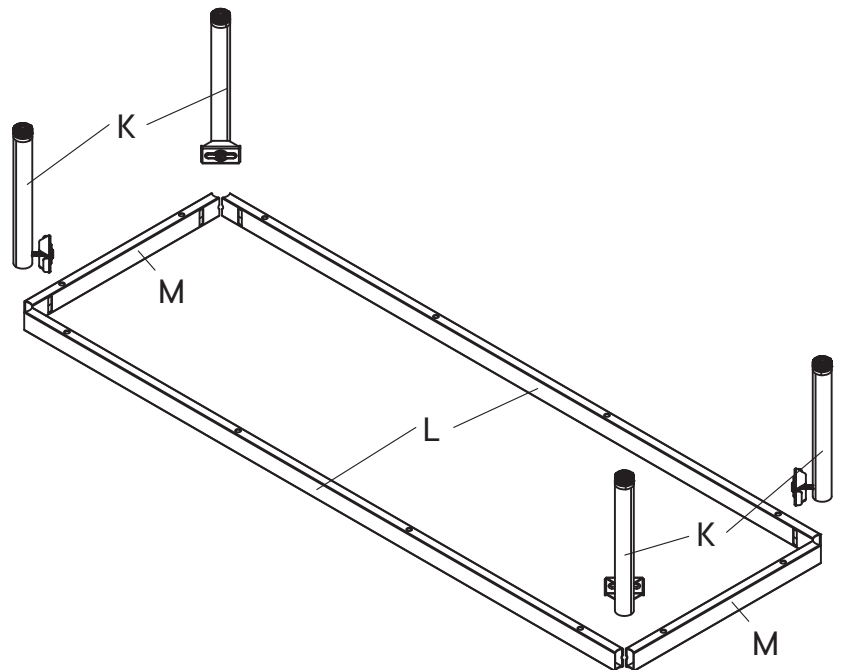

Step 12

HARDWARE

G	Allen Key	x1
H	Screw M 6.4 x 45 mm	x12

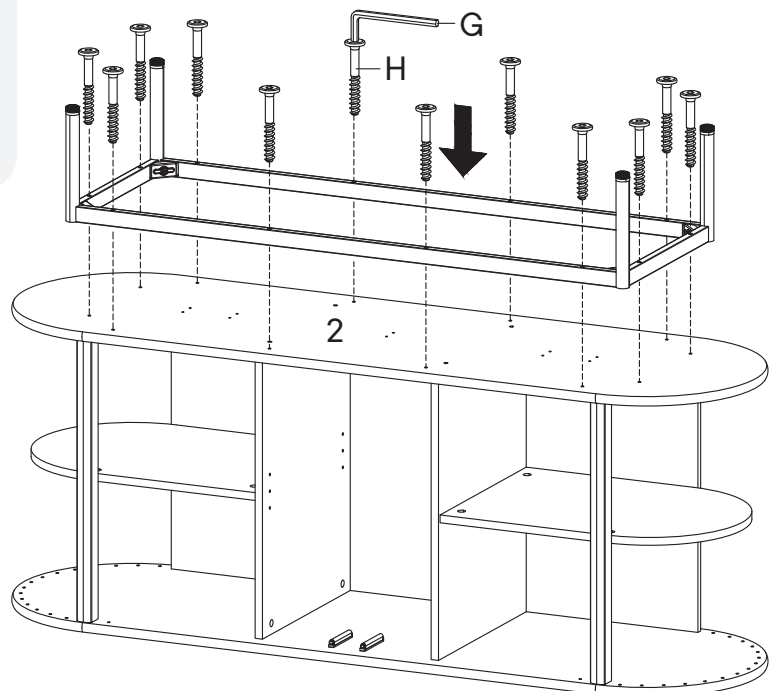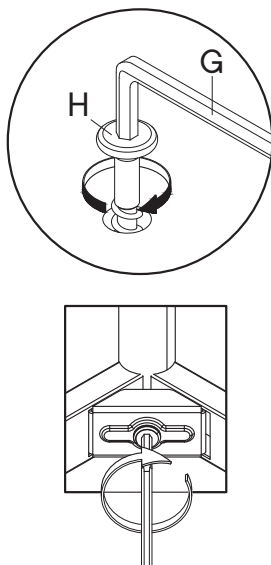


Step 13

HARDWARE

○ Screw M 6 x 12.5 mm x10

US90 Anti-Deflection Bar x1

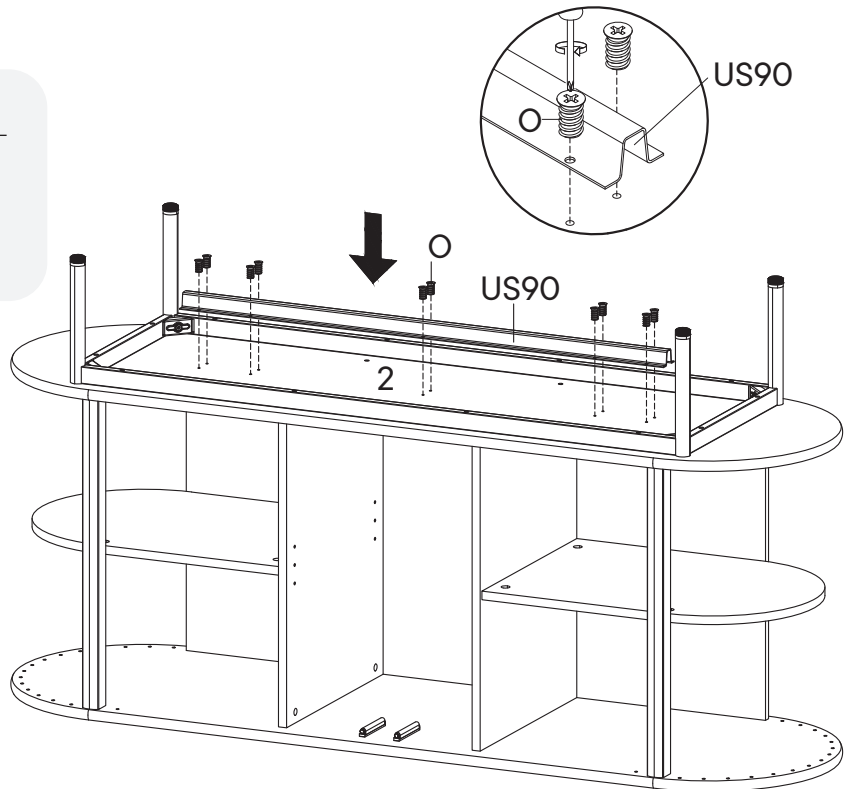



Step 14

HARDWARE

● PVC Sheet x2

COMPONENTS


8 Bar Side 2 x30

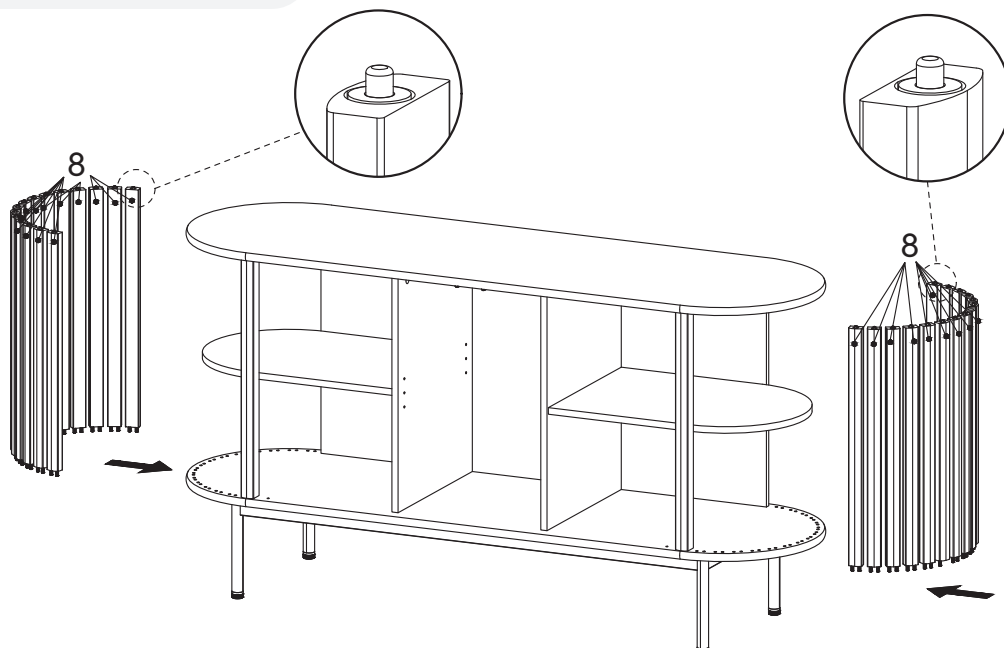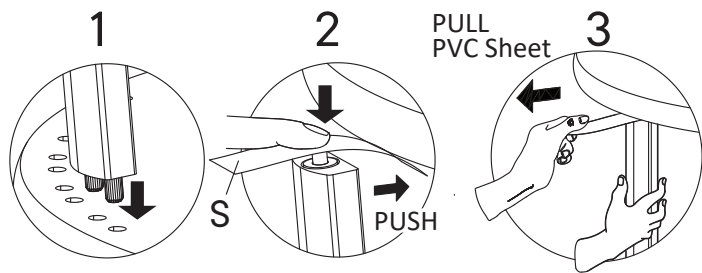

Step 15

HARDWARE

W Pivot Hinge Bottom Set x2

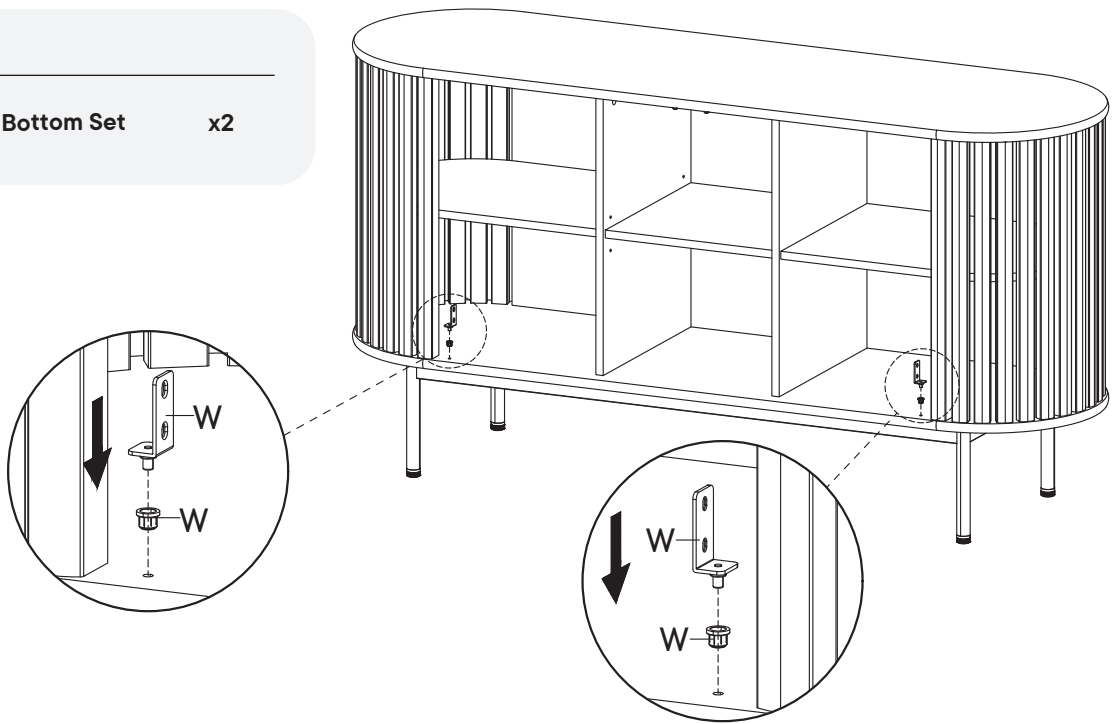


Step 16

HARDWARE

N Shelf Pin x4

COMPONENTS

5 Adjustable Shelf x1

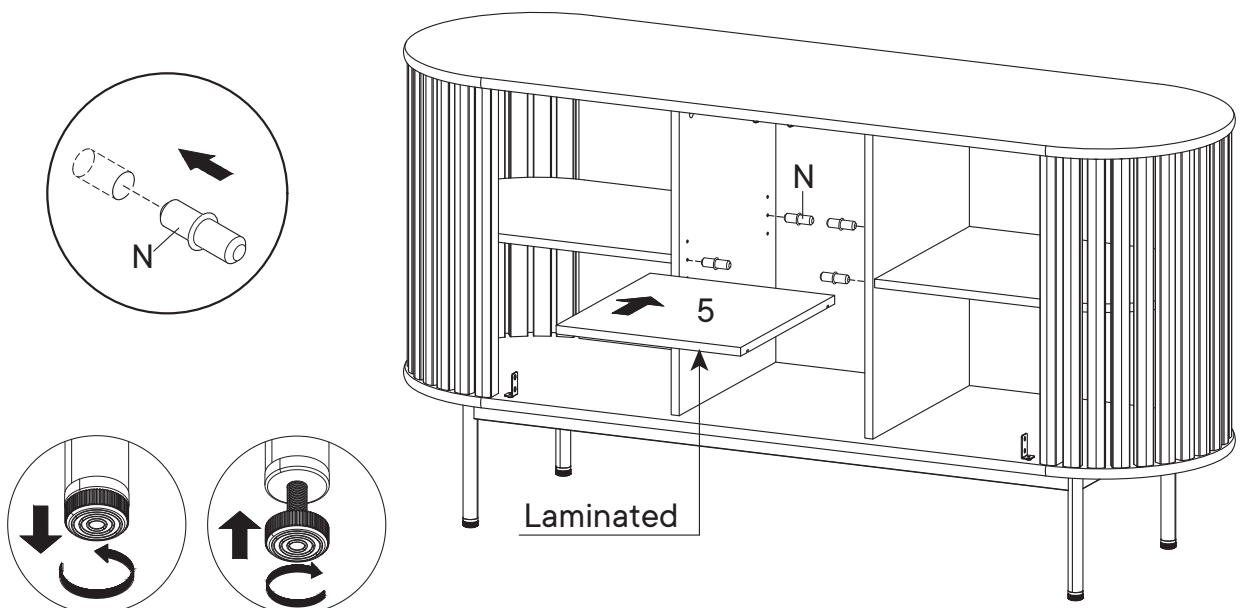


Step 17

HARDWARE

- Q** Plate for Push to Open Latch x2
- V** Screw M 4.5 x 12.5 mm x6
- X** Pivot Hinge Top x2

COMPONENTS

- 10** Door Left x1
- 11** Door Right x1

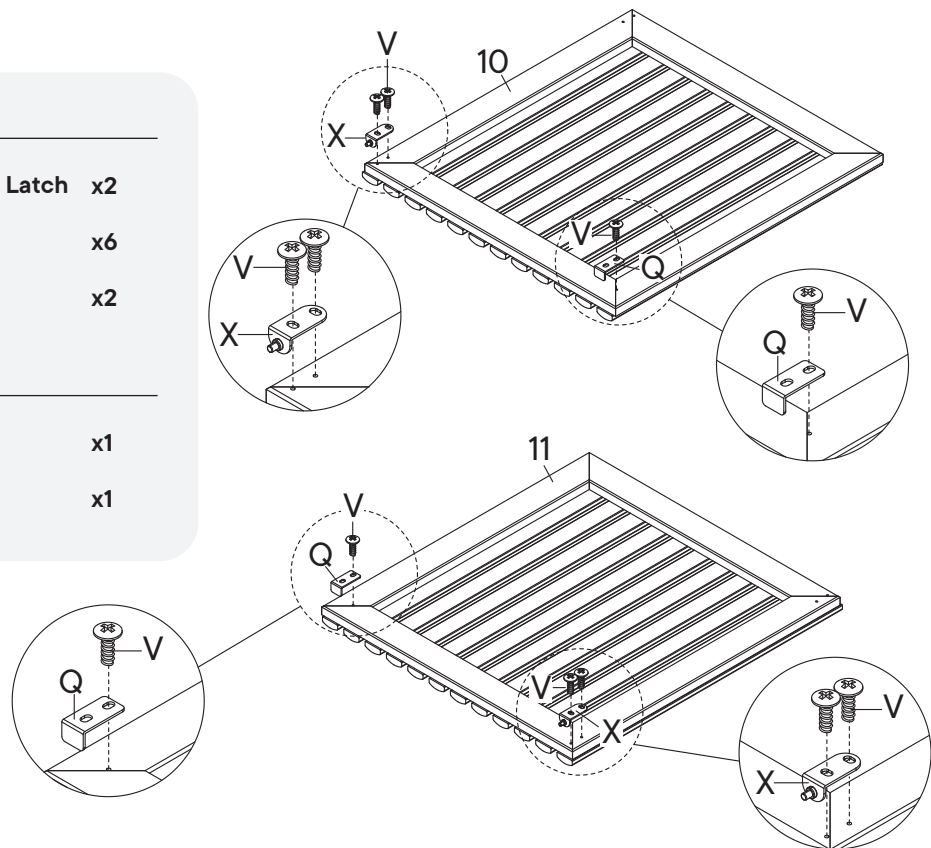


Step 18

HARDWARE

- V** Screw M 4.5 x 12.5 mm x4

COMPONENTS

- 10** Door Left x1
- 11** Door Right x1

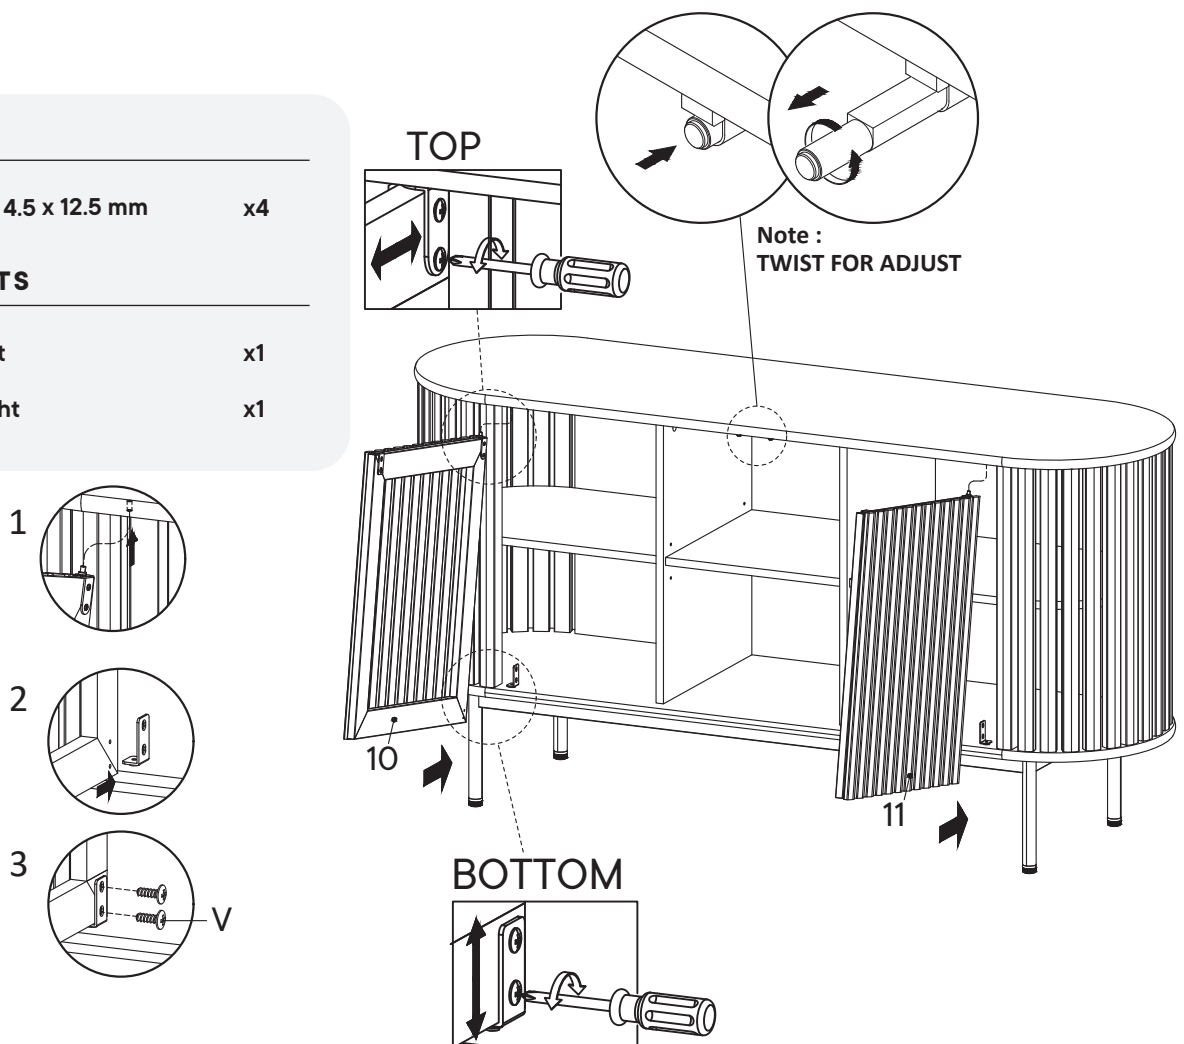

Great job!

Sideboard assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner.

Never use harsh chemicals,
as they could damage the finish
or integrity of the item.

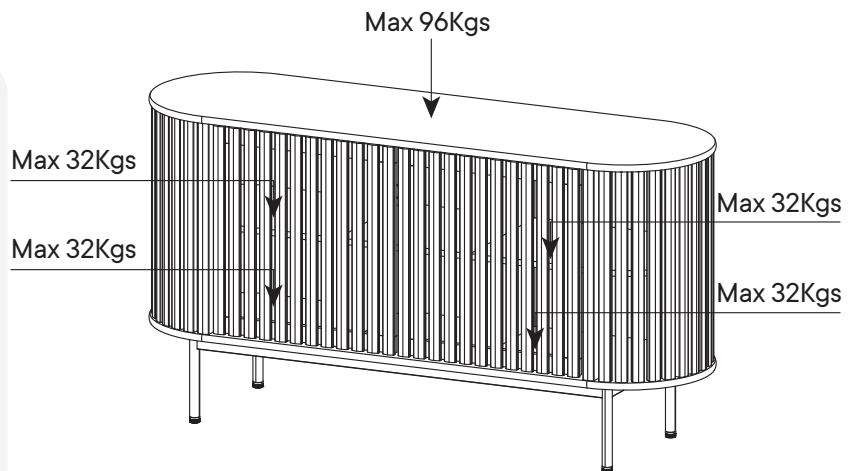

CONNECT WITH US!








Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

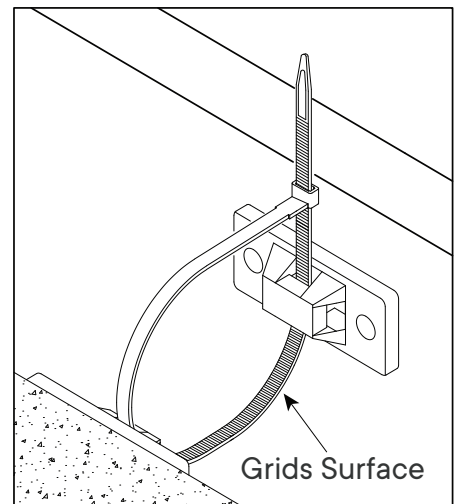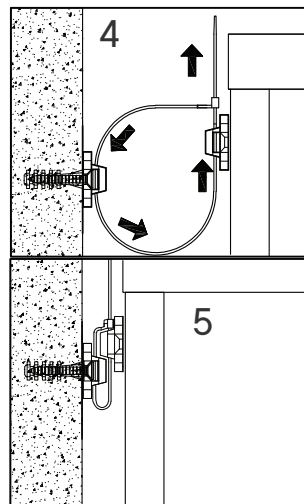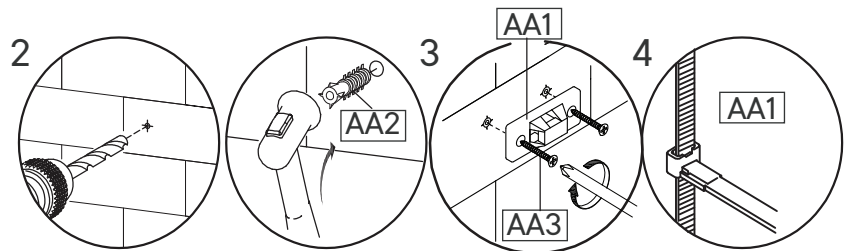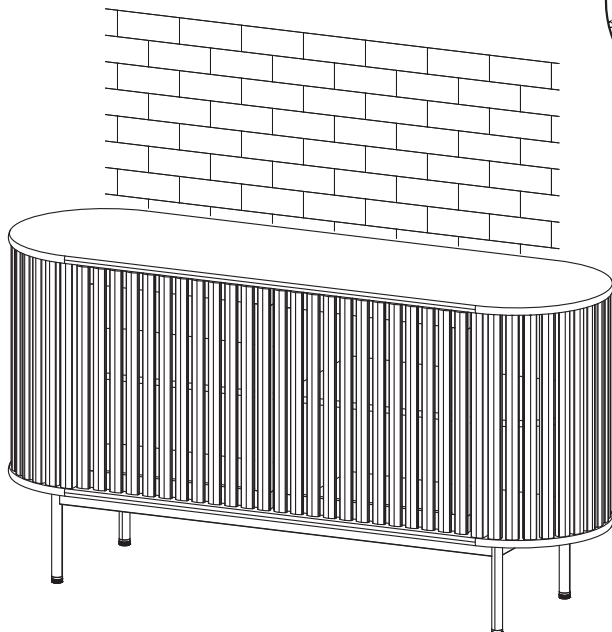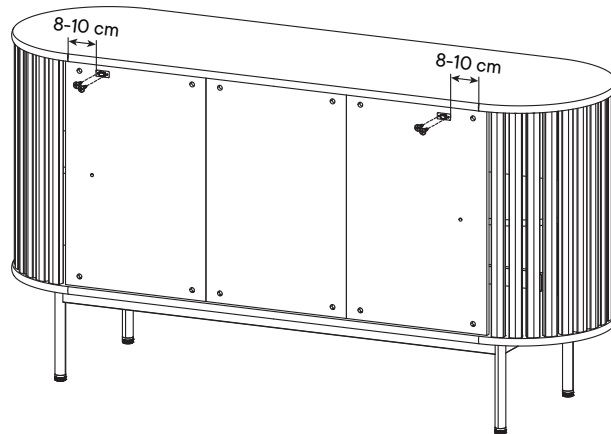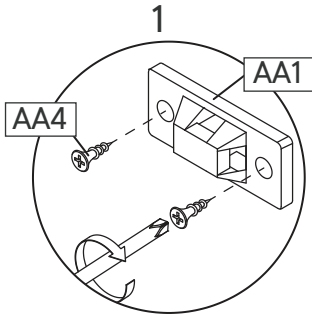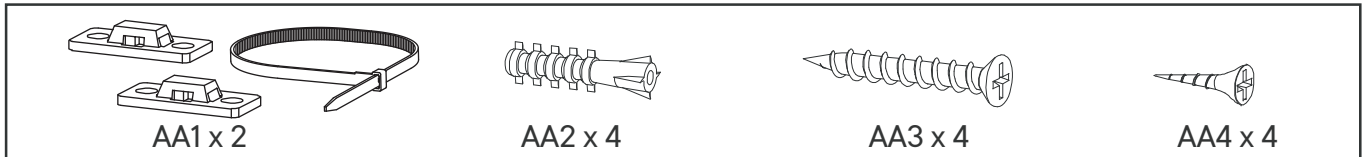

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.