


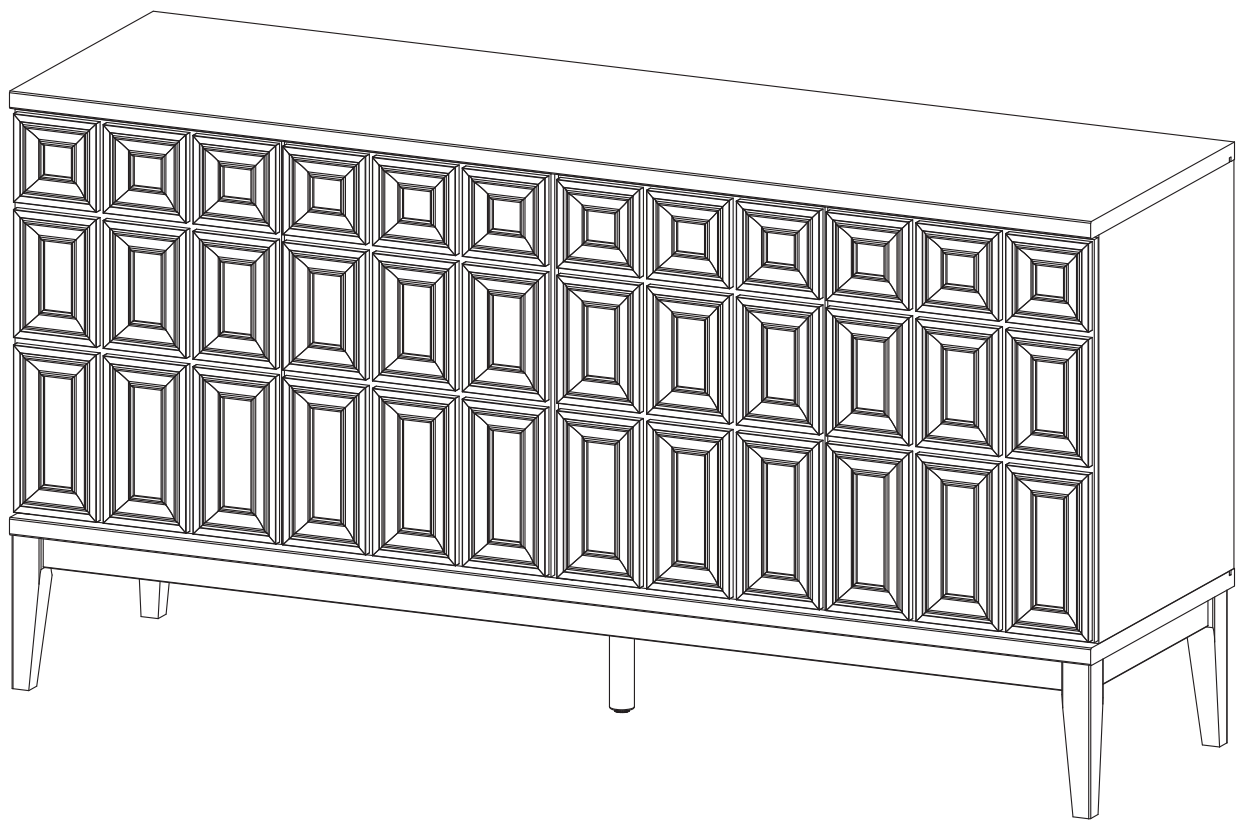

ASSEMBLY INSTRUCTIONS

SIDEBOARD

EEI-7021 / V2.04.22.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.







Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x6
B		Cam Lock Ø15 mm	x6
C		Wood Dowel Ø8 x 30 mm	x24
D		Screw M 7 x 50 mm	x6
E		Screw M 6.4 x 53 mm	x12
F		Flang Nut	x4
G		Screw M 4.5 x 12.5 mm	x76
H		Screw M 3.5 x 13 mm	x8
I		Shelf Pin	x8
J		Screw M 3.5 x 15.5 mm	x20
K		Wedge	x20
L		Screw Cap Ø15 mm	x4
M		Screw Cap Ø15 mm	x2
N		Push Tools	x4
O		Allen Key	x2
P		Floor Protector	x4
Q		Joining Strip	x2
R		Wrench	x1
BC410		Corner Brace	x4
HS26A		Hinge	x8
PM3		Mounting Plate	x1

WHAT YOU NEED:



Phillips




Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 17

All parts are numbered with a sticker according to this list.

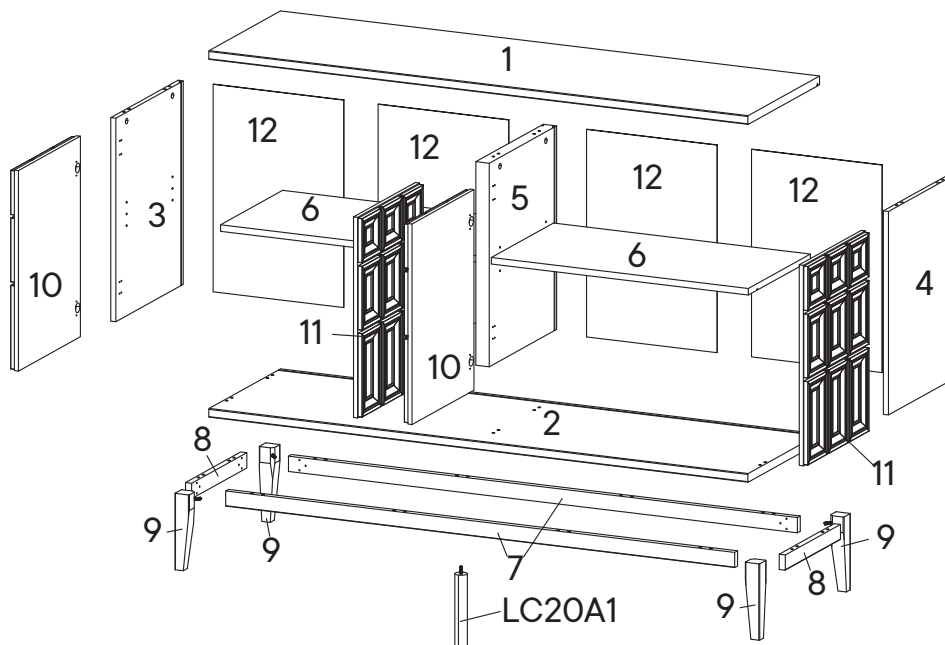

1	Top Board	x1	8	Bottom Skirt 2	x2
2	Bottom Board	x1	9	Leg	x4
3	Side Board Left	x1	10	Door 1	x2
4	Side Board Right	x1	11	Door 2	x2
5	Center Board	x1	12	Back Board	x4
6	Adjustable Shelf	x2	LC20A1	Center Leg	x1
7	Bottom Skirt 1	x2			

Carton 1 Of 2

Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board	x1
9	Leg	x4
10	Door 1	x2
11	Door 2	x2
LC20A1 Center Leg		x1
Hardware Pack		x1

Carton 2 Of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
6	Adjustable Shelf	x2
7	Bottom Skirt 1	x2
8	Bottom Skirt 2	x2
12	Back Board	x4
Q	Joining Strip	x2

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x6
C	Wood Dowel Ø8 x 30 mm x12	
H	Screw M 3.5 x 13 mm	x8
N	Push Tool	x4

COMPONENTS

1	Top Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board	x1


1.1 Insert Wood Dowel Ø8 x 30 mm (C) into the Side Board Left (3).

1.2 Insert Wood Dowel Ø8 x 30 mm (C) into the Side Board Right (4).

1.3 Insert Wood Dowel Ø8 x 30 mm (C) into the Center Board (5).

1.4 Insert Cam Bolt Ø6 x 35 mm (A) into the Top Board (1).

1.5 Separate the Push Tool (N) by pressing down the hook at the back. Separate the base, ensuring the front hook (see figure) is at the edge of the front side, and secure it with the Screw M 3.5 x 13 mm (H) . Align the front part of the Push Tool body with the bumper to the hook, then press down the back part of the Push Tool.

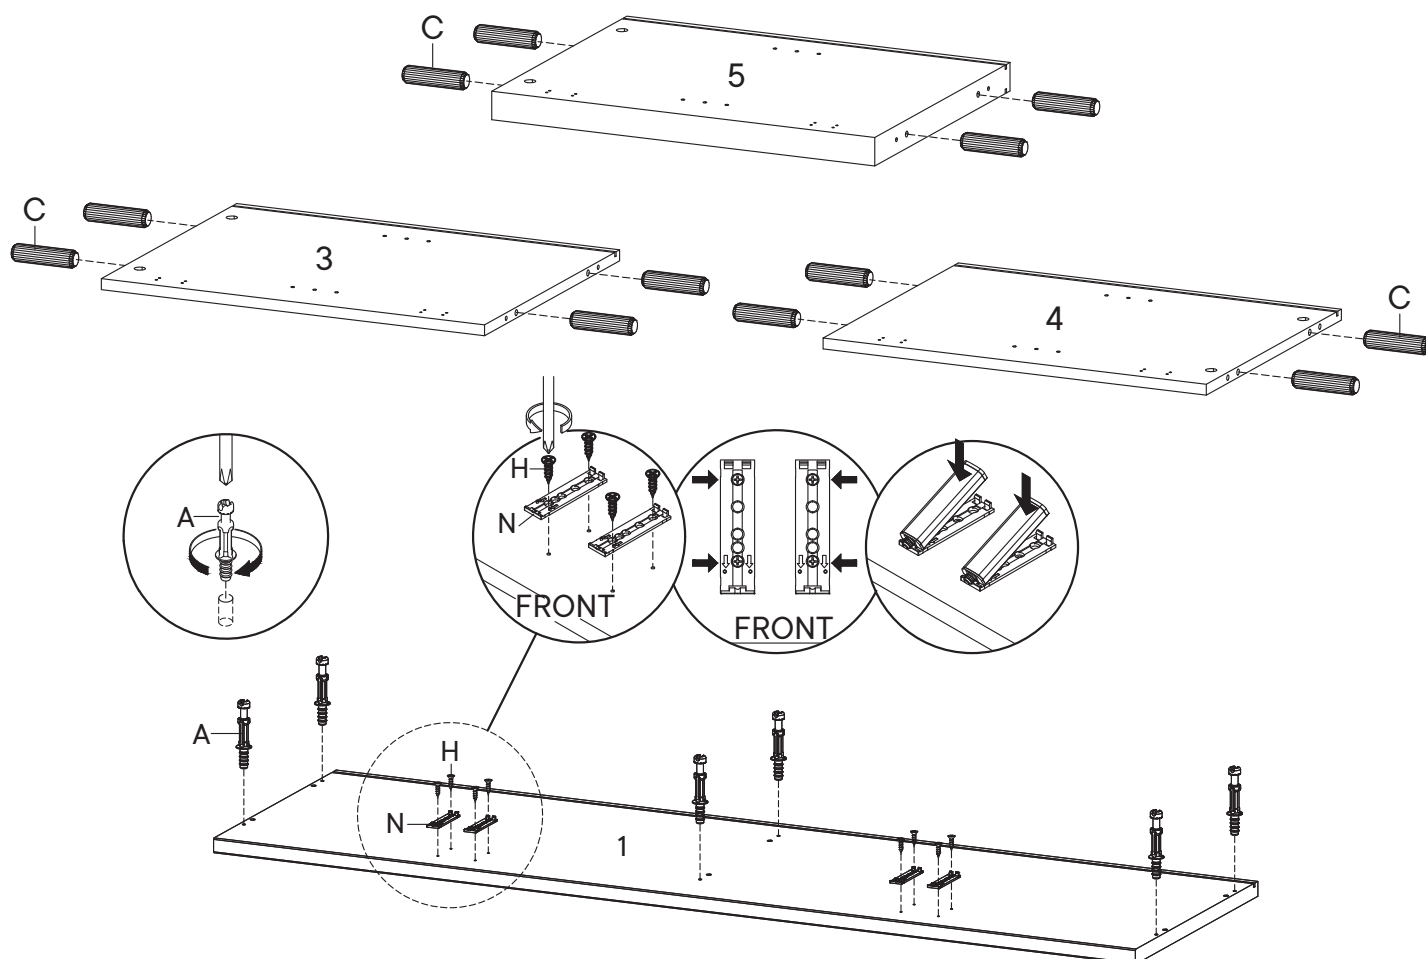


HARDWARE

B	Cam Lock Ø15 mm	x6
L	Screw Cap Ø15 mm	x4
M	Screw Cap Ø15 mm	x2

COMPONENTS

1	Top Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board	x1

2.1 Attach Side Board Left (3), Side Board Right (4) and Center Board (5) into Top Board (1). Insert Cam Lock (B) then tighten using screwdriver. Put Screw Cap Ø15 mm (M) over the screw on Center Board (5), and put Screw Cap Ø15 mm (L) over the screw on Side Boards (3&4).

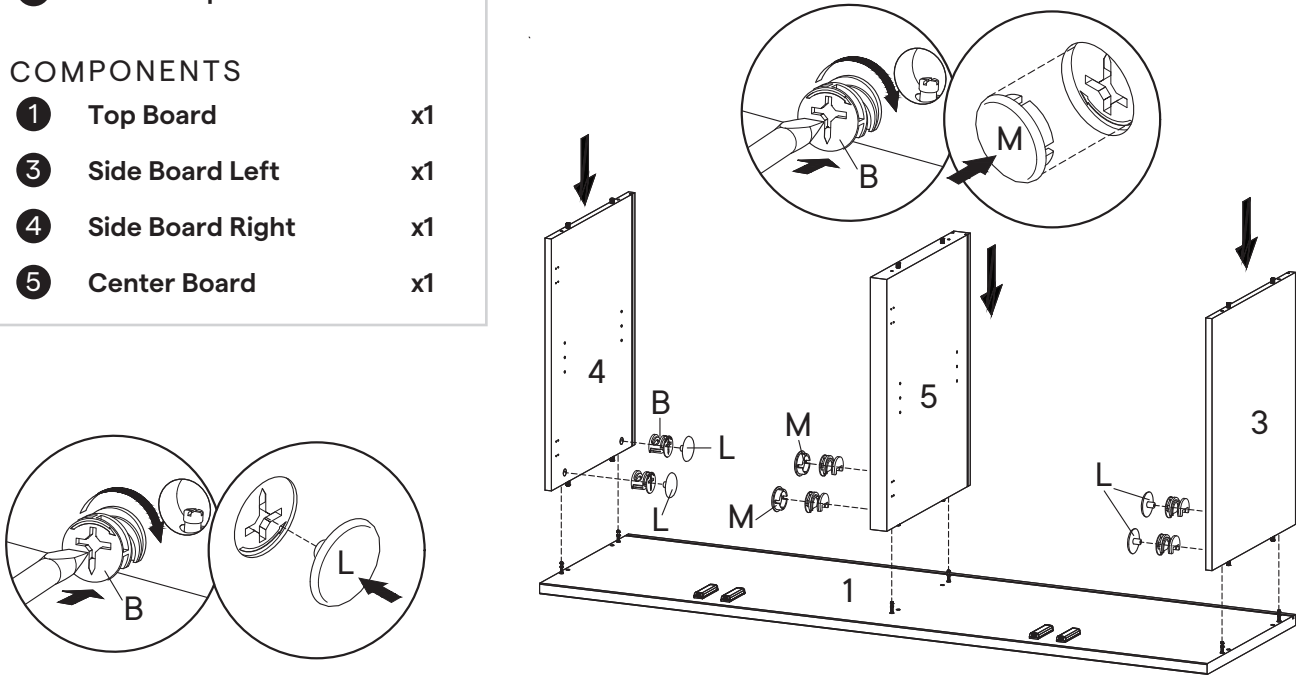

STEP 03


HARDWARE

Q	Joining Strip	x2
----------	---------------	----

COMPONENTS

12	Back Board	x4
-----------	------------	----

3.1 Insert Back Boards (12) into Top Board. Insert Joining Strip (Q) in between the Back Boards (12).

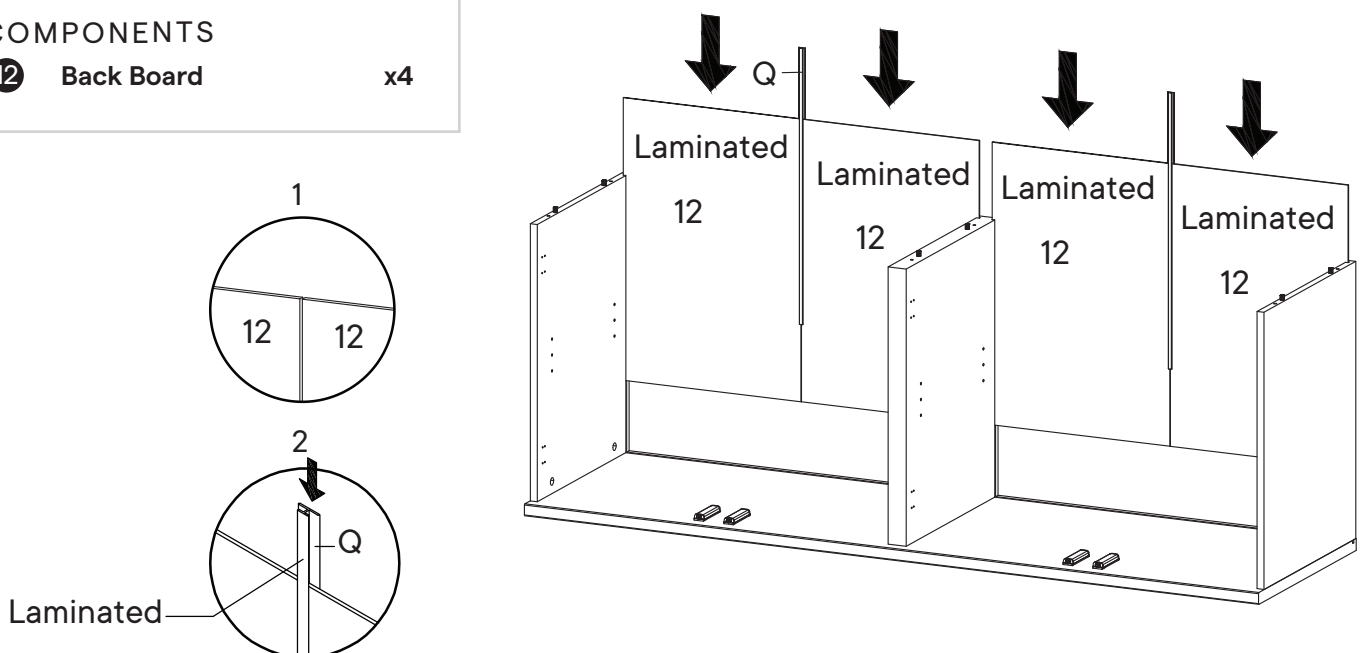


HARDWARE


- D** Screw M 7 x 50 mm x6
- O** Allen Key x1

COMPONENTS

- 2** Bottom Board x1

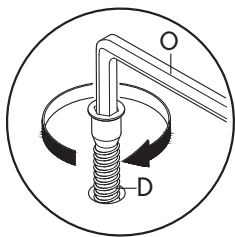

4.1 Insert Bottom Board (2) and secure with Screw M 7 x 50 mm (D), tighten screws using Allen Key (O).

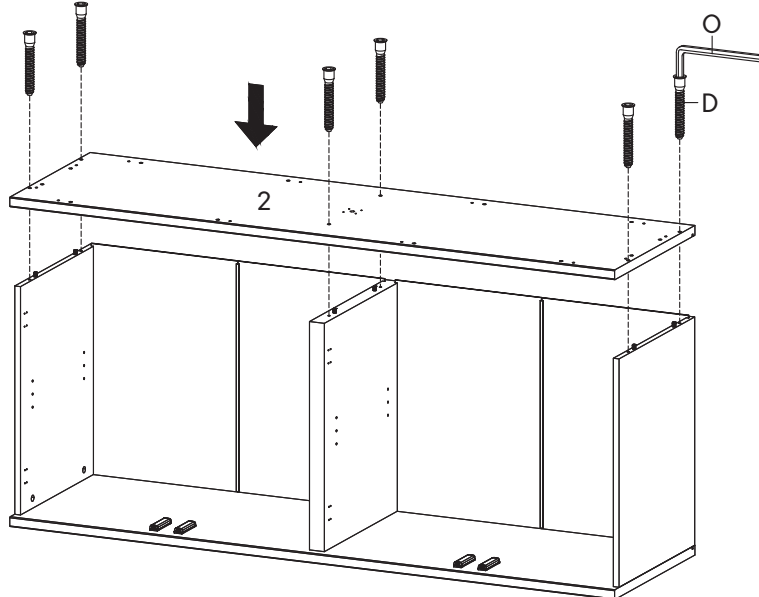

STEP 05


HARDWARE

- G** Screw M 4.5 x 12.5 mm x12
- BC410** Corner Brace x4

COMPONENTS

- 8** Bottom Skirt 2 x2

5.1 Let's assemble the bottom skirt. Start by installing Corner Brace (BC410) into Bottom Skirt 2 (8) using Screw M 4.5 x 12.5 mm (G). Do not overtighten screw yet, leave around 2mm gap.

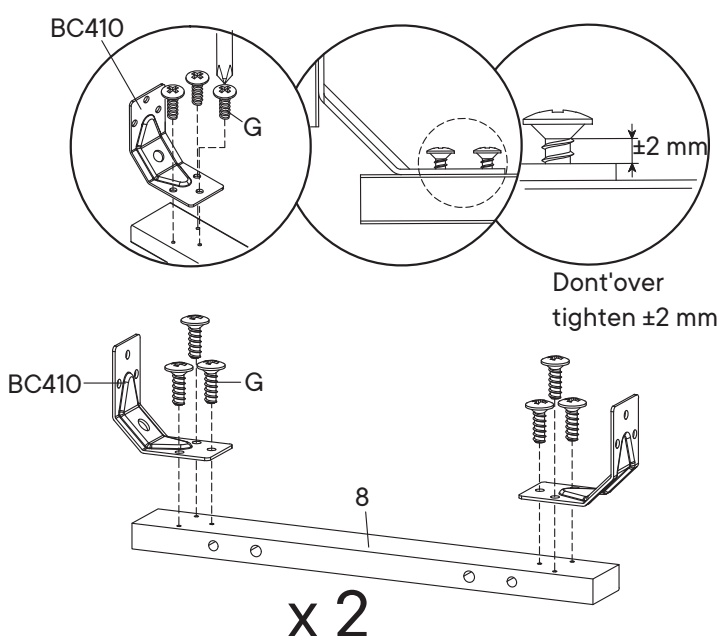

HARDWARE


G Screw M 4.5 x 12.5 mm x6

COMPONENTS

7 Bottom Skirt 1 x1

8 Bottom Skirt 2 x2

6.1 Combine the Bottom Skirt 2 (8) from step 5 into Bottom skirt 1 (7), using Screw M 4.5 x 12.5 mm (G). Do not overtighten screw yet, leave around 2mm gap.

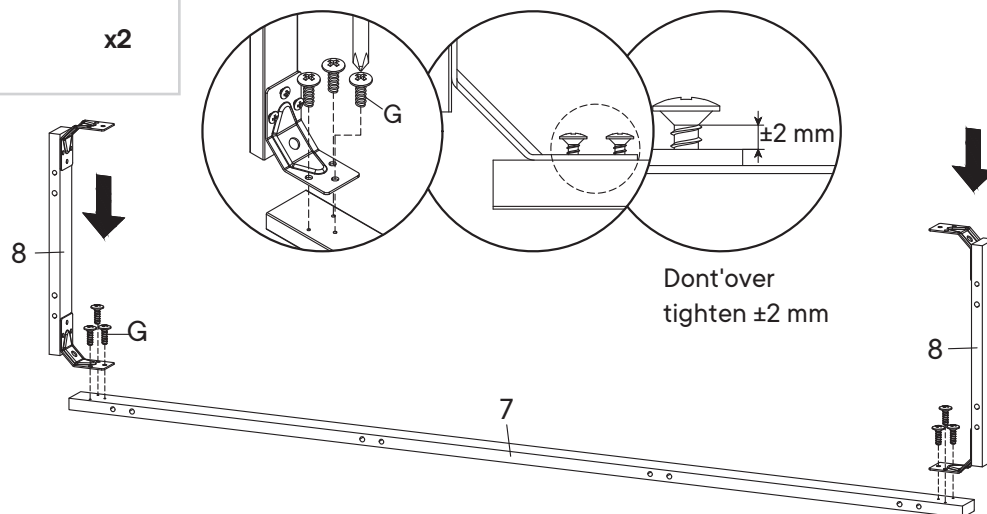

STEP 07


HARDWARE

G Screw M 4.5 x 12.5 mm x6

COMPONENTS

7 Bottom Skirt 1 x1


7.1 Combine components from step 6 with remaining Bottom skirt 1 (7), using Screw M 4.5 x 12.5 mm (G). Do not overtighten screw yet, leave around 2mm gap.

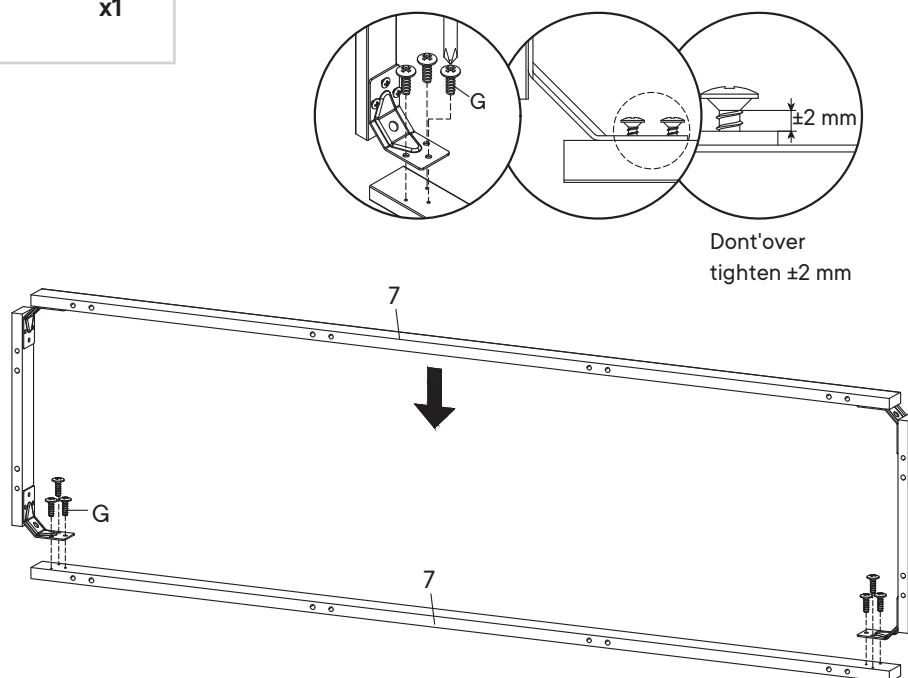

HARDWARE


C Wood Dowel Ø8 x 30 mm x12

8.1 Insert Wood Dowel Ø8 x 30 mm (C) into assembled Bottom skirt from previous step.

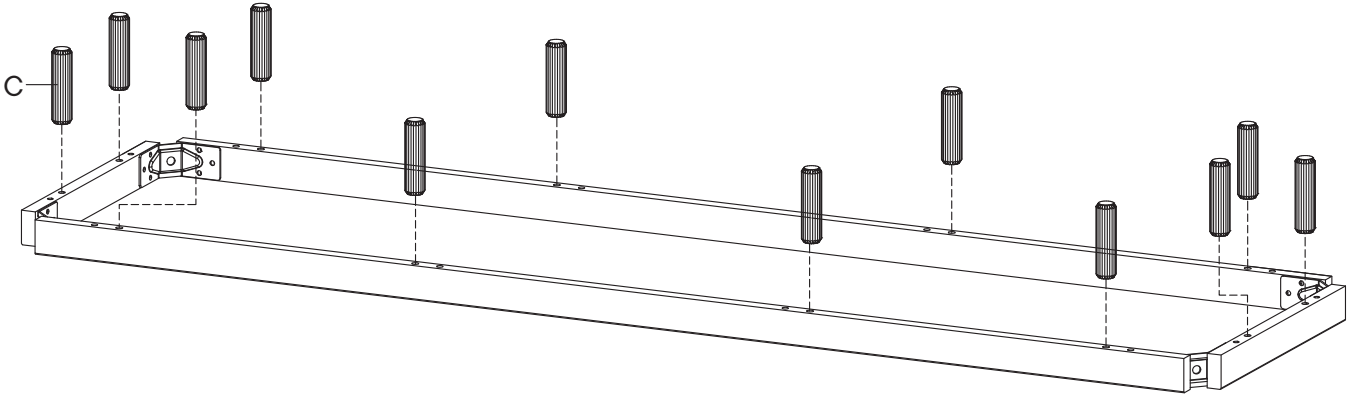

STEP 9

9.1 Bring the assembled bottom skirt and insert to Bottom Board. Position as shown in the figure.

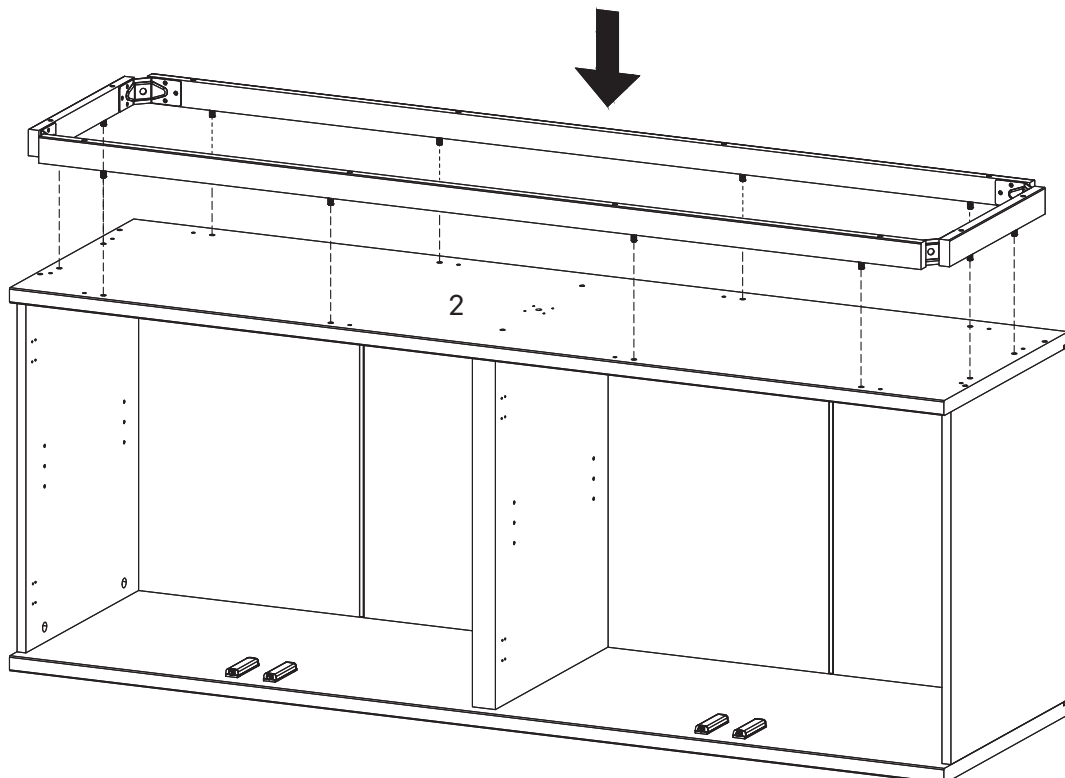

HARDWARE


F	Flange Nut	x4
P	Floor Protector	x4
R	Wrench	x1

COMPONENTS



9	Leg	x4
----------	-----	----

10.1 First, let's fix the leg by inserting the legs into the Corner Brace. Insert the Flange Nut (F) onto the hanger bolt of the Leg (9) and tighten all the Flange Nuts using the provided Wrench (R), continue tightening all the screws on the Corner Brace.

10.2 Peel off the paper from the Floor Protector (P) and stick it onto the leg.

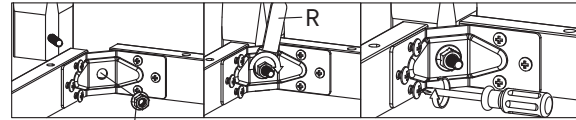

Note
tighten all screws

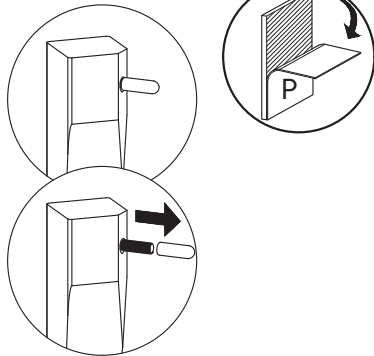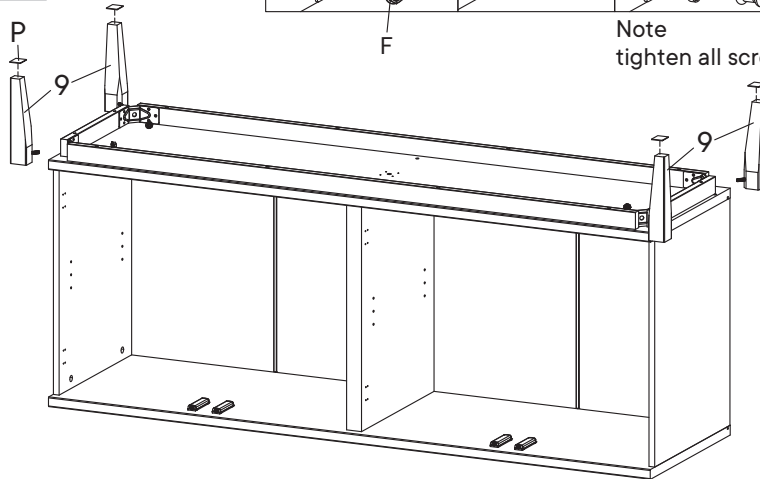



STEP 11

HARDWARE

E	Screw M 6.4 x 53 mm	x12
G	Screw M 4.5 x 12.5 mm	x4
O	Allen Key	x1
PM3	Mounting Plate	x1

11.1 Insert Screw M 6.4 x 53 mm (E) into the assembled bottom skirt using Allen Key (O).

11.2 install the Mounting Plate (PM2) into the Bottom Board and securely tighten it with the Screw M 4.5 x 12.5 mm (G) using screwdriver.

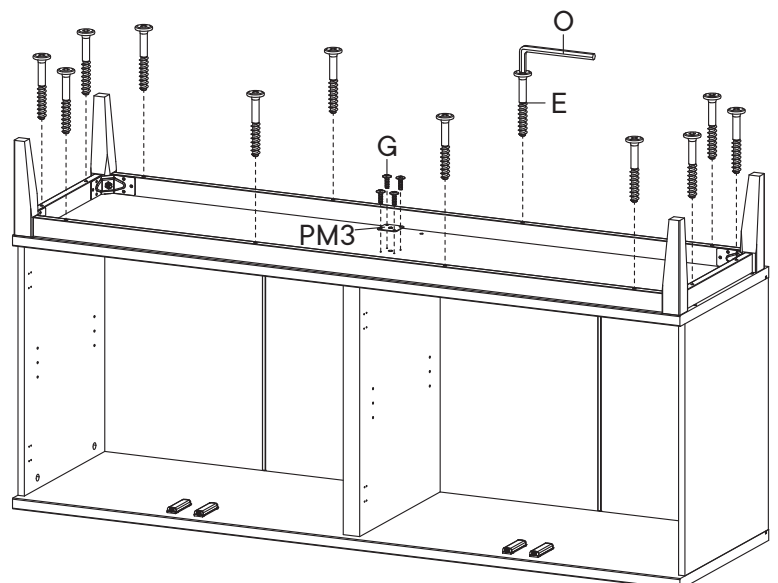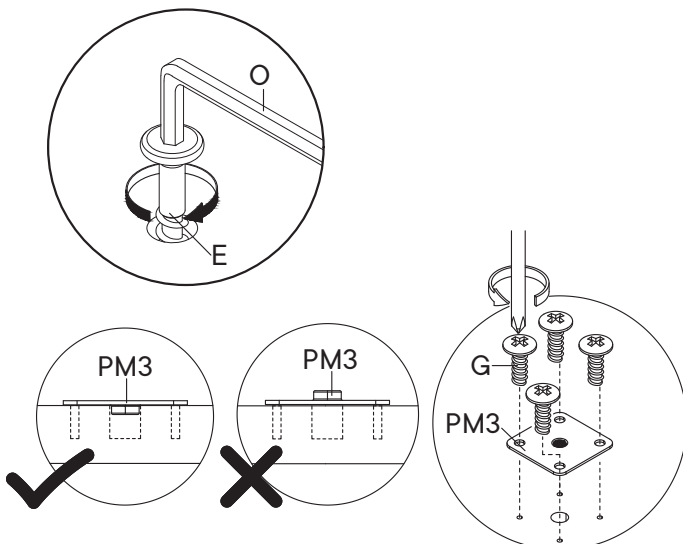


COMPONENTS

LC20A1 Center Leg

x1

12.1 Install Center Leg (LC20A1) into Bottom Board. Tighten by rotating clockwise.

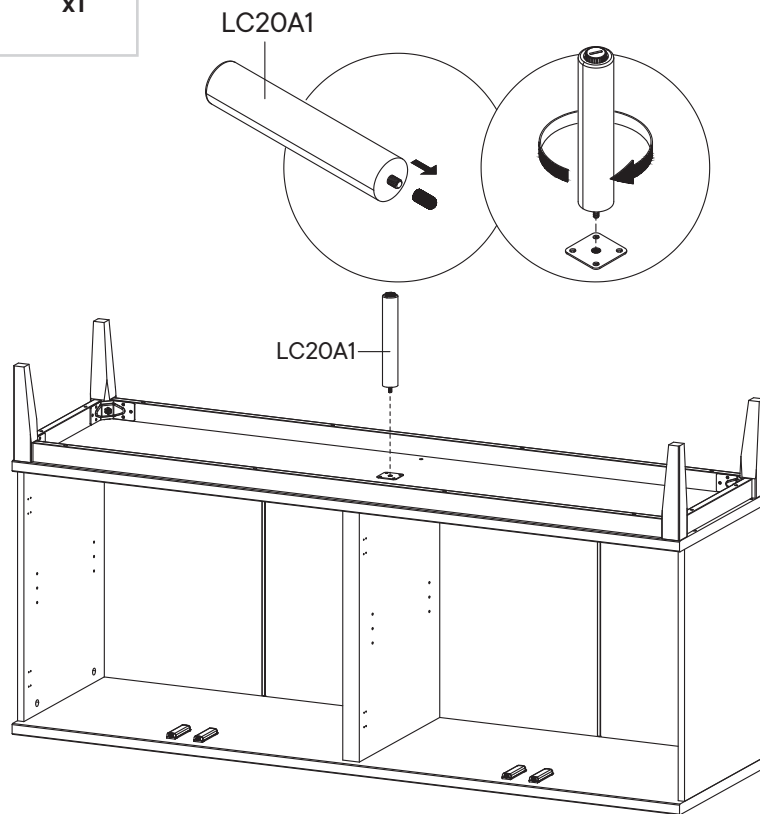

STEP 13



HARDWARE

① Shelf Pin x8

COMPONENTS

⑥ Adjustable Shelf x2

13.1 After positioning the product upright, insert Shelf Pin (①) into the holes on the Side Board and Center Board at the desired level. Then, place the Adjustable Shelf (⑥) by aligning its hole with the Shelf Pin (①) and inserting it securely.

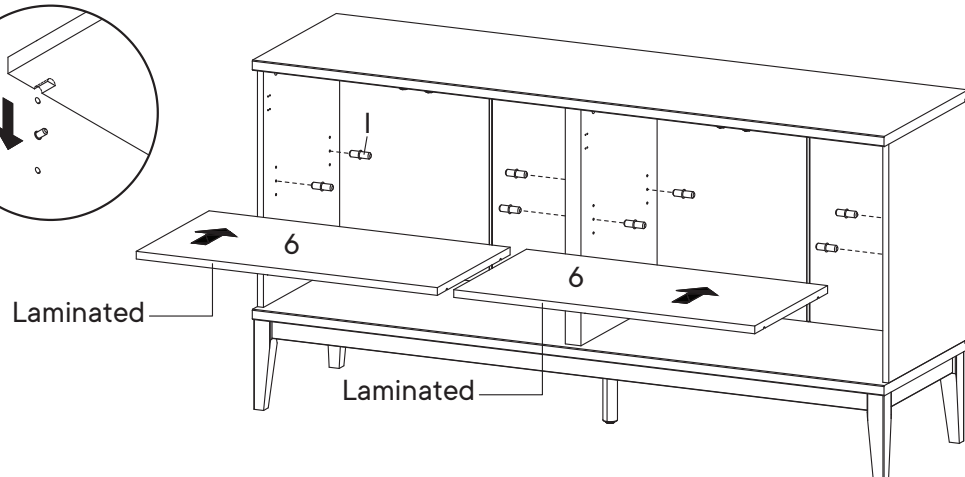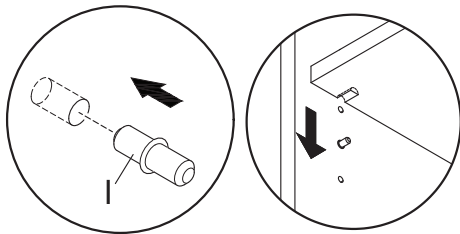

HARDWARE

G Screw M 4.5 x 12.5 mm x16


HS26A Hinge x8

COMPONENTS

10 Door 1 x2

11 Door 2 x2

14.1 Insert Hinge (HS26A) into Door 1 (10) and Door 2 (11). Secure with Screw M 4.5 x 12.5 mm (G).

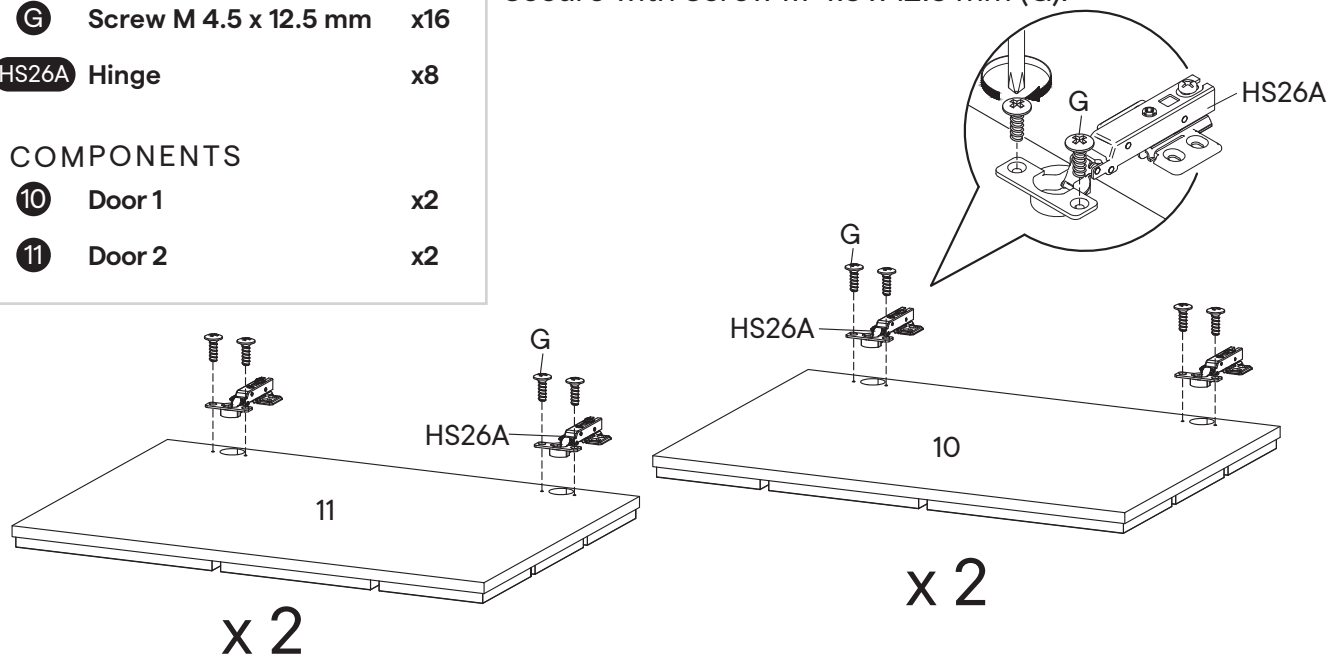

STEP 15

HARDWARE


G Screw M 4.5 x 12.5 mm x16

COMPONENTS




10 Door 1 x1

11 Door 2 x1

15.1 Install Door 1 (10) and Door 2 (11) into Side Board and Center Board. Please see the above images carefully. Secure with Screw M 4.5 x 12.5 mm (G). Please refer to the last page for more guide on how to adjust hinges. Position as shown in the figure. Adjust the push tool as needed to ensure doors opening and closing smoothly.

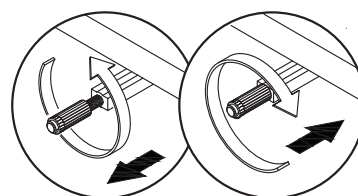

Note :
TWIST TO ADJUST

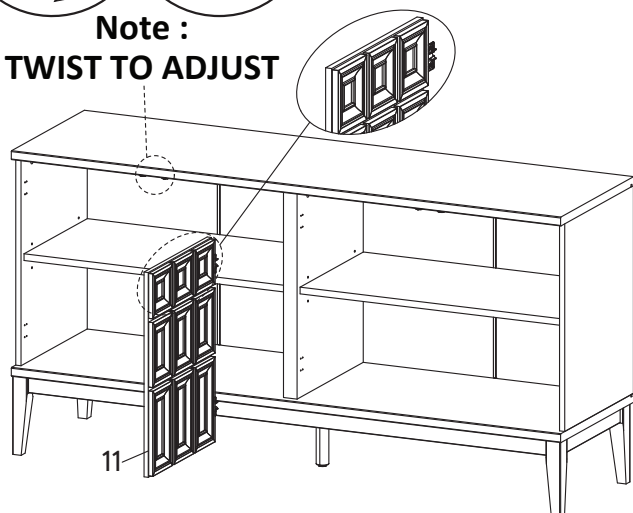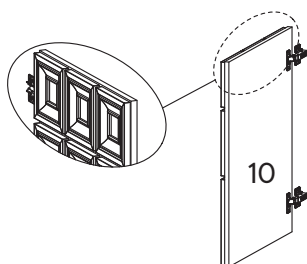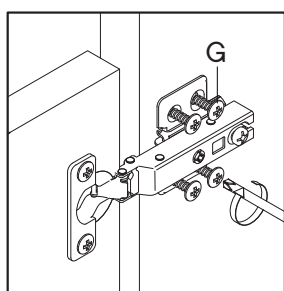

HARDWARE



G Screw M 4.5 x 12.5 mm x16

COMPONENTS

10 Door 1 x1

11 Door 2 x1

16.1 Install Door 1 (10) and Door 2 (11) into Side Board and Center Board. Please see the above images carefully. Secure with Screw M 4.5 x 12.5 mm (G). Please refer to the last page for more guide on how to adjust hinges. Position as shown in the figure. Adjust the push tool as needed to ensure doors opening and closing smoothly.

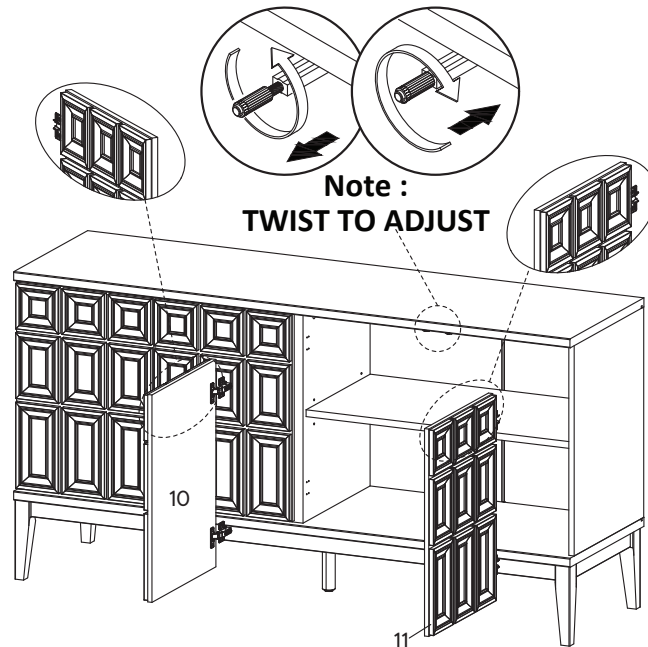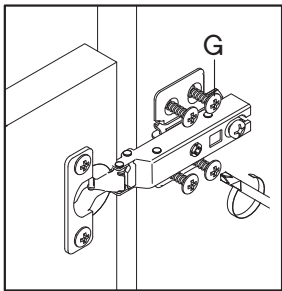



STEP 17

HARDWARE


J Screw M 3.5 x 15.5 mm x20

K Wedge x20

17.1 Use the wedge (K) and Screw M 3.5 x 15.5 mm (J) to tighten the back of the sideboard using screwdriver. Before securing the wedges (K), ensure that the top board and bottom board are aligned at a 90° angle against the sideboard.

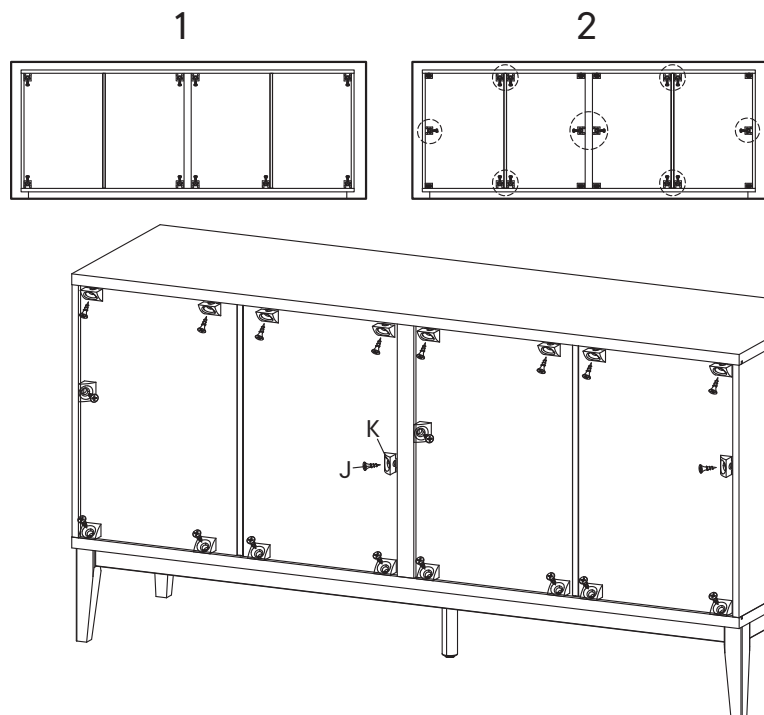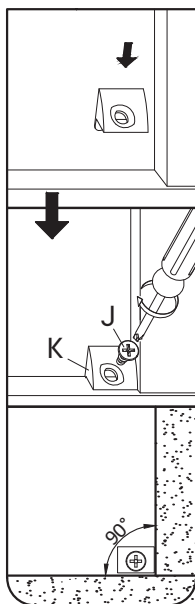

18.1 The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor.


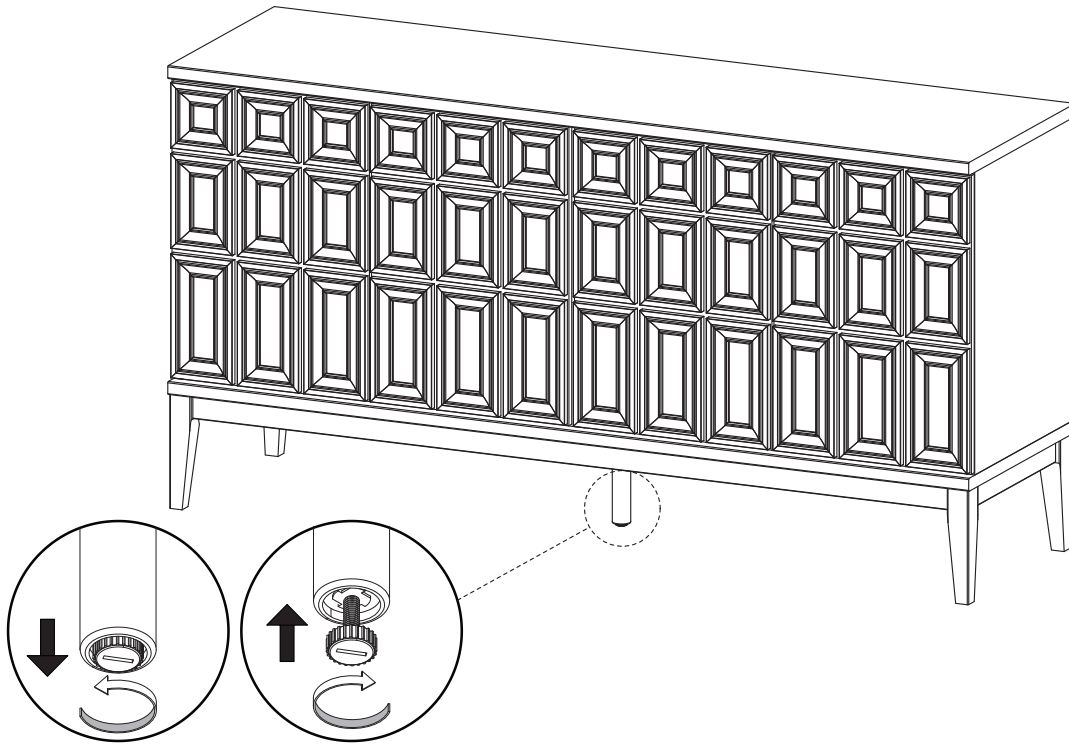


Great job!

Sideboard assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

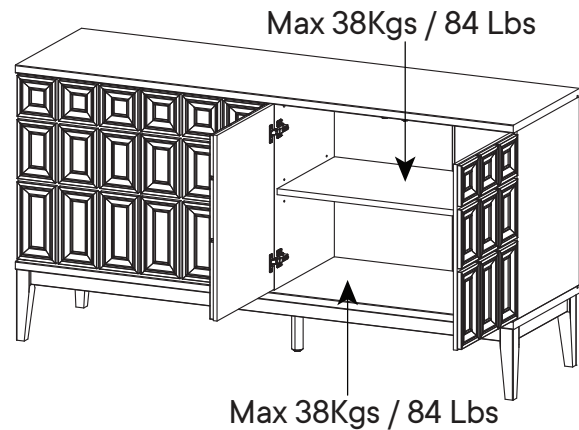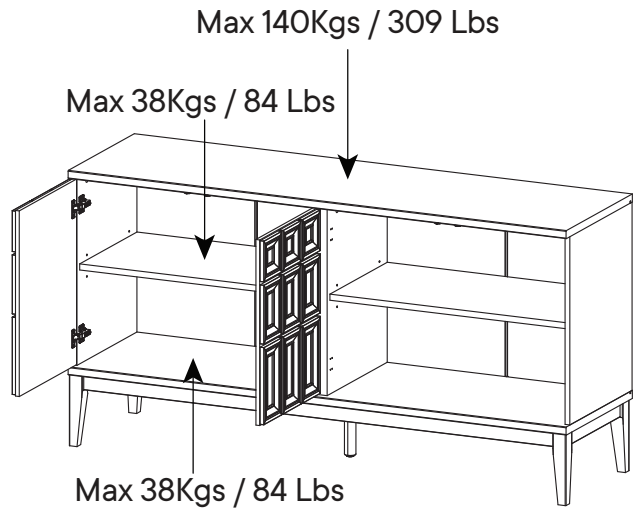

CONNECT WITH US!



Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

modway




Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

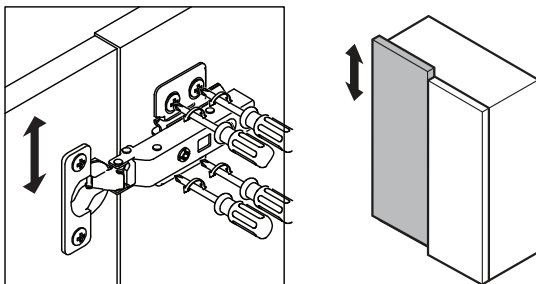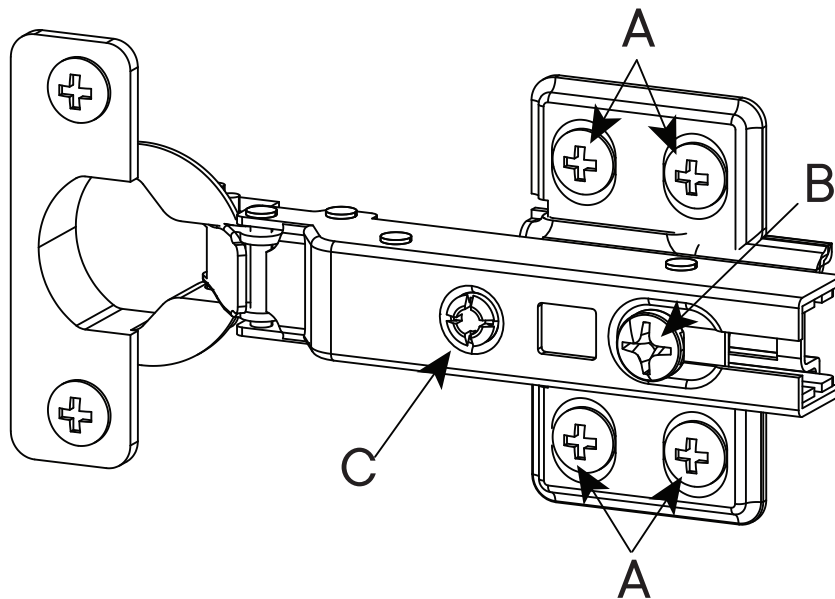


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

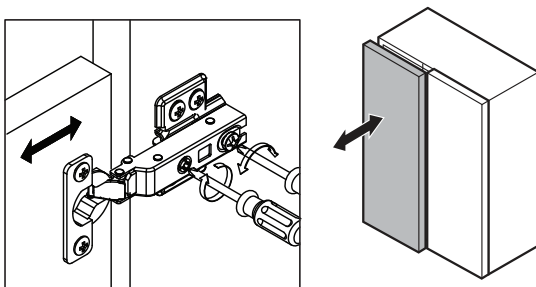

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

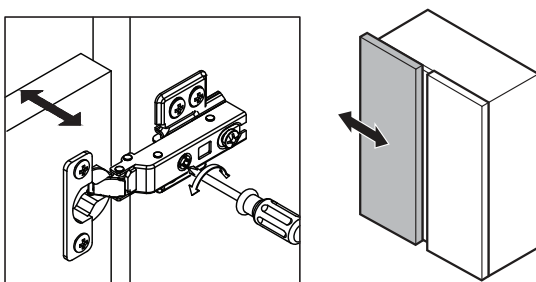

To adjust side ways.








Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

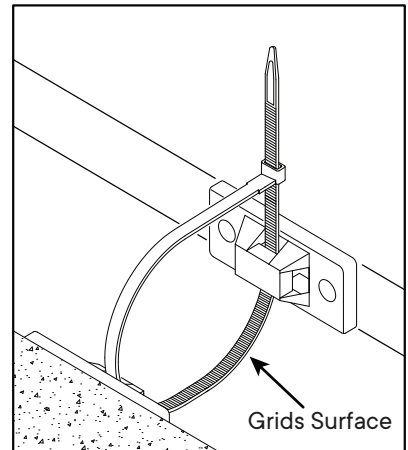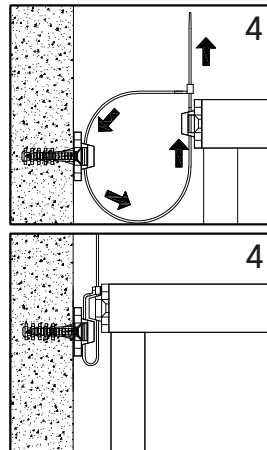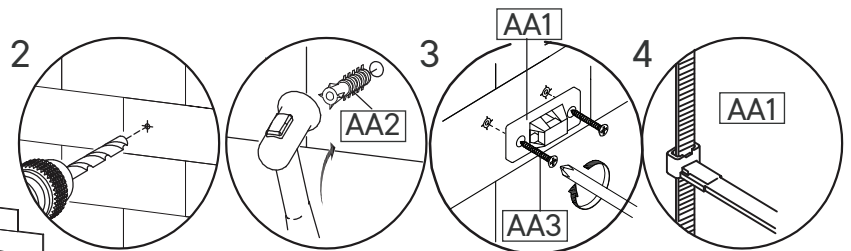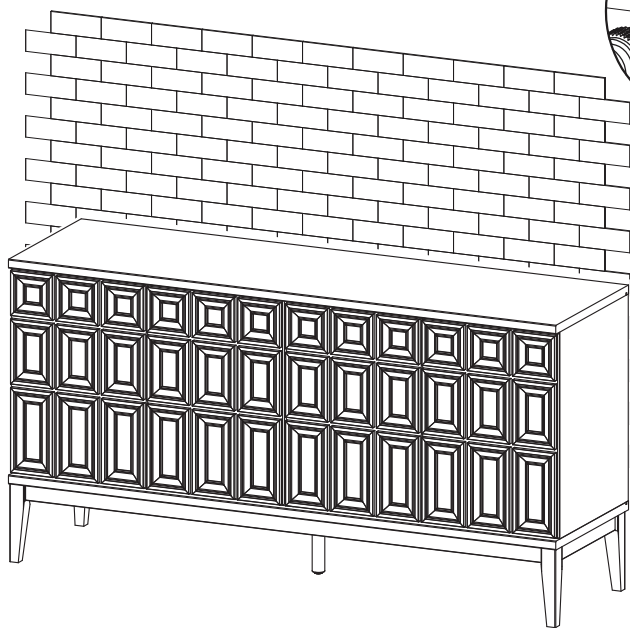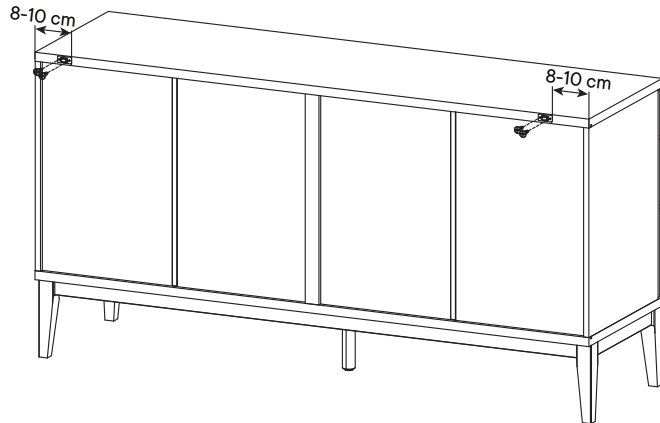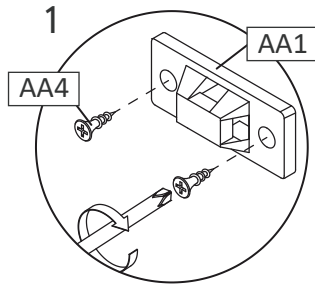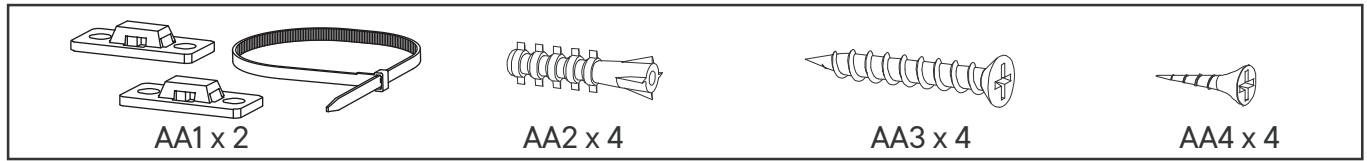

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.