


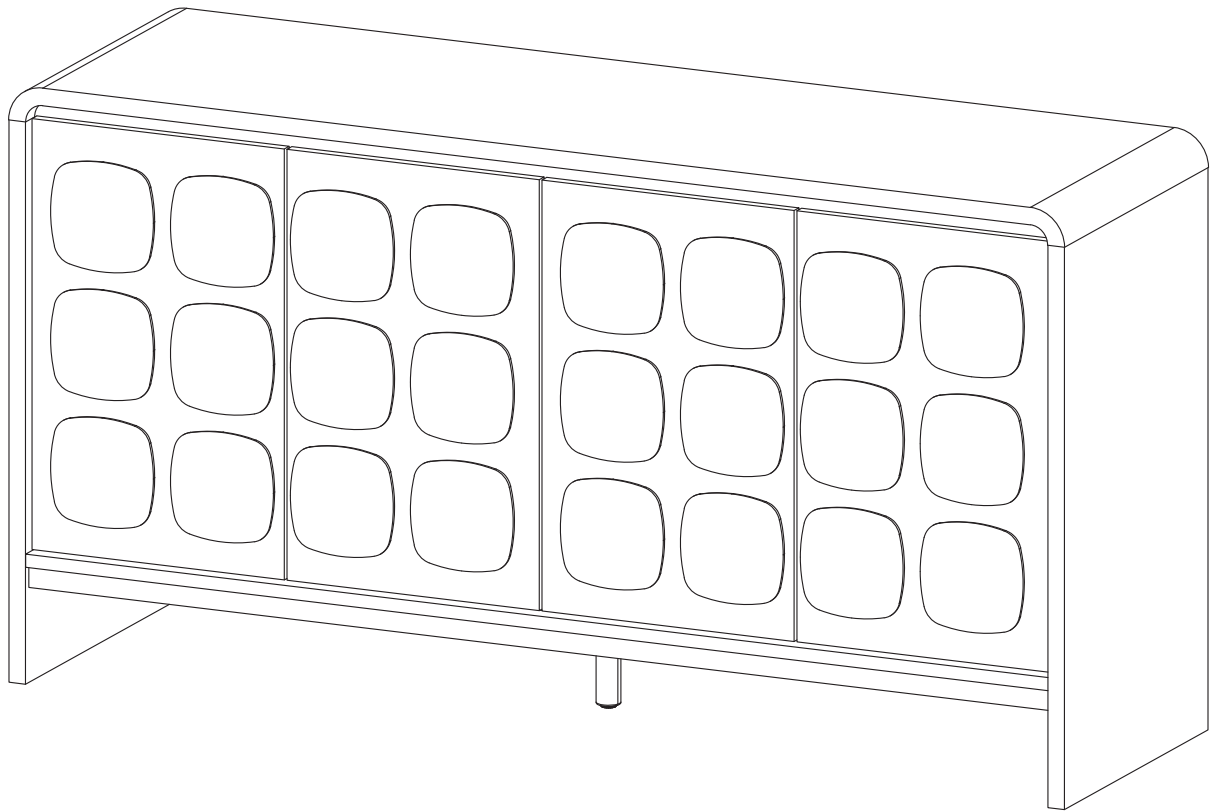

ASSEMBLY INSTRUCTIONS

Sideboard

EEI-6862 / V2.07.09.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.



Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x10
B		Cam Lock Ø15 mm	x10
C		Wood Dowel Ø8 x 30 mm	x18
D		Screw M 7 x 50 mm	x2
E		Screw Cap Ø15 mm	x4
F		Allen Key	x2
G		Floor Glide	x4
H		Shelf Pin	x8
I		Screw M 4.5 x 12.5 mm	x52
J		Joining Strip	x2
K		Wedge	x20
L		Screw M 3.5 x 15.5 mm	x20
M		Screw Cap Ø15 mm	x2
N		Screw M 6.4 x 45 mm	x4
HS35C		Hinge	x4
HS35B		Hinge	x4
PM3		Mounting Plate	x1


WHAT YOU NEED:



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

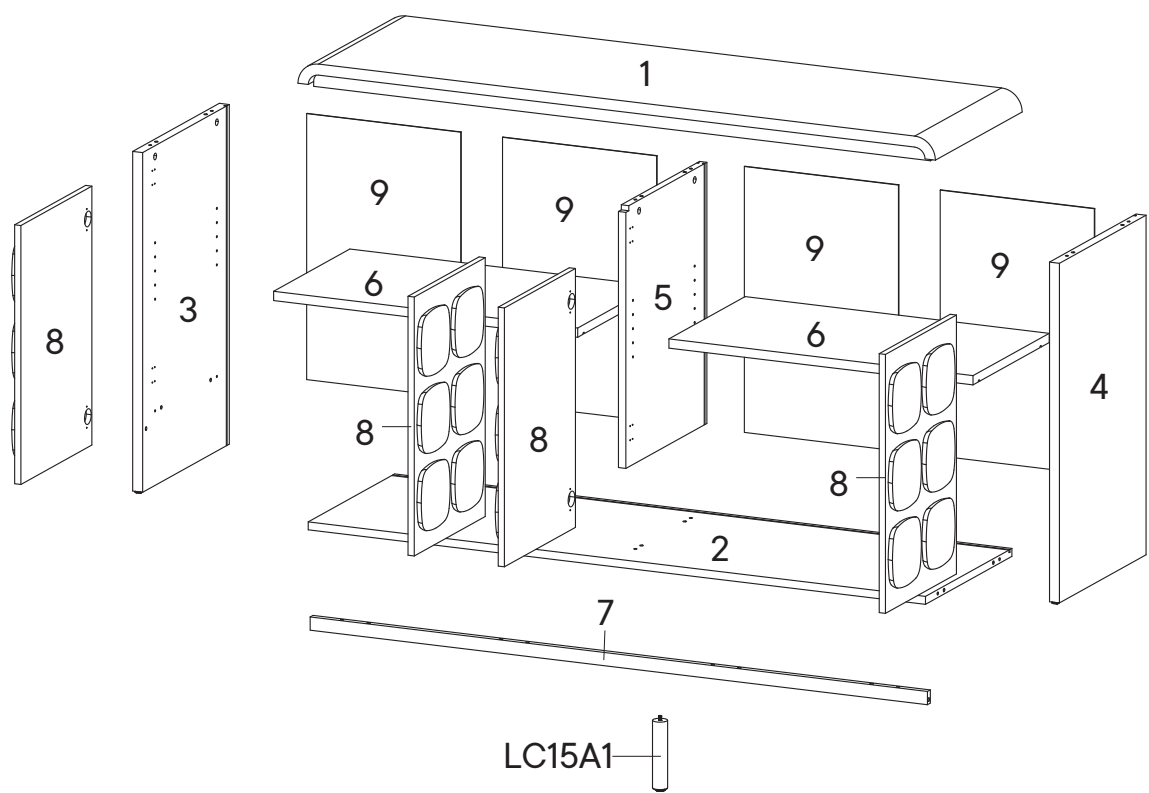

1	Top Board	x1	6	Adjustable Shelf	x2
2	Bottom Board	x1	7	Bottom Skirt	x1
3	Side Board Left	x1	8	Door	x4
4	Side Board Right	x1	9	Back Board	x4
5	Center Board	x1	LC15A1	Center Leg	x1

Carton 1 Of 2

Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board	x1
8	Door	x4
9	Back Board	x4
LC15A1	Center Leg	x1
	Hardware pack	x1

Carton 2 Of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
6	Adjustable Shelf	x2
7	Bottom Skirt	x1

HARDWARE


(C) Wood Dowel Ø8 x 30 mm x10

COMPONENTS

(2) Bottom Board x1

(7) Bottom Skirt x1

1.1 Insert Wood Dowel Ø8 x 30 mm (C) into the Bottom Board (2) and Bottom Skirt (7).

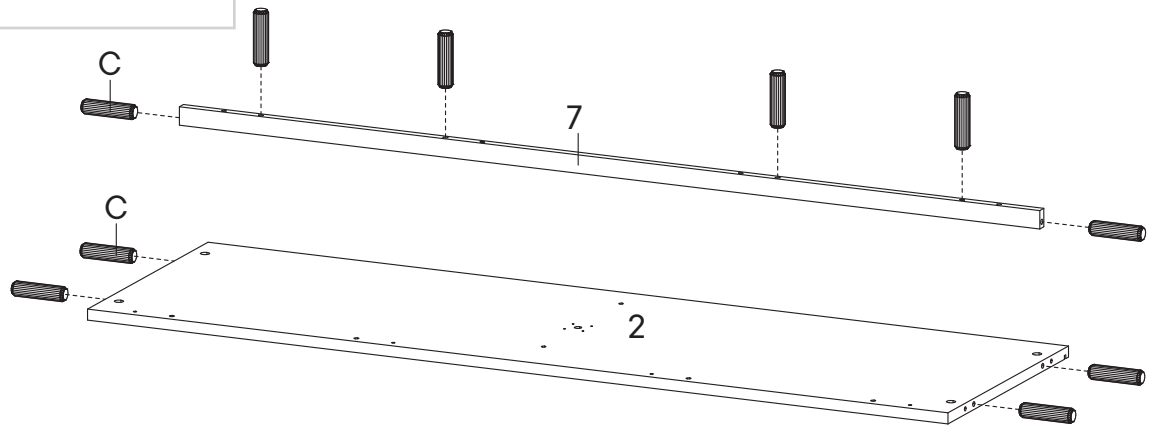

STEP 02

HARDWARE

(F) Allen Key x1

(I) Screw M 4.5 x 12.5 mm x4

(N) Screw M 6.4 x 45 mm x4

(PM3) Mounting Plate x1


COMPONENTS

(2) Bottom Board x1

(7) Bottom Skirt x1

2.1 Attach Bottom Skirt (7) to Bottom Board (2) secure with Screw M 6.4 x 45 mm (N), then tighten screws using Allen Key (F).

2.2 Install the Mounting Plate (PM3) to Bottom Board and secure with the Screw M 4.5 x 12.5 mm (I), then tighten using screwdriver. Position as shown in the figure.

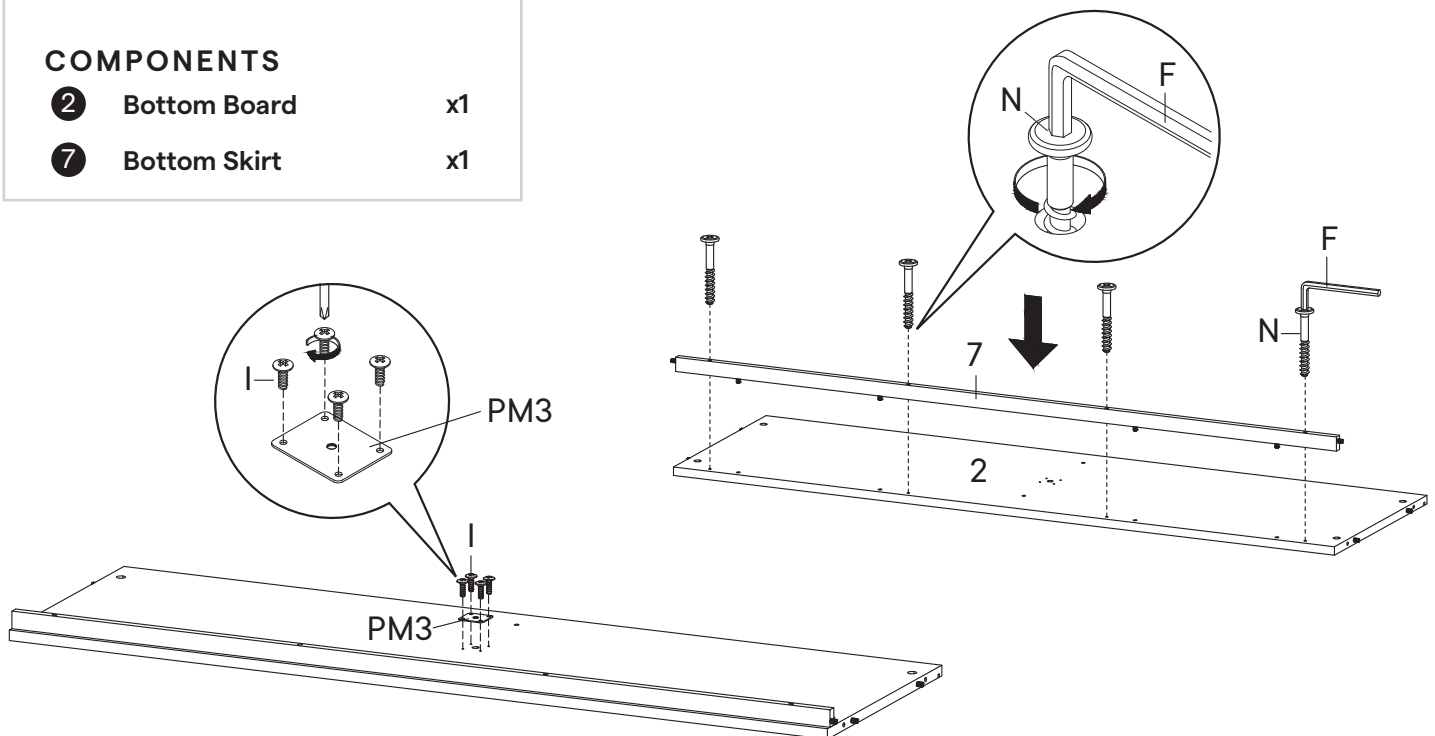

HARDWARE


A	Cam Bolt Ø6 x 35 mm	x4
C	Wood Dowel Ø8 x 30 mm	x4
G	Floor Glide	x4
I	Screw M 4.5 x 12.5 mm	x16
HS35C	Hinge	x4

COMPONENTS

3	Side Board Left	x1
4	Side Board Right	x1

3.1 Insert Wood Dowel Ø8 x 30 mm (C) and Floor Glide (G) into Side Board Left (3). Insert Cam Bolt Ø6 x 35 mm (A), tighten using screwdriver. Then install Hinge (HS35C) to Side Board Left (3), first remove Part of hinge following the picture by pressing the back of hinge, secure with Screw M 4.5 x 12.5 mm (I), then tighten using screwdriver. Position as shown below detail.

3.2 Insert Wood Dowel Ø8 x 30 mm (C) and Floor Glide (G) into Side Board Right (4). Insert Cam Bolt Ø6 x 35 mm (A), tighten using screwdriver. Then install Hinge (HS35C) to Side Board Right (4), first remove Part of hinge following the picture by pressing the back of hinge, secure with Screw M 4.5 x 12.5 mm (I), then tighten using screwdriver. Position as shown below detail.

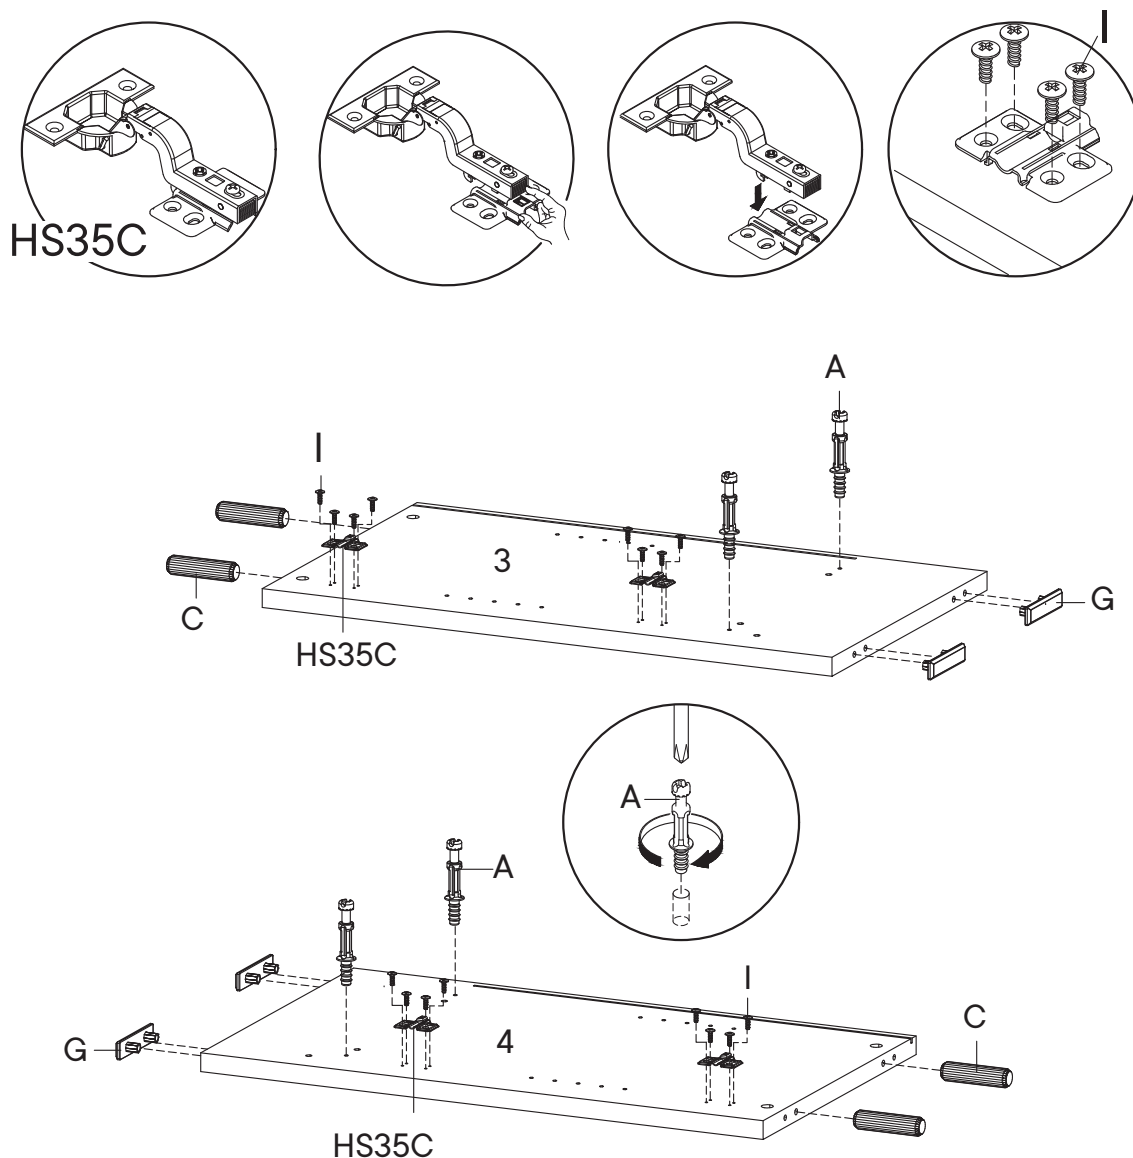

HARDWARE

(B) Cam Lock Ø15 mm x4


COMPONENTS

(2) Bottom Board x1

(3) Side Board Left x1

(4) Side Board Right x1

4.1 Attach Side Board Left (3) and Side Board Right (4) to Bottom Board, secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

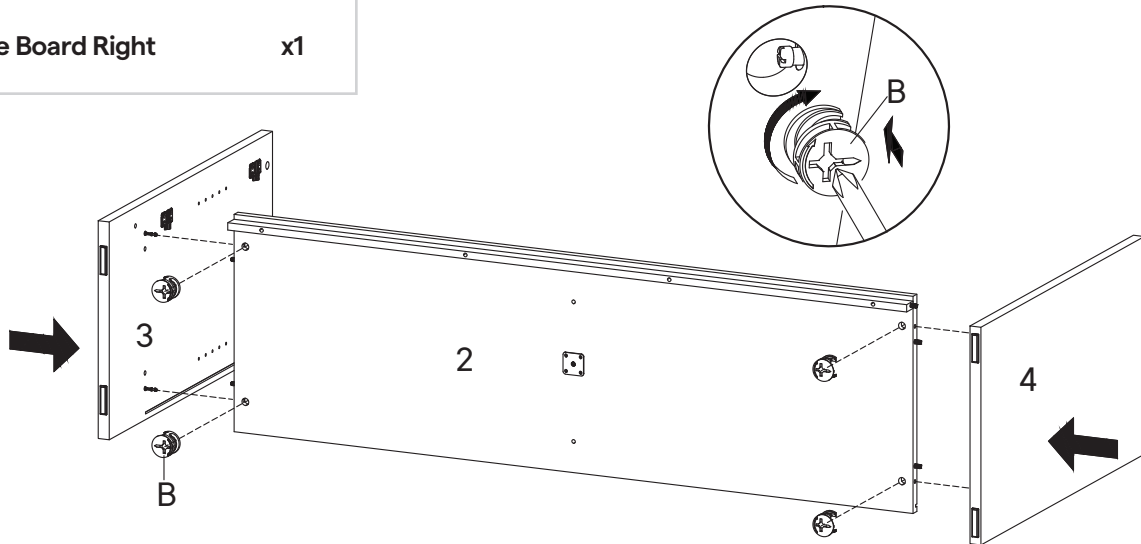

STEP 05

HARDWARE

(C) Wood Dowel Ø8 x 30 mm x4



(I) Screw M 4.5 x 12.5 mm x16

HS35B Hinge x4

COMPONENTS

(5) Center Board x1

5.1 Insert Wood Dowel Ø8 x 30 mm (C) into Center Board (5), Then install Hinge (HS35B) to Center Board (5), first remove Part of hinge following the picture by pressing the back of hinge, secure with Screw M 4.5 x 12.5 mm (I), then tighten using screwdriver. Position as shown below detail.

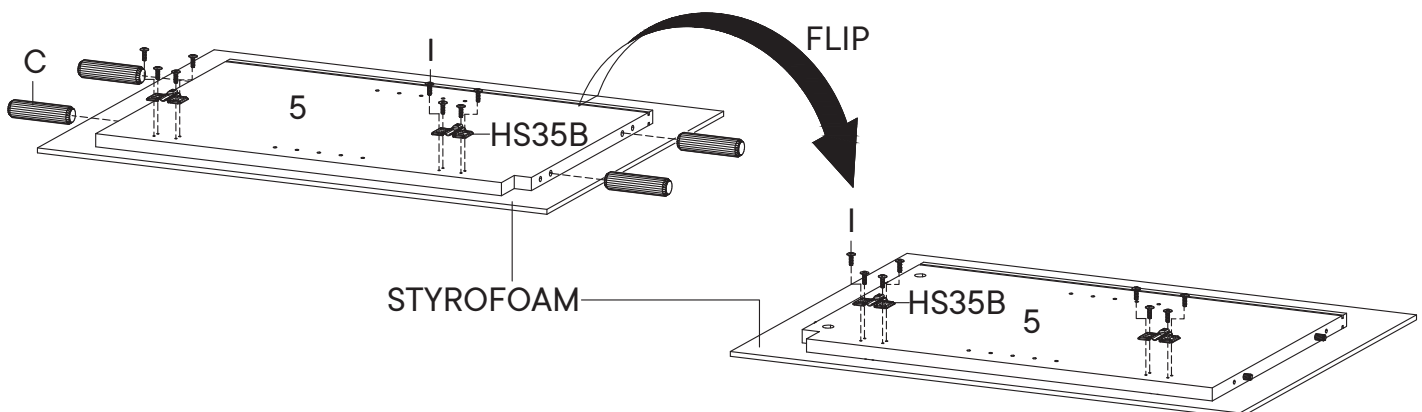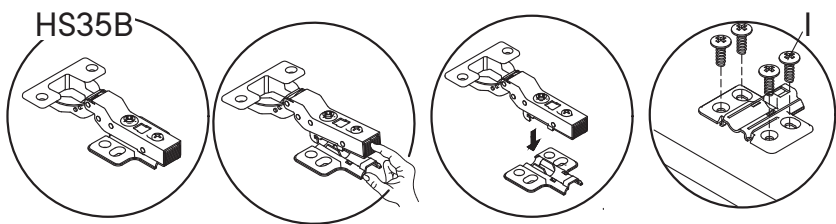



HARDWARE

- D** Screw M 7 x 50 mm x2
- F** Allen Key x1

COMPONENTS

- 5** Center Board x1

6.1 Attach Center Board (5) to Bottom Board (2) secure with Screw M 7 x 50 mm (D), then tighten using Allen Key (F). Position as shown in the figure.

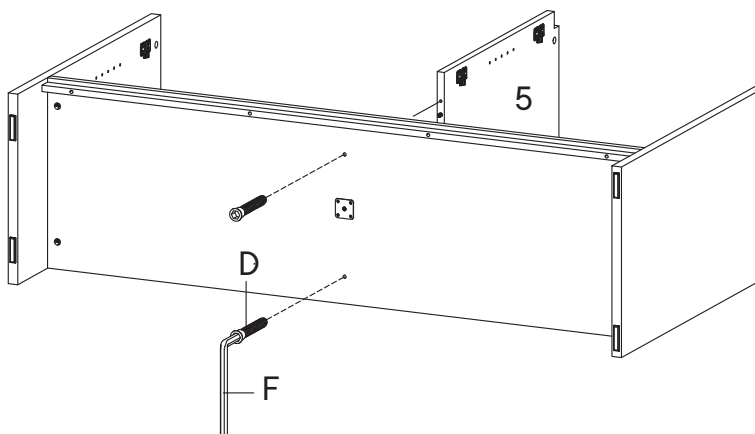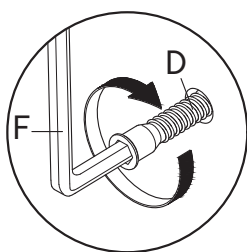


STEP 07

COMPONENTS

- LC15A1** Center Leg x1

7.1 Remove rubber cap from screw on the Center Leg (LC15A1), then install to Mounting Plate on Bottom Board. Position as shown in the figure.

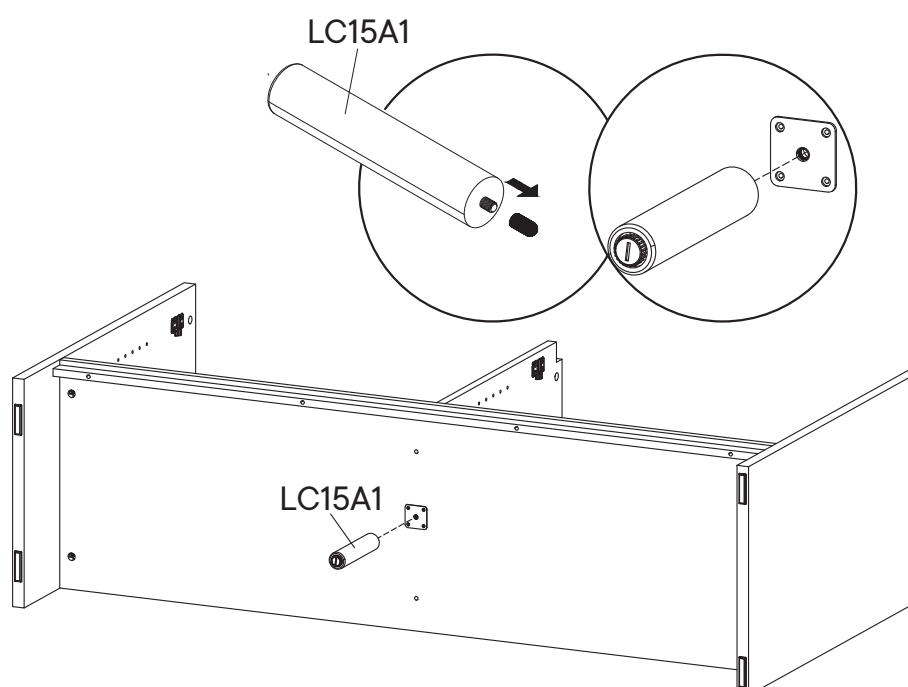



HARDWARE

J Joining Strip x2

COMPONENTS

9 Back Board x4

8.1 Insert Back Boards (9) into Bottom Board. Insert Joining Strip (J) in between the Back Boards (9).

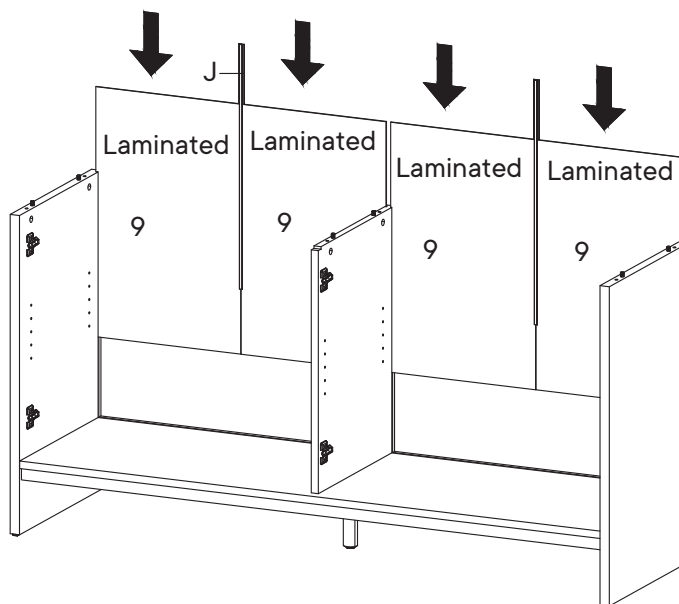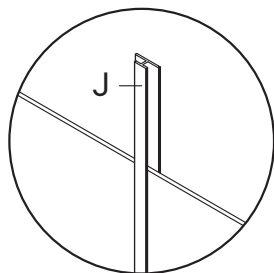

STEP 09


HARDWARE

A Cam Bolt Ø6 x 35 mm x6

COMPONENTS

1 Top Board x1

9.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Top Board (1), then tighten using screwdriver.

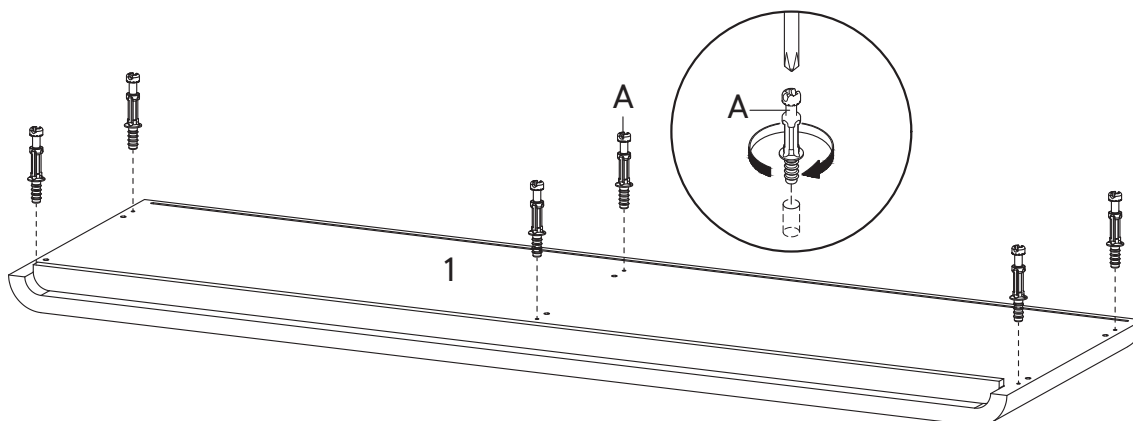


HARDWARE

- (B)** Cam Lock Ø15 mm x6
- (E)** Screw Cap Ø15 mm x4
- (M)** Screw Cap Ø15 mm x2

COMPONENTS

- (1)** Top Board x1

10.1 Attach component Top Board (1) to Side Board and Center Board, secure with Cam Lock Ø15 mm (B) tighten using screwdriver, then put Screw Cap Ø15 mm (E) to Cam Lock on Side Board and put Screw Cap Ø15 mm (M) on Center Board. Position as shown in the figure.


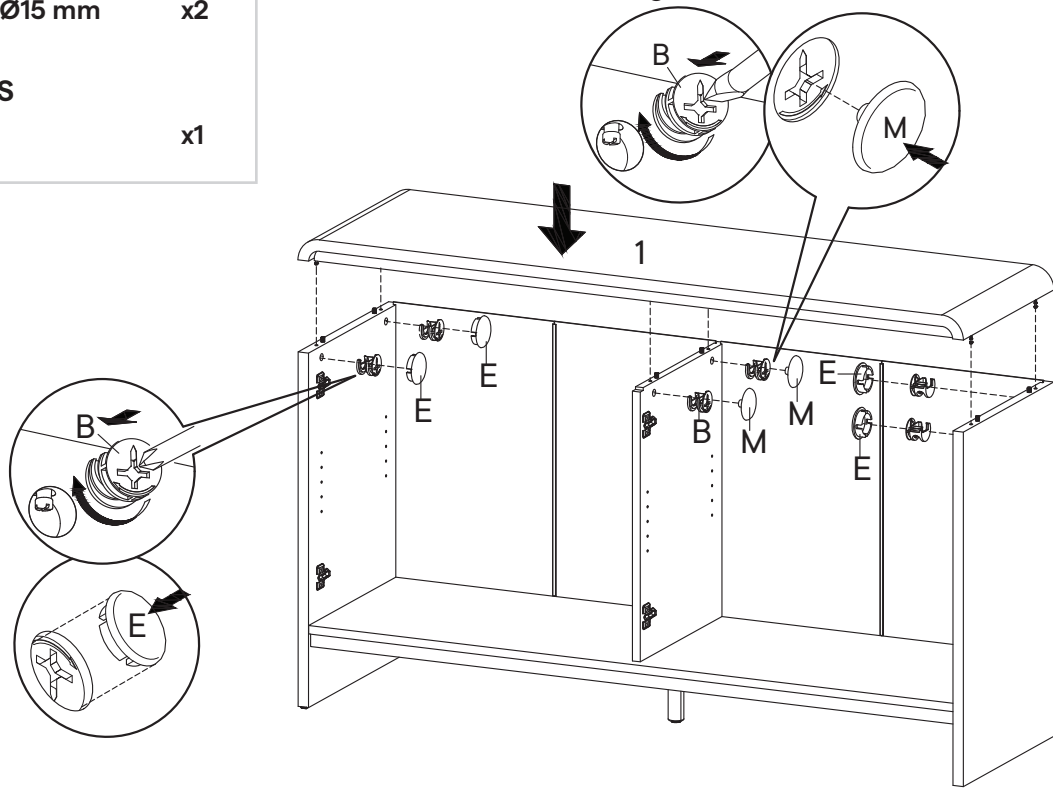


STEP 11

HARDWARE

- (K)** Wedge x20
- (L)** Screw M 3.5 x 15.5 mm x20

11.1 Use the Wedge (K) and Screw M 3.5 x 15.5 mm (L) to tighten the back of the Sideboard using screwdriver. Before securing the wedges (K), ensure that the top board and bottom board are aligned at a 90° angle against the Sideboard.

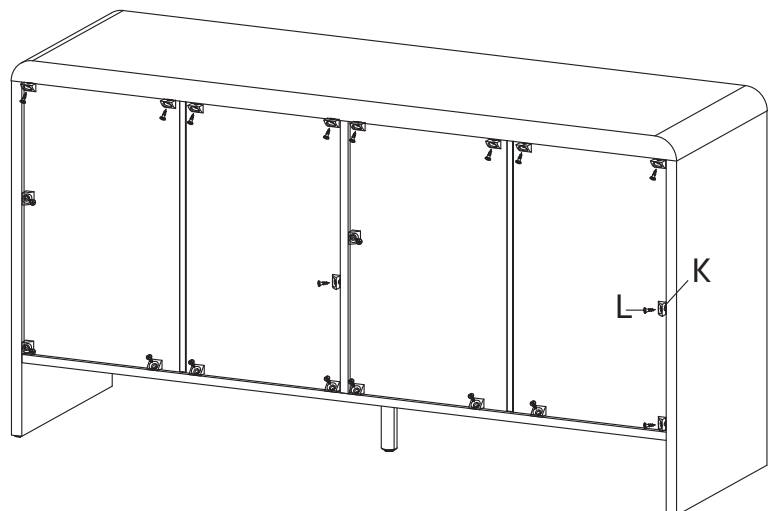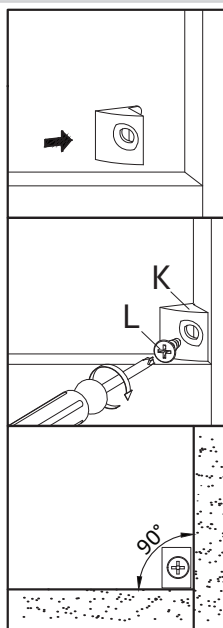


HARDWARE

H Shelf Pin x8

COMPONENTS

6 Adjustable Shelf x2

12.1 Insert Shelf Pin (H) into the holes on the Side Boards and Center Boards at the desired level. Then, place the Adjustable Shelf (6) by aligning its hole with the Shelf Pin (H) and inserting it securely.

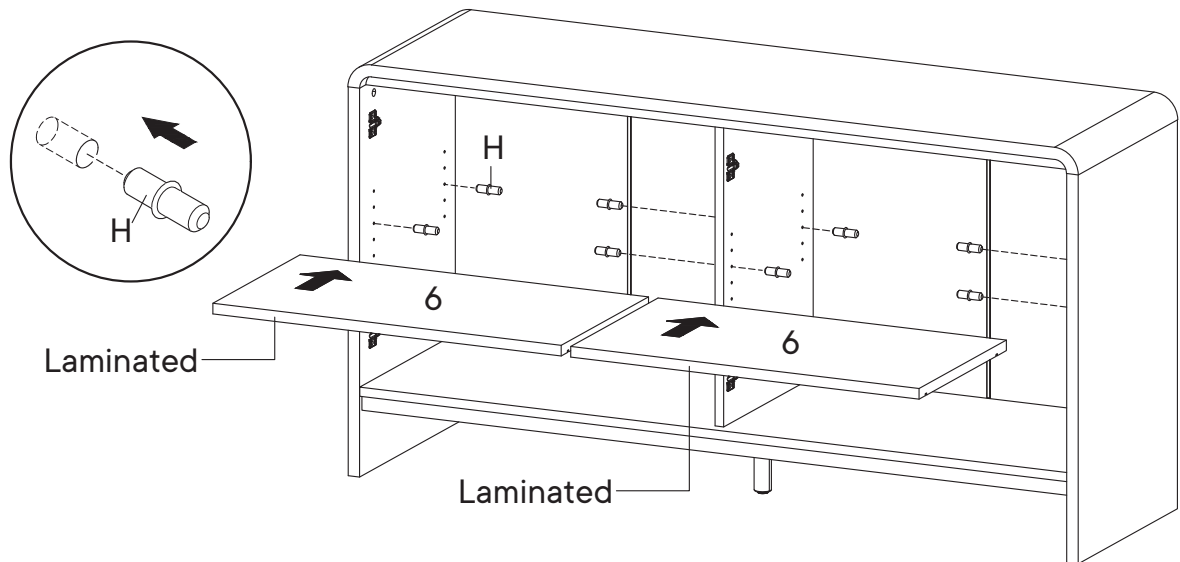

STEP 13

HARDWARE


I Screw M 4.5 x 12.5 mm x8

HS35C Hinge x4

COMPONENTS

8 Door x2







13.1 Install Hinge (HS35C) into Door (8). Secure with Screw M 4.5 x 12.5 mm (I), then tighten using screwdriver. Position as shown in the figure.

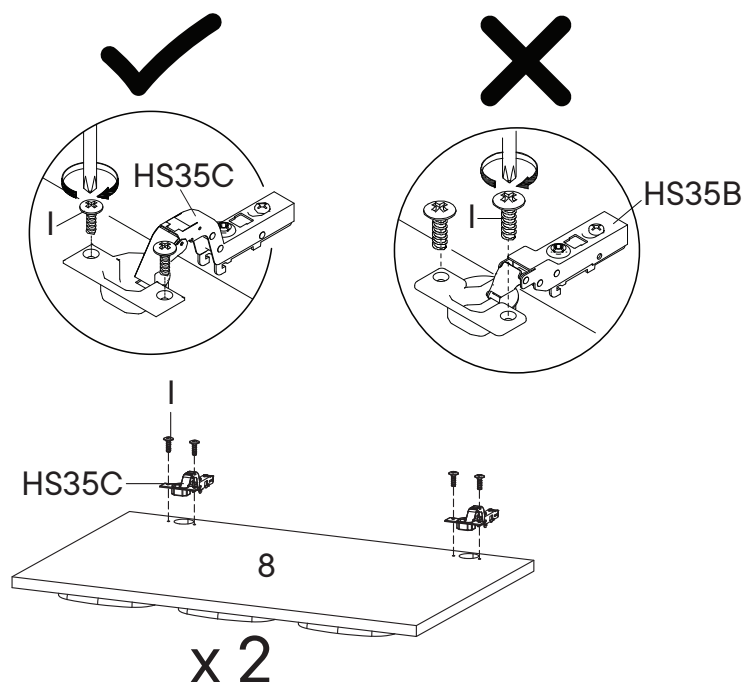

COMPONENTS**8** Door

x2

14.1 Install Door (8) to component Side Board by following below detail. Please refer to below image for more guide on how to adjust hinges. Position as shown in the figure.

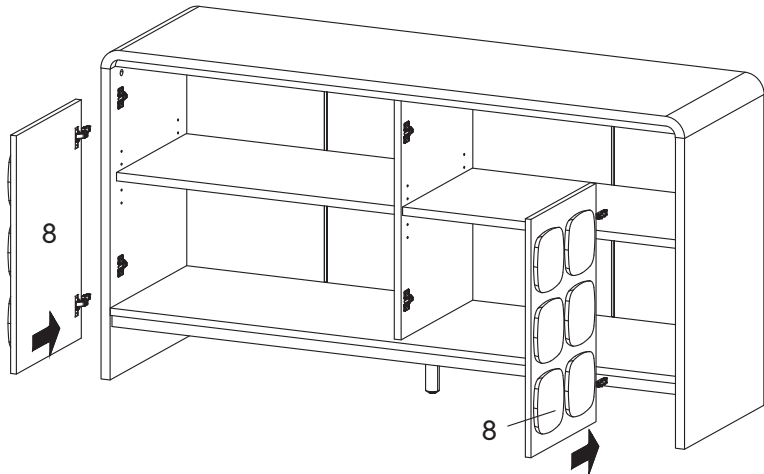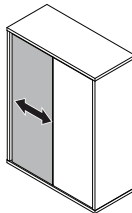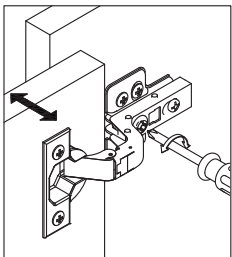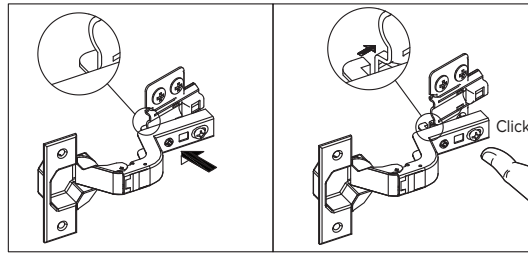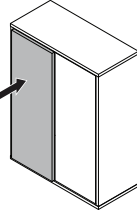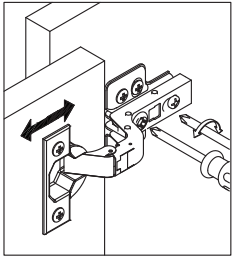


STEP 15

HARDWARE**I** Screw M 4.5 x 12.5 mm x8**HS35B** Hinge x4**COMPONENTS****8** Door

x2

15.1 Install Hinge (HS35B) into Door (8). Secure with Screw M 4.5 x 12.5 mm (I), then tighten using screwdriver. Position as shown in the figure.

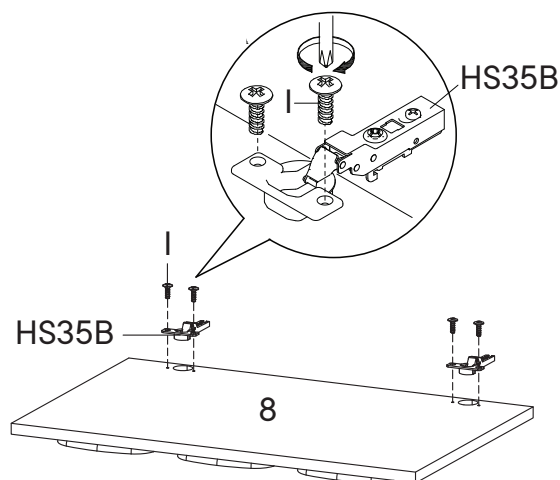


x 2

COMPONENTS

8 Door


x2

15.1 Install Door (8) to component Center Board by following below detail. Please refer to below image for more guide on how to adjust hinges. Position as shown in the figure.

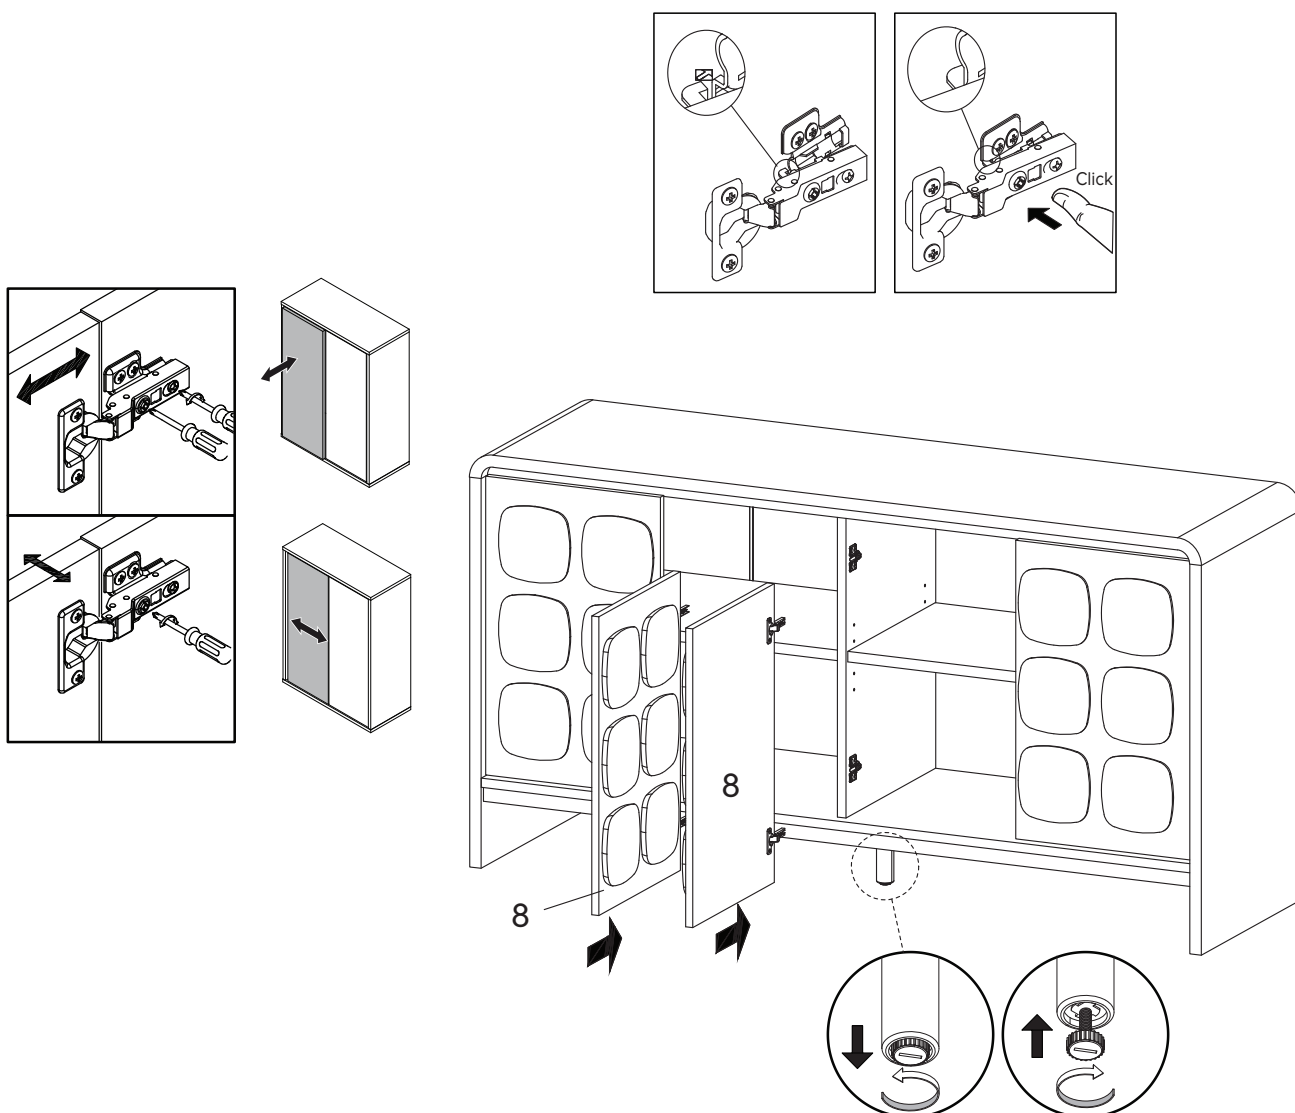

Great job!

Sideboard assembly is complete

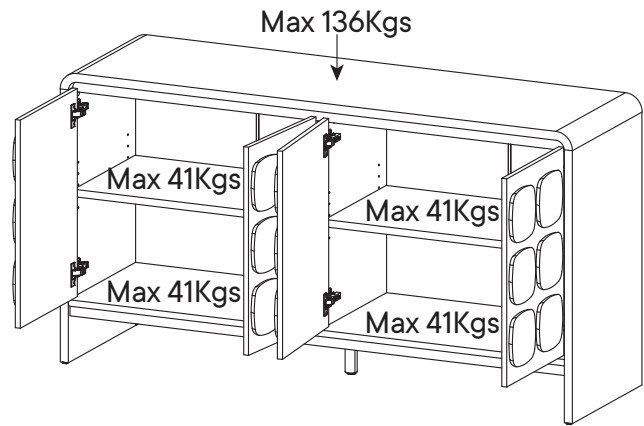

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!

Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.

modway










Questions? Contact us!
609.256.9000
cs@modway.com

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

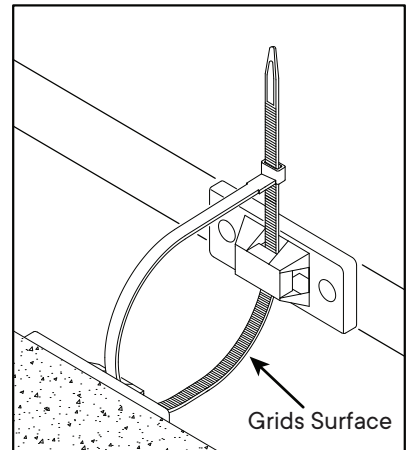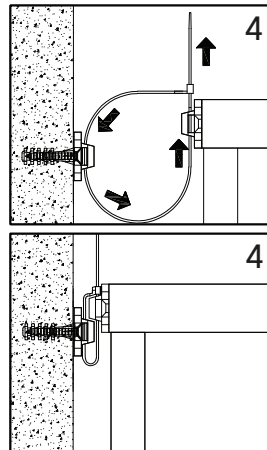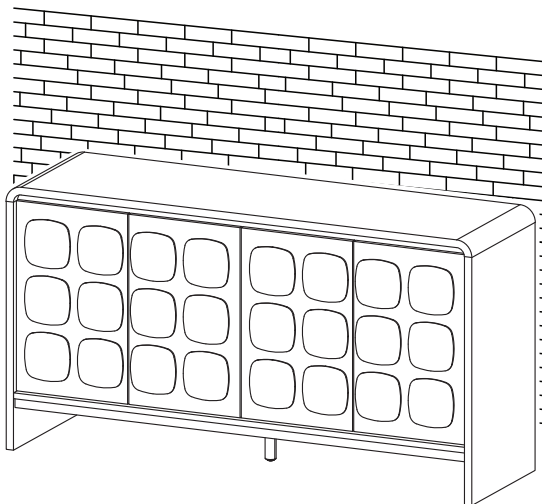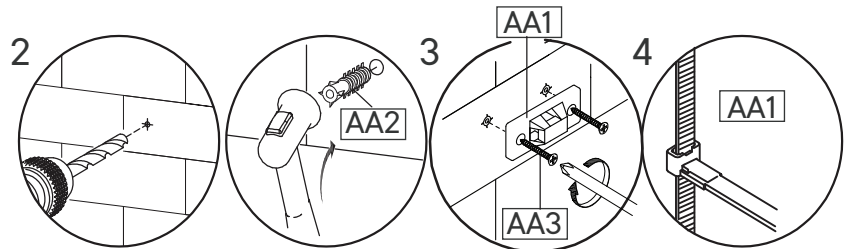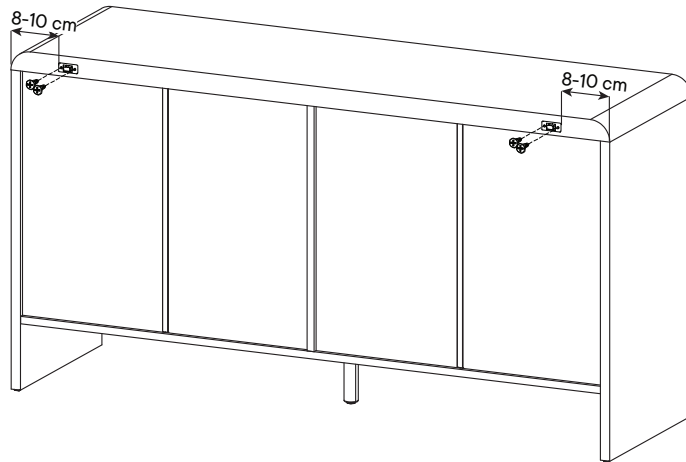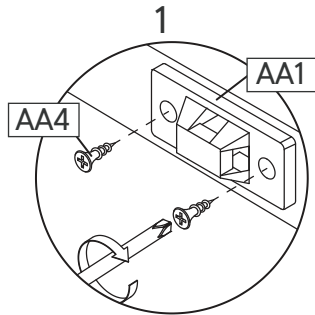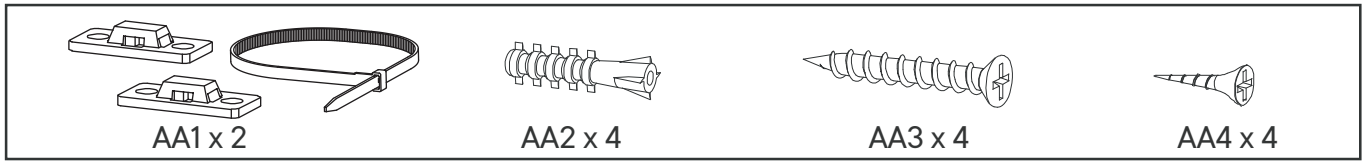

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.