


ASSEMBLY INSTRUCTIONS

EEI-7167

VO.01.10.24

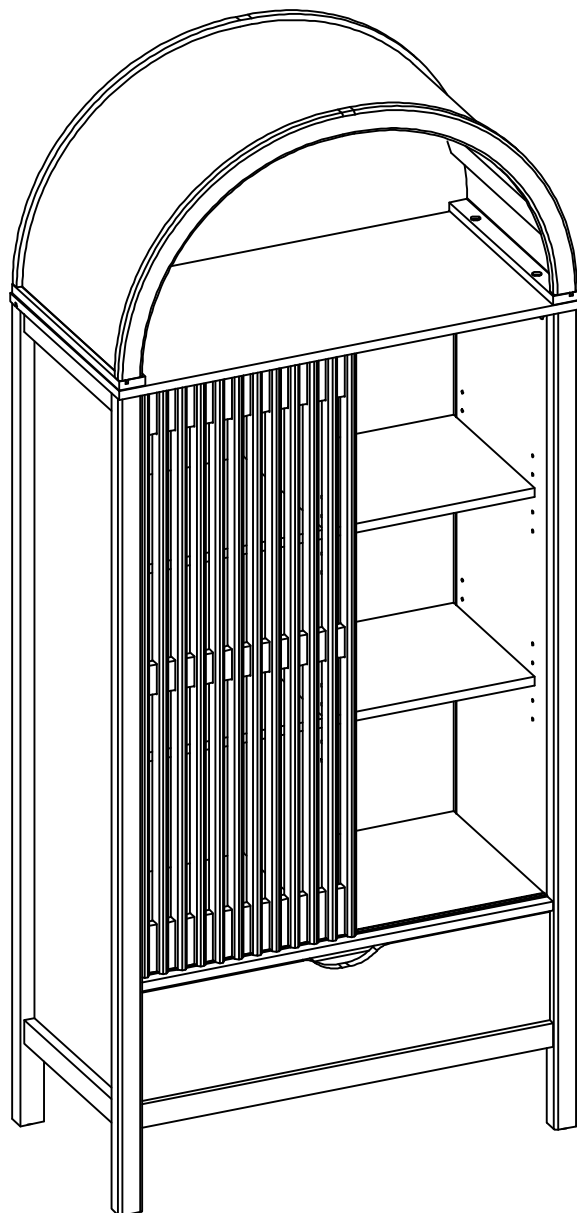

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top panel	x1
2	Top bottom panel	x1
3	Front bottom support panel	x1
4	Back bottom support panel	x1
5	Right side panel	x1
6	Left side panel	x1
7	Divider panel	x1
8	Fix shelf panel	x1
9	Front crown	x1
10	Bottom apron	x1
11	Support top	x5
12	Side support	x2
13	Support fix shelf	x1
14	Top back panel	x1
15	Back panel	x2
16	Bottom back panel	x1
17	Adjustable shelf	x4
18	Door	x1
19	Front drawer	x1
20	Right side drawer	x1
21	Left side drawer	x1
22	Back drawer	x1
23	Bottom drawer	x1
24	Support bottom drawer	x1

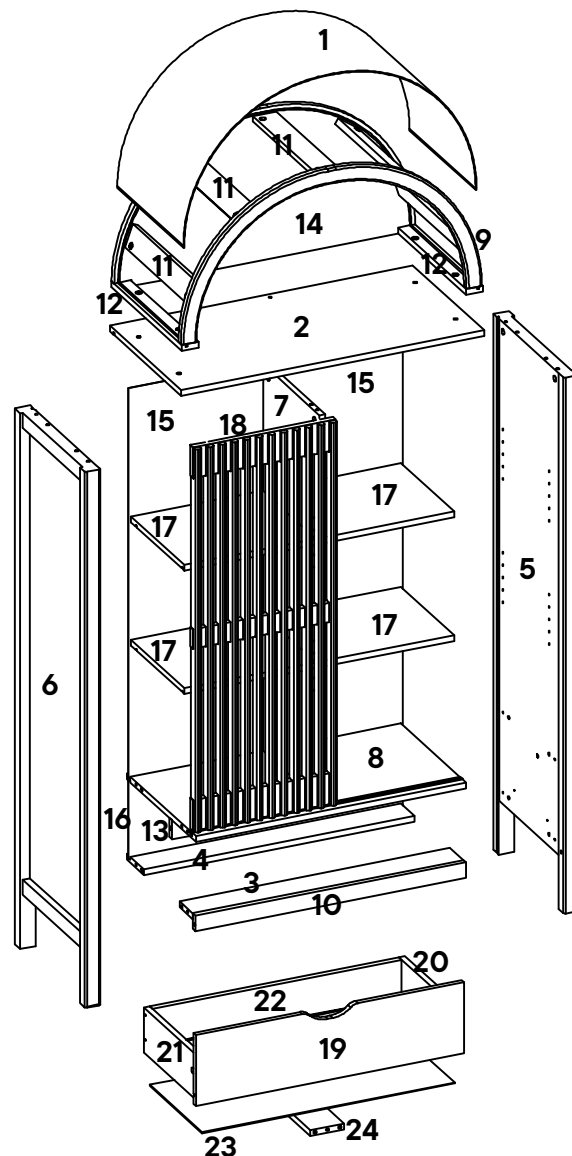

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A.		Cambolt Ø6 x 32 mm	x32
B.		Camlock Ø15 x 12 mm	x32
C.		Cover cap	x8
D.		Dowel Ø7.8 x 32 mm	x44
E.		Assembly screw	x7
F.		Screw Ø8 x 37 mm	x4
G.		Screw Ø6 x 12 mm	x18
H.		Screw Ø4 x 12 mm	x3
I.		Screw Ø6 x 19 mm	x24
J.		Wedge	x24
K.		Rear clamp	x3
L.		Allen key	x1
M.		Bolt M6 x 20 mm	x4
N.		Shelf pin	x16
O.		Screw Ø6 x 12 mm	x1
P.		Bumper	x4
Q.		Drawer runner A (R/L)	x1
R.		Drawer runner B (R/L)	x1
S.		Hole plug	x4
T.		Top sliding door	x2
U.		Bottom sliding door	x2
V.		Wall tipping	x1

What you need:



Phillips



Phillips Head Screwdriver

You may also need:

+ Level

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

COMPONENTS

7	Divider panel	x1
8	Fix shelf panel	x1
13	Support fix shelf	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x2
D	Dowel Ø7.8 x 32 mm	x13

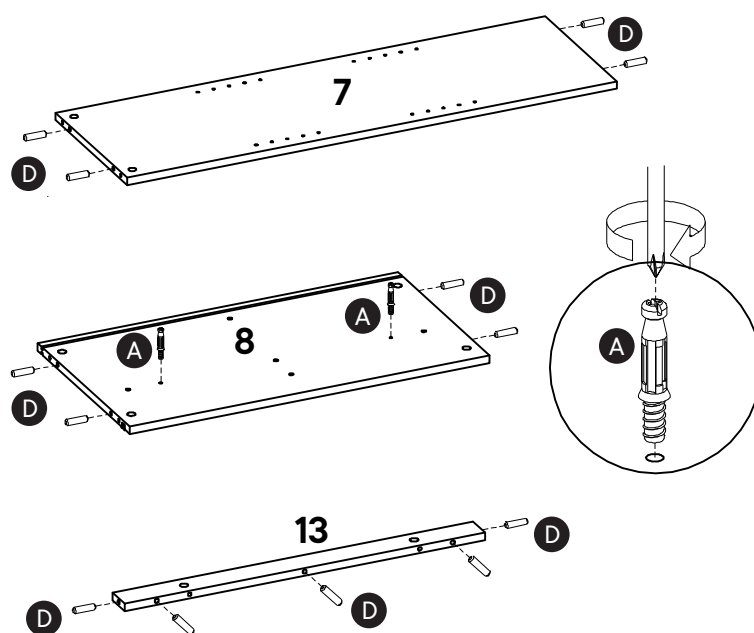


Step 2

COMPONENTS

7	Divider panel	x1
8	Fix shelf panel	x1
13	Support fix shelf	x1

HARDWARE

B	Camlock Ø15 x 12 mm	x2
E	Assembly screw	x2

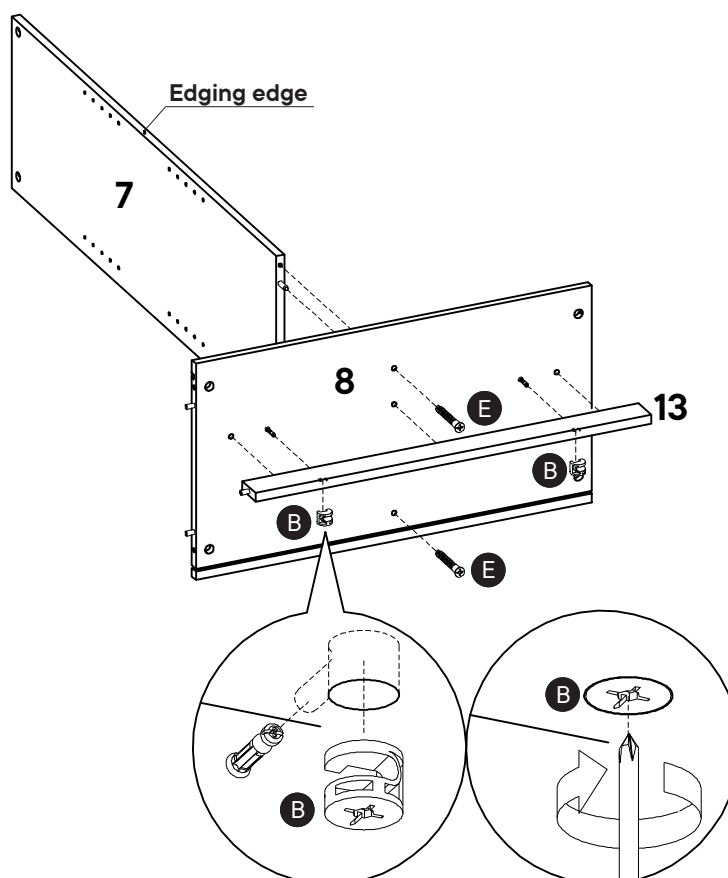


Step 3

COMPONENTS

3	Front bottom support panel	x1
4	Back bottom support panel	x1
10	Bottom apron	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x2
D	Dowel Ø7.8 x 32 mm	x9

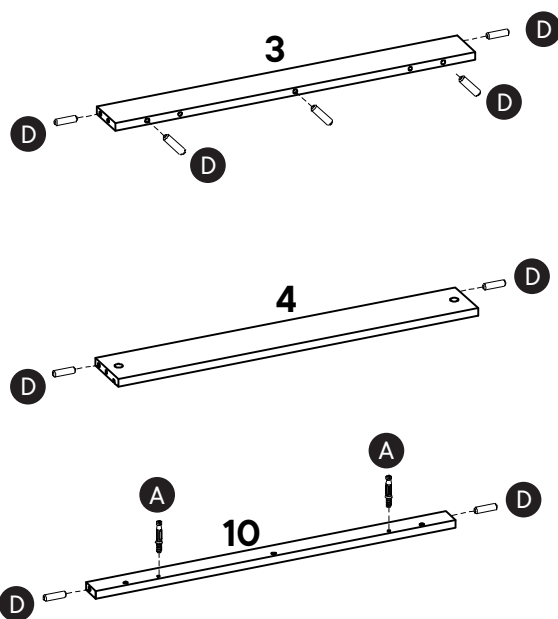


Step 4

COMPONENTS

3	Front bottom support panel	x1
10	Bottom apron	x1

HARDWARE

B	Camlock Ø15 x 12 mm	x2
---	---------------------	----

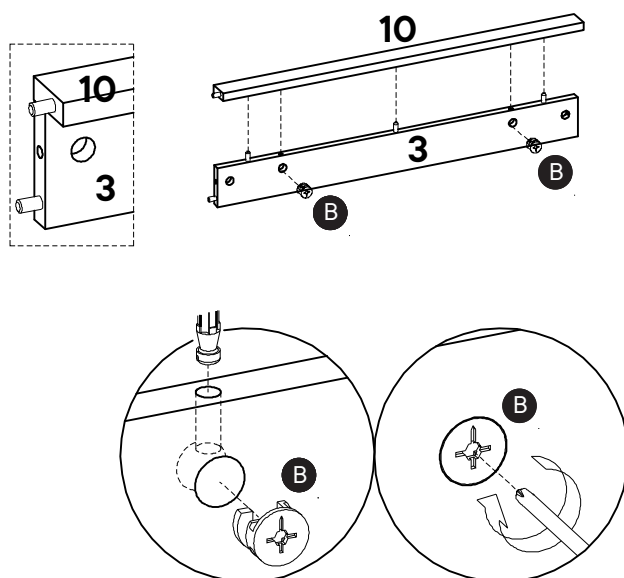


Step 5

COMPONENTS

5	Right side panel	x1
6	Left side panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x8
D	Dowel Ø7.8 x 32 mm	x4
G	Screw Ø6 x 12 mm	x4
Q	Drawer runner A (R/L)	x1

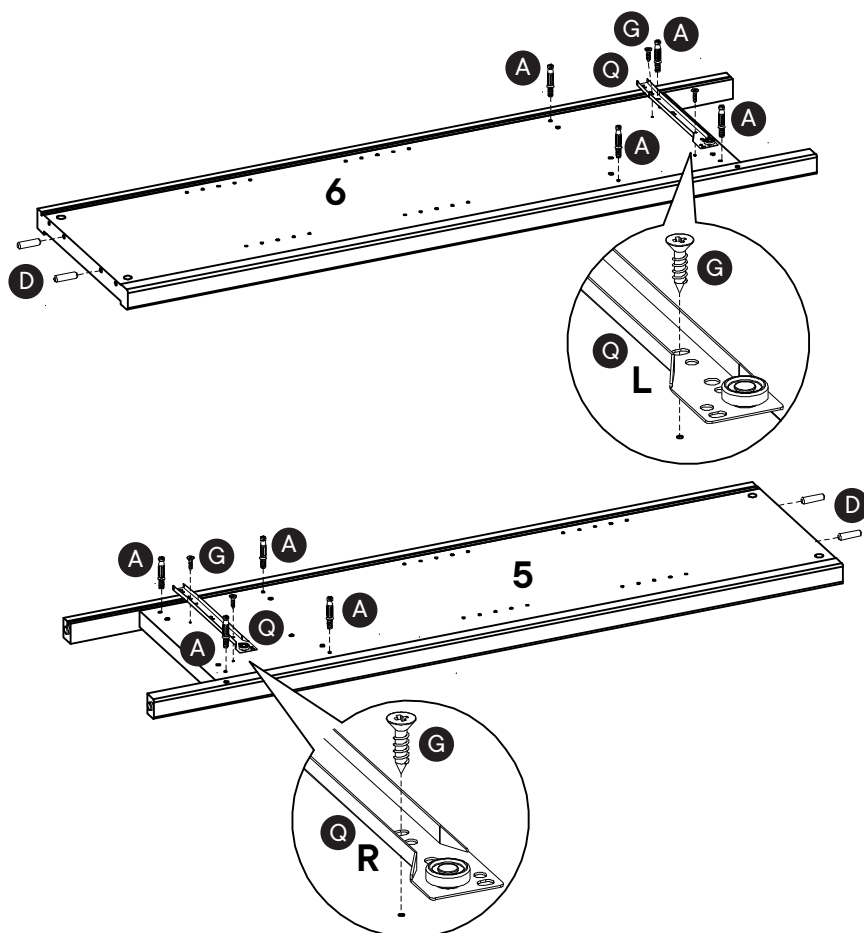


Step 6

COMPONENTS

5	Right side panel	x1
4	Back bottom support panel	x1

HARDWARE


B	Camlock Ø15 x 12 mm	x4
---	---------------------	----

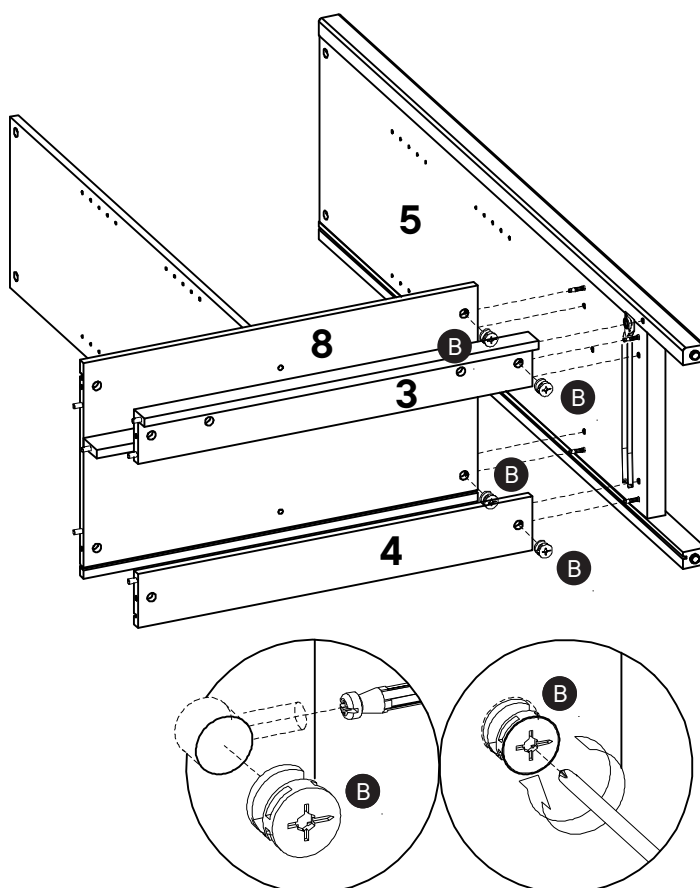

Step 7

COMPONENTS

16 Bottom back panel x1

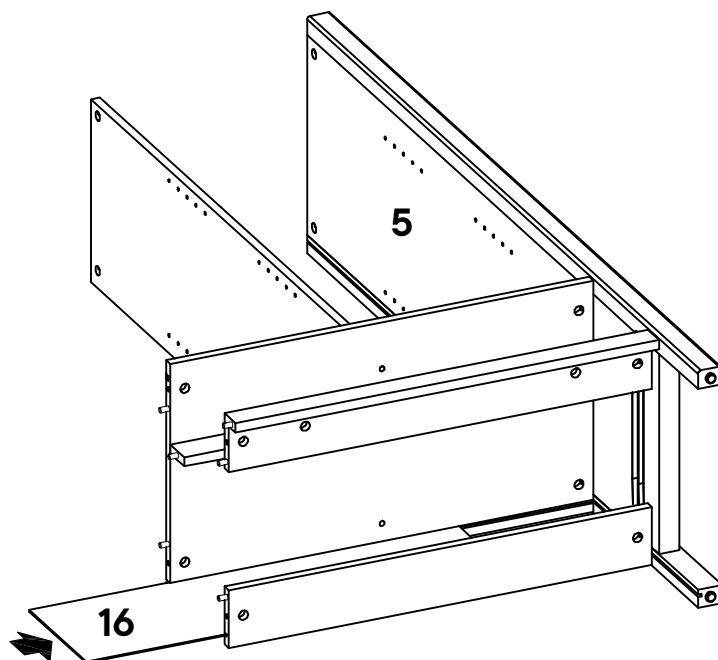



Step 8

COMPONENTS

6 Left side panel x1

HARDWARE


B Camlock Ø15 x 12 mm x4

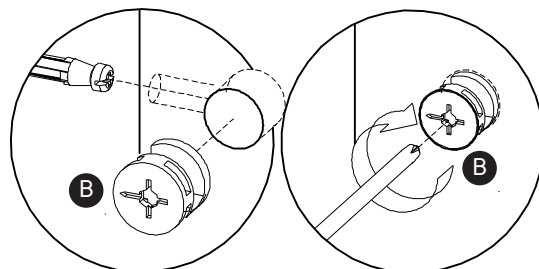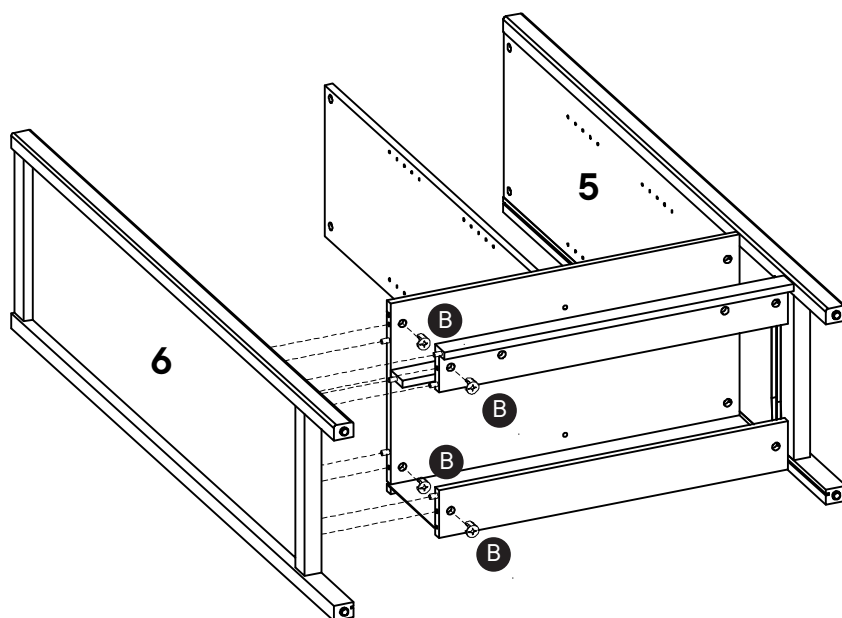

Step 9

COMPONENTS

15	Back panel	x1
----	------------	----

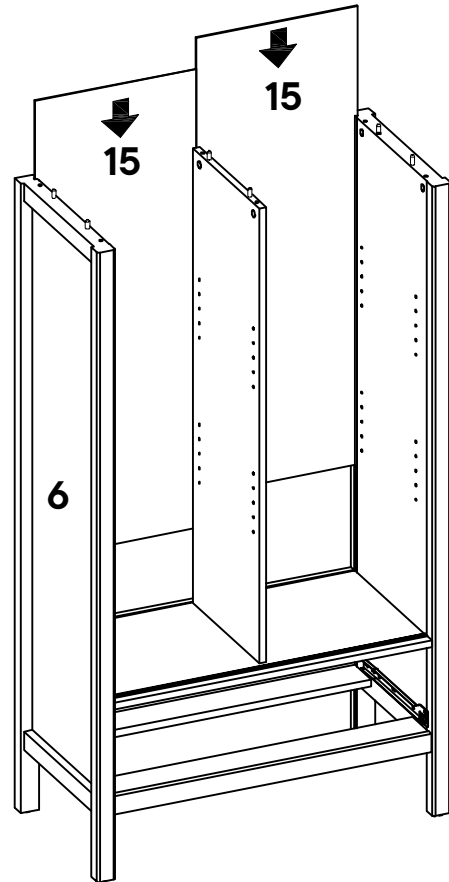




Step 10

COMPONENTS

9	Front crown	x1
11	Support top	x5
14	Top back panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x10
D	Dowel Ø7.8 x 32 mm	x10

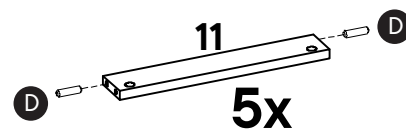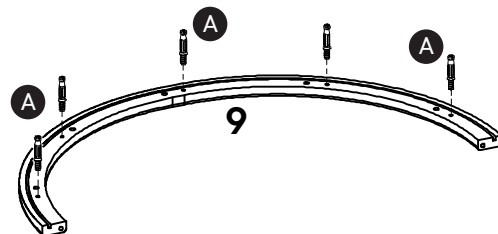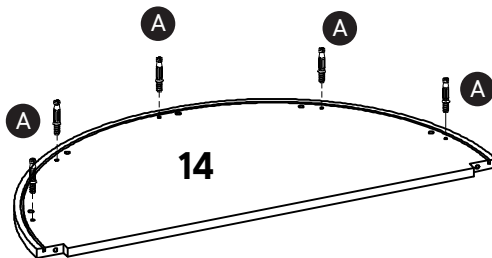


Step 11

COMPONENTS

9	Front crown	x1
11	Support top	x5
14	Top back panel	x1

HARDWARE


B	Camlock Ø15 x 12 mm	x10
---	---------------------	-----

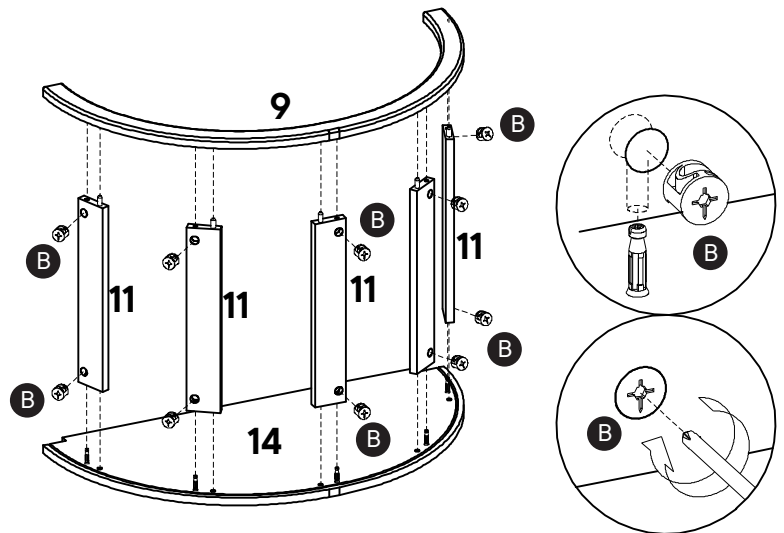

Step 12

COMPONENTS

1	Top panel	x1
---	-----------	----

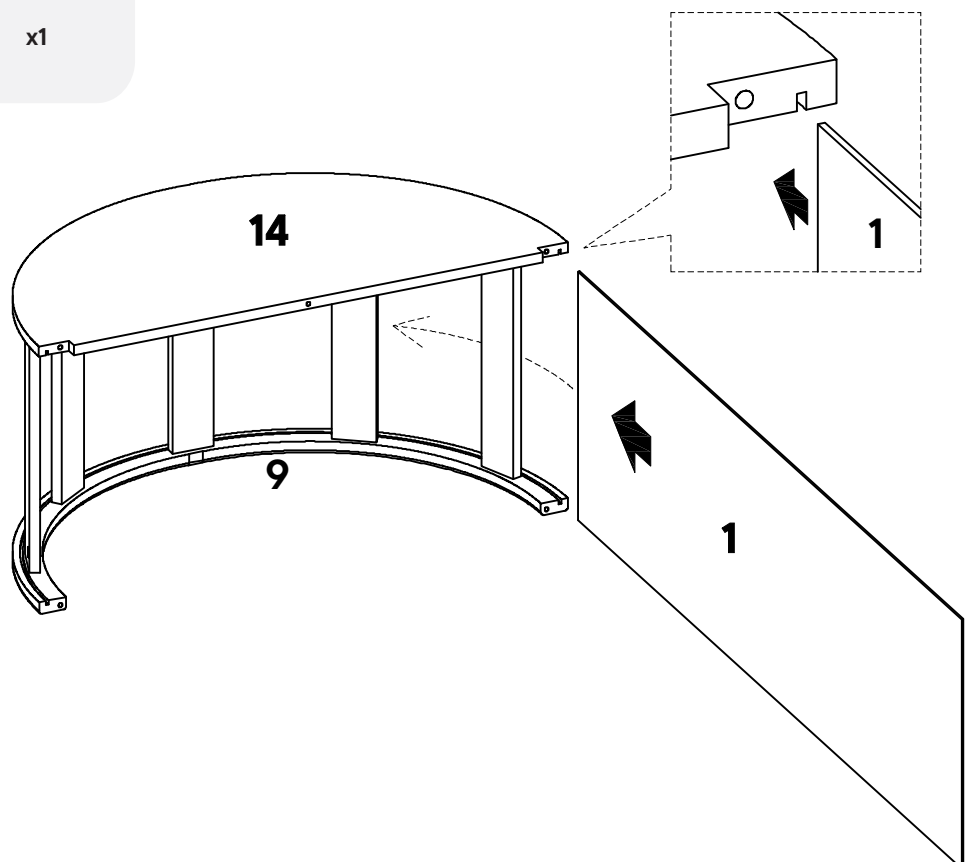


Step 13

COMPONENTS

12 Side support x2

HARDWARE

E Assembly screw x4

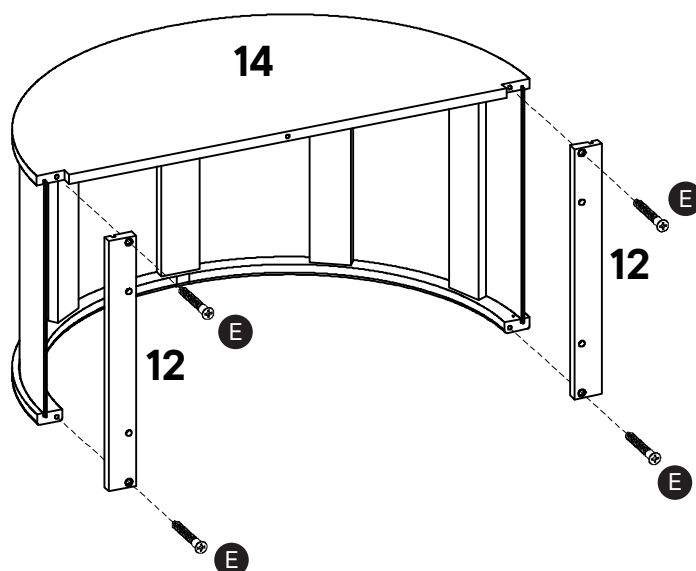

Step 14

COMPONENTS

2 Top bottom panel x1

HARDWARE


A Cambolt Ø6 x 32 mm x6

E Assembly screw x1

L Allen key x1

M Bolt M6 x 20 mm x4

S Hole plug x4

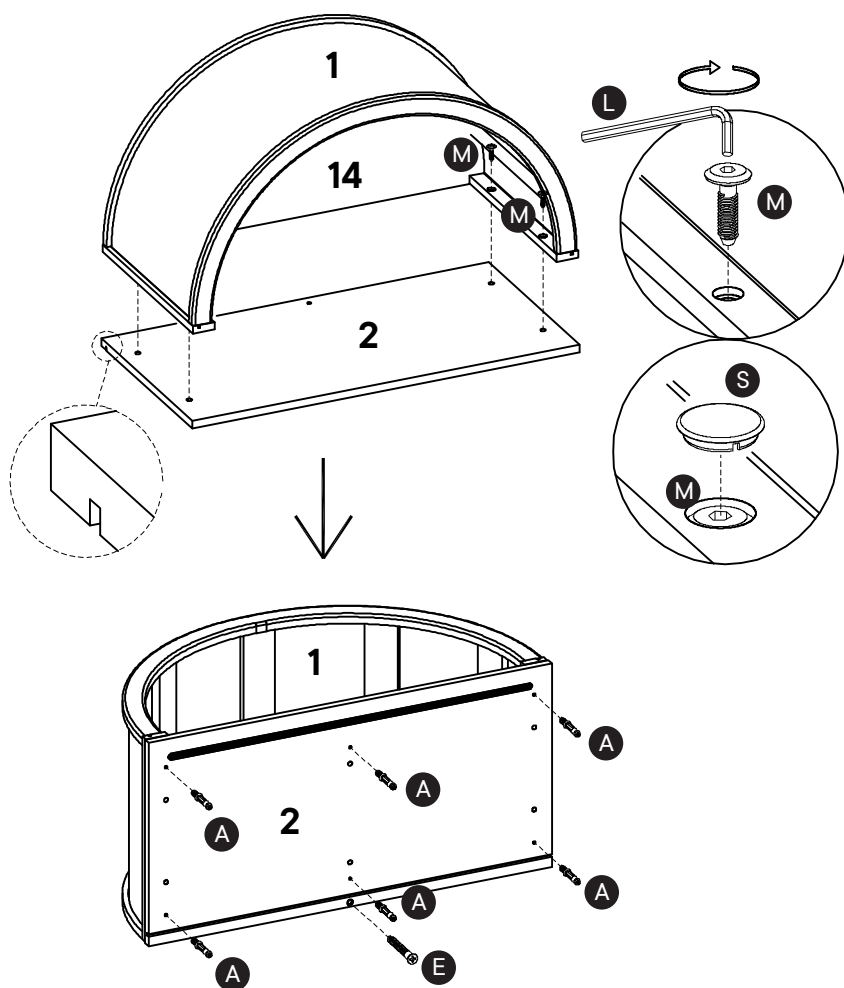

Step 15


COMPONENTS

② Top bottom panel x1

HARDWARE

Ⓑ Camlock Ø15 x 12 mm x6

Ⓒ Cover cap x6

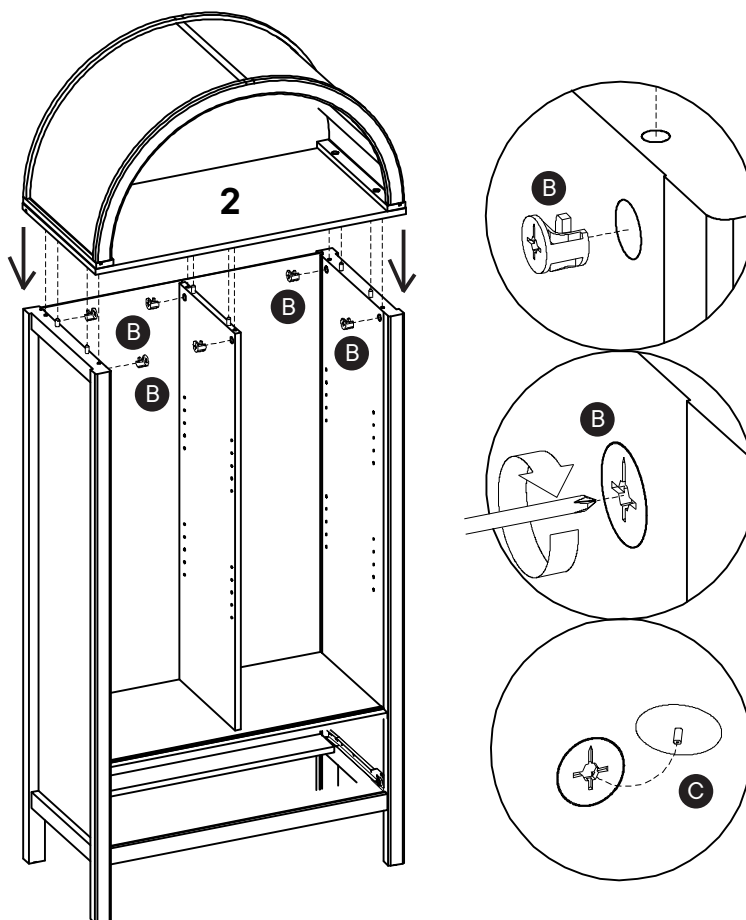

Step 16


HARDWARE

Ⓗ Screw Ø4 x 12 mm x3

Ⓘ Screw Ø6 x 19 mm x22

Ⓙ Wedge x22

Ⓚ Rear clamp x3

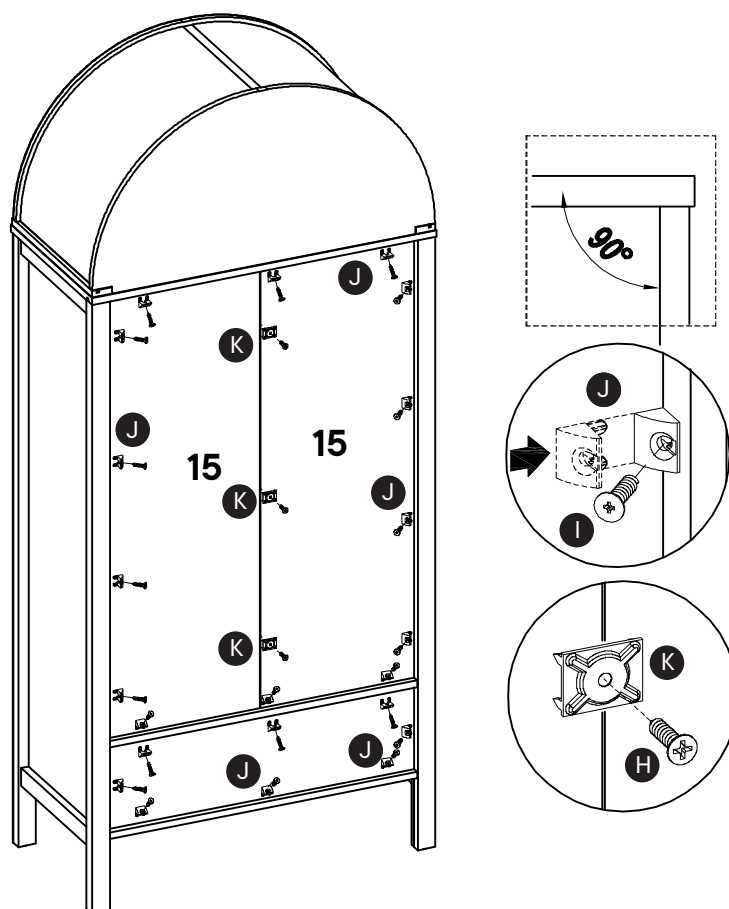


Step 17

COMPONENTS

17 Adjustable shelf x4

HARDWARE

N Shelf pin x16

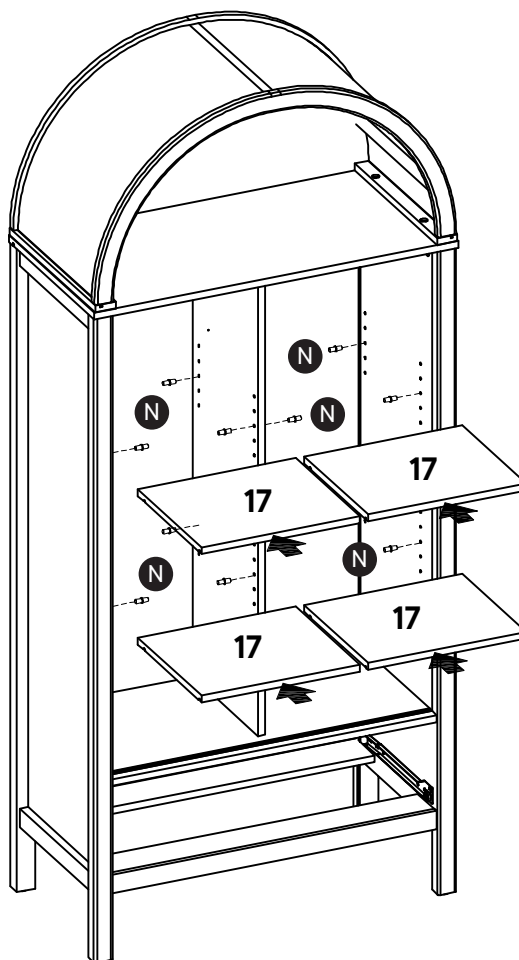

Step 18

COMPONENTS


18 Door x1

HARDWARE


G Screw Ø6 x 12 mm x8

T Top sliding door x2

U Bottom sliding door x2

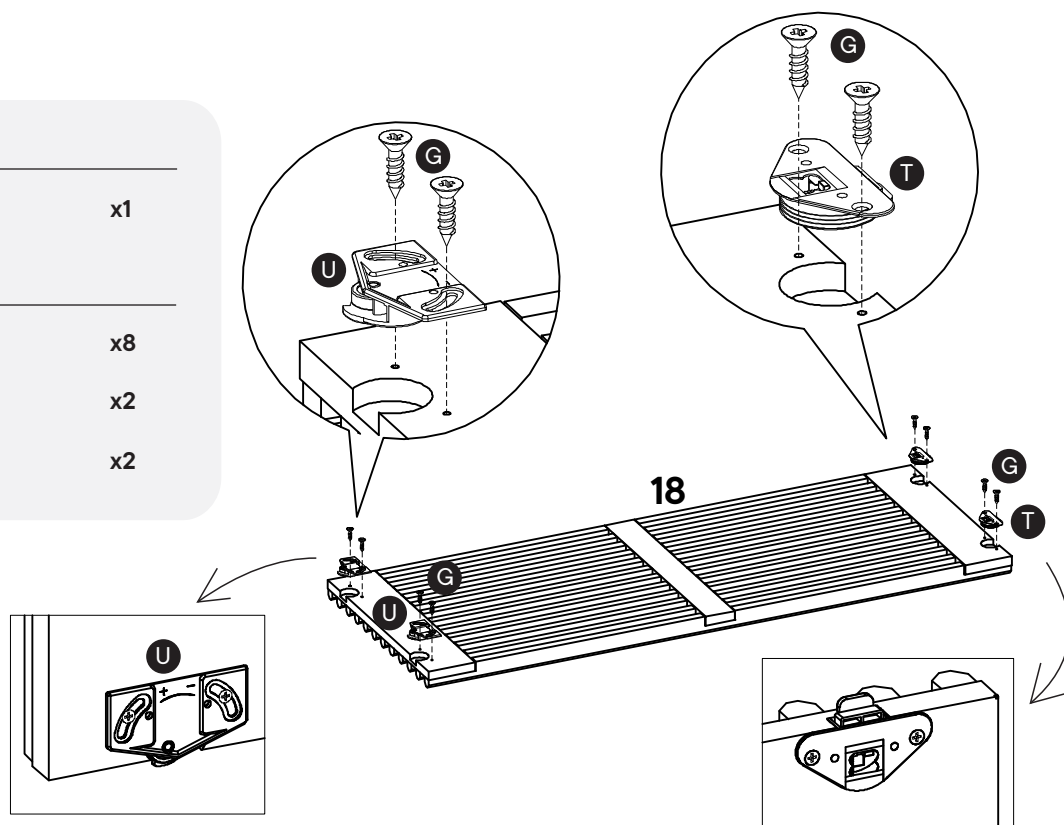

Step 19

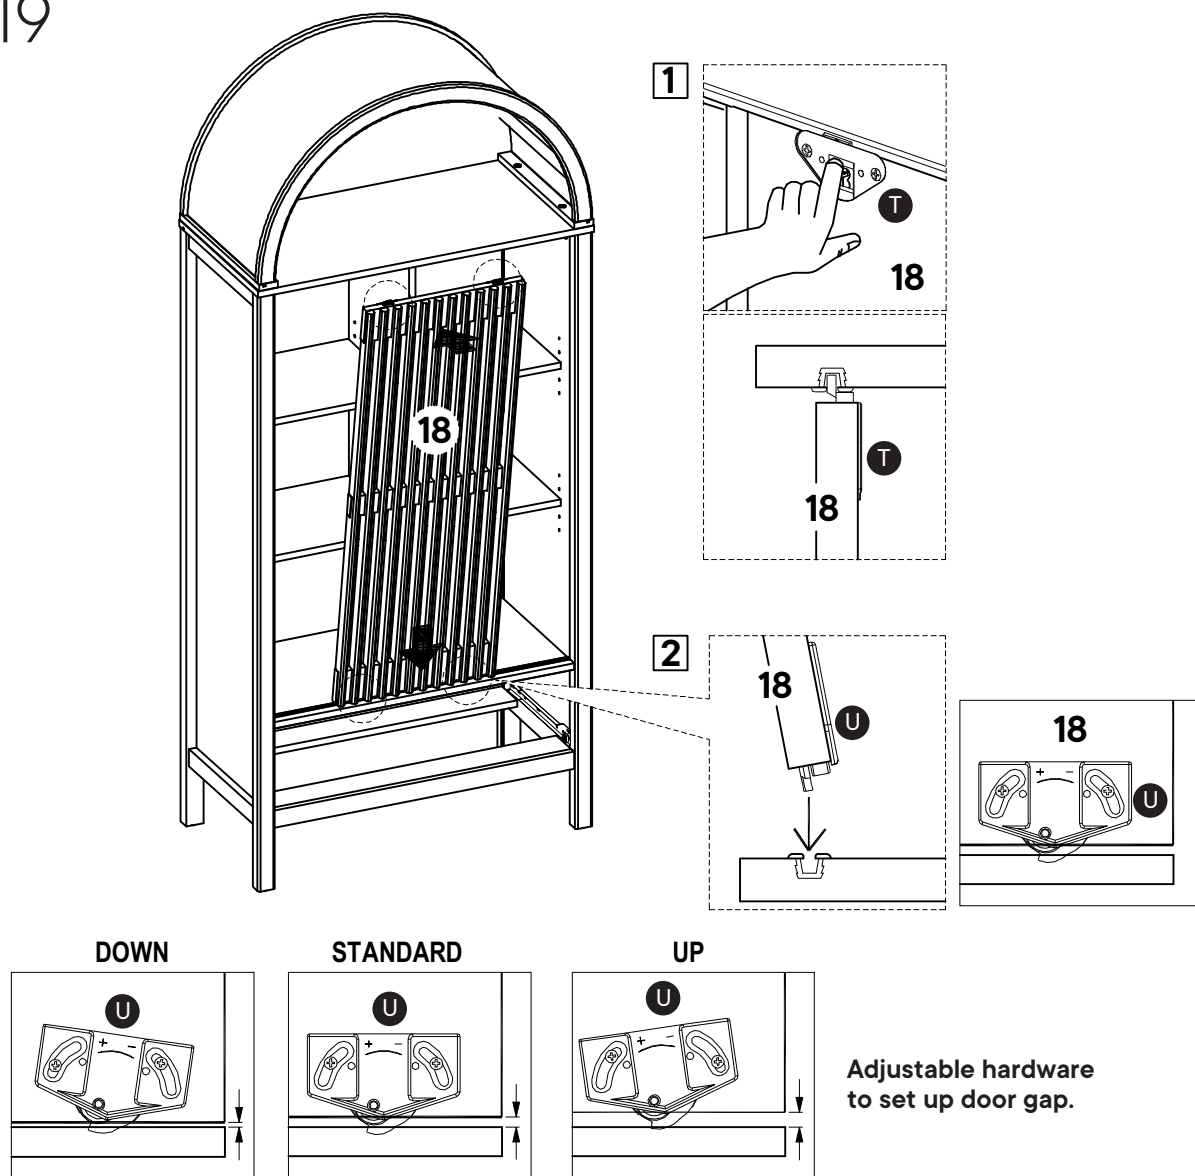


Step 20

COMPONENTS

19	Front drawer	x1
20	Right side drawer	x1
21	Left side drawer	x1
22	Back drawer	x1
24	Support bottom drawer	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x4
D	Dowel Ø7.8 x 32 mm	x8

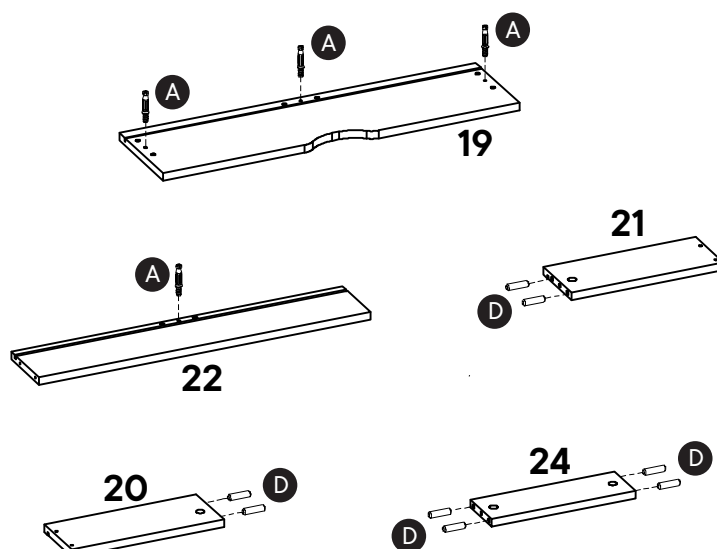





Step 21

COMPONENTS

20	Right side drawer	x1
21	Left side drawer	x1
22	Back drawer	x1
24	Support bottom drawer	x1

HARDWARE

B	Camlock Ø15 x 12 mm	x1
F	Screw Ø7 x 37 mm	x4

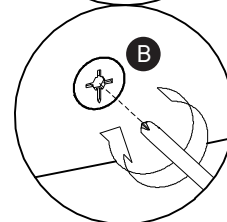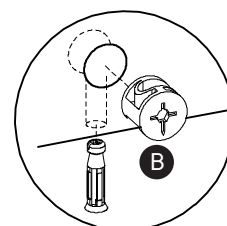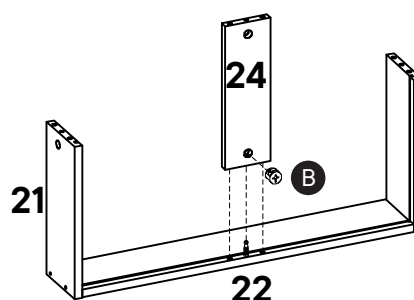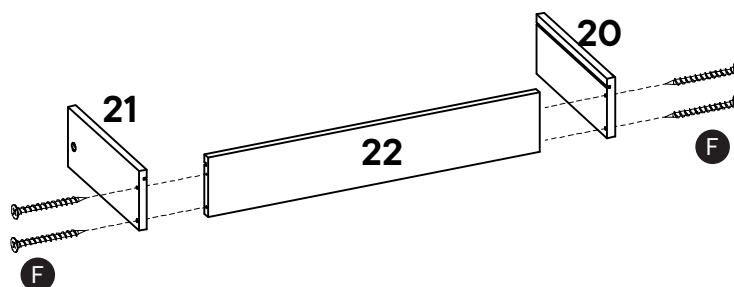


Step 22

COMPONENTS

19	Front drawer	x1
23	Bottom drawer	x1

HARDWARE


B	Camlock Ø15 x 12 mm	x3
C	Cover cap	x2

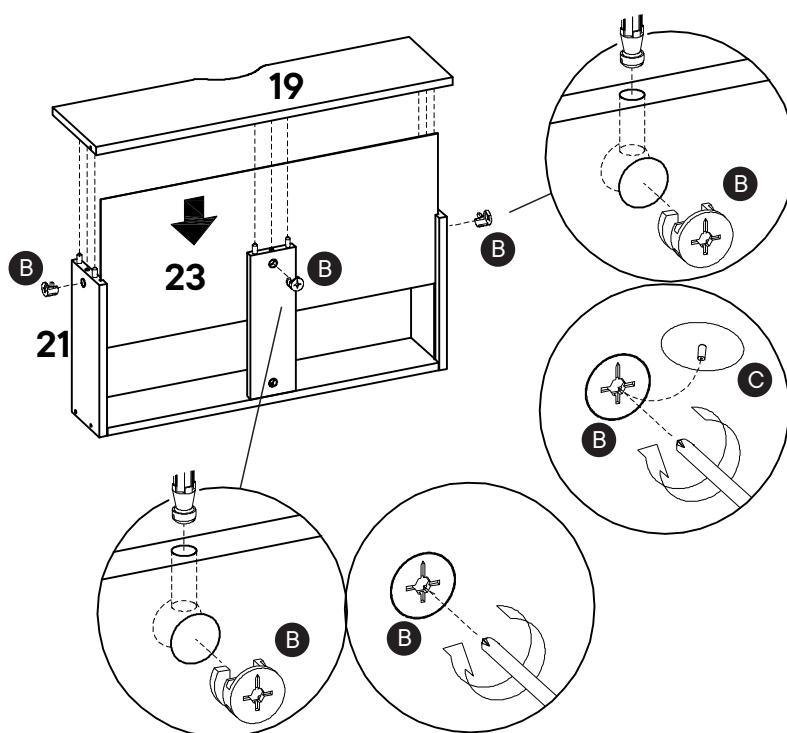

Step 23

HARDWARE



G	Screw Ø6 x 12 mm	x4
I	Screw Ø6 x 19 mm	x2
J	Wedge	x2
R	Drawer runner B (R/L)	x1

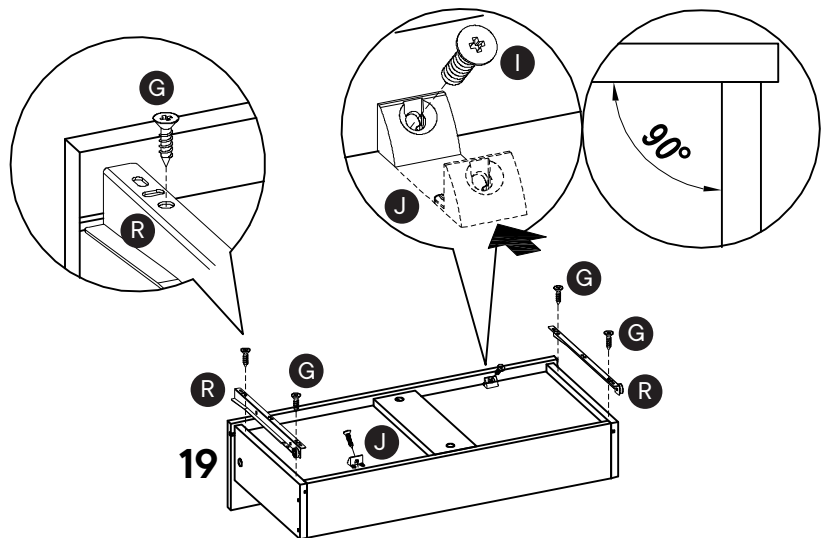

Step 24

HARDWARE



G	Screw Ø6 x 12 mm	x2
----------	------------------	----

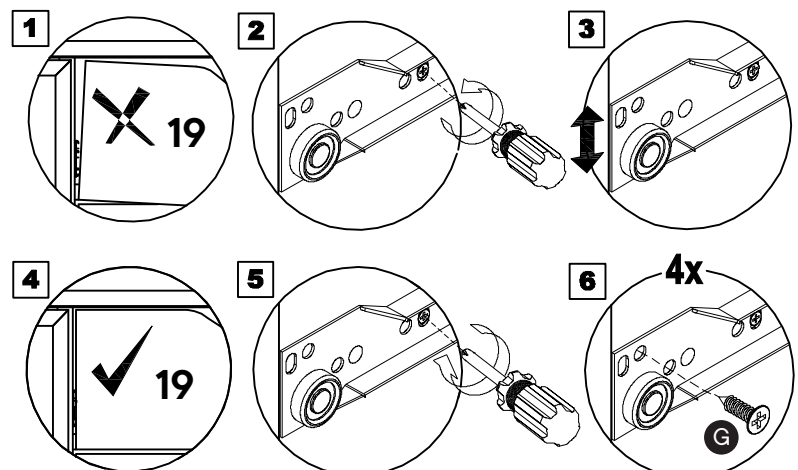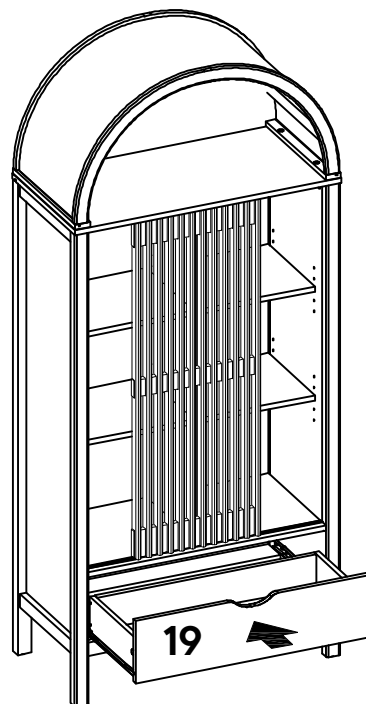

Step 25

HARDWARE

P Bumper x4

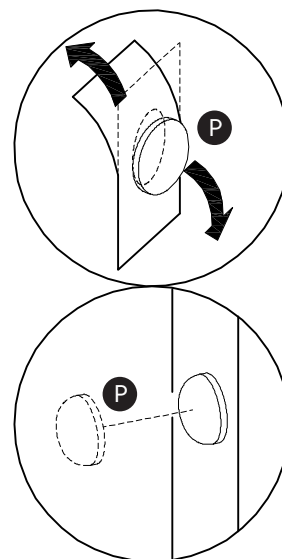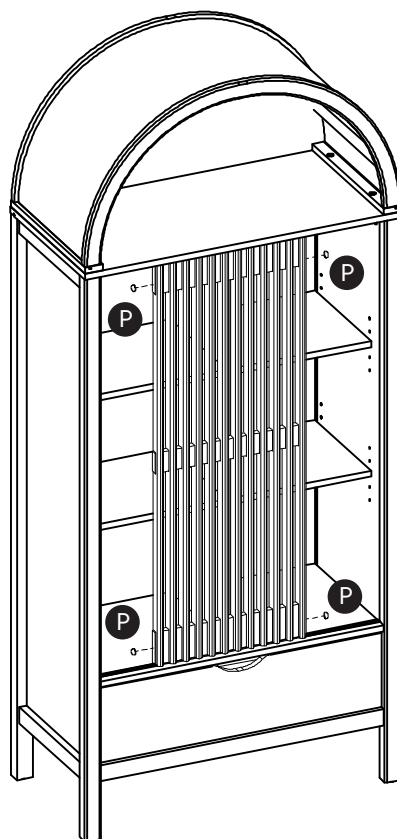

Step 26

HARDWARE


V Wall Tipping x1

O Screw $\varnothing 6 \times 12$ mm x1

ATTENTION:

For your safety it is imperative to fix your furniture to the wall.

Please source the right wall mounting hardware according to the nature of wall.

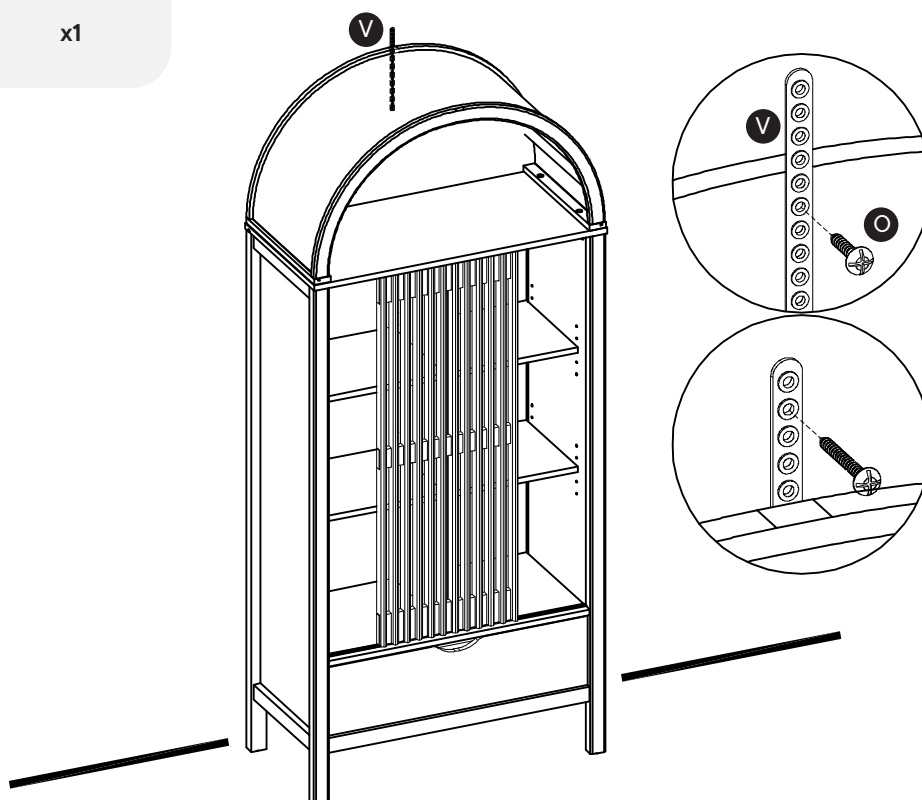

Great job!

Your Bookcase is complete.



CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway** for a chance to be featured.

