


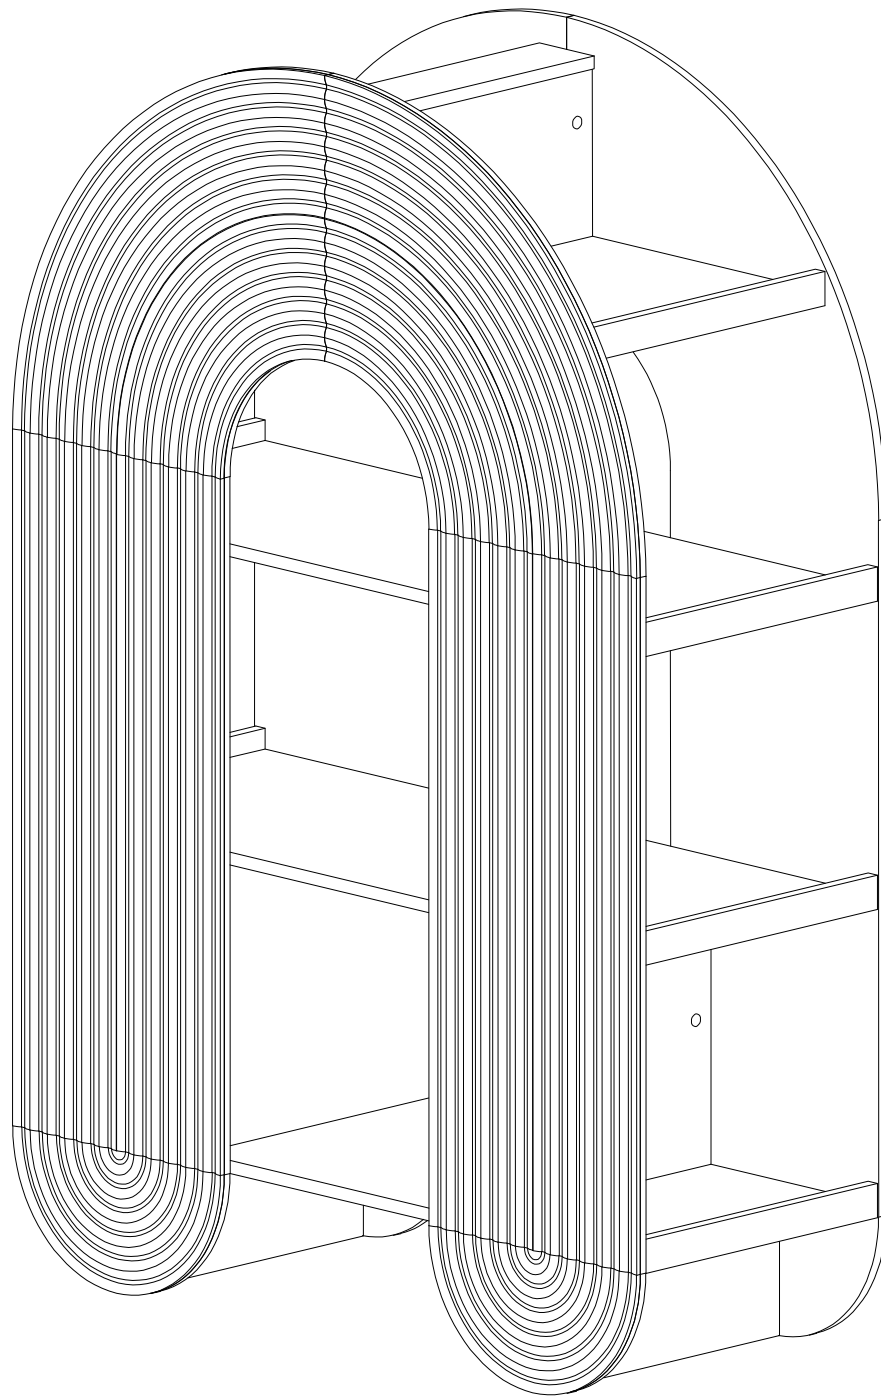

ASSEMBLY INSTRUCTIONS

BookShelf

EEI-7390 / V2.11.12.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome. Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.




Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Screw M6 x 40 mm	x4
B		Wood Dowel Ø6 x 20mm	x40
C		Wood Dowel Ø6 x 35mm	x4
D		Wood Dowel Ø8 x 25mm	x76
E		5857 Bolt 7 x 64mm	x4
F		Cam Bolt 20 x 5 mm	x52
G		Cam Lock 15/12	x48
H		Cam Lock 15/10	x4
J		Cam Lock 15/10 Titus	x8
K		Plastic Leg Stud	x4
L		Round Sticker	x10
M		Allen Key	x1

WHAT YOU NEED:




Phillips Head Screwdriver



Mallet

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

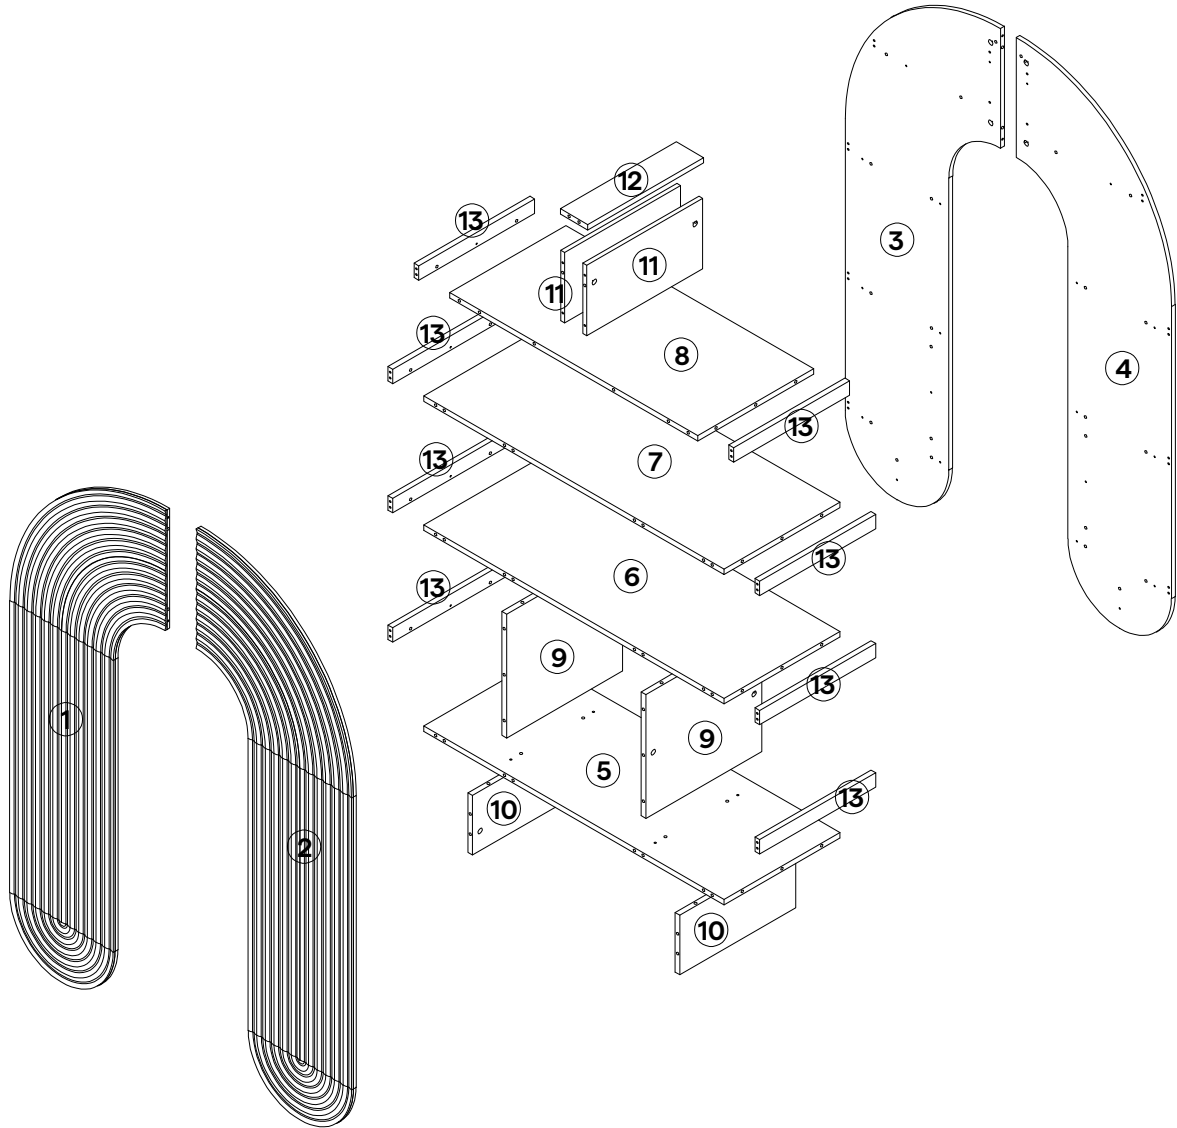

1	Front Panel Left	x1
2	Front Panel Right	x1
3	Back Panel Left	x1
4	Back Panel Right	x1
5	Bottom Panel	x1

6	Shelf Panel Bottom	x1
7	Shelf Panel Center	x1
8	Shelf Panel Top	x1
9	Divider Panel	x2

10	Divider Panel Bottom	x2
11	Divider Panel Top	x2
12	Top Panel	x1
13	Side Rail	x8

HARDWARE


- C** Wood Dowel Ø6 x 35mm x2
- F** Cam Bolt 20 x 5mm x20

COMPONENTS

- 1** Front Panel Left x1
- 2** Front Panel Right x1

1.1 Insert **Wood Dowel (C)** into the innermost pre-drilled holes on the right edge of **Front Panel Left (1)**.

1.2 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the back side of **Front Panel Left (1)** and **Front Panel Right (2)**, then tighten with screwdriver.

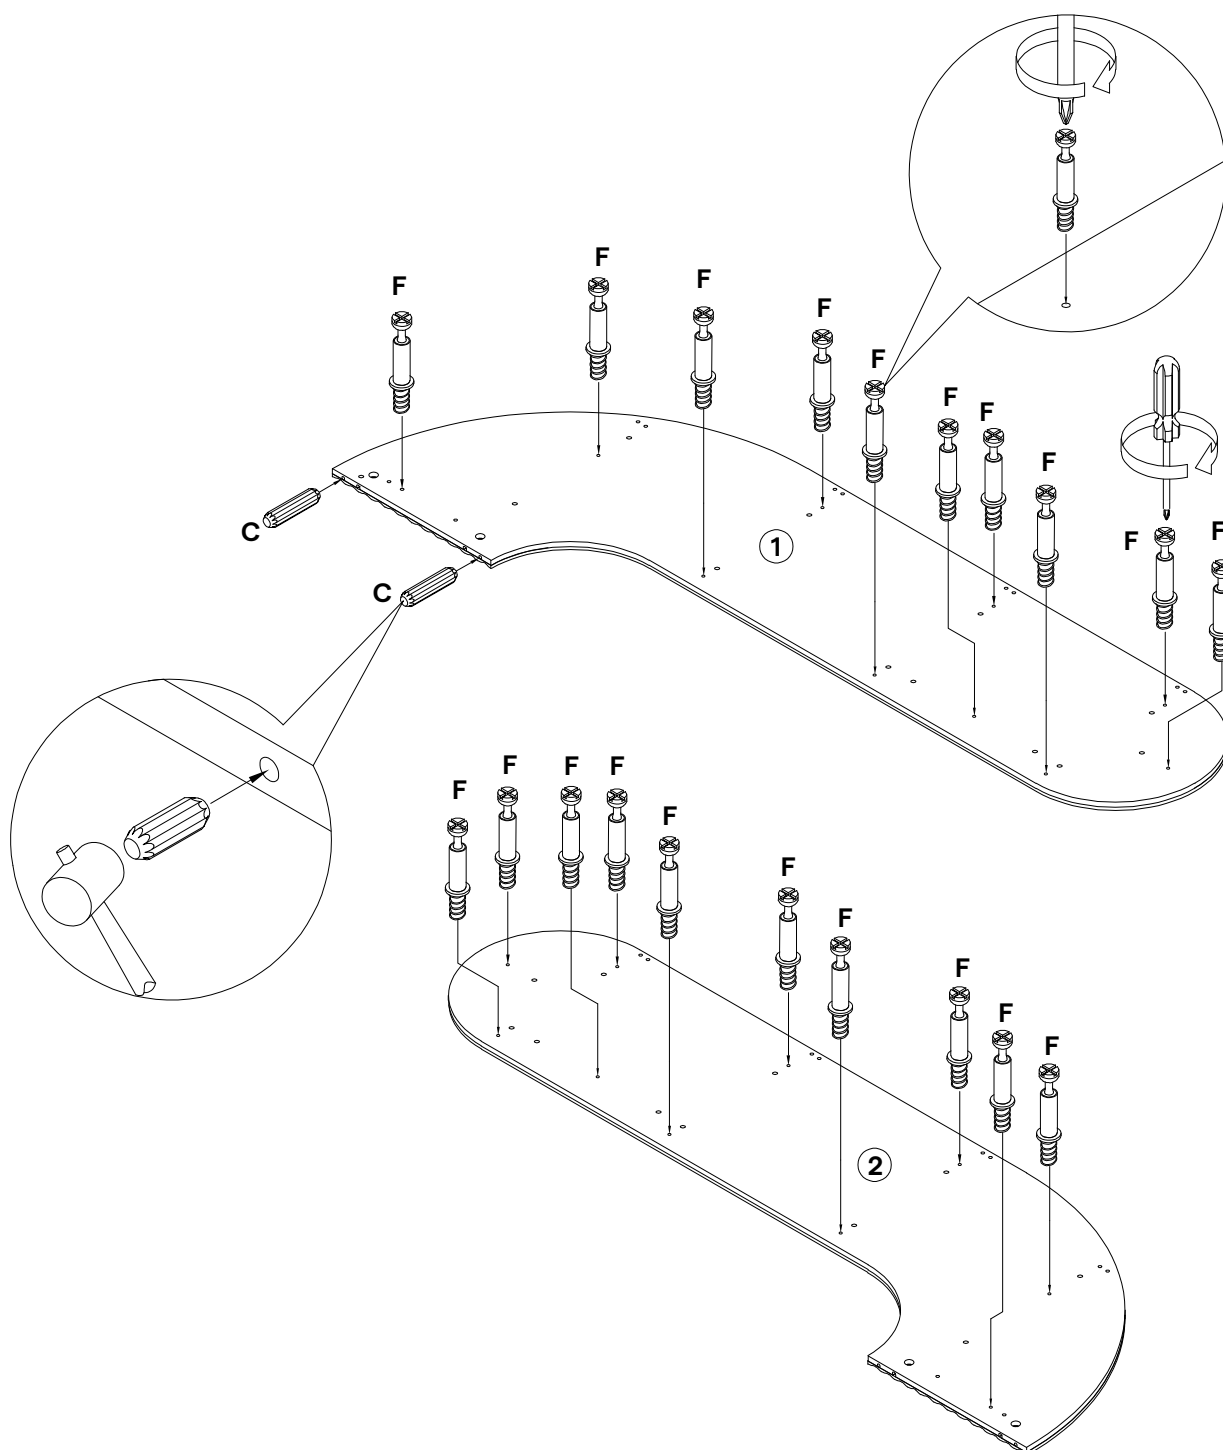

HARDWARE


- C** Wood Dowel Ø6 x 35mm x2
- F** Cam Bolt 20 x 5 mm x20

COMPONENTS

- 3** Back Panel Left x1
- 4** Back Panel Right x1

2.1 Insert **Wood Dowel (C)** into innermost pre-drilled holes on the right edge of **Back Panel Left (3)**.

2.2 Insert **Cam Bolt (F)** into innermost pre-drilled holes on the front side of **Back Panel Left (3)** and **Back Panel Right (4)**, then tighten using screwdriver.

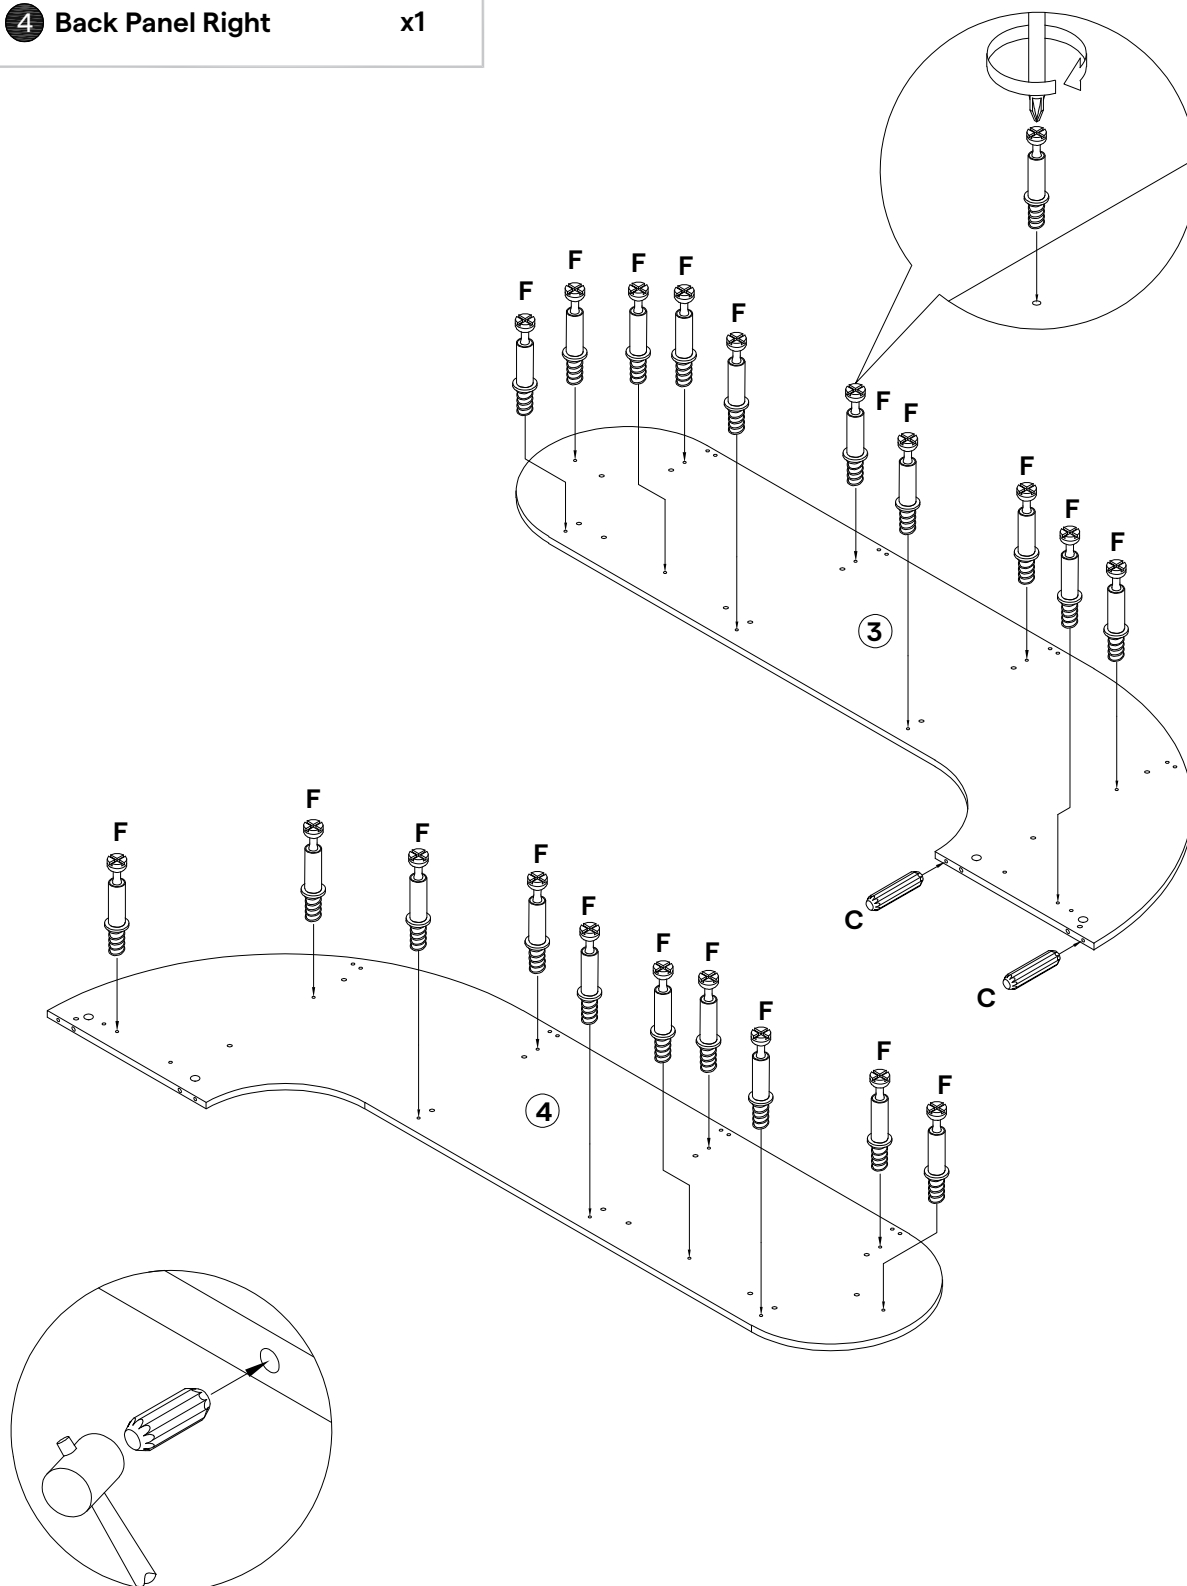

HARDWARE

(D) Wood Dowel Ø8 x 25mm x24

(F) Cam Bolt 20 x 5 mm x4


COMPONENTS

(5) Bottom Panel x1

(6) Shelf Panel Bottom x1

3.1 Insert **Wood Dowel (D)** into the innermost pre-drilled holes on the front, left, right and back edge of **Bottom Panel (5)** and **Shelf Panel Bottom (6)**.

3.2 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the bottom side of **Bottom Panel (5)** and **Shelf Panel Bottom (6)**, then tighten using screwdriver.

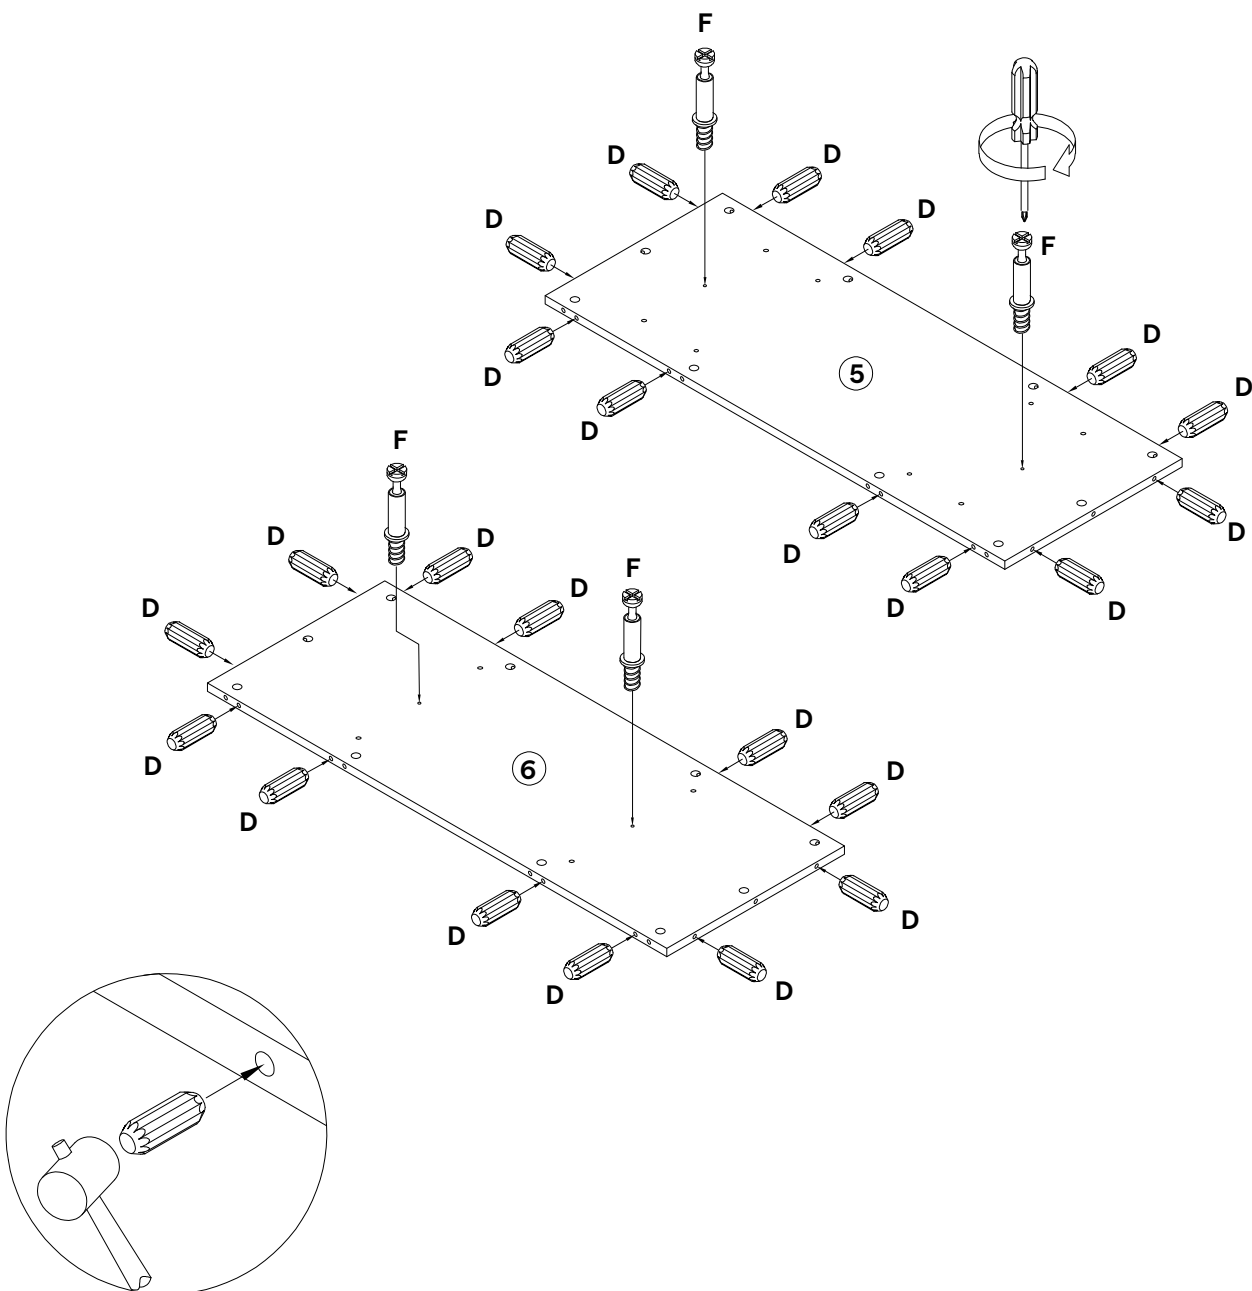

HARDWARE


D Wood Dowel Ø8 x 25mm x24

COMPONENTS

7 Shelf Panel Center x1

8 Shelf Panel Top x1

4.1 Insert **Wood Dowel (D)** into the innermost pre-drilled holes on the front, left, right and back edge of **Shelf Panel Center (7)** and **Shelf Panel Top (8)**.

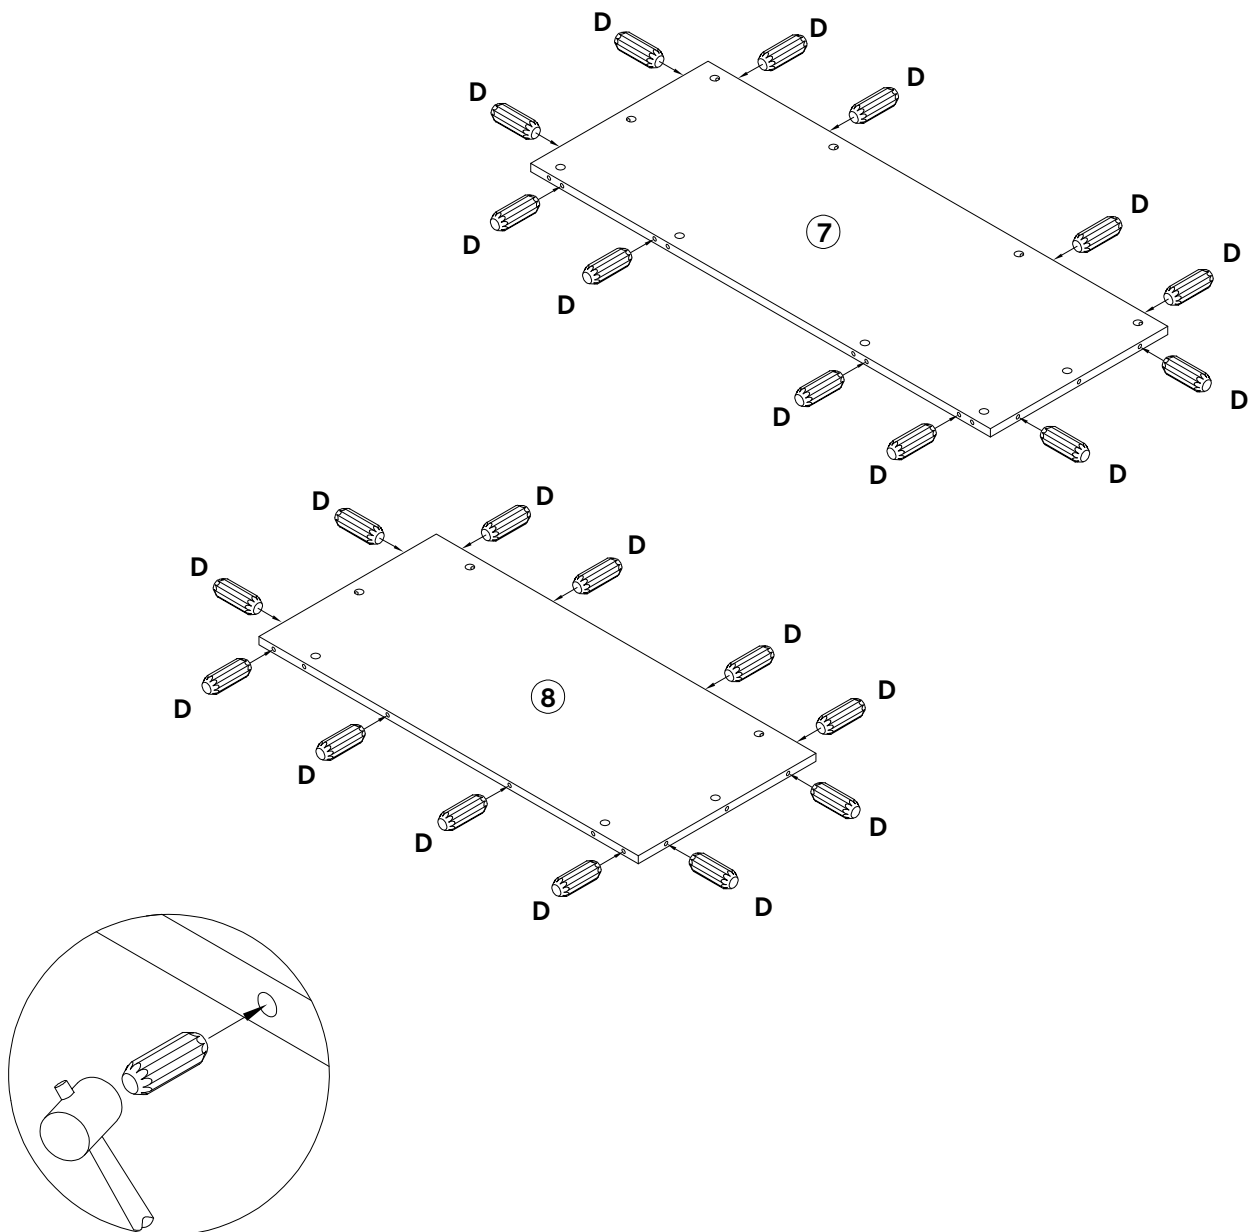

HARDWARE

B	Wood Dowel Ø6 x 20mm	x40
D	Wood Dowel Ø8 x 25mm	x28
F	Cam Bolt 20 x 5mm	x8






COMPONENTS

9	Divider Panel	x2
10	Divider Panel Bottom	x2
11	Divider Panel Top	x2
12	Top Panel	x1
13	Side Rail	x3

5.1 Insert **Wood Dowel (B)** into the innermost pre-drilled holes on the left and right edge of **Divider Panel Top (11)** and **Side Rail (13)**.

5.2 Insert **Wood Dowel (D)** into the innermost pre-drilled holes on the front, top, bottom and back edge of **Divider Panel (9)**, front, top and back edge of **Divider Panel Bottom (10)** and front and back edge of **Top Panel (12)**.

5.3 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the left side of **Side Rail (13)**, then tighten using screwdriver.

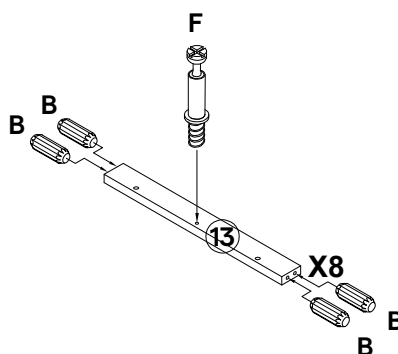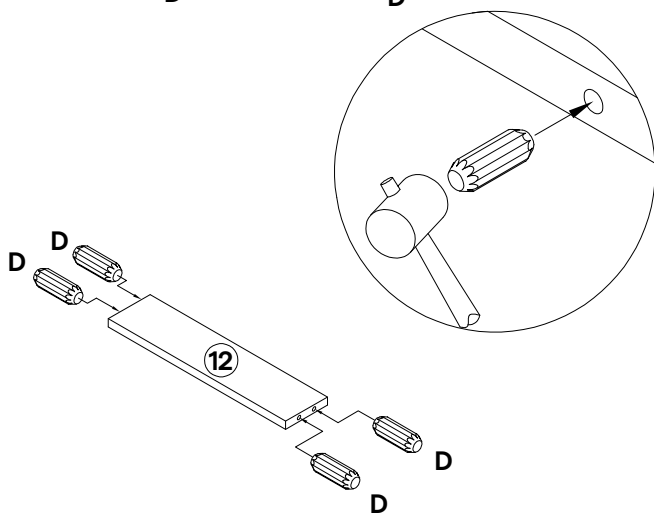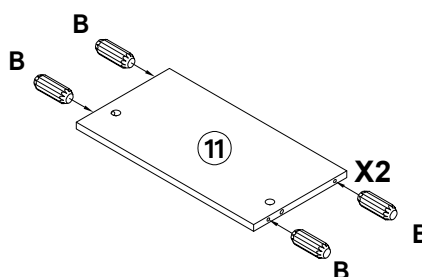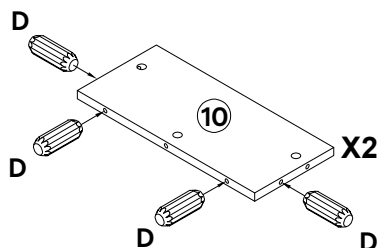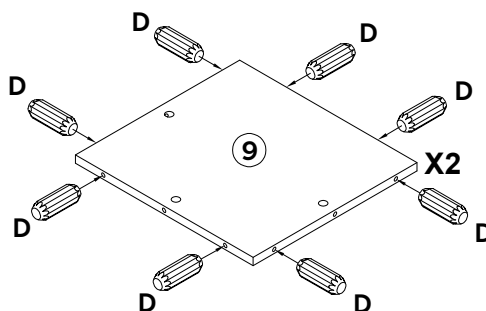


HARDWARE

- E** 5857 Bolt 7 x 64mm x2
J Cam Lock 15/10 Titus x4

COMPONENTS

- 3** Back Panel Left x1
4 Back Panel Right x1

6.1 Connect **Back Panel Left (3)** to **Back Panel Right (4)** with **Bolt (E)** then insert **Cam Lock (J)** into the corresponding holes.

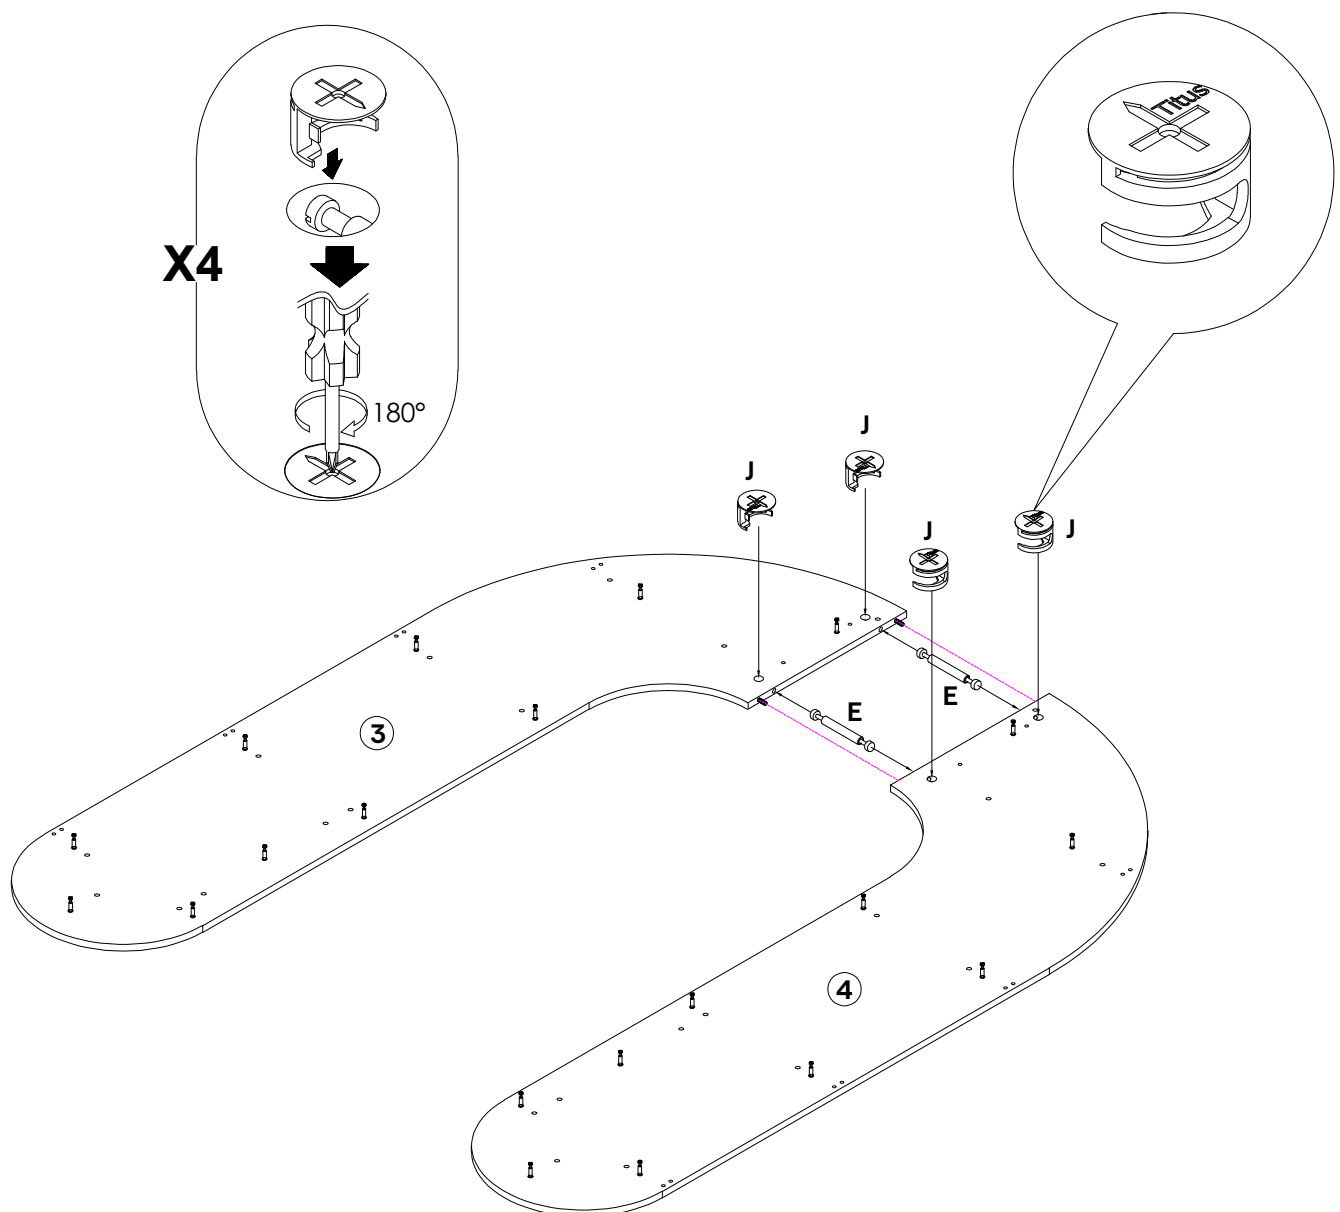

HARDWARE

G Cam Lock 15/12 x8

COMPONENTS

5 Bottom Panel x1





6 Shelf Panel Bottom x1

7 Shelf Panel Center x1

8 Shelf Panel Top x1

13 Side Rail x8

7.1 Connect **Side Rail (13)** to **Bottom Panel (5)**, **Shelf Panel Bottom (6)**, **Shelf Panel Center (7)** and **Shelf Panel Top (8)** by inserting **Cam Lock (G)** into the corresponding holes then tighten using screwdriver.

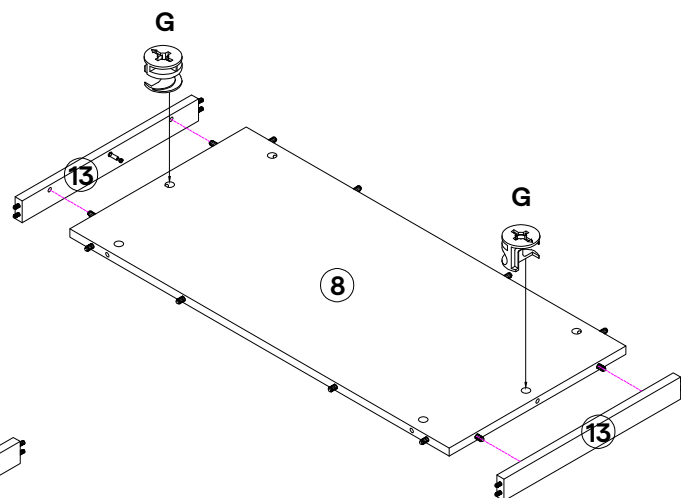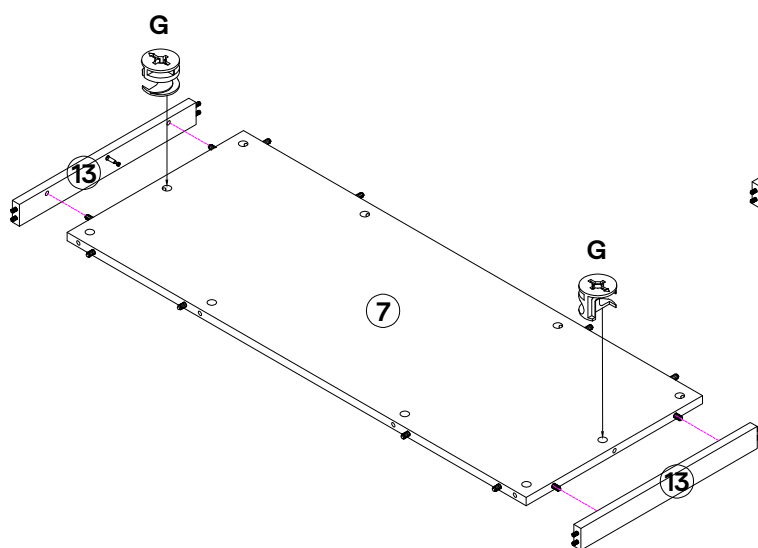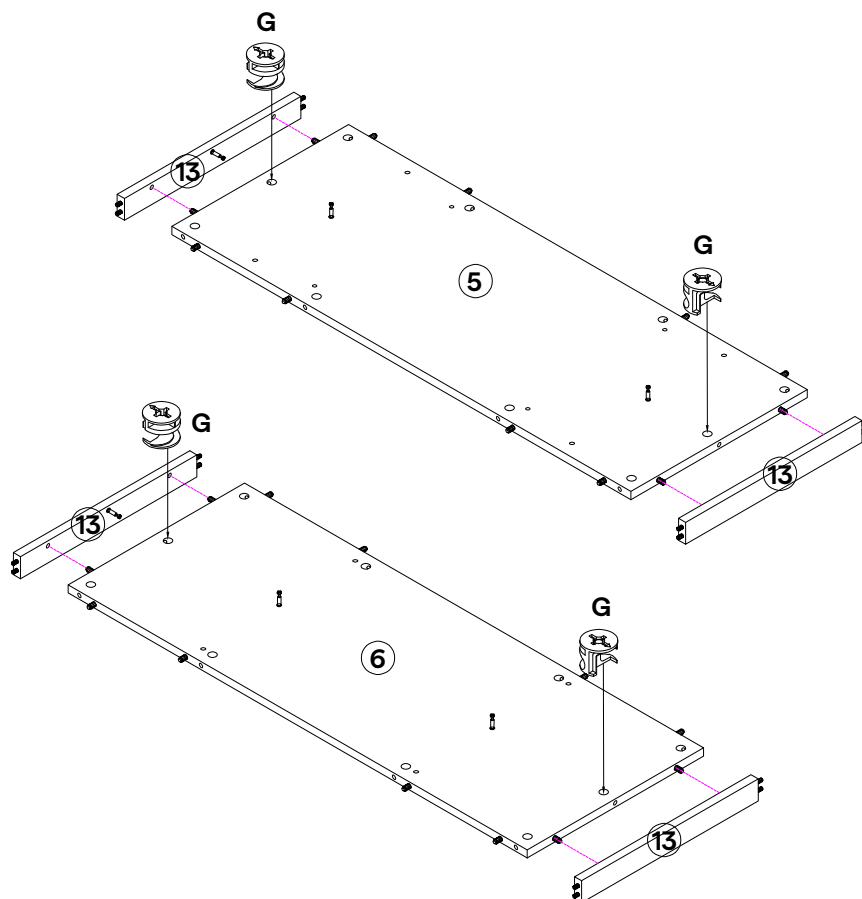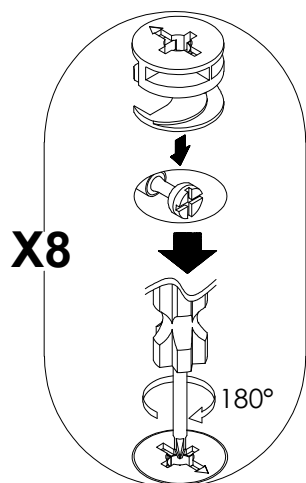

HARDWARE



G Cam Lock 15/12 **x2**

COMPONENTS

6 Shelf Panel Bottom **x1**

9 Divider Panel **x2**

8.1 Connect **Divider Panel (9)** to **Shelf Panel Bottom (6)** by inserting **Cam Lock (G)** into the corresponding holes then tighten using screwdriver.

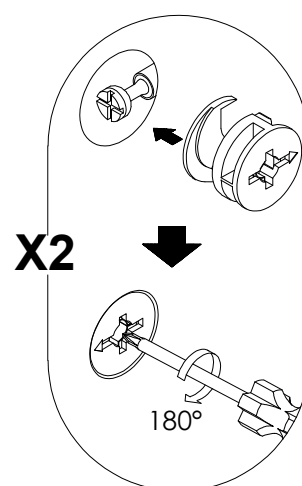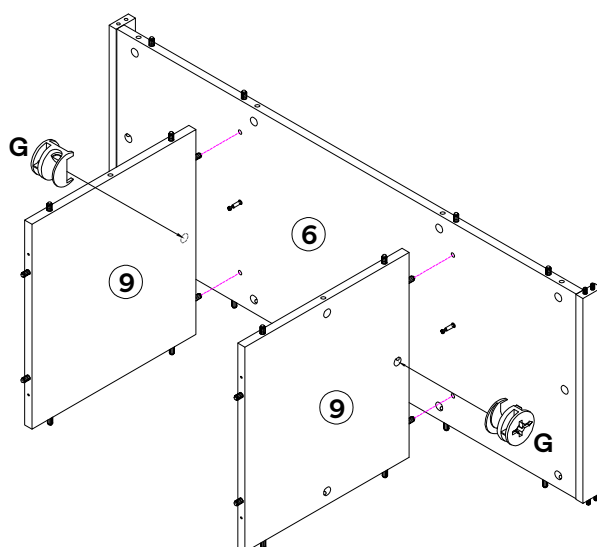

HARDWARE

A Screw M6 x 40mm x4

COMPONENTS


5 Bottom Panel x1

9 Divider Panel x2

TOOLS

M Allen Key

9.1 Secure **Bottom Panel (5)** to **Divider Panel (9)** with **Screw (A)** by using the provided **Allen Key (M)**.

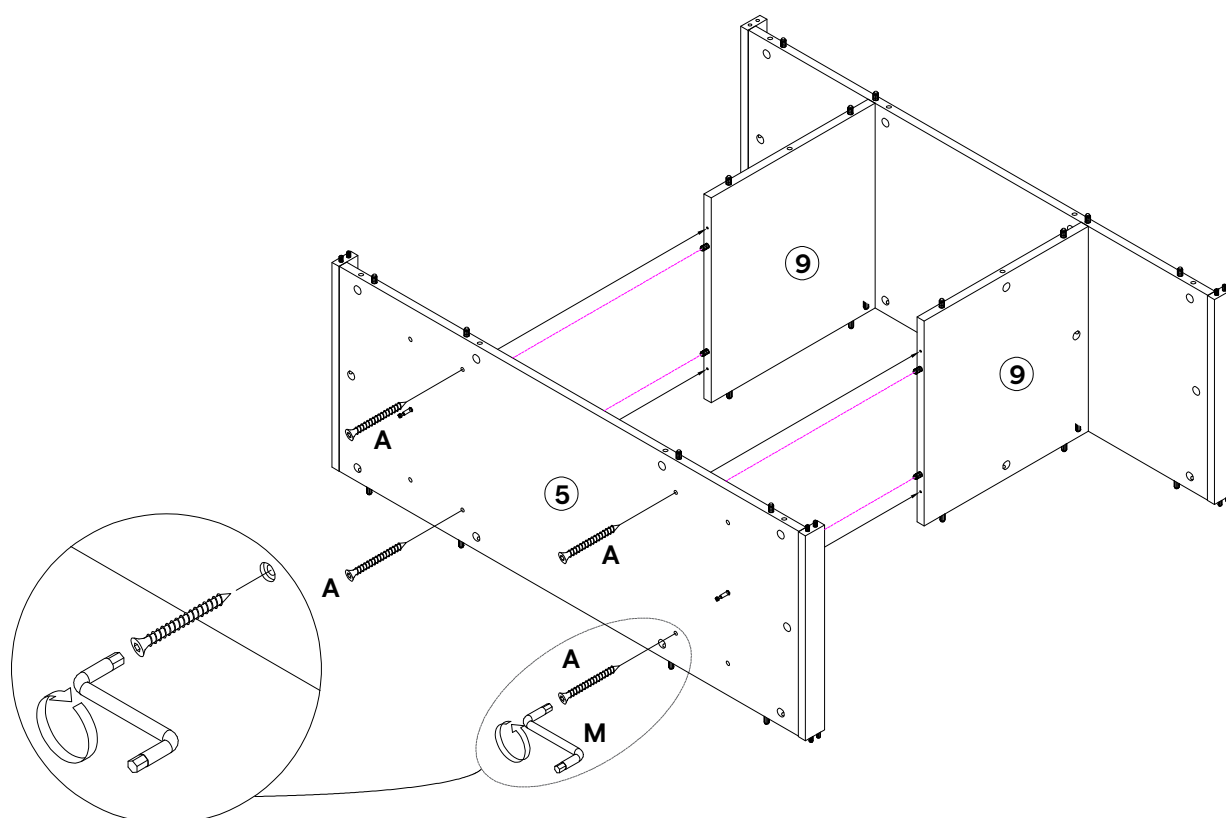

HARDWARE

G Cam Lock 15/12 **x2**



COMPONENTS

5 Bottom Panel **x1**

6 Shelf Panel Bottom **x1**

10 Divider Panel Bottom **x2**

10.1 Connect **Divider Panel Bottom (10)** to **Bottom Panel (5)** by inserting **Cam Lock (G)** into the corresponding holes then tighten using screwdriver.

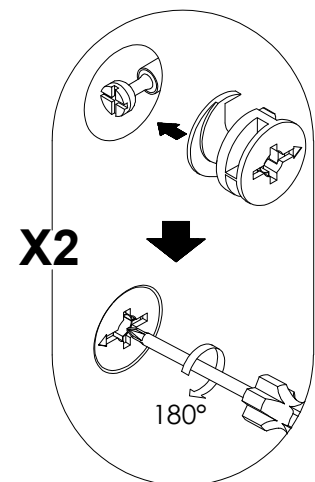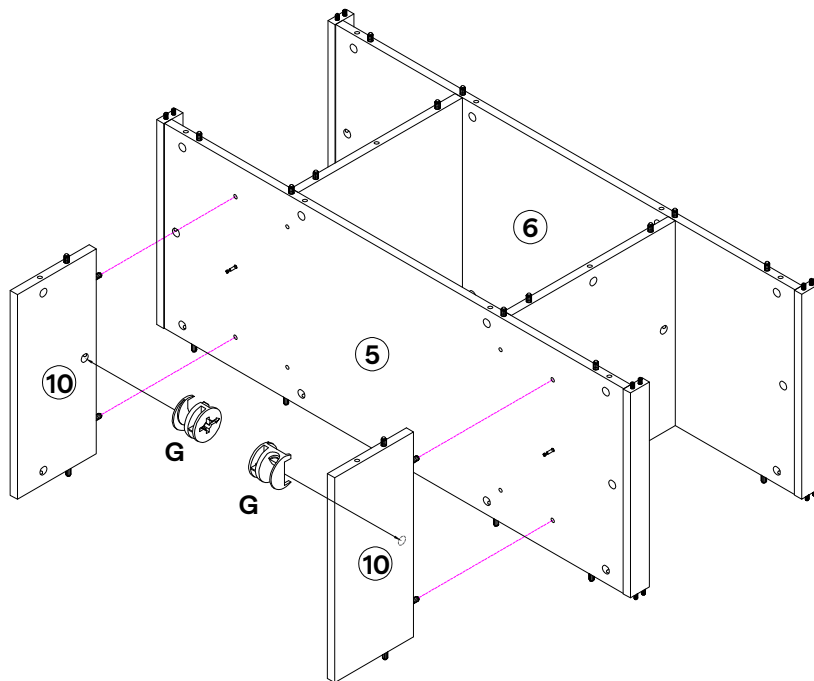

HARDWARE

G Cam Lock 15/12 x12

COMPONENTS

3 Back Panel Left x1

4 Back Panel Right x1

5 Bottom Panel x1


6 Shelf Panel Bottom x1

9 Divider Panel x2

10 Divider Panel Bottom x2

13 Side Rail x4

11.1 Connect **Bottom Panel (5)**, **Shelf Panel Bottom (6)**, **Divider Panel (9)**, **Divider Panel Bottom (10)** and **Side Rail (13)** to **Back Panel Left (3)** and **Back Panel Right (4)** by inserting **Cam Lock (G)** into the corresponding holes then tighten using screwdriver.

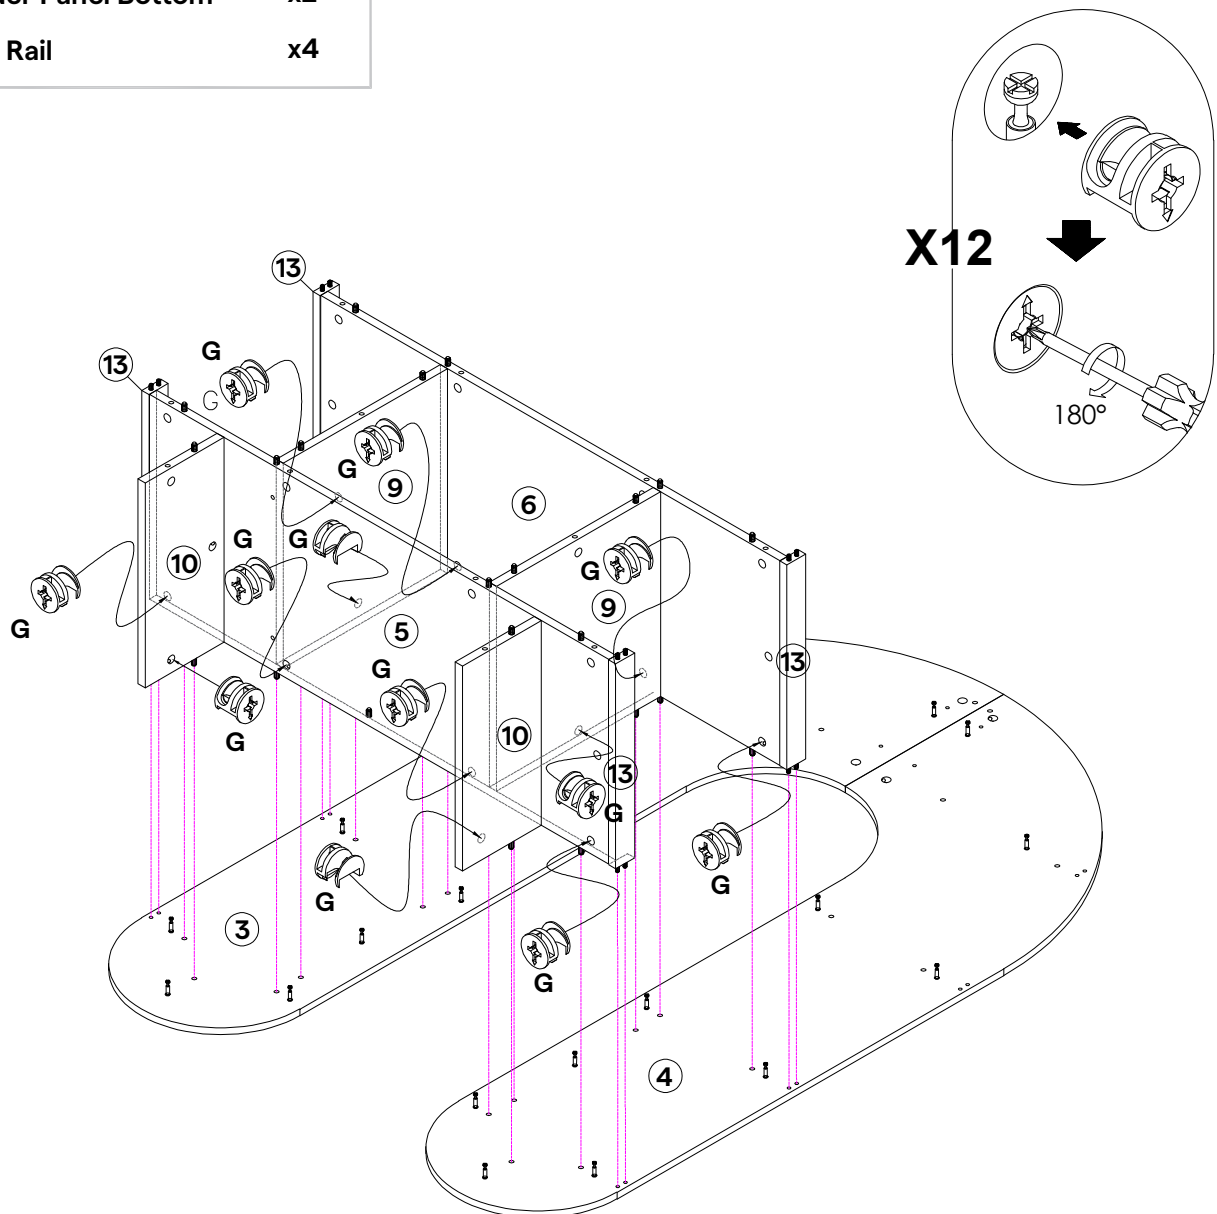

HARDWARE

G Cam Lock 15/12 x4

COMPONENTS


3 Back Panel Left x1

4 Back Panel Right x1

7 Shelf Panel Center x1

13 Side Rail x2

12.1 Connect **Shelf Panel Center (7)** and **Side Rail (13)** to **Back Panel Left (3)** and **Back Panel Right (4)** by inserting **Cam Lock (G)** into the corresponding holes.



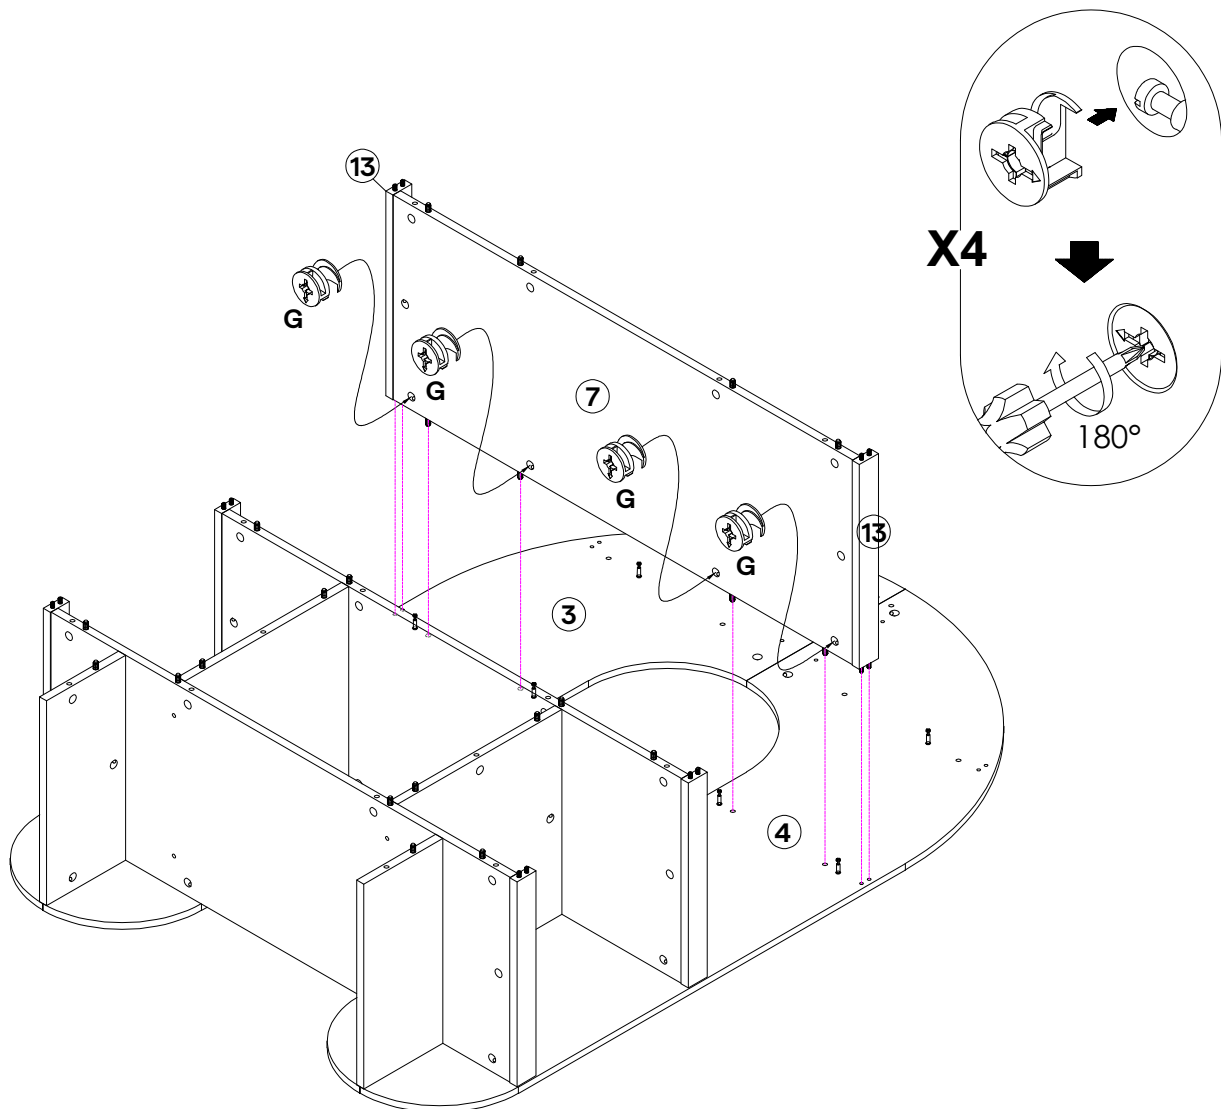


HARDWARE**G** Cam Lock 15/12 x2**H** Cam Lock 15/10 x2**COMPONENTS****3** Back Panel Left x1**4** Back Panel Right x1**8** Shelf Panel Top x1**11** Divider Panel Top x2**12** Top Panel x1**13** Side Rail x2

13.1 Connect **Shelf Panel Top (8)** and **Side Rail (13)** to **Back Panel Left (3)** and **Back Panel Right (4)** by inserting **Cam Lock (G)** into the corresponding holes then tighten using screwdriver.

13.2 Connect **Divider Panel Top (11)** to **Back Panel Left (3)** and **Back Panel Right (4)** by inserting **Cam Lock (H)** into the corresponding holes then tighten using screwdriver.

13.3 Connect **Top Panel (12)** to **Back Panel Left (3)** and **Back Panel Right (4)**.

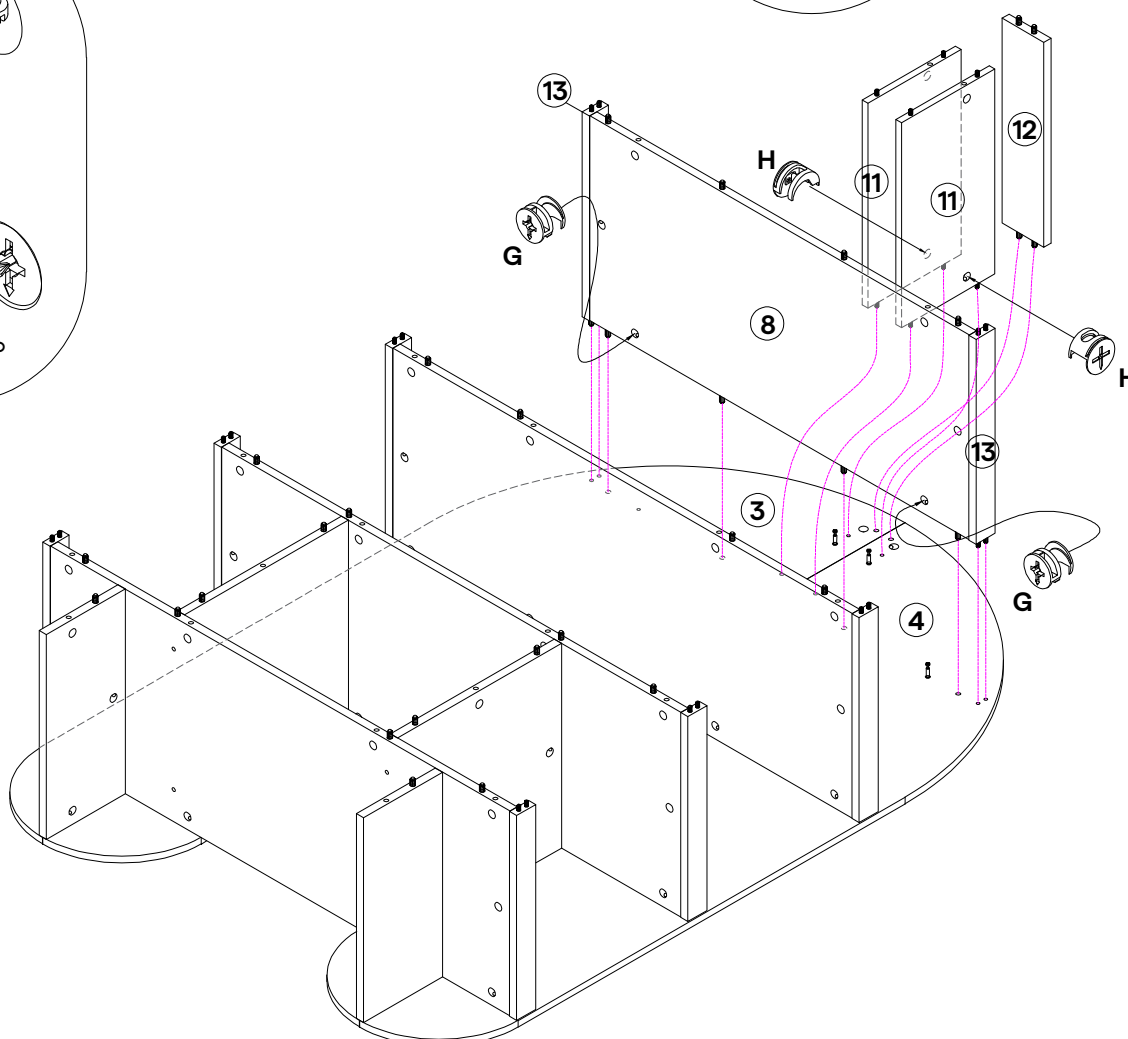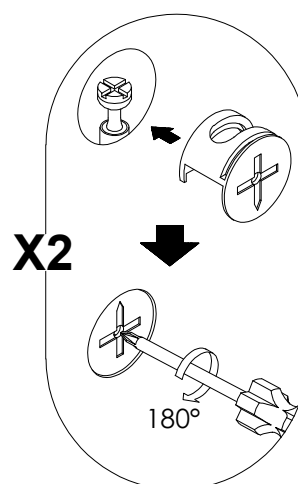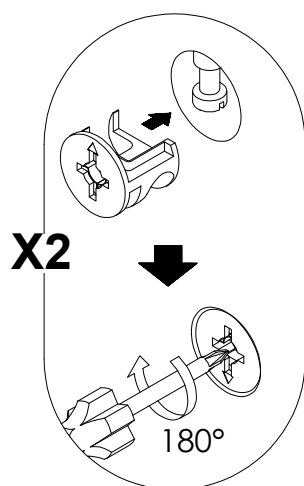


HARDWARE

- E** 5857 Bolt 7x 64mm x2
J Cam Lock 15/10 Titus x4

COMPONENTS


- 1** Front Panel Left x1
2 Front Panel Right x1

14.1 Connect **Front Panel Left (2)** to **Front Panel Right (2)** with **Bolt (E)** then by inserting **Cam Lock (J)** into the corresponding holes then tighten using screwdriver.

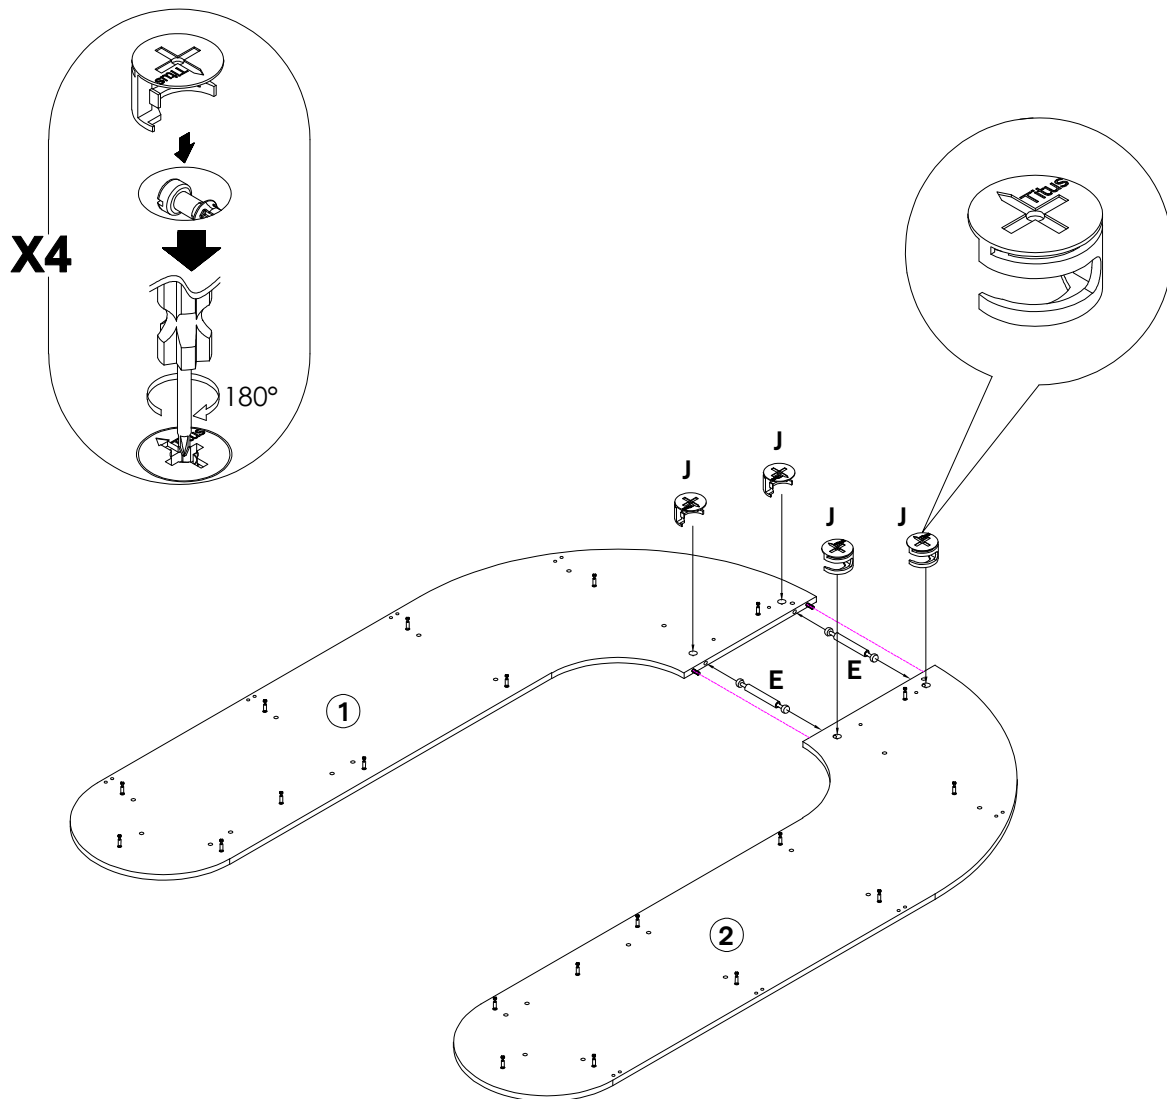

HARDWARE**G** Cam Lock 15/12 x18**H** Cam Lock 15/10 x2**COMPONENTS****1** Front Panel Left x1**2** Front Panel Right x1**5** Bottom Panel x1**6** Shelf Panel Bottom x1**7** Shelf Panel Center x1**8** Shelf Panel Top x1**9** Divider Panel x2**10** Divider Panel Bottom x2**11** Divider Panel Top x2**12** Top Panel x1**13** Side Rail x8

15.1 Connect **Front Panel Left (1)** and **Front Panel Right (2)** to **Bottom Panel (2)**, **Bottom Panel (5)**, **Shelf Panel Bottom (6)**, **Shelf Panel Center (7)**, **Shelf Panel Top (8)**, **Divider Panel (9)**, **Divider Panel Bottom (10)**, **Divider Panel Top (11)** and **Top Panel (11)** by inserting **Cam Lock (G)** and **Cam Lock (H)** into the corresponding holes then tighten using screwdriver.

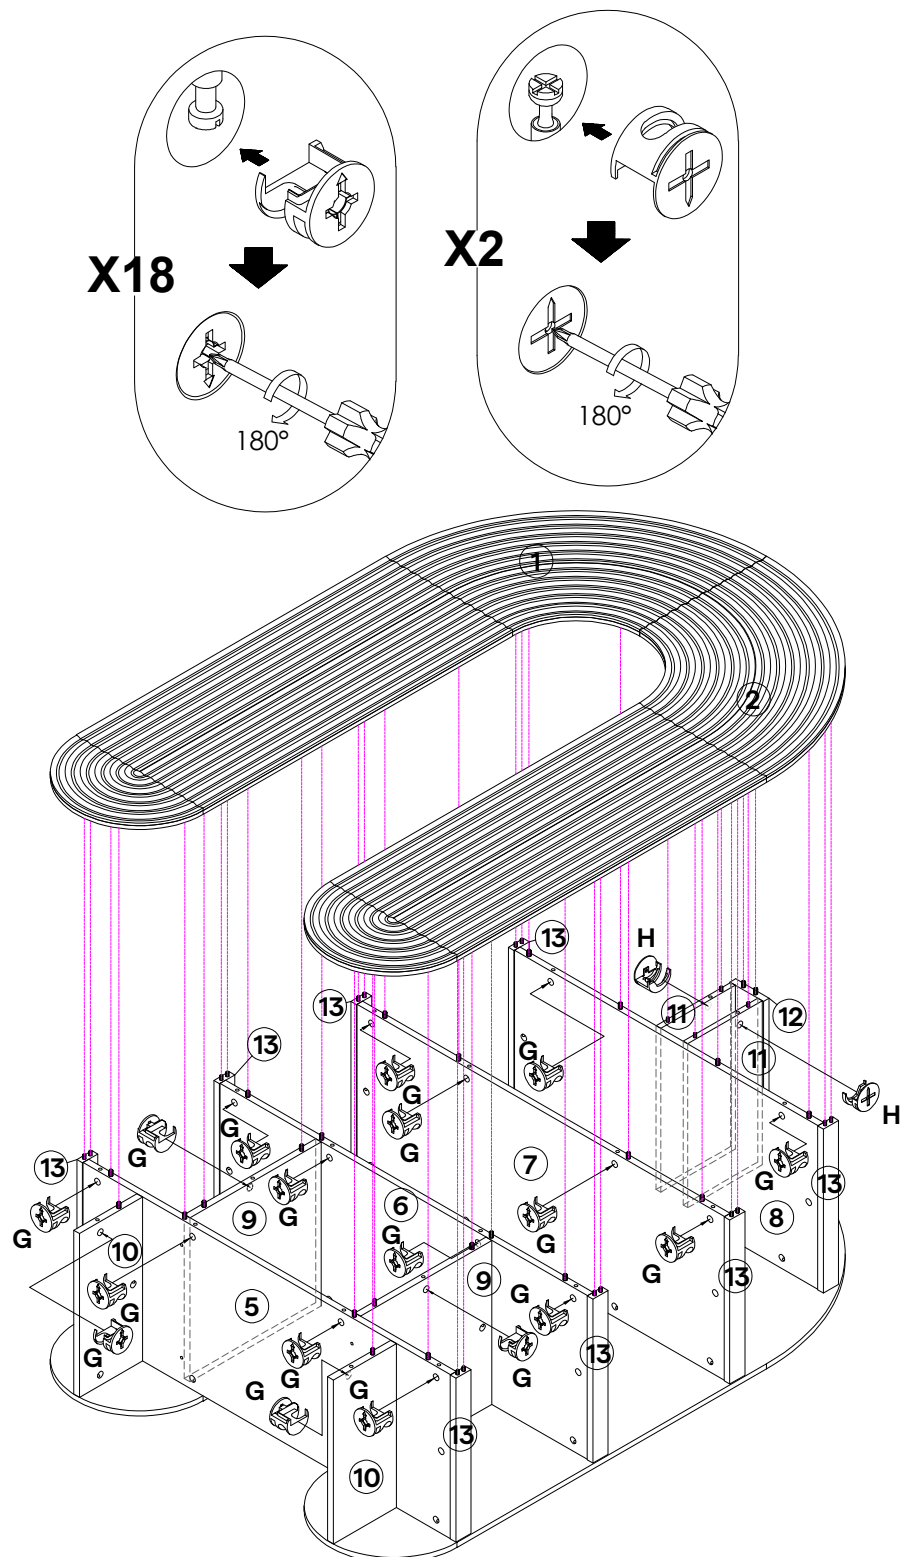

HARDWARE


L Round Sticker x5

COMPONENTS

9 Divider Panel x1


11 Divider Panel Top x1

16.1 Attach **Round Sticker (L)** to cam lock on **Divider Panel (9)** and **Divider Panel Top (11)**.

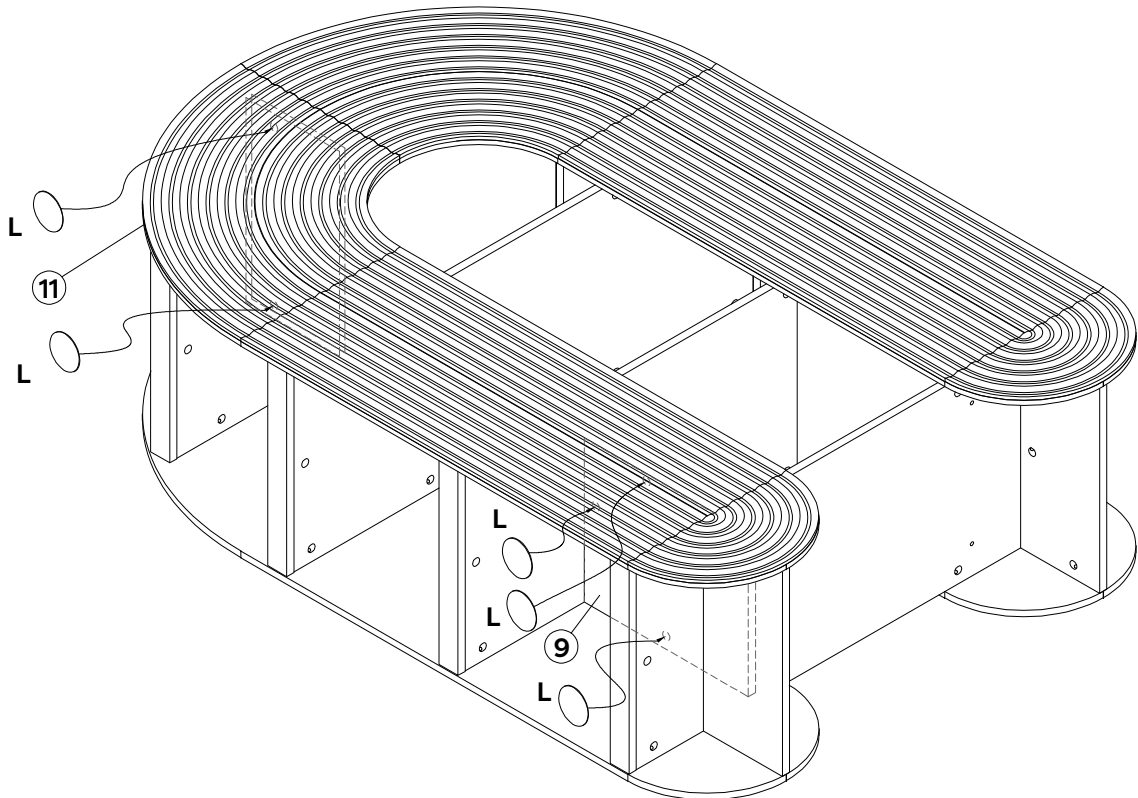


HARDWARE**L** Round Sticker x5**COMPONENTS****9** Divider Panel x1**11** Divider Panel Top x1

17.1 Attach **Round Sticker (L)** to cam lock on **Divider Panel Panel (9)** and **Divider Panel Top (11)**.

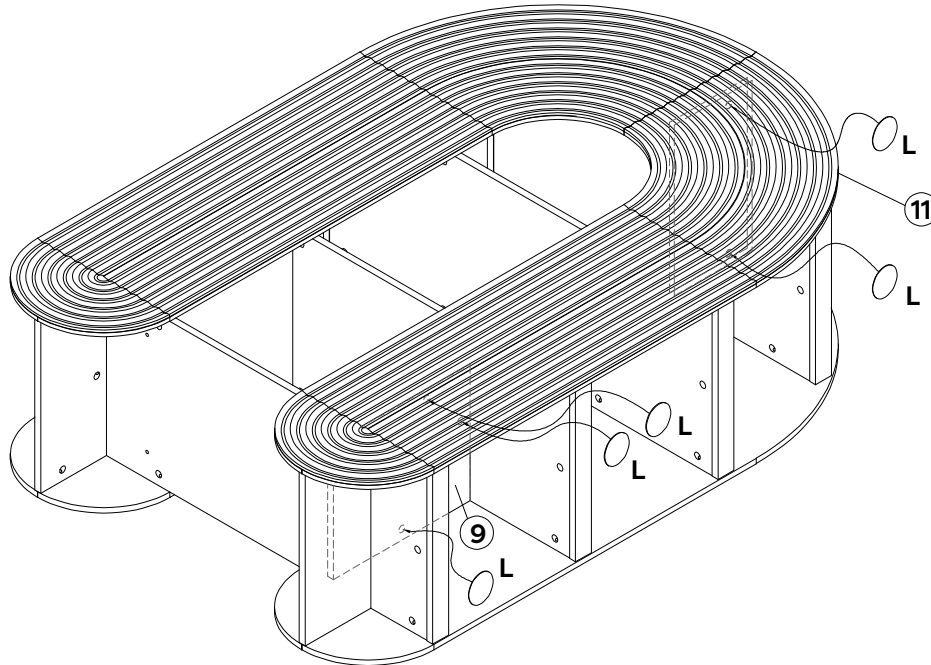

HARDWARE**K** Plastic Leg Stud **x4****COMPONENTS****10** Divider Panel Bottom **x2**

18.1 Insert **Plastic Leg Stud (K)** into **Divider Panel Bottom (10)**, position as the image shown below.

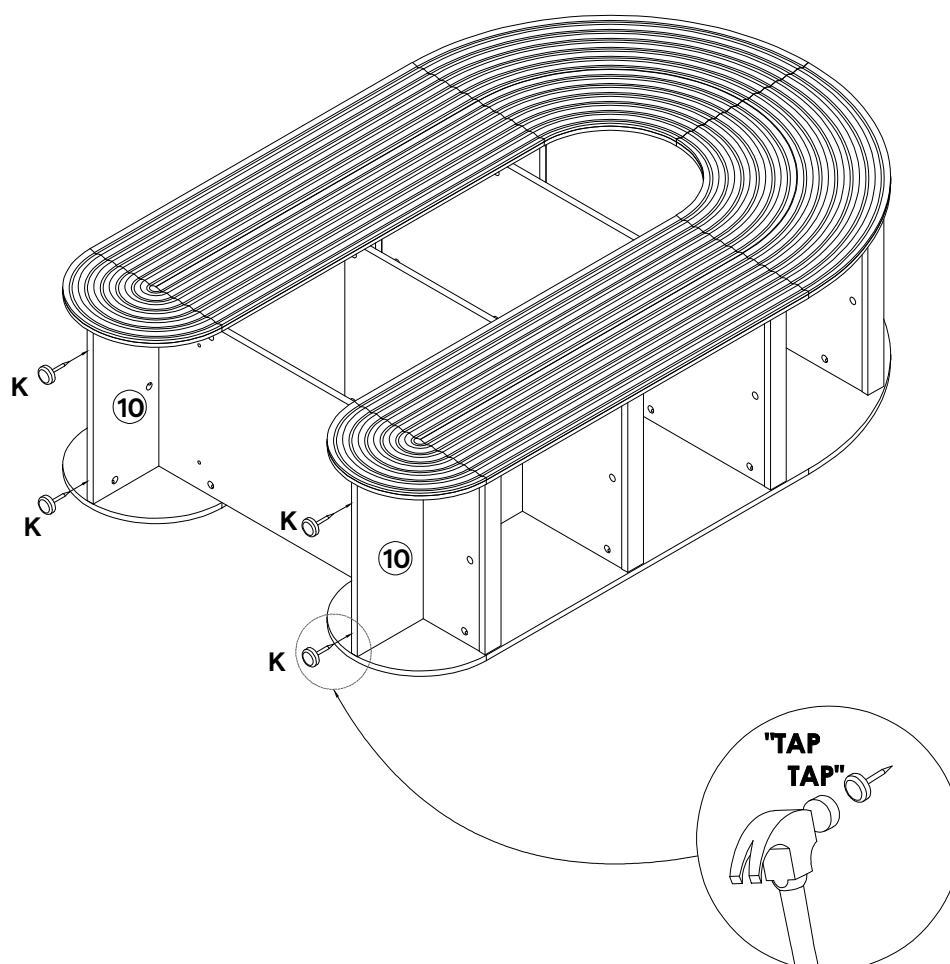


Great job!

Your bookshelf assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

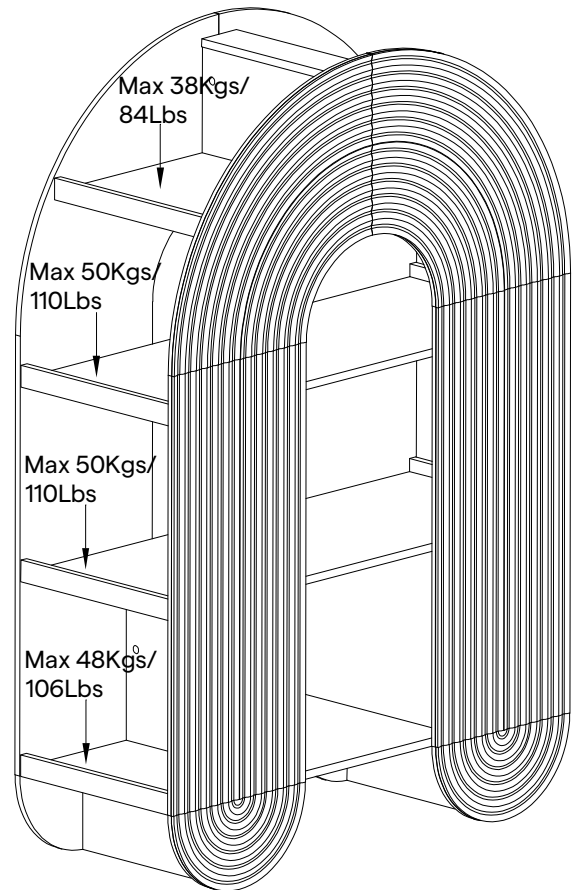

CONNECT WITH US!

Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com