


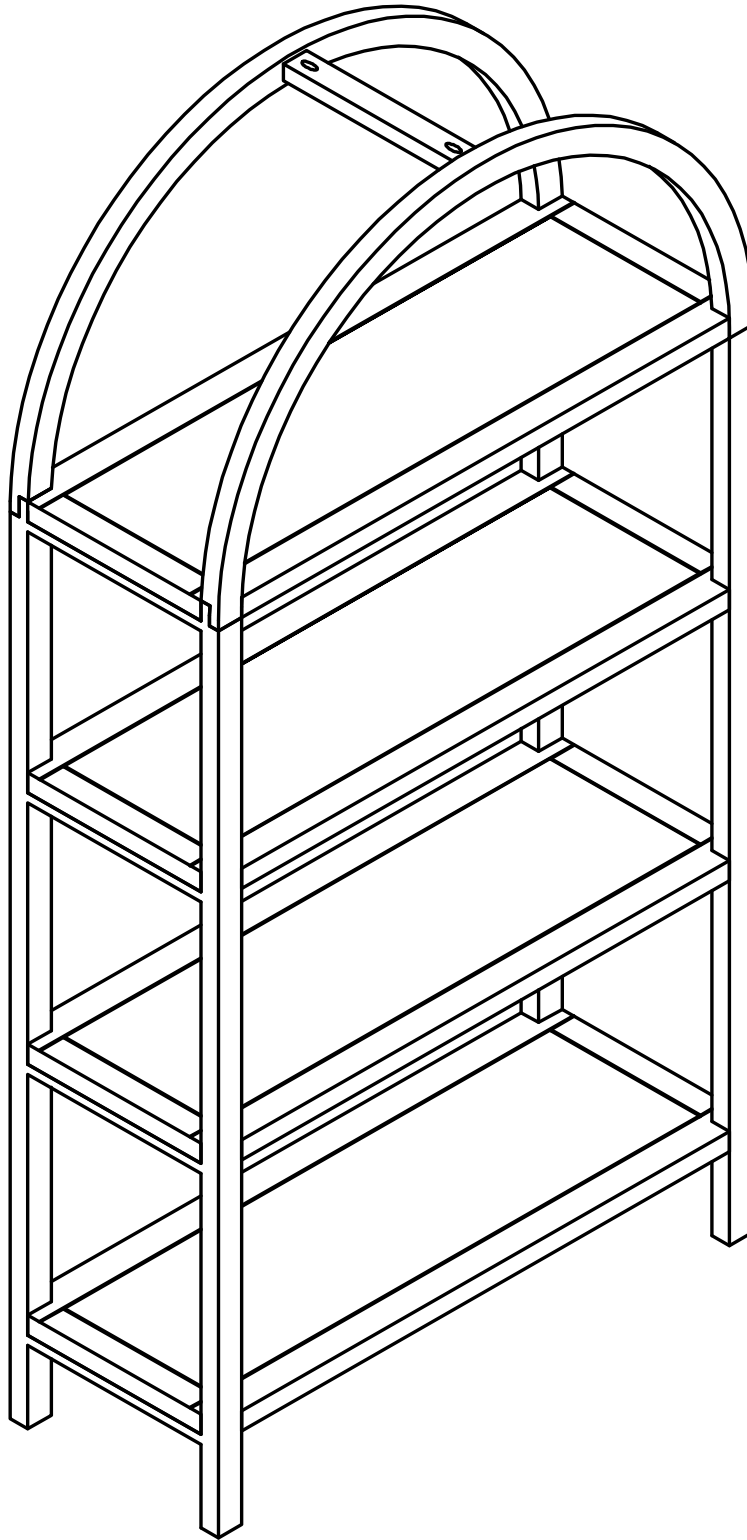

ASSEMBLY INSTRUCTIONS

36" Arch Bookcase

EEI-7318 / V1.04.10.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.



Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Bolt 1/4 × 30mm	x32
B		Spring Washer M6	x2
C		Flat Washer M6	x1
D		Allen Key	x1
E		Screw M4 x 35mm	x3
F		Metal Plate 73 x 20mm	x1
G		Anchor Ø9 × 35mm	x1
H		Bolt 1/4 × 15mm	x1

WHAT YOU NEED:


  **Phillips Head Screwdriver**

+ Drilling Machine

+ Hammer

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

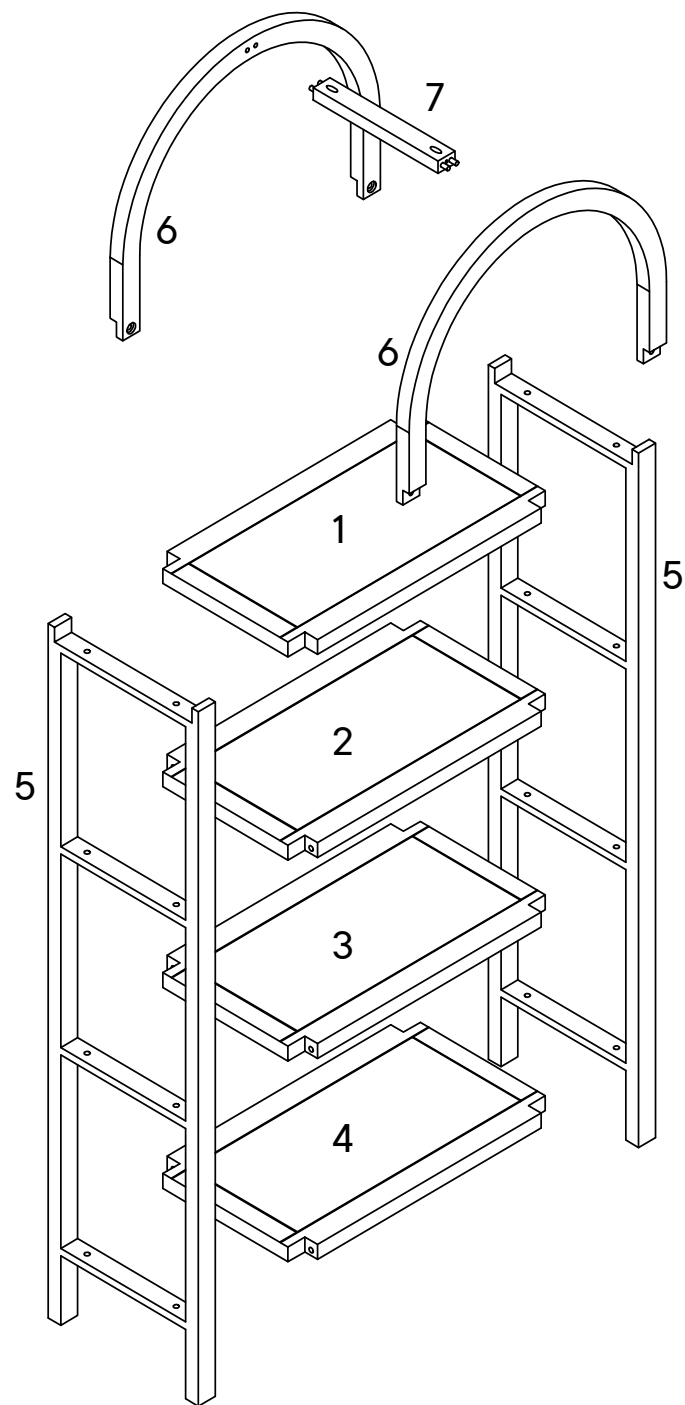

1	Top Shelf	x1	4	Bottom Shelf	x1	7	Stretcher	x1
2	Upper Shelf	x1	5	Leg	x2			
3	Lower Shelf	x1	6	Curve	x2			

HARDWARE

E Screw M4 × 35mm x2

COMPONENTS

6 Curve x2


7 Stretcher x1

TOOLS

+ Phillips Head Screwdriver x1

1.1 Assembly the Stretcher (7) into two Curves (6) with the Screw (E), using a Screwdriver.

NOTE: Tools needed for installation are not included.

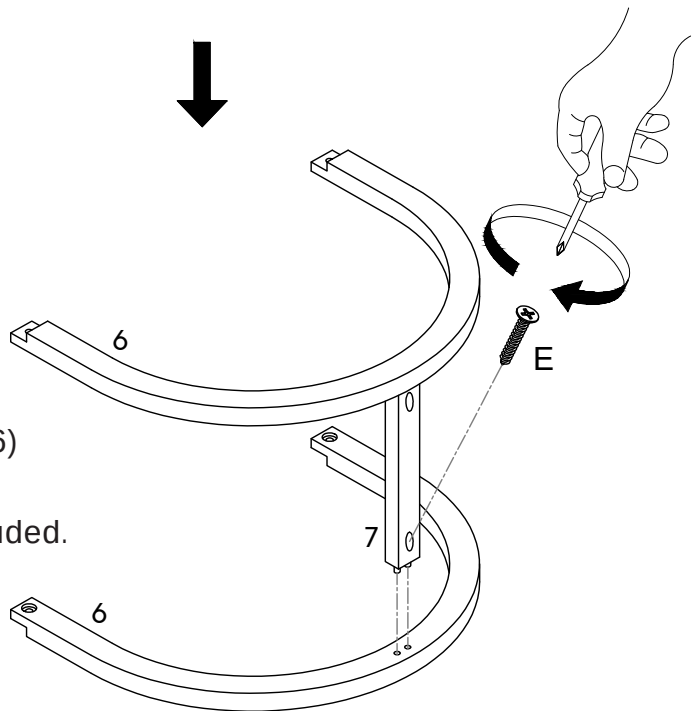

STEP 02

HARDWARE

A Bolt 1/4 × 30mm x4

B Spring Washer M6 x4


C Flat Washer M6 x4

COMPONENTS

1 Top Shelf x1

TOOLS

D Allen Key x1

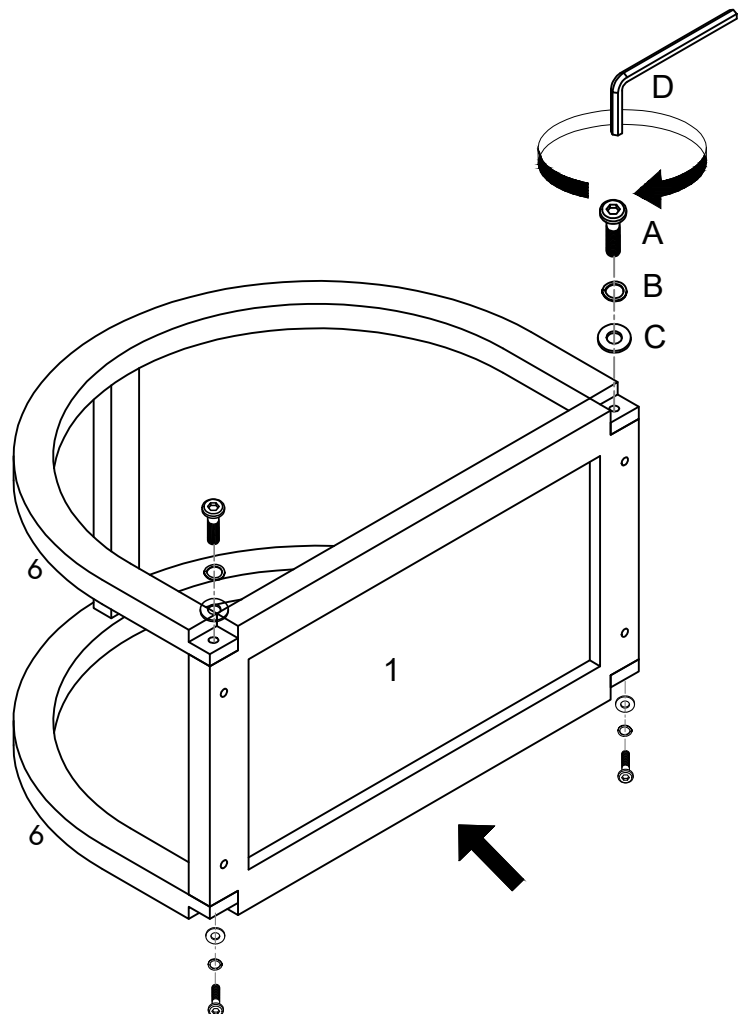

1.2 Insert the Top Shelf (1) into the Curves (6) with Bolt (A), Spring Washer (B), Flat Washer (C), using Allen Key (D).

HARDWARE


- A** Bolt 1/4 x 30mm x2
- B** Spring Washer M6 x2
- C** Flat Washer M6 x2

COMPONENTS

- 5** Leg x1

TOOLS

- D** Allen Key x1

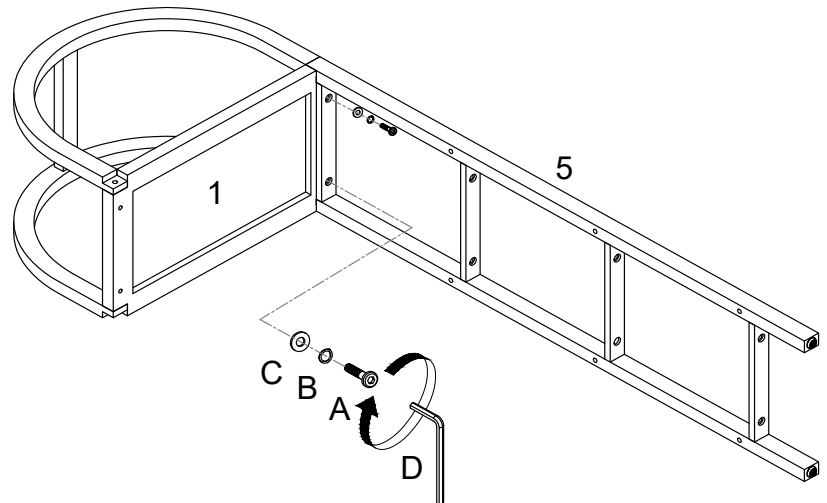

3.1 Assembly the Leg (5) into the Top Shelf (1) with Bolt (A), Spring Washer (B), Flat Washer (C) using the Allen Key (D) as shown.


STEP 04

HARDWARE

- A** Bolt 1/4 x 30mm x14
- B** Spring Washer M6 x14
- C** Flat Washer M6 x14

COMPONENTS

- 2** Upper Shelf x1
- 3** Lower Shelf x1
- 4** Bottom Shelf x1
- 5** Leg x2

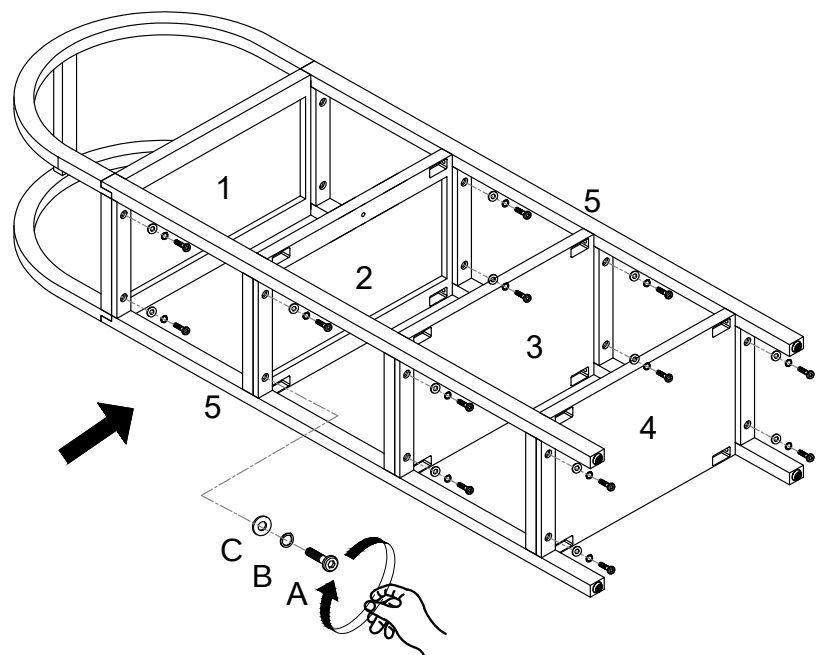

4.1 Assembly two Legs (5) into the Upper Shelf (2), Lower Shelf (3), Bottom Shelf (4) with Bolt (A), Spring Washer (B), Flat Washer (C) using Hand. Do not tighten the Bolts at this step.

HARDWARE

A Bolt 1/4 x 30mm x12

B Spring Washer M6 x12

C Flat Washer M6 x12

COMPONENTS

2 Upper Shelf x1


3 Lower Shelf x1

4 Bottom Shelf x1

5 Legs x2

TOOLS

D Allen Key x1

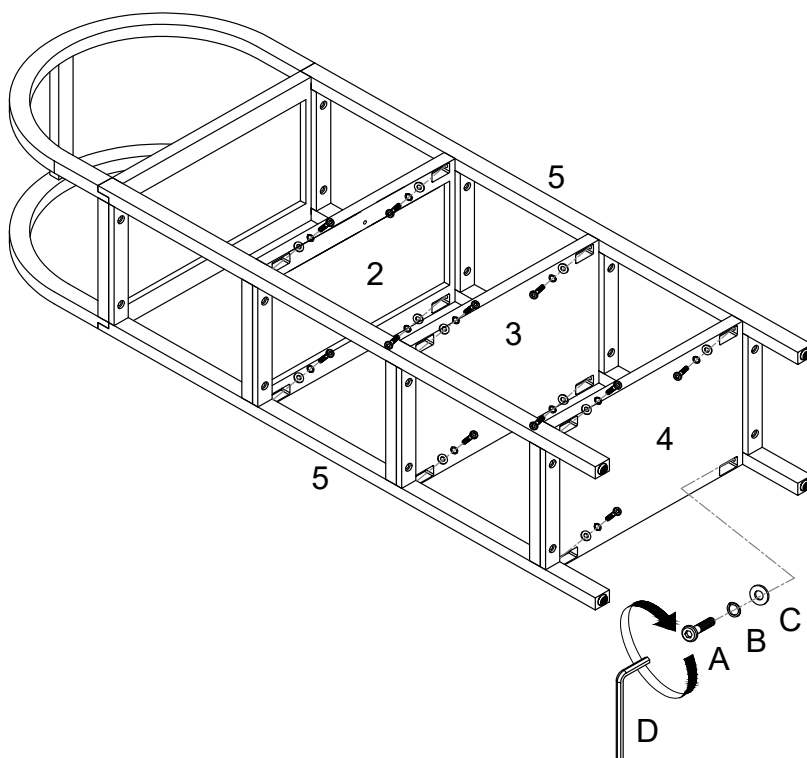

5.1 Assembly the Upper Shelf (2), Lower Shelf (3), Bottom Shelf (4) to two Legs (5) with Bolt (A), Spring Washer (B), Flat Washer (C), using Allen Key (D) as shown. Then, using Allen Key (D) to tighten all Bolts at Step 4.

STEP 06

HARDWARE

B Spring Washer M6 x1


C Flat Washer M6 x1

H Bolt 1/4 x 15mm x1

F Metal Plate 73 x 20mm x1

TOOLS



D Allen Key x1

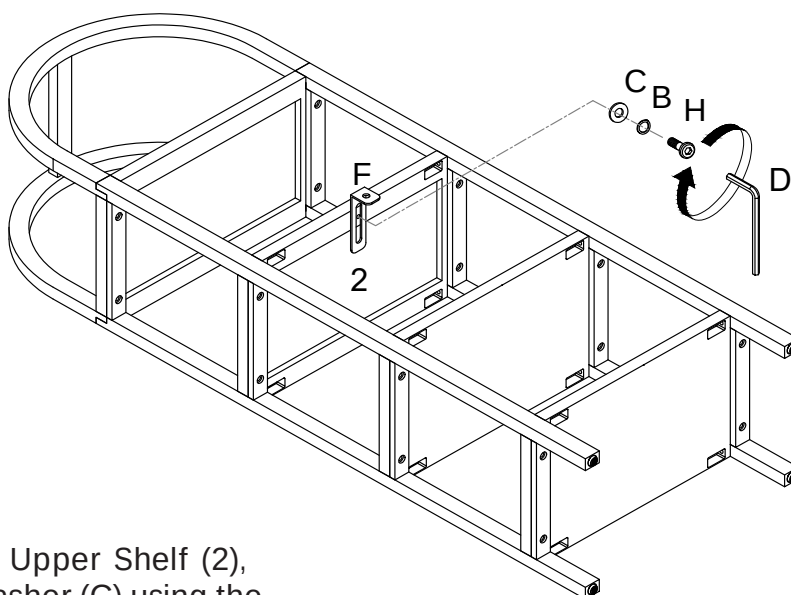

6.1 Assembly the Metal Plate (F) into the Upper Shelf (2), with Bolt (H), Spring Washer (B), Flat Washer (C) using the Allen Key (D) as shown.

HARDWARE

G Anchor Ø 9 x 35mm x1

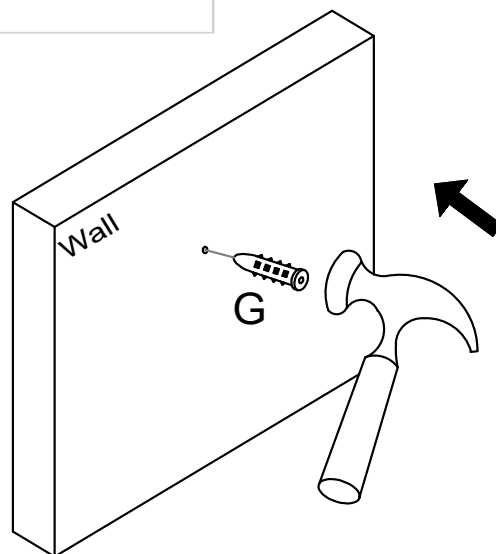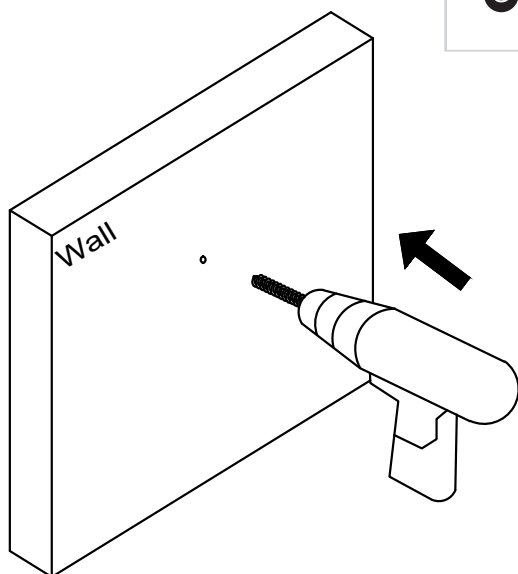

7.1 Using a bubble level, adjust the Leg pins leveler if needed.

7.2 Depending on the type of wall in the room, place the Bookcase on the wall in its desired location. Ensure it is level and mark the location of the mounting hole in the Metal Plate (F) on the wall. Pre-drill hole for the Anchor (G) at the marked hole locations using a drill and using a hammer to tap it into the wall.

NOTE: Tools needed for installation are not included.

STEP 08


HARDWARE

F Metal Plate 73 x 20mm x1

C Flat Washer M6 x1

E Screw M4 x 35mm x1

8.1 Place the Bookcase back over the hole on the wall, insert Screw (E), Flat Washer (C) into the Anchor (G) using a Screwdriver.

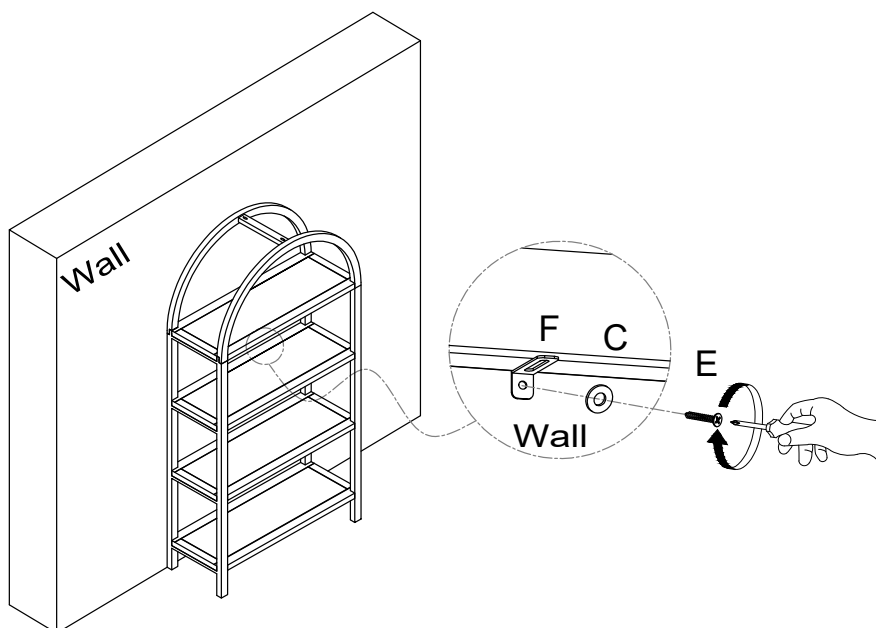


Great job!

Bookcase assembly is completed and ready for using.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

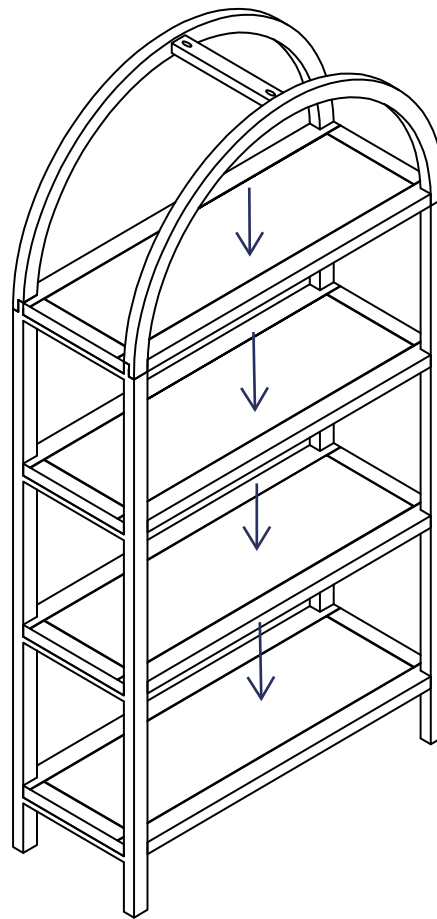

Max 30Kgs
(66Lbs)

Max 30Kgs
(66Lbs)

Max 30Kgs
(66Lbs)

Max 30Kgs
(66Lbs)



CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com