


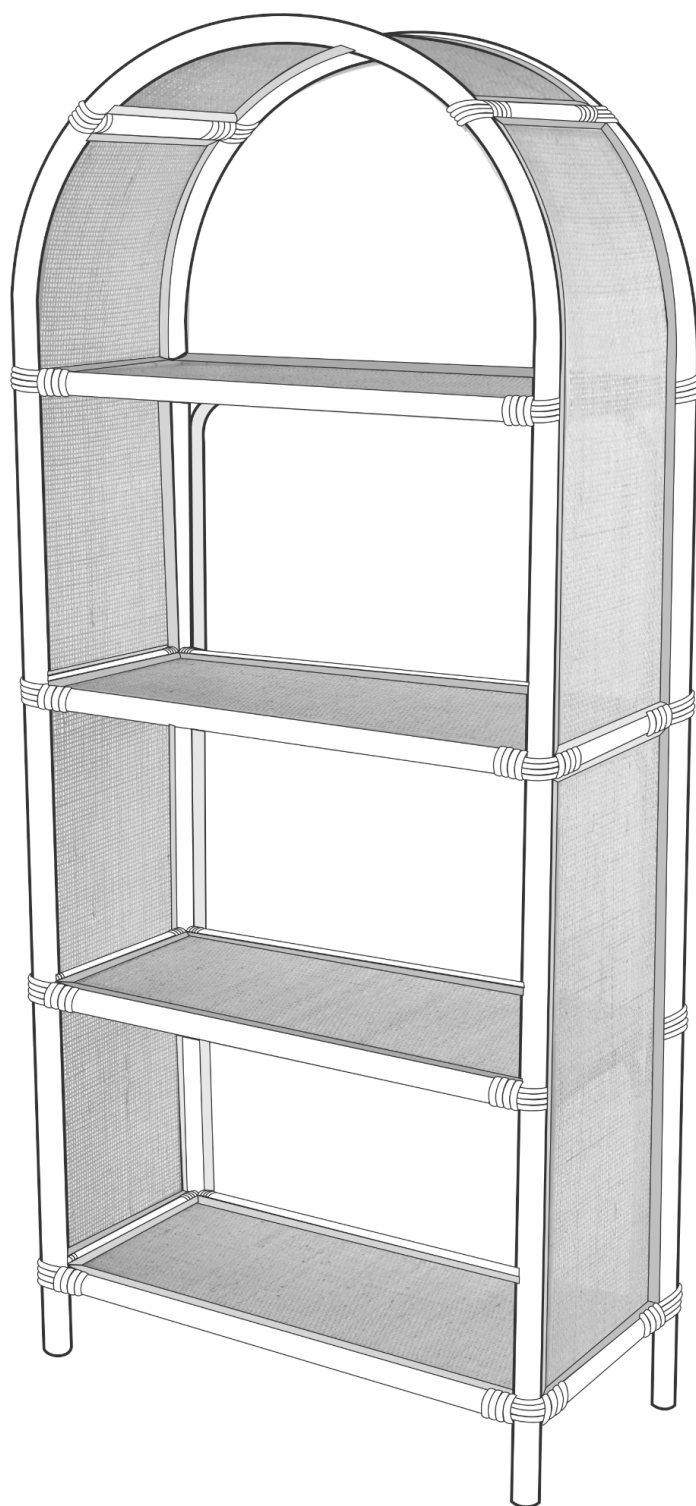

ASSEMBLY INSTRUCTIONS

Rack

EEl-7363 / V0.05.28.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Bracket	X2
B		Screw M7.5 x 15mm	x2
C		Fischer S8 30mm	x2
D		Screw M7.5 x 30mm	x2
E		Stainless Wire 200mm	X1

WHAT YOU NEED:

  **Screwdriver Phillips Head**

FURNITURE COMPONENTS INCLUDED IN THE BOX:



1 Rattan Cabinet x1

STEP 01



1. Secure the provided mounting bracket (A) to the rattan cabinet (1) using screws (B) included in the kit.
2. Ensure the bracket is firmly attached before proceeding.

HARDWARE

A	Bracket	x1
B	Screw M7.5 x 15mm	x2

COMPONENT


1	Rattan Cabinet	x1
----------	----------------	----

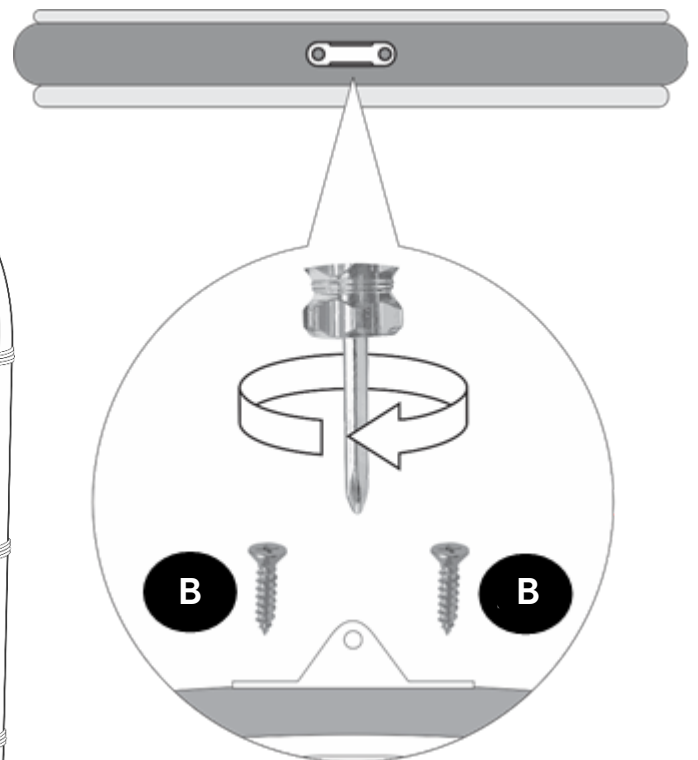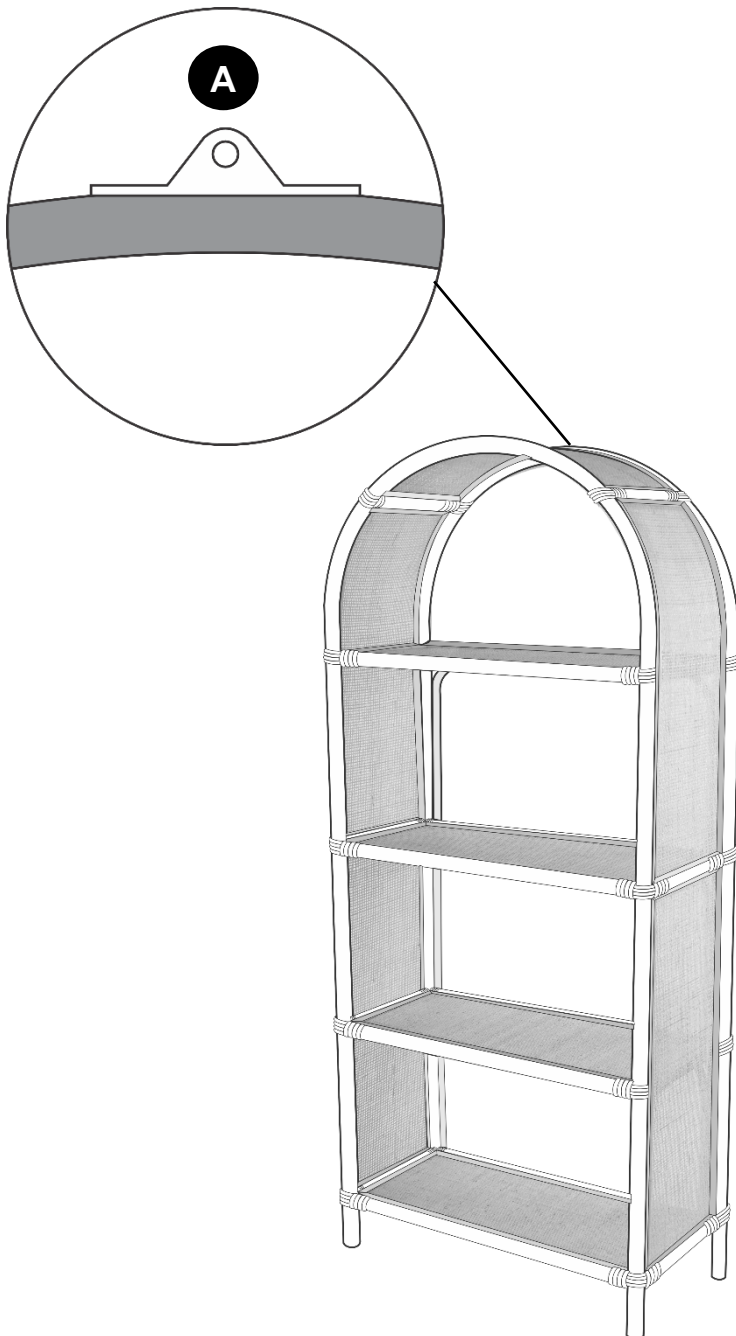


STEP 02

HARDWARE



- | | | |
|----------|-----------------|----|
| A | Bracket | x1 |
| C | Fischer S8 30mm | x2 |

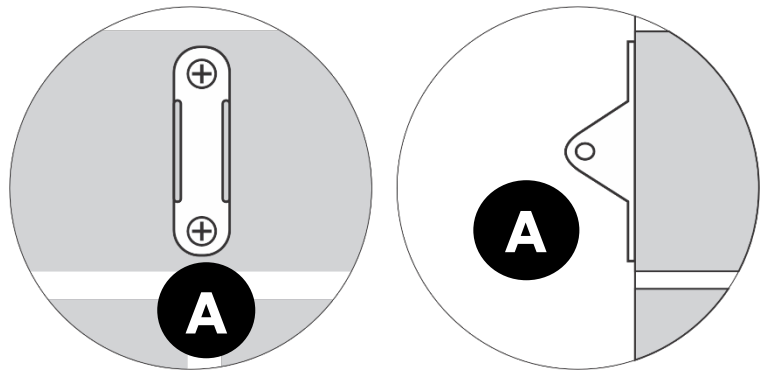

The bracket (A) can be mounted on the wall in either a vertical or horizontal position.

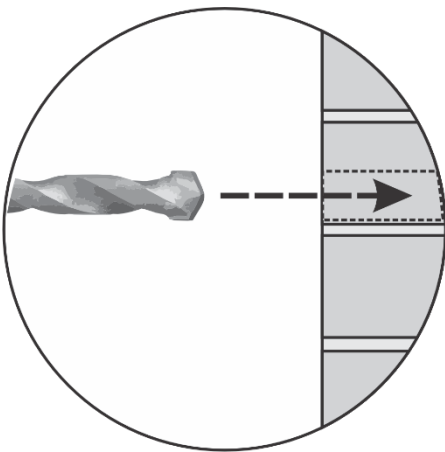

To install the Fischer plug (C), drill a hole in the wall using a 3/8" wall drill to a depth of 3cm.

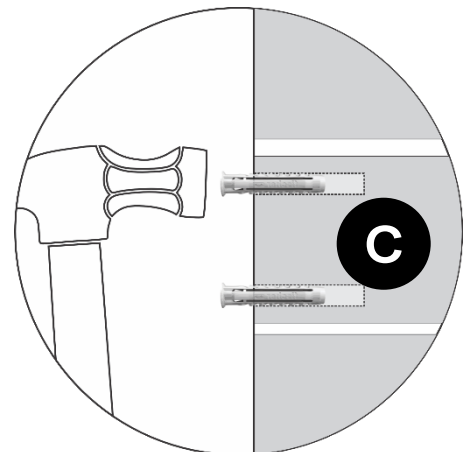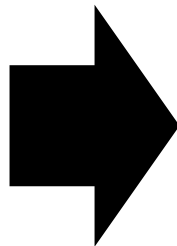

Tap with a hammer to insert the Fischer plug (C) into the wall.


STEP 03

HARDWARE


- | | | |
|----------|---------------------|----|
| D | Screw M7.5 x 15mm | x2 |
| E | Stainless Wire 200m | x1 |

COMPONENT


- | | | |
|----------|----------------|----|
| 1 | Rattan Cabinet | x1 |
|----------|----------------|----|

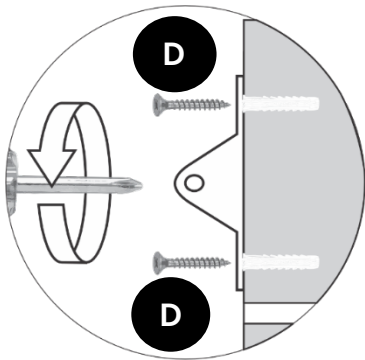

Once the Fischer anchors are installed, insert the **M7.5 x 30mm screw (D)** using a screwdriver.

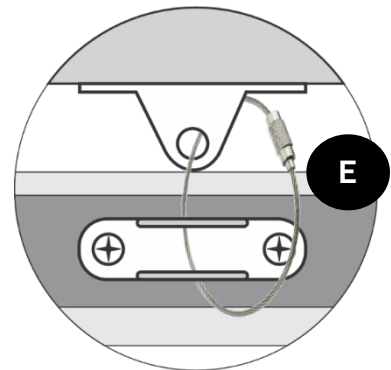


Horizontal Installation

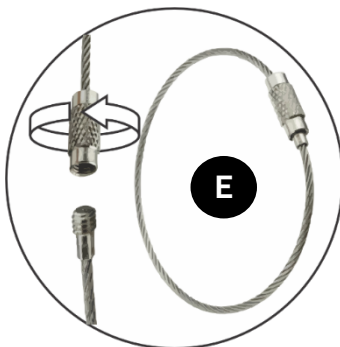

The Barrel Clasp is secured by joining the two ends via Clockwise rotation

Join the **bracket on the wall** with the **bracket on the shelf**, connecting them with the **stainless wire**, then Turn the barrel clasp to connect each end and lock it in place.

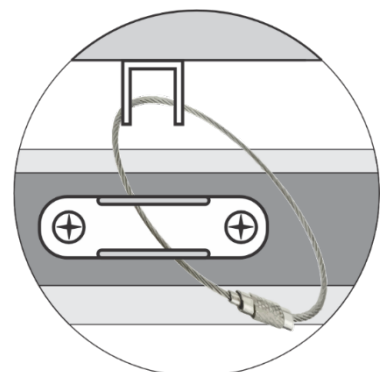


Vertical Installation

Great job!

Your new cabinet is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

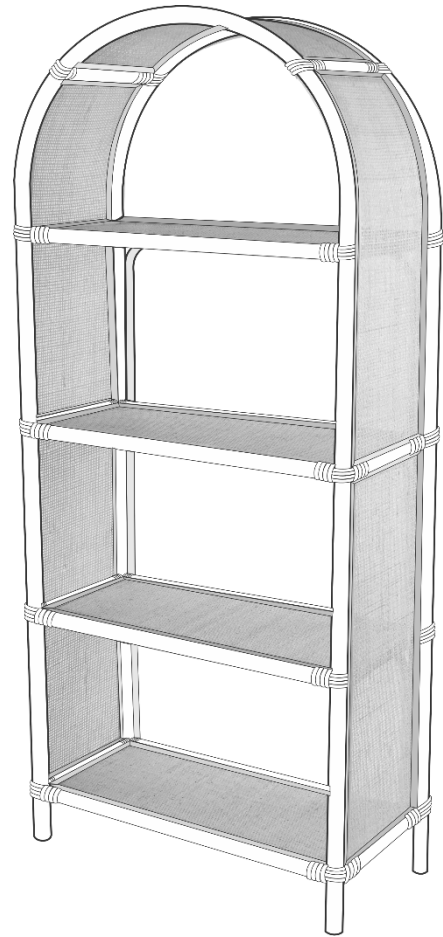

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com