


ASSEMBLY INSTRUCTIONS

EEI-7202

VO.09.30.24

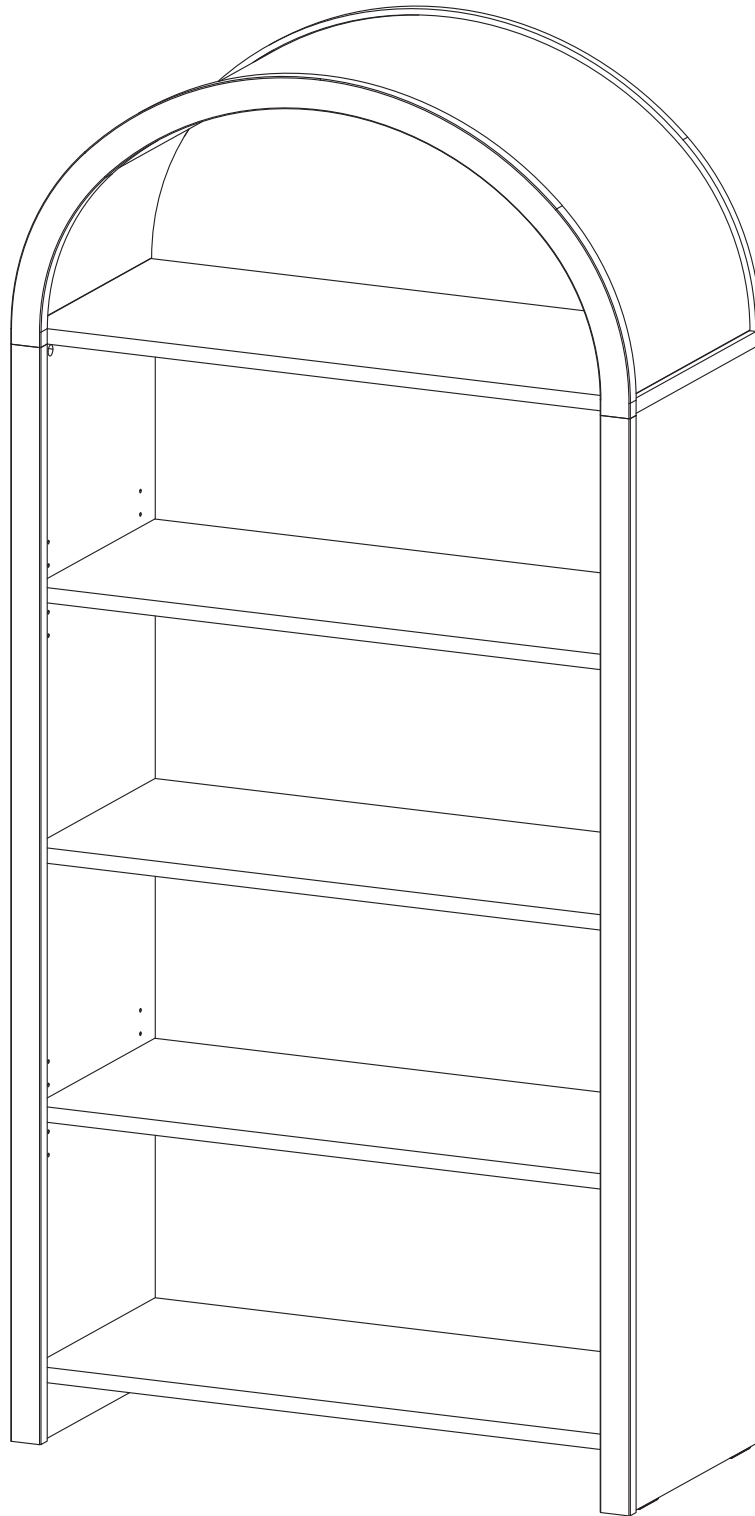

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.



Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:


1	Top Board	x1	11	Support Board Hutch	x3
2	Bottom Board	x1	12	Back Board Hutch	x1
3	Side Board Left	x1	13	PVC Board	x1
4	Side Board Right	x1	14	Back Board	x4
5	Adjustable Shelf	x2			
6	Fixed Shelf	x1			
7	Front Skirt	x2			
8	Support Board 1	x1			
9	Support Board 2	x2			
10	Front Board Hutch	x1			

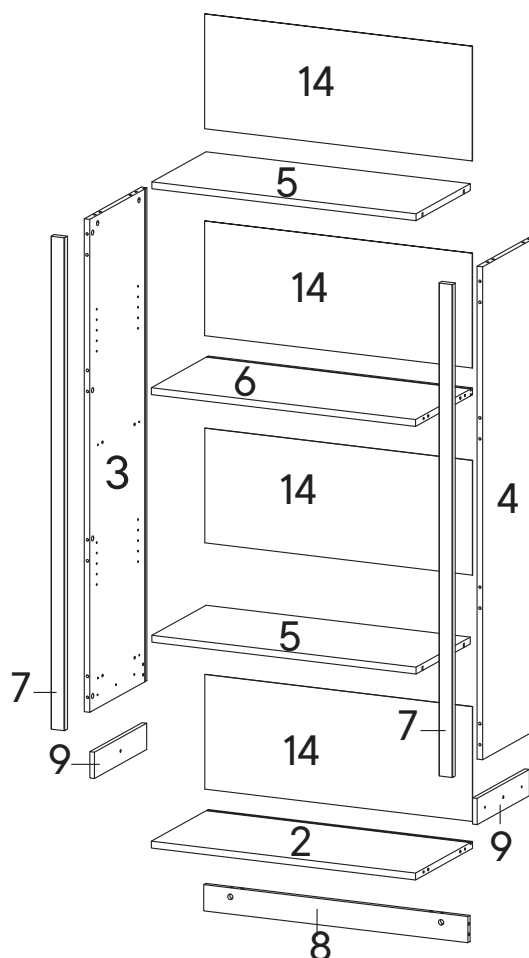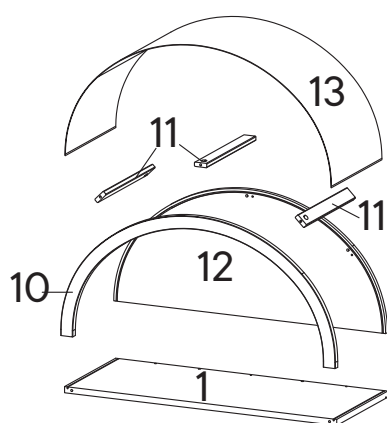

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x30
B		Cam Lock Ø15 mm	x30
C		Wood Dowel Ø8 x 30 mm	x31
D		Wood Dowel Ø5 x 20 mm	x4
E		Joining Strip	x2
F		Floor Glide	x6
G		Screw Cap Ø15 mm	x10
H		Allen Key	x2
I		Screw M 8 x 39 mm	x3
J		Wedge	x24

K		Screw M 3.5 x 15.5 mm	x24
L		Cam Bolt Ø6 x 19.5 mm	x8
M		Screw M 6.4 x 25 mm	x2
N		Rubber	x2

What you need:



Components Carton Placement

Carton 1 of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
5	Adjustable Shelf	x2
6	Fixed Shelf	x1
10	Front Board Hutch	x1
12	Back Board Hutch	x1
14	Back Board	x4
	Hardware Pack	x1

Carton 2 of 2

Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
7	Front Skirt	x2
8	Support Board 1	x1
9	Support Board 2	x2
11	Support Board Hutch	x3
13	PVC Board	x1

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com



Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2
- C** Wood Dowel Ø8 x 30 mm x26
- L** Cam Bolt Ø6 x 19.5 mm x8

COMPONENTS

- 2** Bottom Board x1
- 3** Side Board Left x1
- 4** Side Board Right x1
- 6** Fixed Shelf x1
- 8** Support Board 1 x1

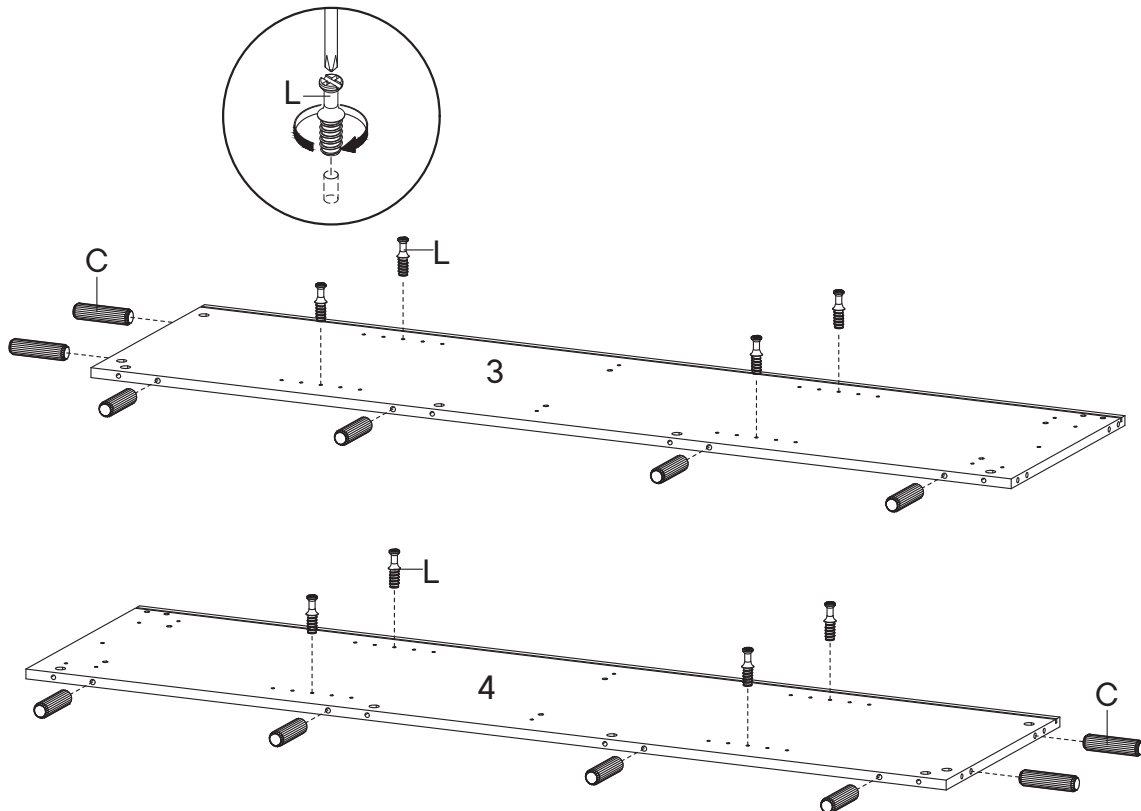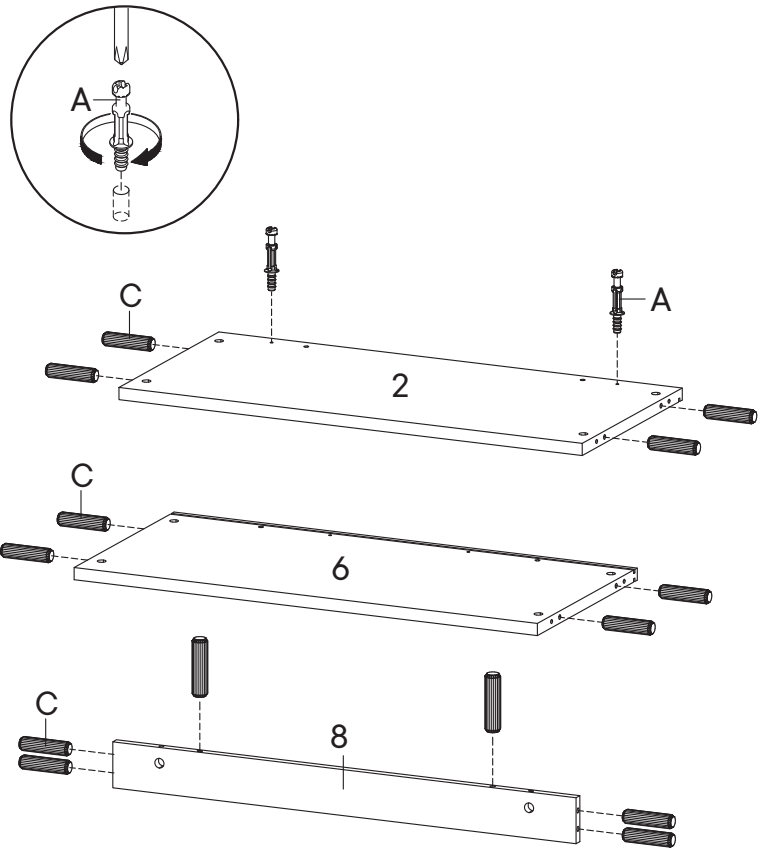


Step 2

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8

COMPONENTS

- 3** Side Board Left x1
4 Side Board Right x1

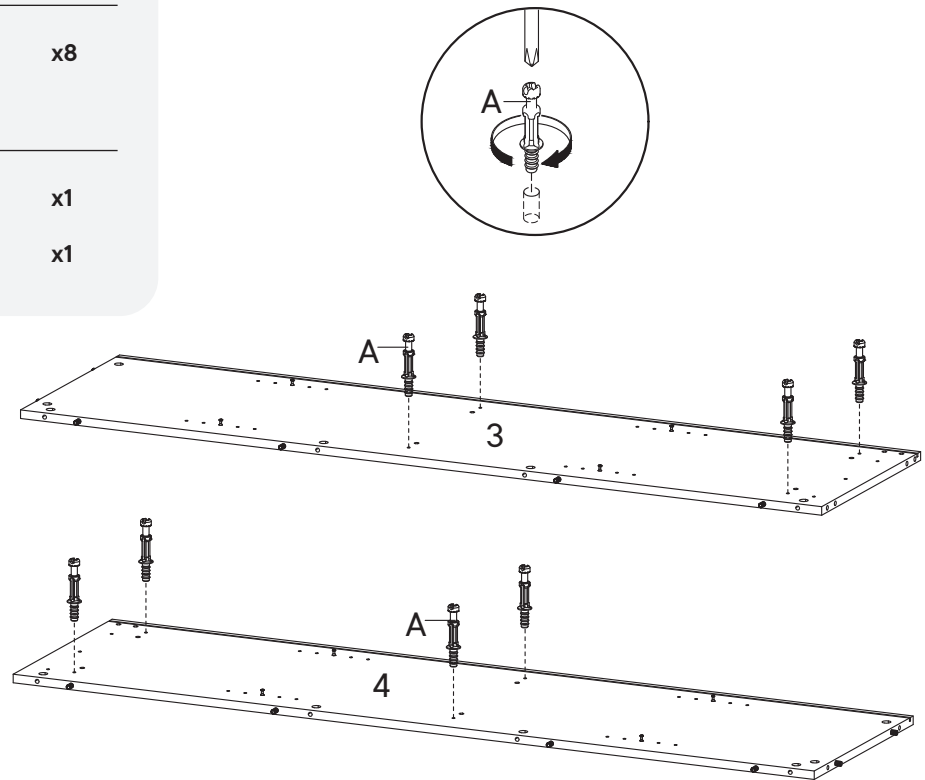


Step 3

HARDWARE

- B** Cam Lock Ø15 mm x2

COMPONENTS

- 2** Bottom Board x1
8 Support Board 1 x1

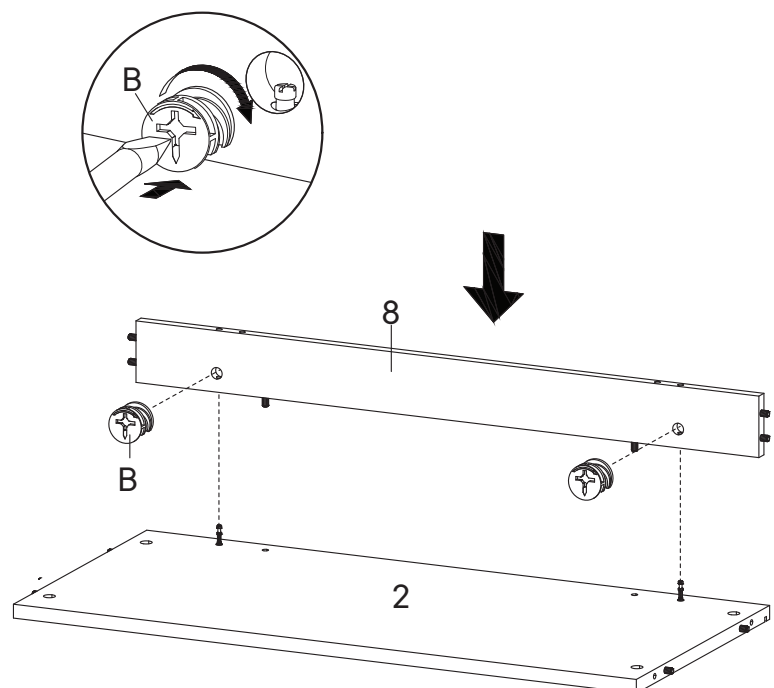


Step 4

HARDWARE

- B** Cam Lock Ø15 mm x4

COMPONENTS

- 2** Bottom Board x1
4 Side Board Right x1
6 Fixed Shelf x1

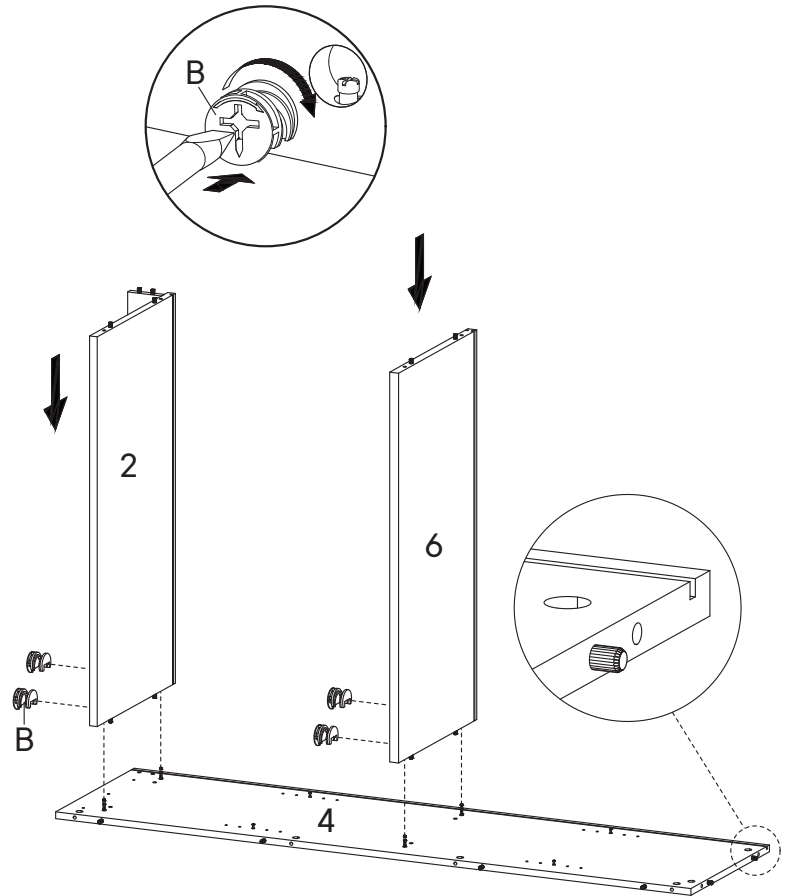



Step 5

HARDWARE

- E** Joining Strip x1

COMPONENTS

- 14** Back Board x2

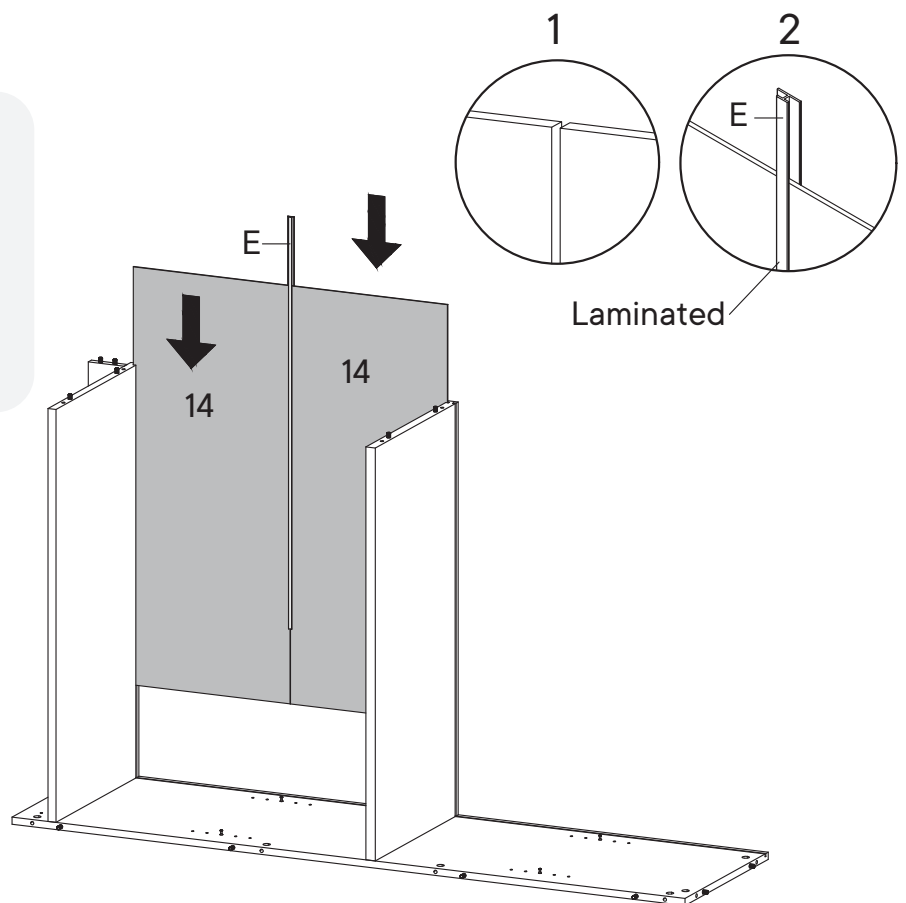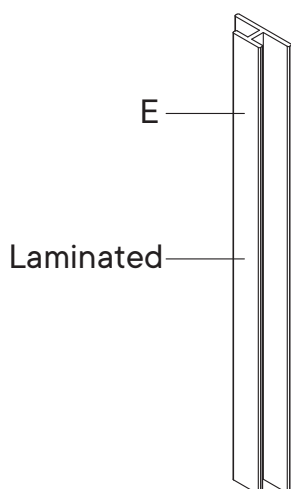



Step 6

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

3 Side Board Left x1

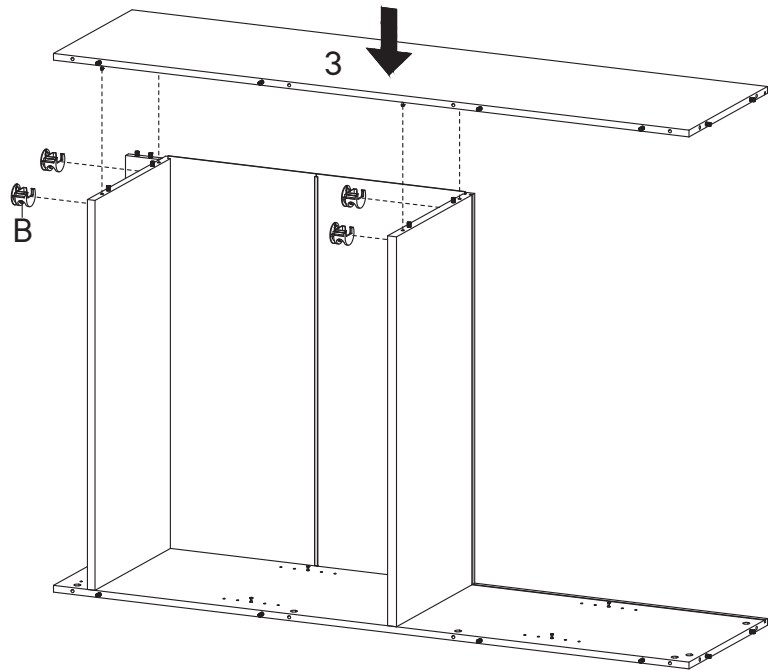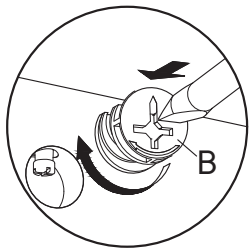



Step 7

HARDWARE

A Cam Bolt Ø6 x 35 mm x8

COMPONENTS

7 Front Skirt x2

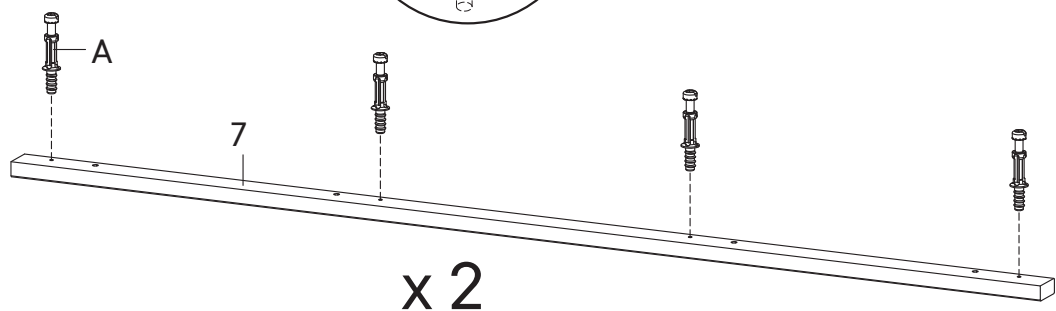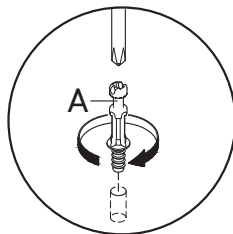


Step 8

HARDWARE

- B** Cam Lock Ø15 mm x8
- G** Screw Cap Ø15 mm x6

COMPONENTS

- 7** Front Skirt x2

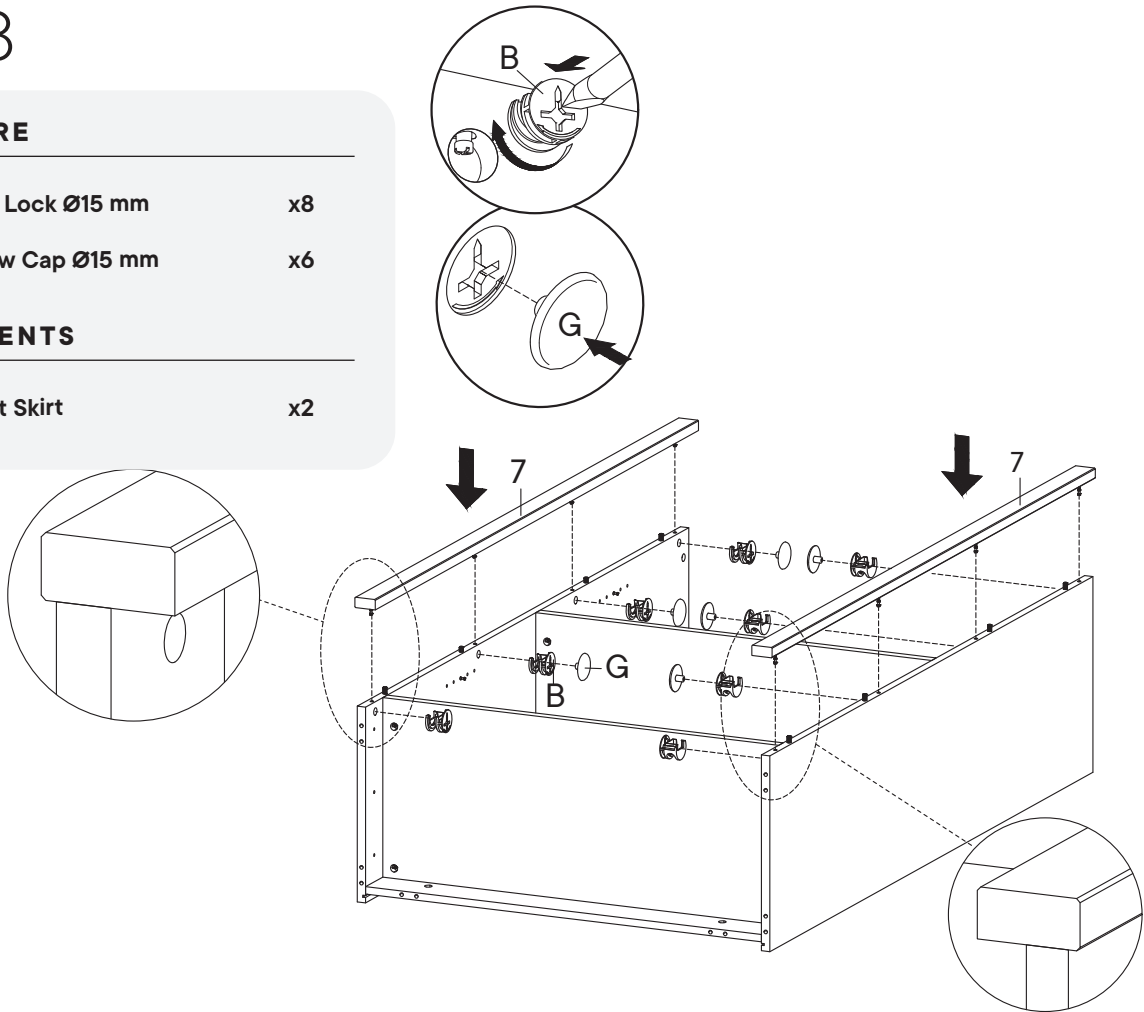


Step 9

HARDWARE

- D** Wood Dowel Ø5 x 20 mm x4
- H** Allen key x1
- M** Screw M 6.4 x 25 mm x2

COMPONENTS


- 9** Support Board 2 x2

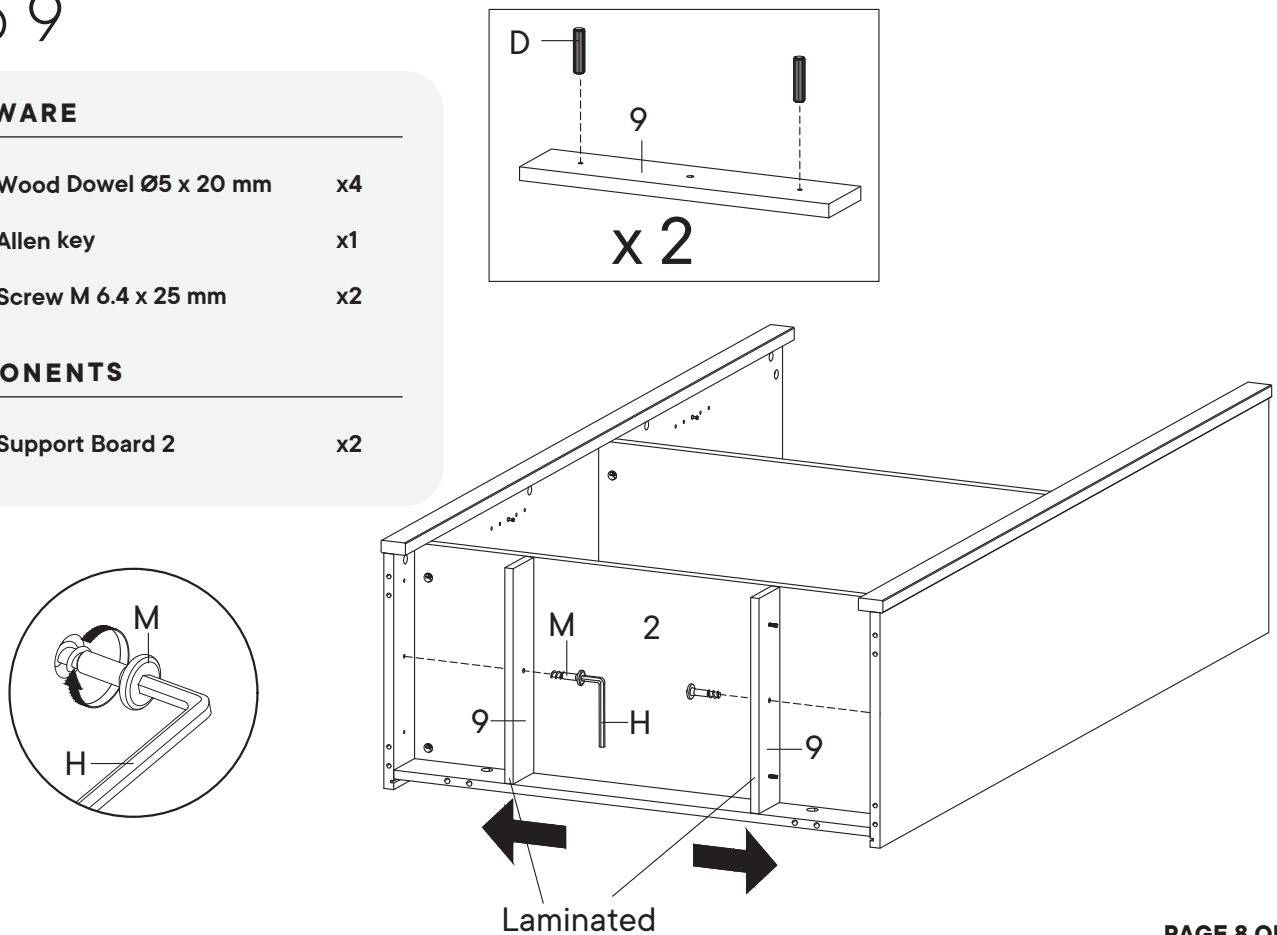

Step 10

HARDWARE

- F** Floor Glide x6

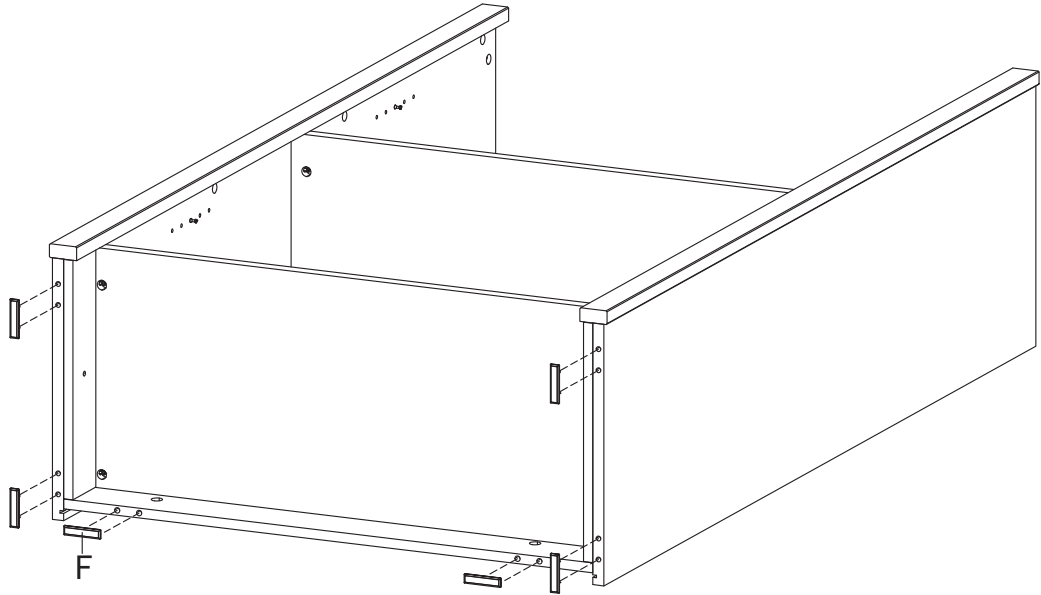


Step 11

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
C Wood Dowel Ø8 x 30 mm x5

COMPONENTS

- 1** Top Board x1
10 Front Board Hutch x1
11 Support Board Hutch x3
12 Back Board Hutch x1

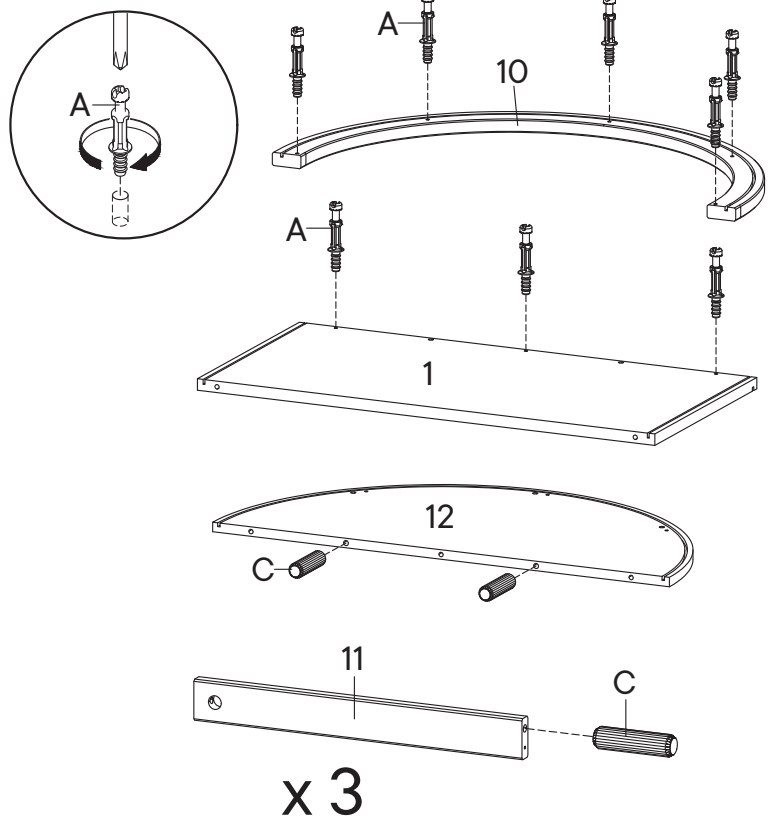



Step 12

HARDWARE

- B** Cam Lock Ø15 mm x3

COMPONENTS

- 10** Front Board Hutch x1
11 Support Board Hutch x3

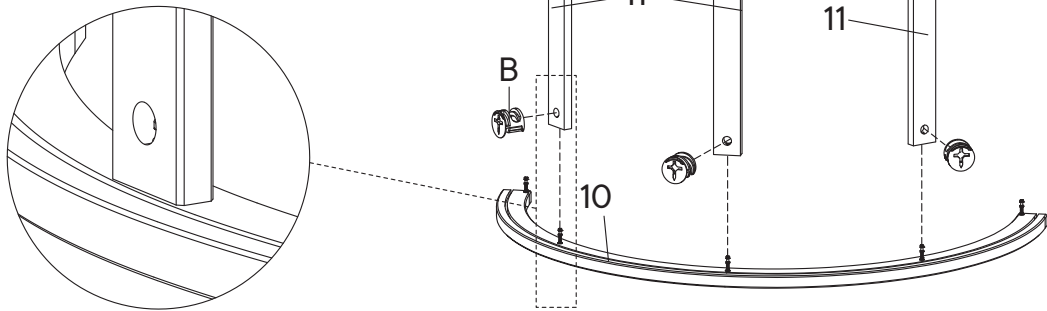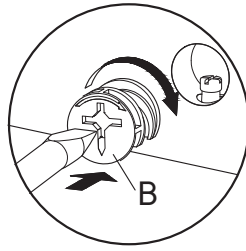



Step 13

HARDWARE

- I** Screw M 8 x 39 mm x3

COMPONENTS


- 12** Back Board Hutch x1

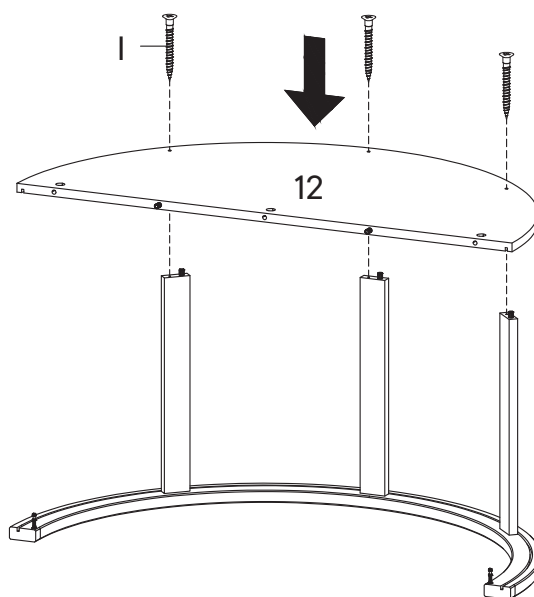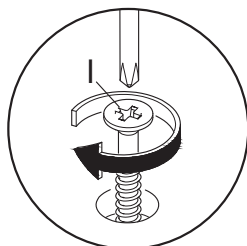

Step 14

COMPONENTS

13 PVC Board x1

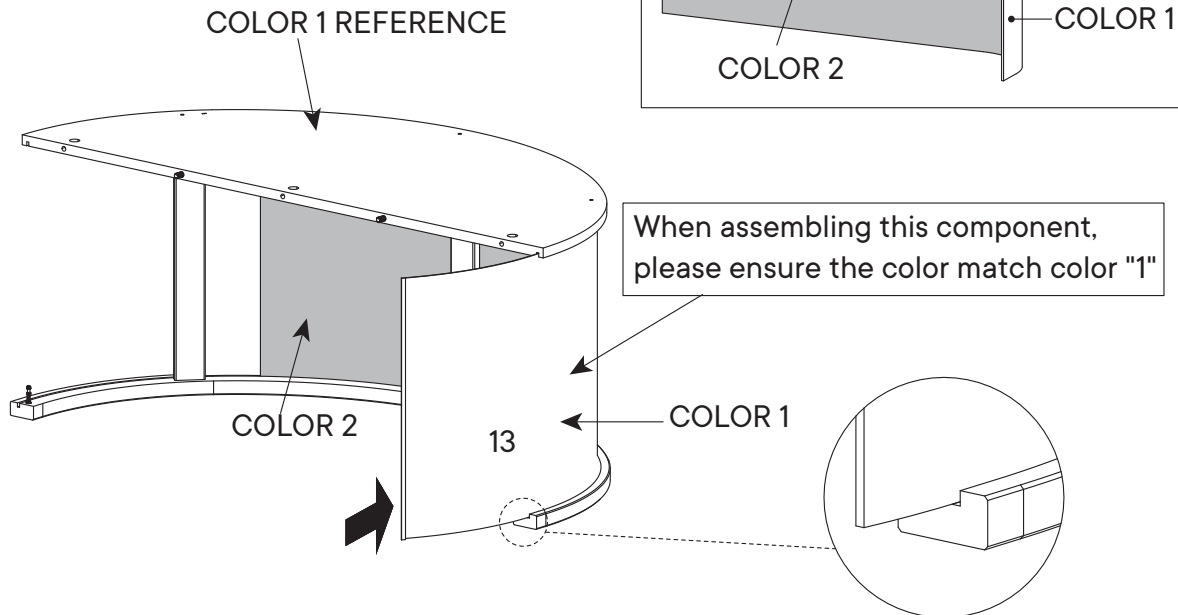


Step 15

HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS



1 Top Board x1

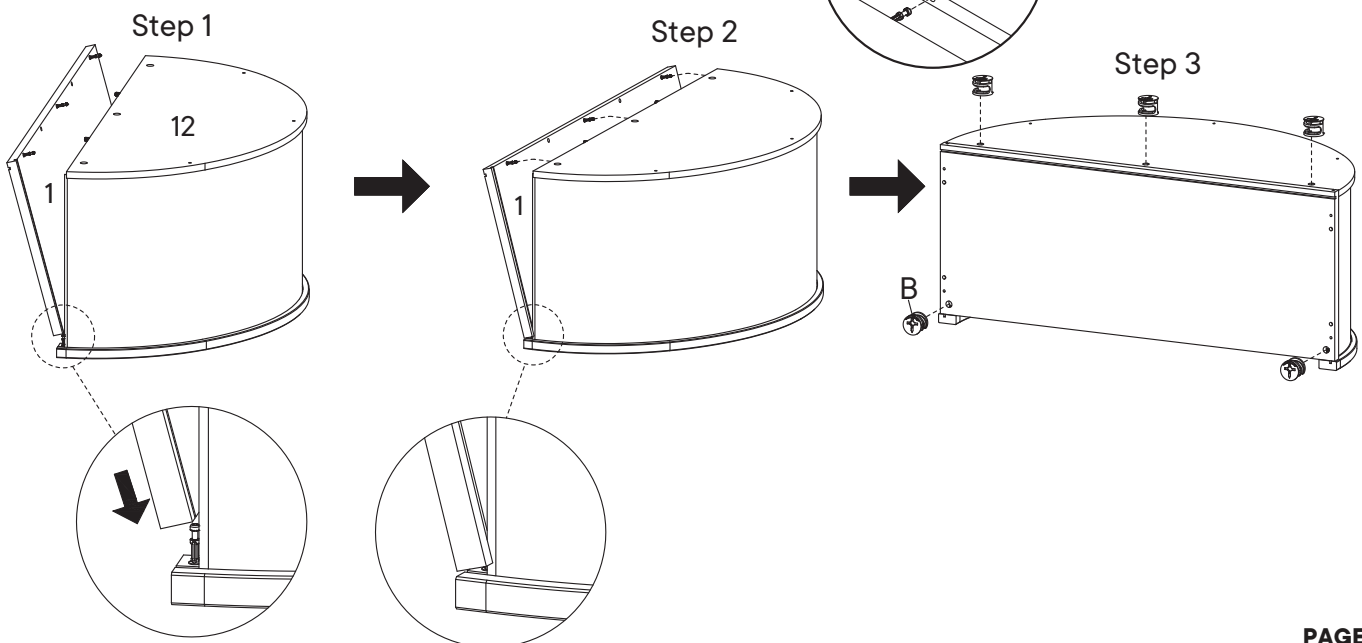

Step 16

HARDWARE

A Cam Bolt Ø6 x 35 mm x4

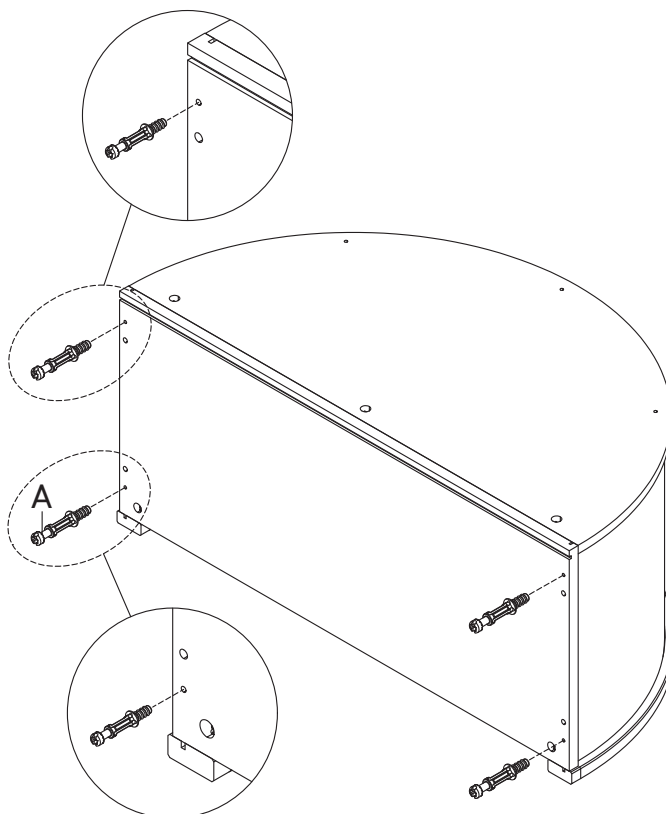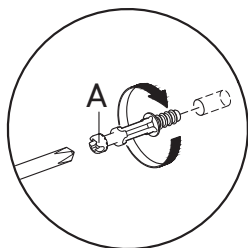






Step 17

HARDWARE

E Joining Strip x1

COMPONENTS


14 Back Board x2

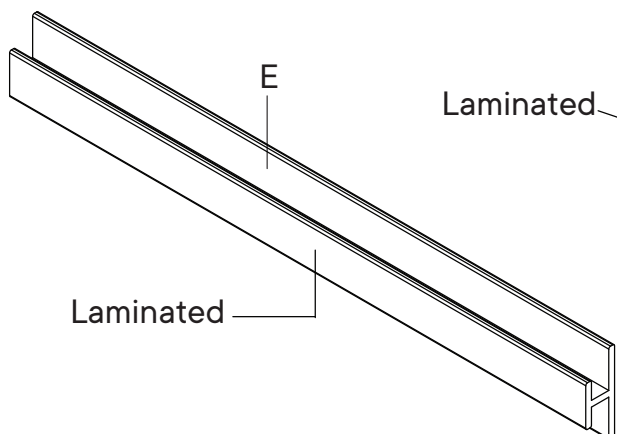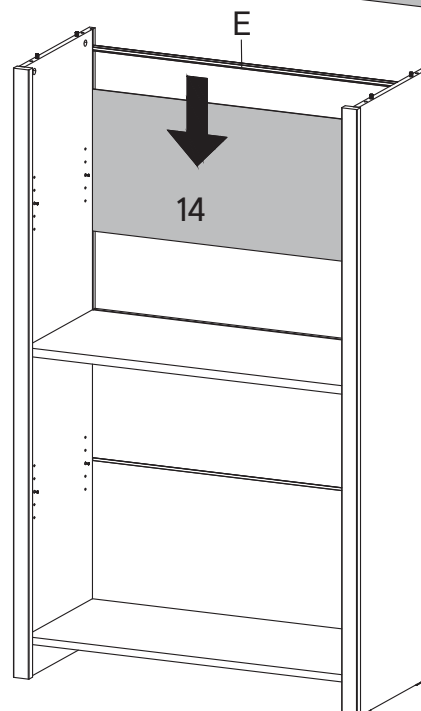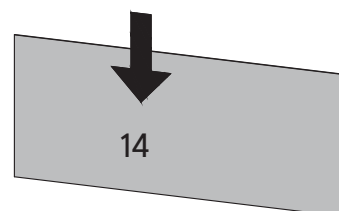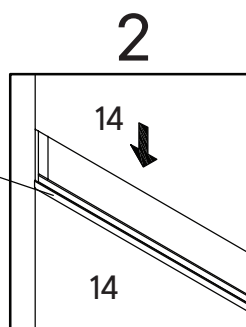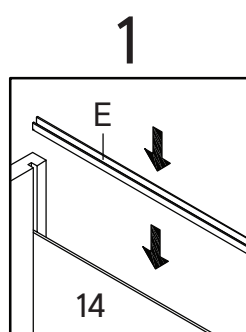

Step 18

HARDWARE


- B** Cam Lock Ø15 mm x4
- G** Screw Cap Ø15 mm x4

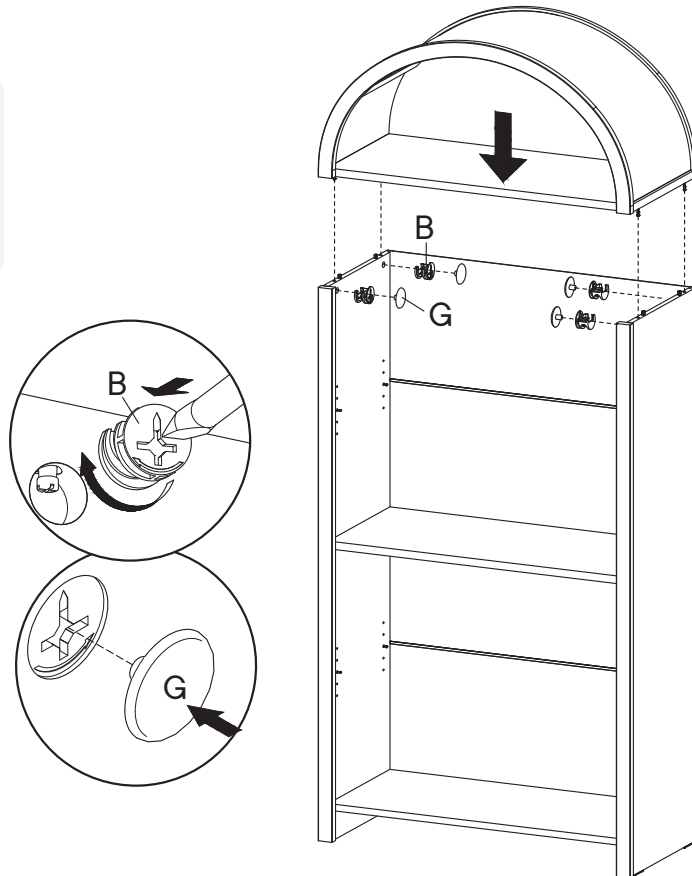

Step 19

COMPONENTS


- 5** Adjustable Shelf x2

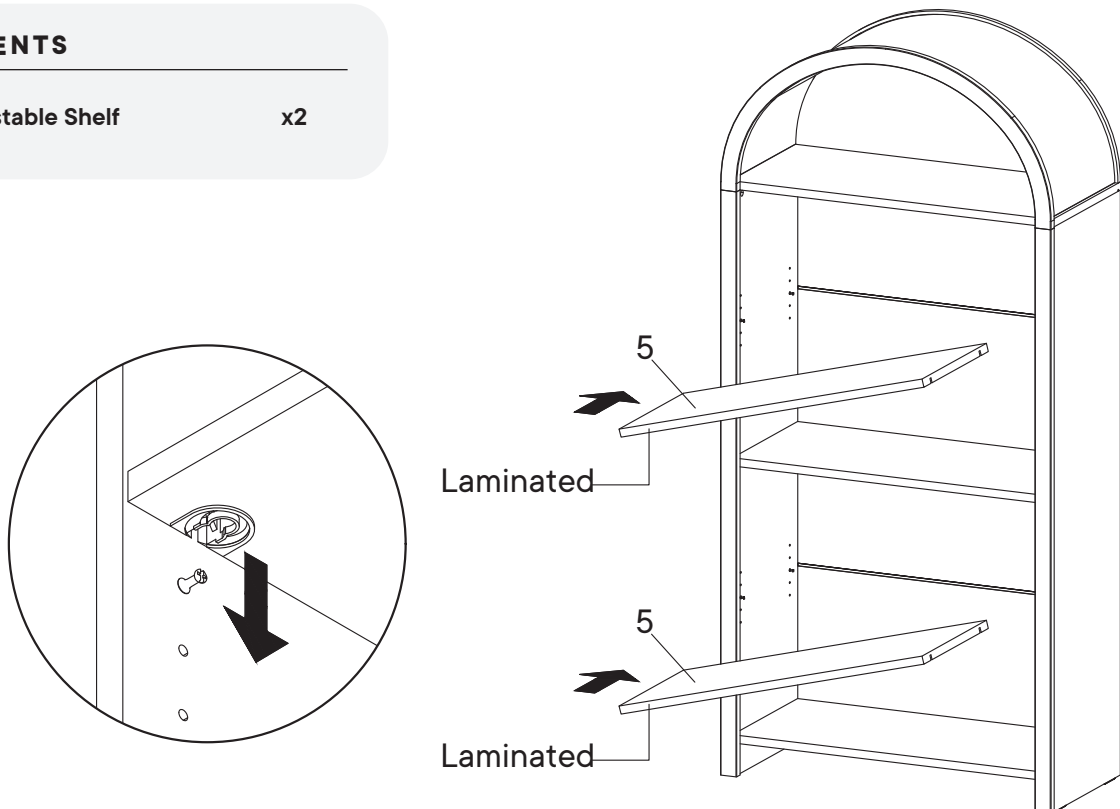

Step 20

HARDWARE


- J** Wedge x24
- K** Screw M 3.5 x 15.5 mm x24

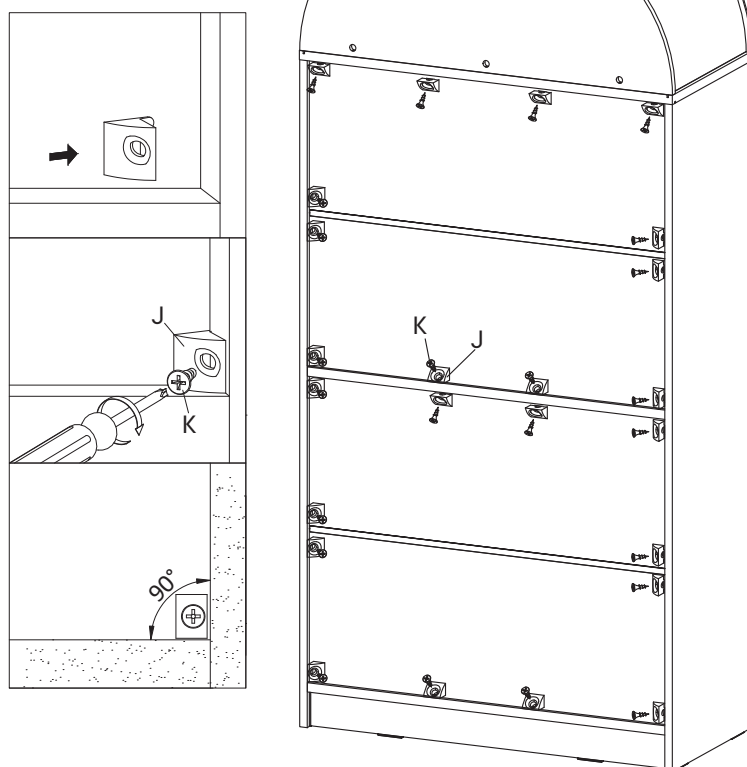

Step 21

HARDWARE

- N** Rubber x2

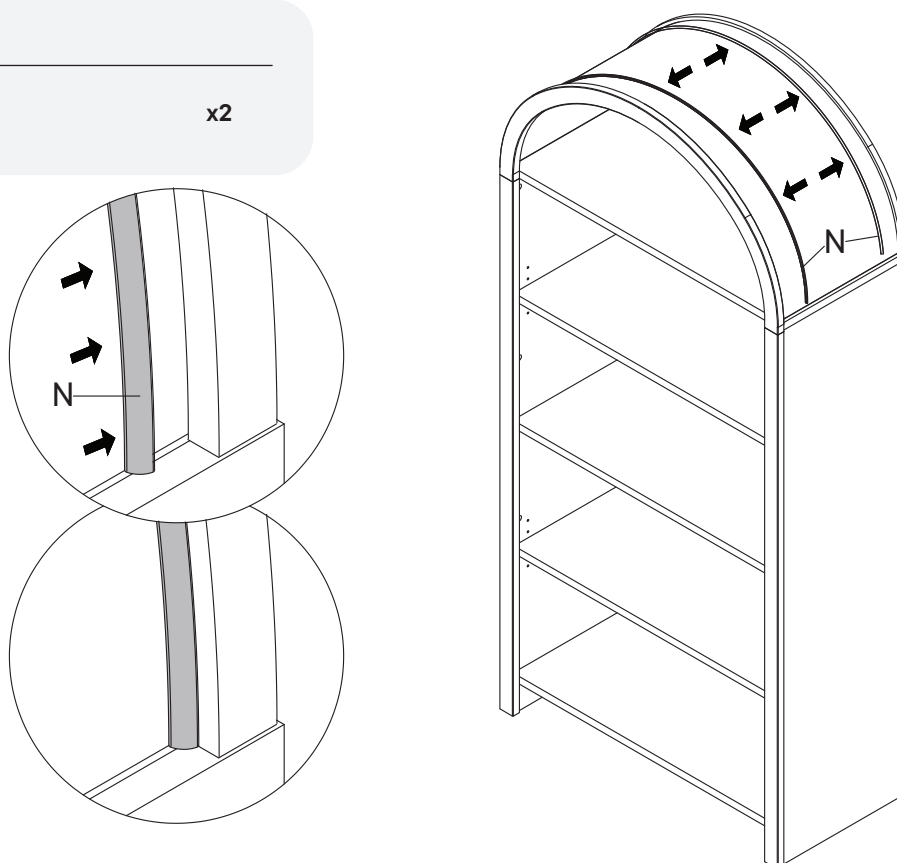

Great job!

Bookcase assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner.


Never use harsh chemicals,
as they could damage the finish
or integrity of the item.

Max 25 Kg / 55 Lbs

Max 56 Kg / 123 Lbs

Max 25 Kg / 55 Lbs

Max 56 Kg / 123 Lbs

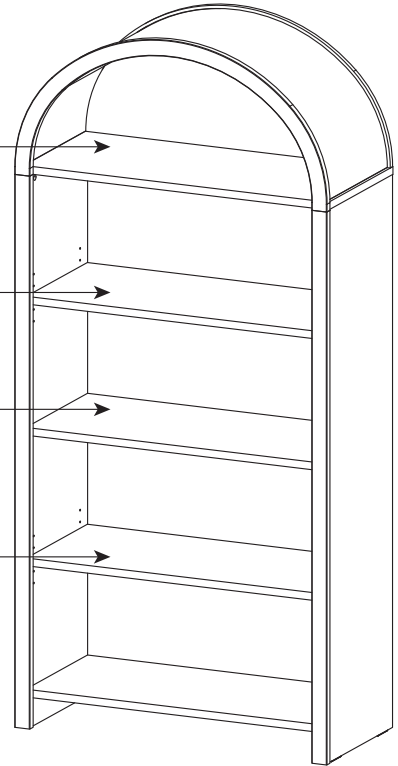

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

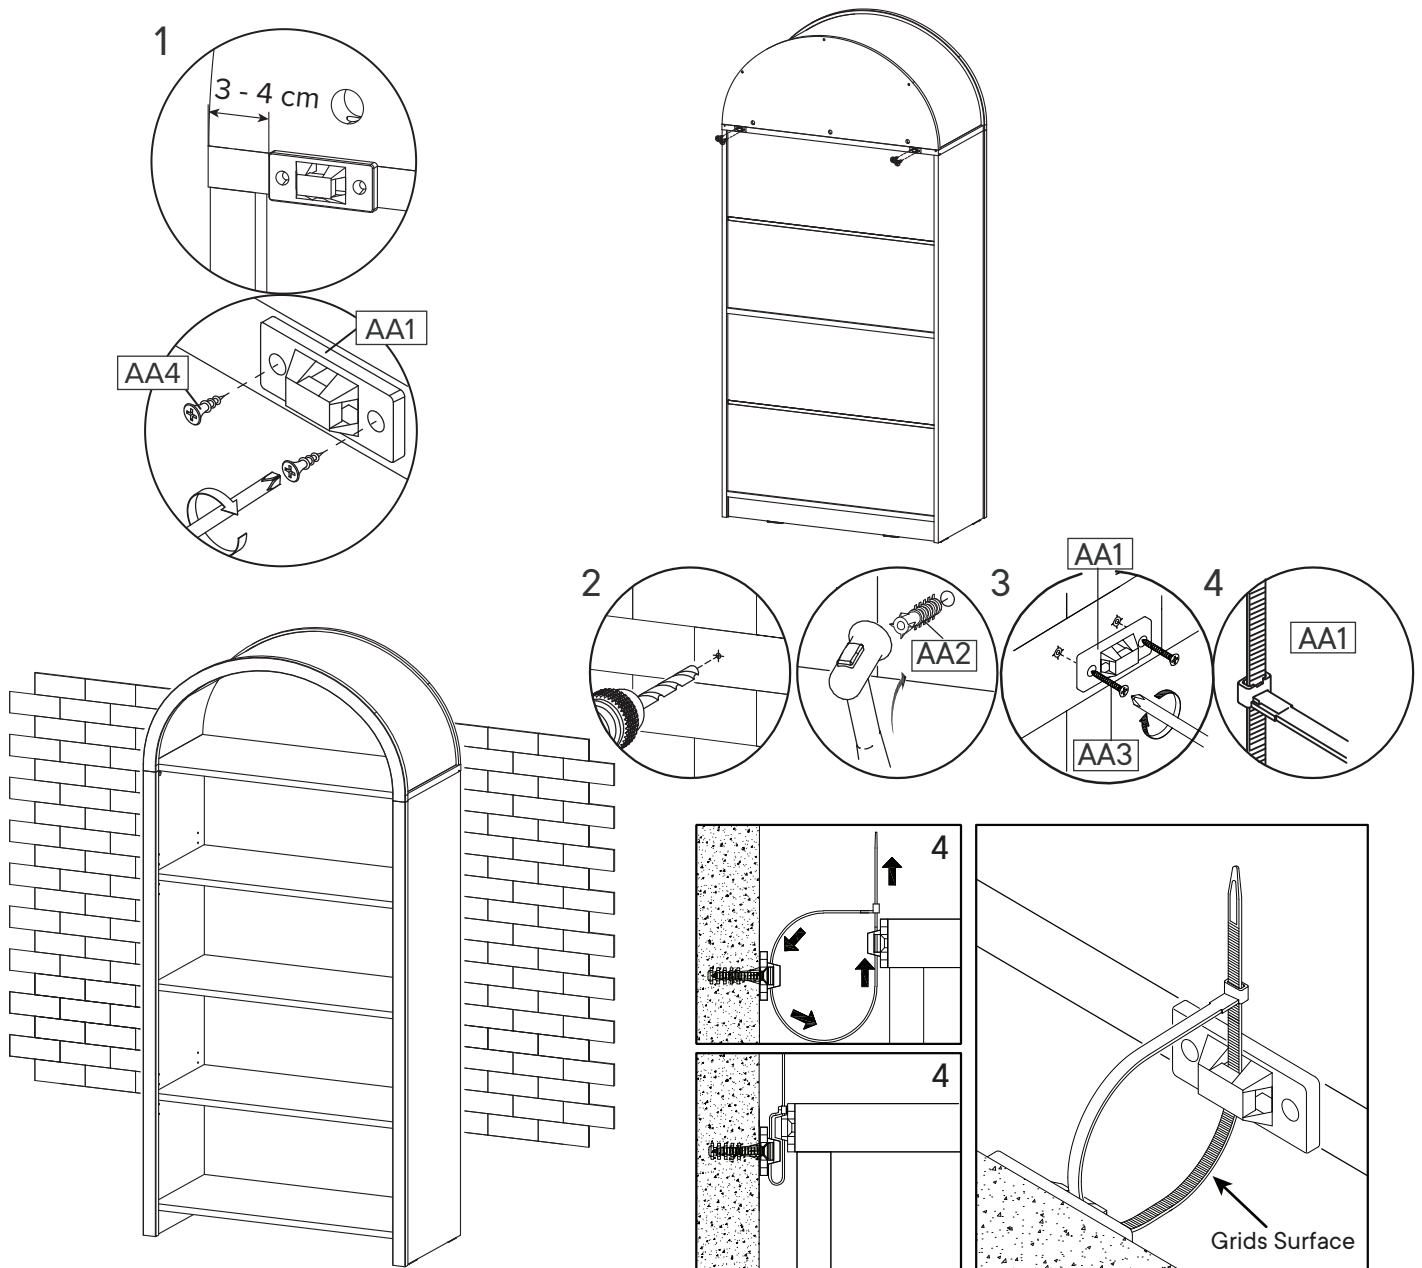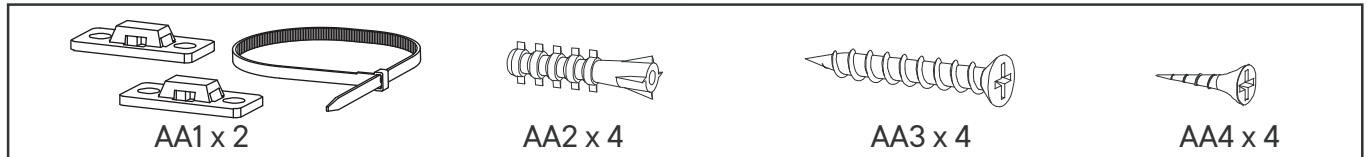

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 3 - 4 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.