


ASSEMBLY INSTRUCTIONS

EEI-7168

V1.01.21.25

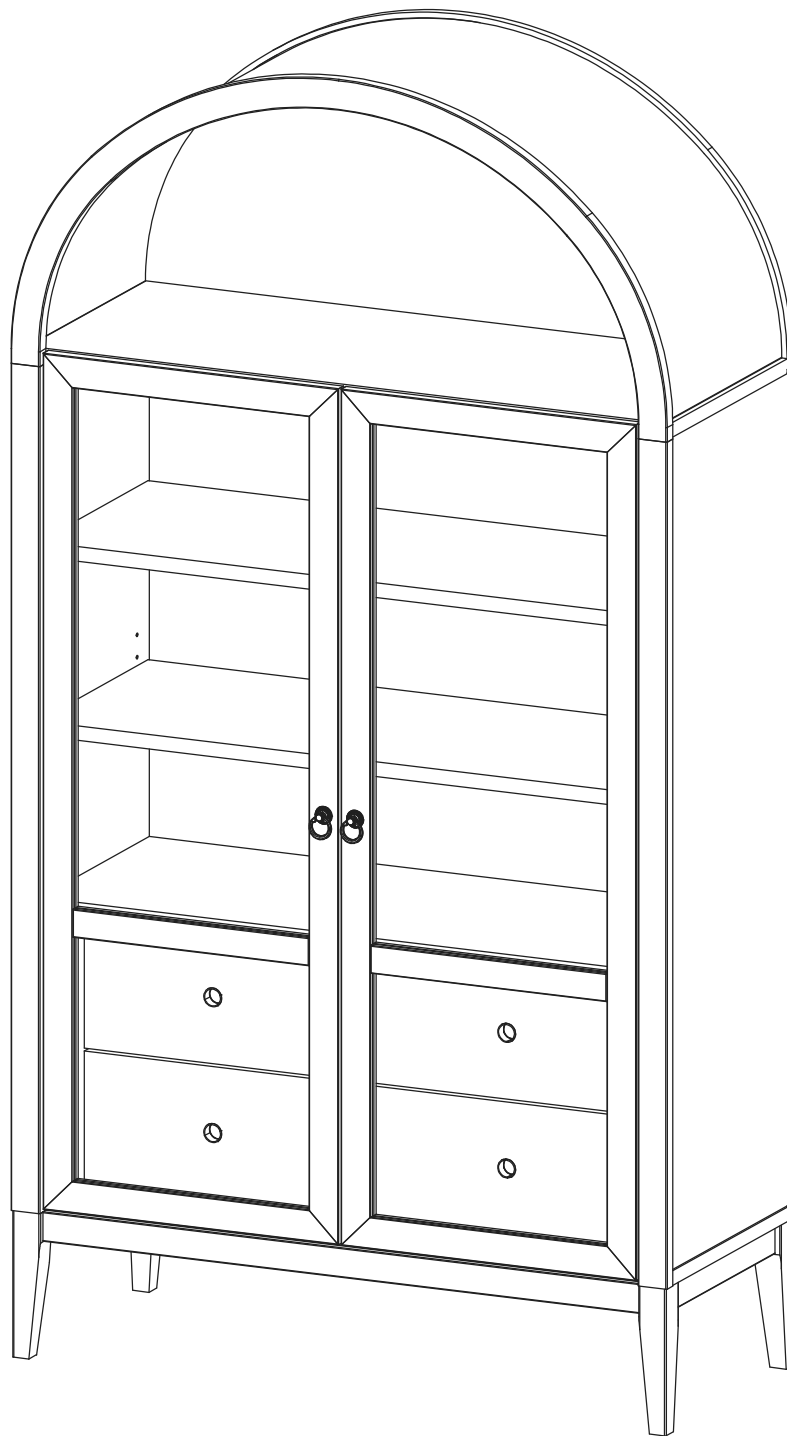

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Approx. 90 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.



Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:




1	Top Board	x1	16	Door Right	x1
2	Bottom Board	x1	17	Side Board Drawer 1	x1
3	Side Board Left	x1	18	Side Board Drawer 2	x1
4	Side Board Right	x1	19	Side Board Drawer 3	x1
5	Front Board Hutch	x1	20	Side Board Drawer 4	x1
6	Support Board Hutch	x3	21	Front Drawer	x2
7	Back Board Hutch	x1	22	Side Drawer Left	x2
8	PVC Board	x1	23	Side Drawer Right	x2
9	Bottom Skirt 1	x1	24	Back Drawer	x2
10	Bottom Skirt 2	x1	25	Bottom Drawer	x2
11	Bottom Skirt 3	x2	26	Support Drawer	x2
12	Leg	x4	27	Adjustable Shelf	x2
13	Front Skirt 1	x1	28	Fixed Shelf	x1
14	Front Skirt 2	x1	29	Support Board 1	x2
15	Door Left	x1	30	Support Board 2	x2

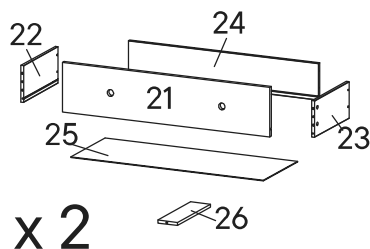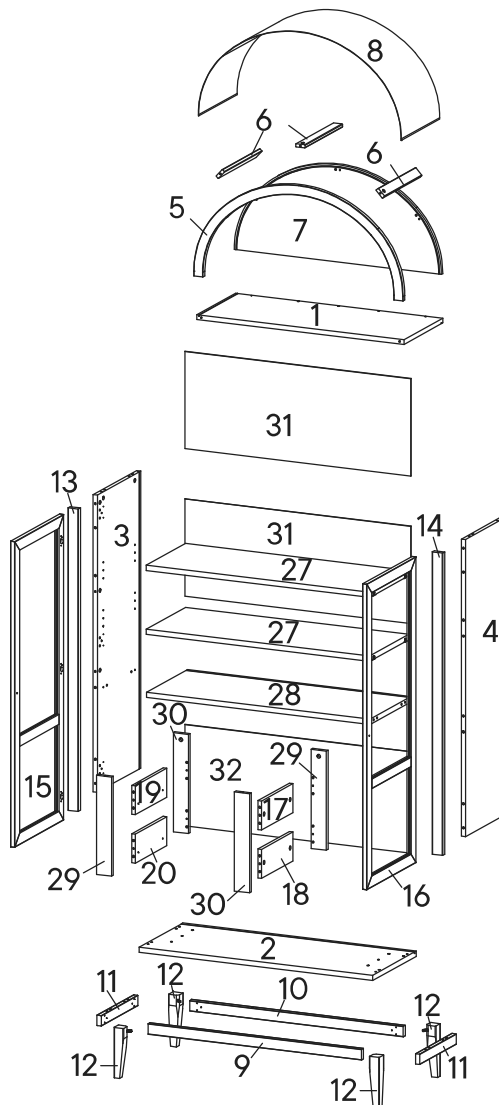

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A  Cam Bolt Ø6 x 35 mm x46	L  Allen Key x2	W  Flange Nut x4
B  Cam Lock Ø15 mm x36	M  Wedge x30	X  Wrench x1
C  Wood Dowel Ø8 x 30 mm x51	N  Screw M 3.5 x 15.5 mm x30	Y  Screw M 8 x 39 mm x15
D  Screw M 6.4 x 14 mm x3	O  Screw M 7 x 50 mm x6	Z  Screw M 6 x 10.5 mm x8
E  Joining Strip x1	P  Wood Dowel Ø6 x 30 mm x4	AA  Screw M 3.5 x 13 mm x12
F  Cam Bolt Ø6 x 19.5 mm x8	Q  Plate x3	AB  List x2
G  Screw Cap Ø15 mm x12	R  Screw M 6.4 x 53 mm x7	AC  Silicon Bumper x4
H  Screw M 4.5 x 12.5 mm x75	S  Cam Lock Ø12 mm x10	RM30A  Drawer Runner x2
I  Handle x2	T  Floor Protector x4	HS26C  Hinge x6
J  Screw M 4 x 22 mm x2	U  Support Hinge x6	BC410  Corner Brace x4
K  Screw M 6.4 x 25 mm x6	V  Handle x4	

What you need:

 Phillips Head Screwdriver

Components Carton Placement

Carton 1 of 2

Label	Description	Qty	Label	Description	Qty
1	Top Board	x1	29	Support Board 1	x2
2	Bottom Board	x1	30	Support Board 2	x2
5	Front Board Hutch	x1	31	Back Board 1	x2
6	Support Board Hutch	x3	32	Back Board 2	x1
7	Back Board Hutch	x1		Hardware Pack	x1
9	Bottom Skirt 1	x1			
10	Bottom Skirt 2	x1			
11	Bottom Skirt 3	x2			
12	Leg	x4			
22	Side Drawer Left	x2			
23	Side Drawer Right	x2			
24	Back Drawer	x2			
27	Adjustable Shelf	x2			
28	Fixed Shelf	x1			

Carton 2 of 2

Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
8	PVC Board	x1
13	Front Skirt 1	x1
14	Front Skirt 2	x1
15	Door Left	x1
16	Door Right	x1
17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1
19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1
21	Front Drawer	x2
25	Bottom Drawer	x2
26	Support Drawer	x2

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- | | | |
|----------|-----------------------|-----|
| A | Cam Bolt Ø6 x 35 mm | x10 |
| P | Wood Dowel Ø6 x 30 mm | x4 |

COMPONENTS

- | | | |
|-----------|-------------------|----|
| 21 | Front Drawer | x2 |
| 22 | Side Drawer Left | x2 |
| 23 | Side Drawer Right | x2 |

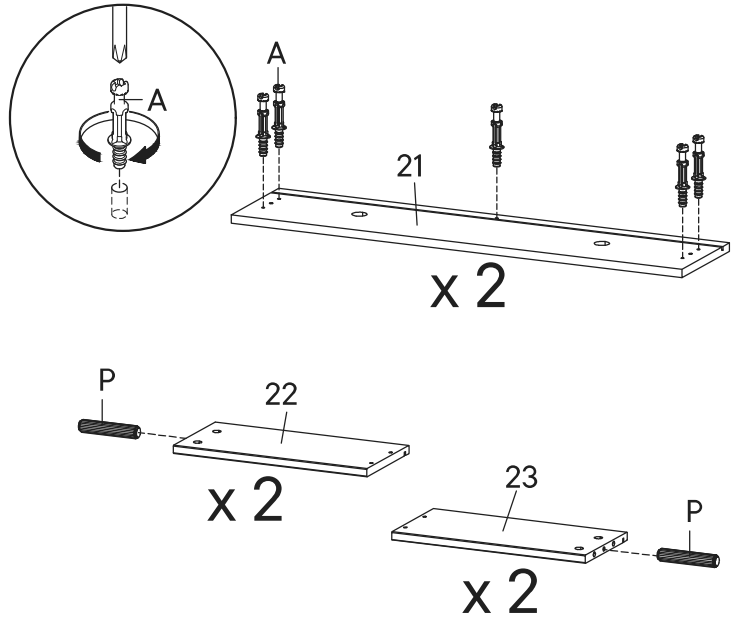


Step 2

HARDWARE

- | | | |
|----------|-------------------|-----|
| S | Cam Lock Ø12 mm | x10 |
| Y | Screw M 8 x 39 mm | x12 |

COMPONENTS

- | | | |
|-----------|-------------------|----|
| 21 | Front Drawer | x2 |
| 22 | Side Drawer Left | x2 |
| 23 | Side Drawer Right | x2 |
| 24 | Back Drawer | x2 |
| 25 | Bottom Drawer | x2 |
| 26 | Support Drawer | x2 |


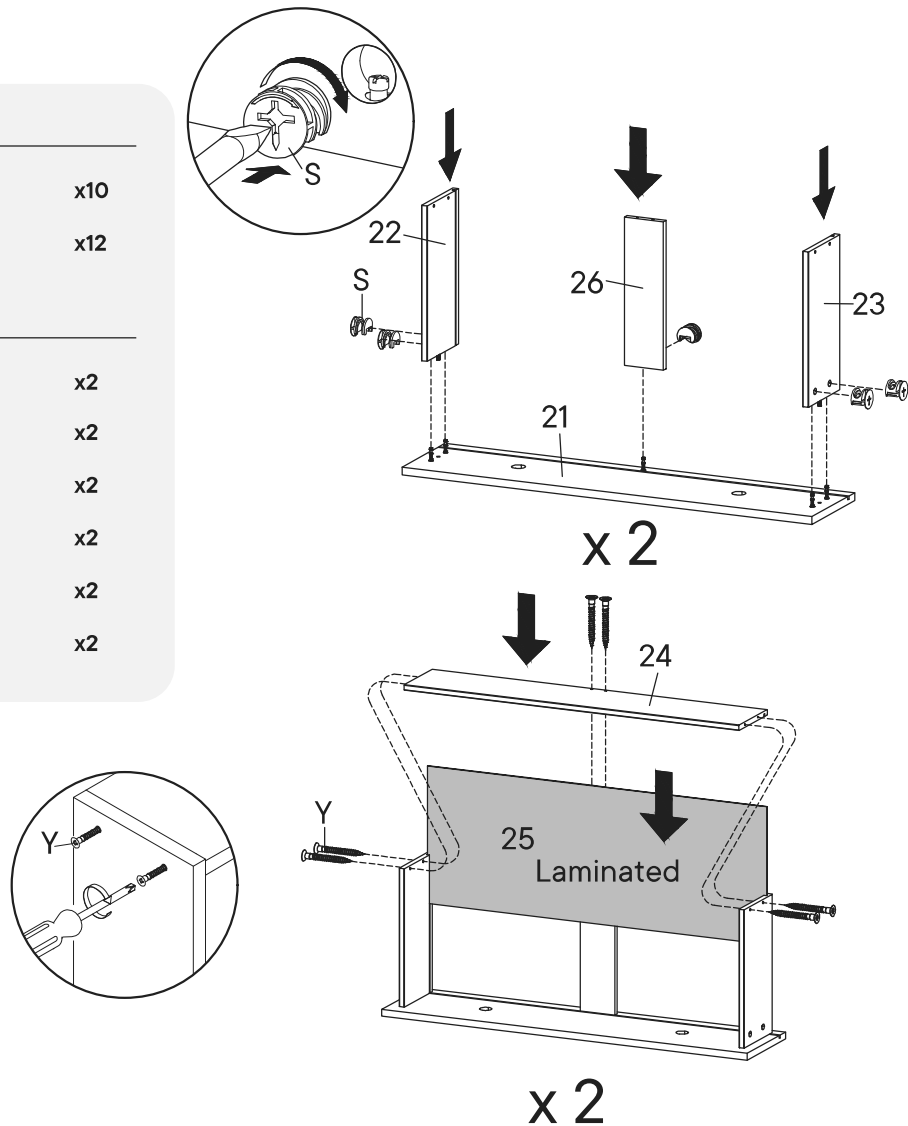


Step 3

HARDWARE

AA Screw M 3.5 x 13 mm x12

RM30A Drawer Runner x2

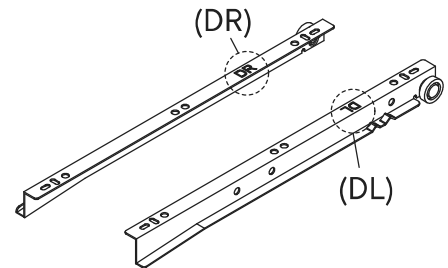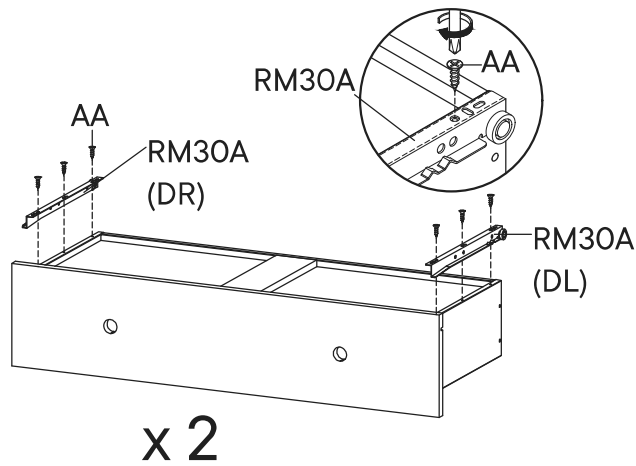




Step 4

HARDWARE

M Wedge x8

N Screw M 3.5 x 15.5 mm x8

V Handle x4

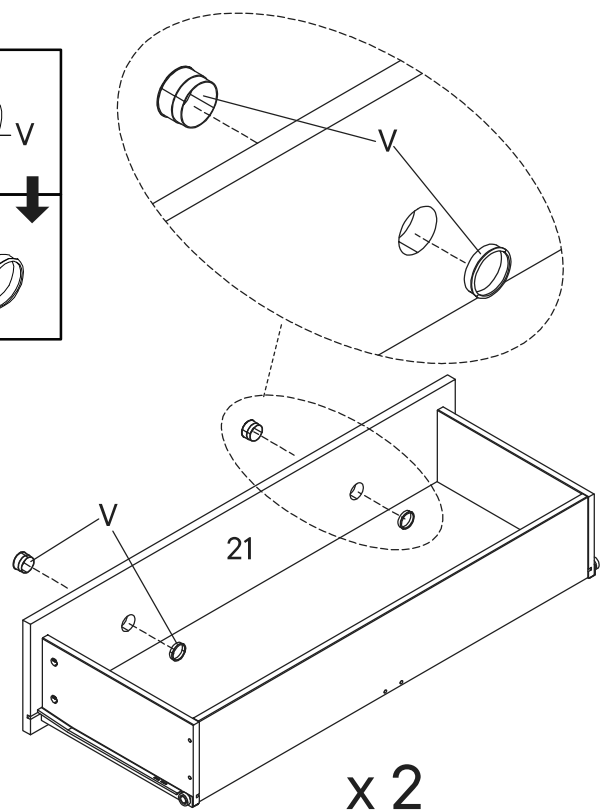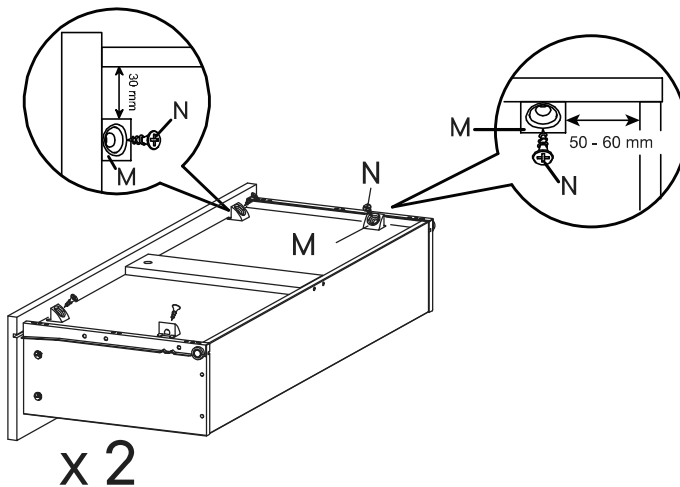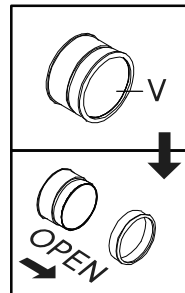



Step 5

HARDWARE

- | | | |
|----------|-----------------------|-----|
| C | Wood Dowel Ø8 x 30 mm | x16 |
| F | Cam Bolt Ø6 x 19.5 mm | x8 |

COMPONENTS

- | | | |
|----------|------------------|----|
| 3 | Side Board Left | x1 |
| 4 | Side Board Right | x1 |

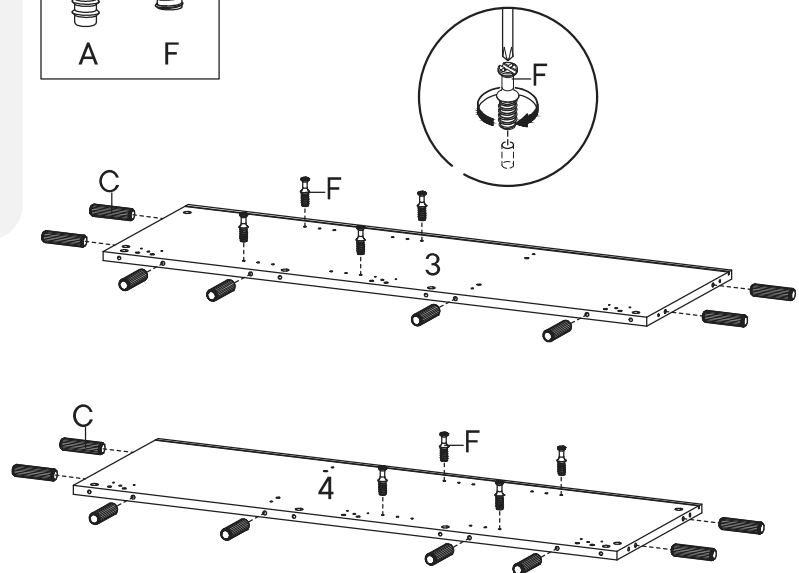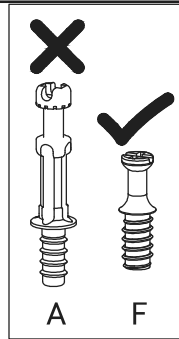



Step 6

HARDWARE

- | | | |
|----------|---------------------|----|
| A | Cam Bolt Ø6 x 35 mm | x4 |
|----------|---------------------|----|

COMPONENTS

- | | | |
|----------|------------------|----|
| 3 | Side Board Left | x1 |
| 4 | Side Board Right | x1 |

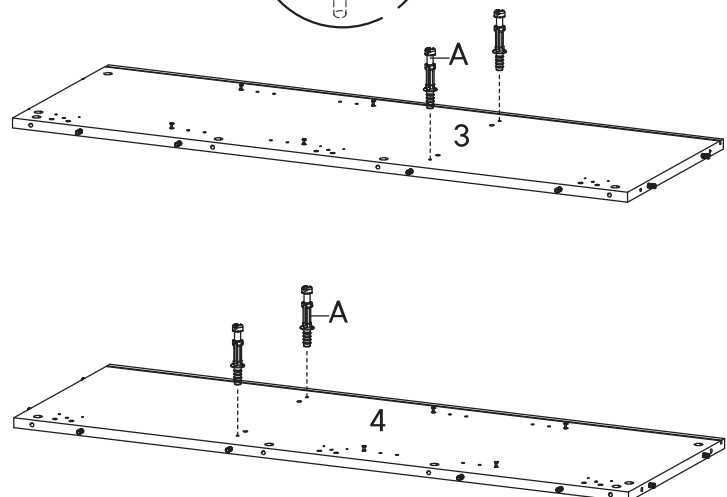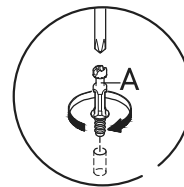


Step 7

HARDWARE

H	Screw M 4.5 x 12.5 mm	x12
K	Screw M 6.4 x 25 mm	x6
L	Allen Key	x1
U	Support Hinge	x6

COMPONENTS

3	Side Board Left	x1
4	Side Board Right	x1

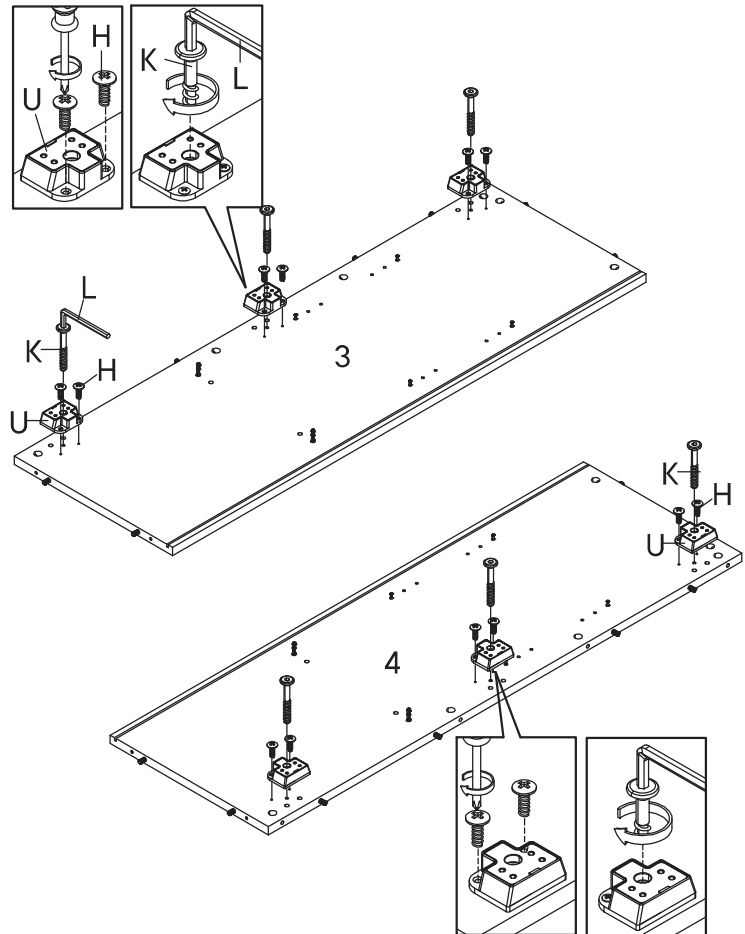



Step 8

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x12
C	Wood Dowel Ø8 x 30 mm	x4

COMPONENTS

13	Front Skirt 1	x1
14	Front Skirt 2	x1
28	Fixed Shelf	x1

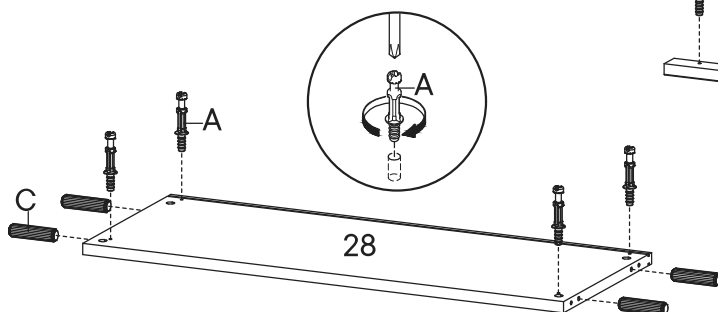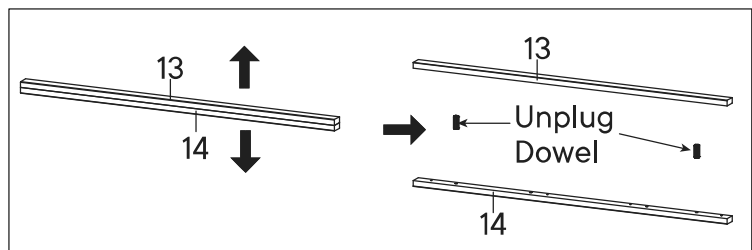


Step 9

HARDWARE

- B** Cam Lock Ø15 mm x4

COMPONENTS

- 3** Side Board Left x1
4 Side Board Right x1
28 Fixed Shelf x1

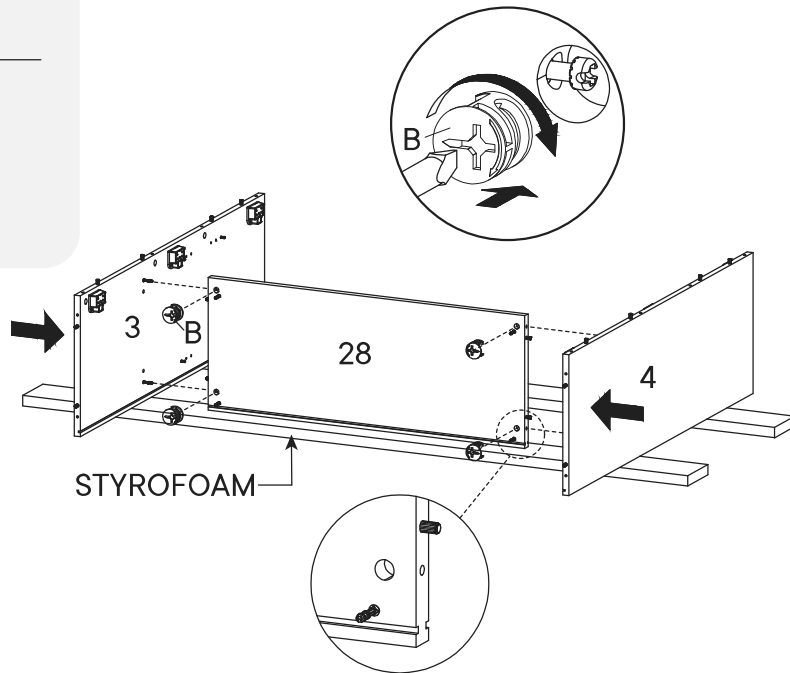


Step 10

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
C Wood Dowel Ø8 x 30 mm x20

COMPONENTS



- 17** Side Board Drawer 1 x1
18 Side Board Drawer 2 x1
19 Side Board Drawer 3 x1
20 Side Board Drawer 4 x1
29 Support Board 1 x2
30 Support Board 2 x2

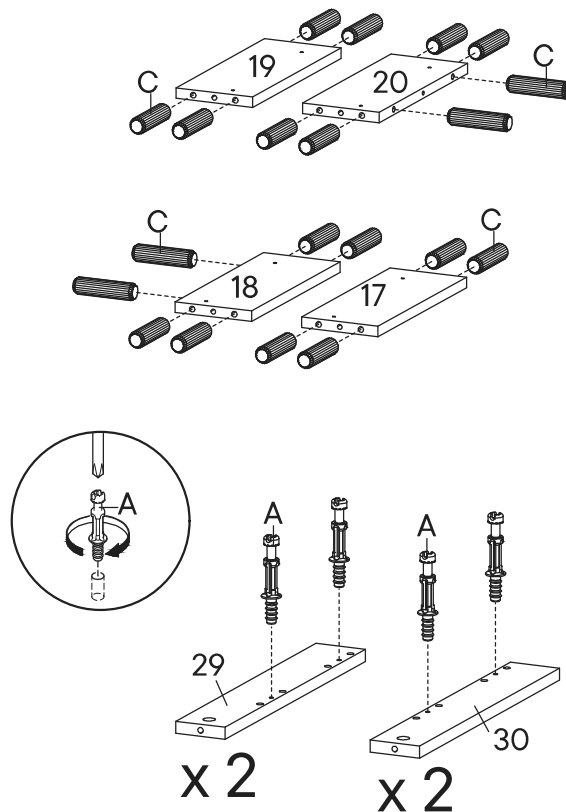

Step 11

COMPONENTS


17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1
19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1
29	Support Board 1	x2
30	Support Board 2	x2

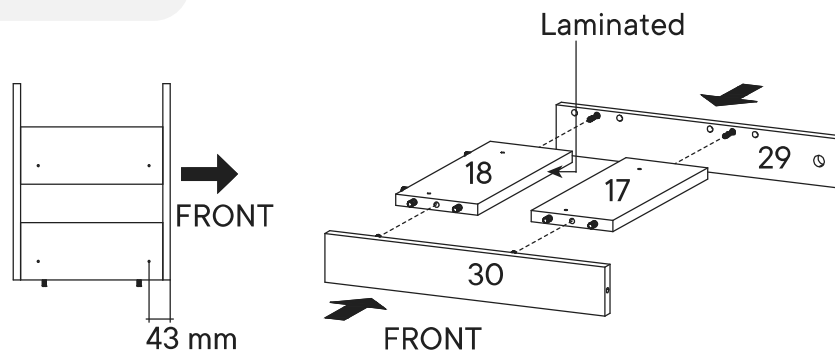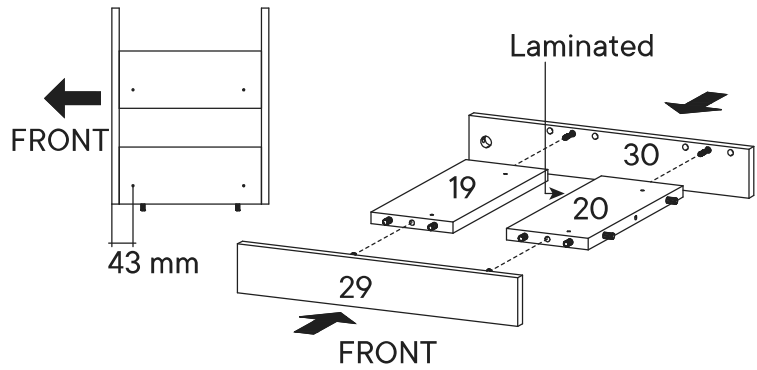

Step 12

HARDWARE

B	Cam Lock Ø15 mm	x8
---	-----------------	----

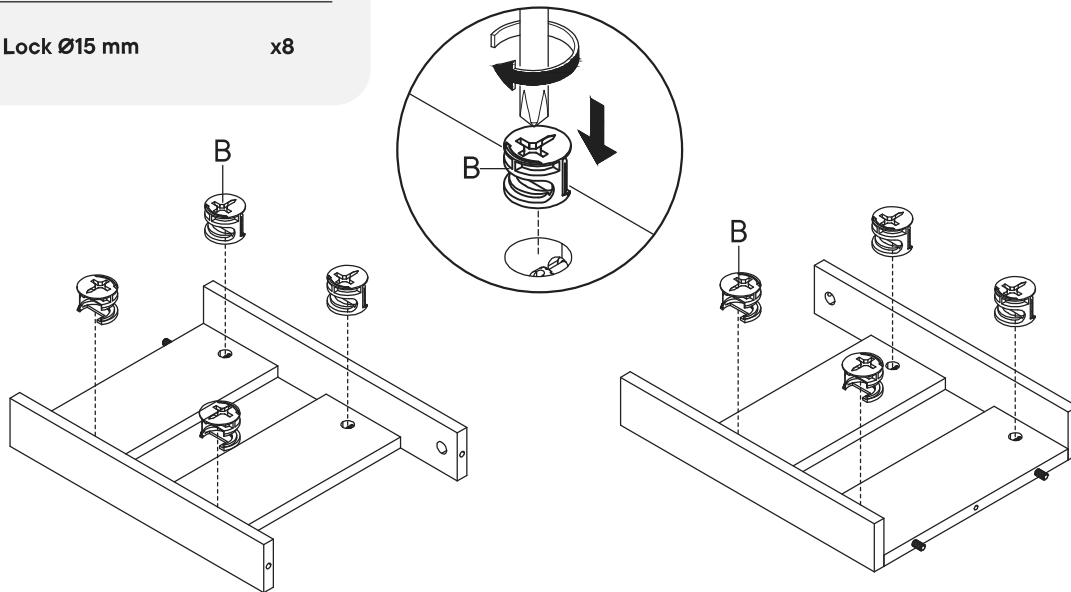


Step 13

HARDWARE

Z Screw M 6 x 10.5 mm x8


RM30A Drawer Runner x2

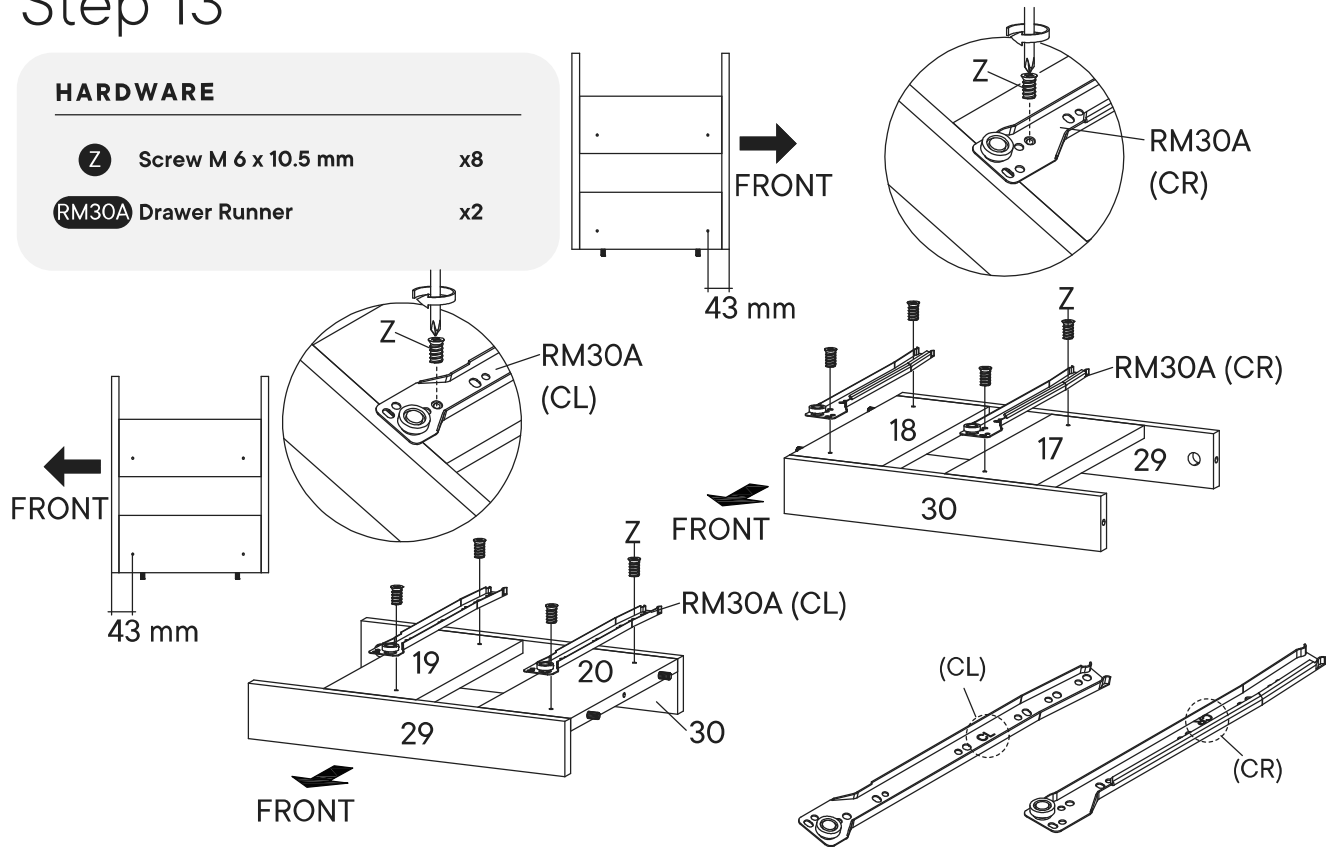

Step 14

HARDWARE

B Cam Lock Ø15 mm x4

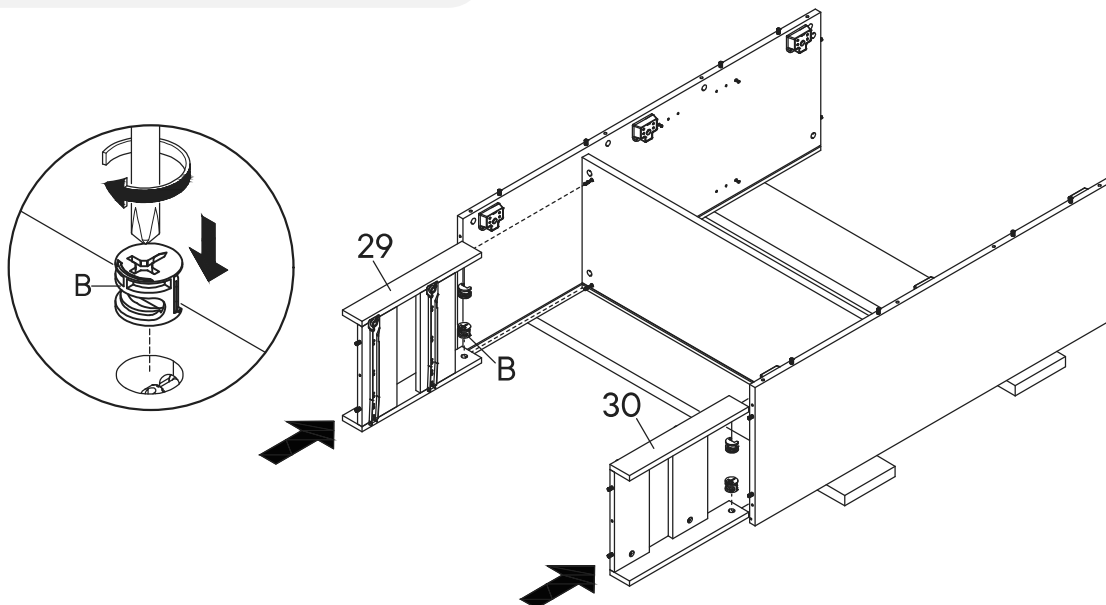



Step 15

HARDWARE

- L** Allen Key x1
- O** Screw M 7 x 50 mm x6

COMPONENTS

- 2** Bottom Board x1
- 32** Back Board 2 x1

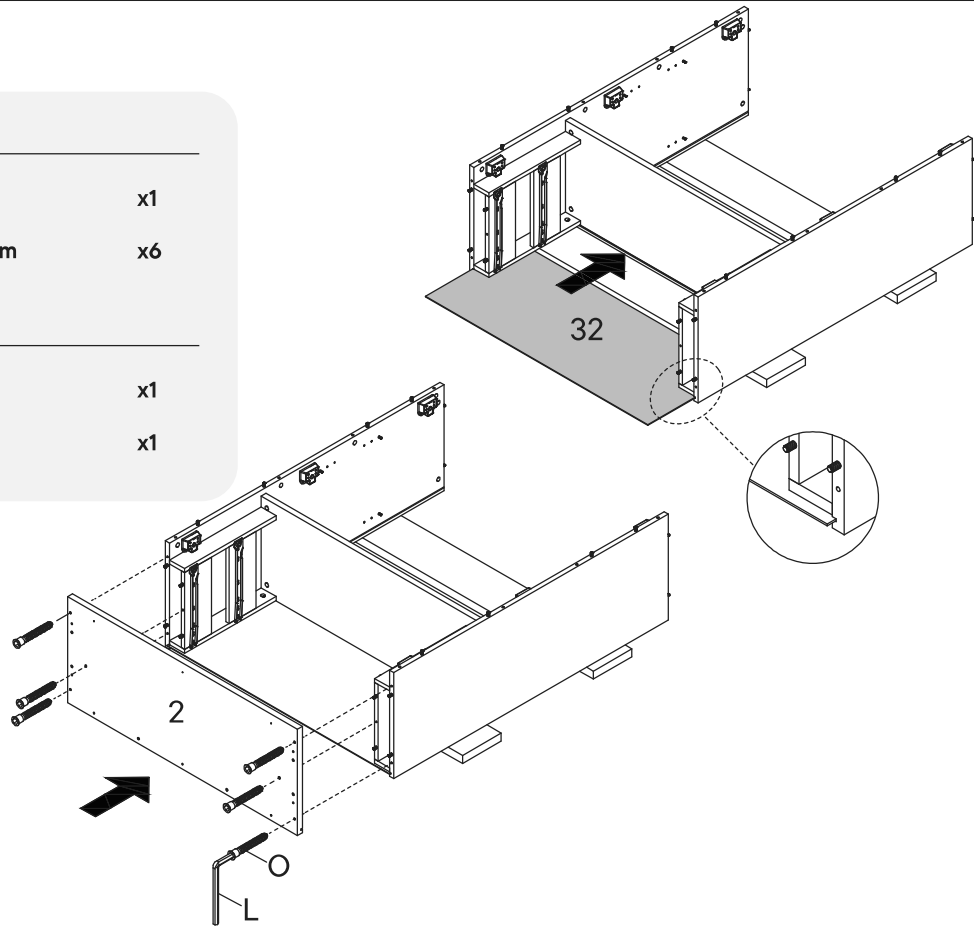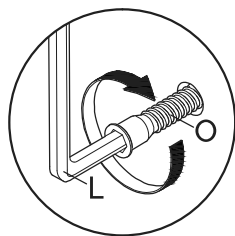



Step 16

HARDWARE

- B** Cam Lock Ø15 mm x8

COMPONENTS

- 13** Front Skirt 1 x1
- 14** Front Skirt 2 x1

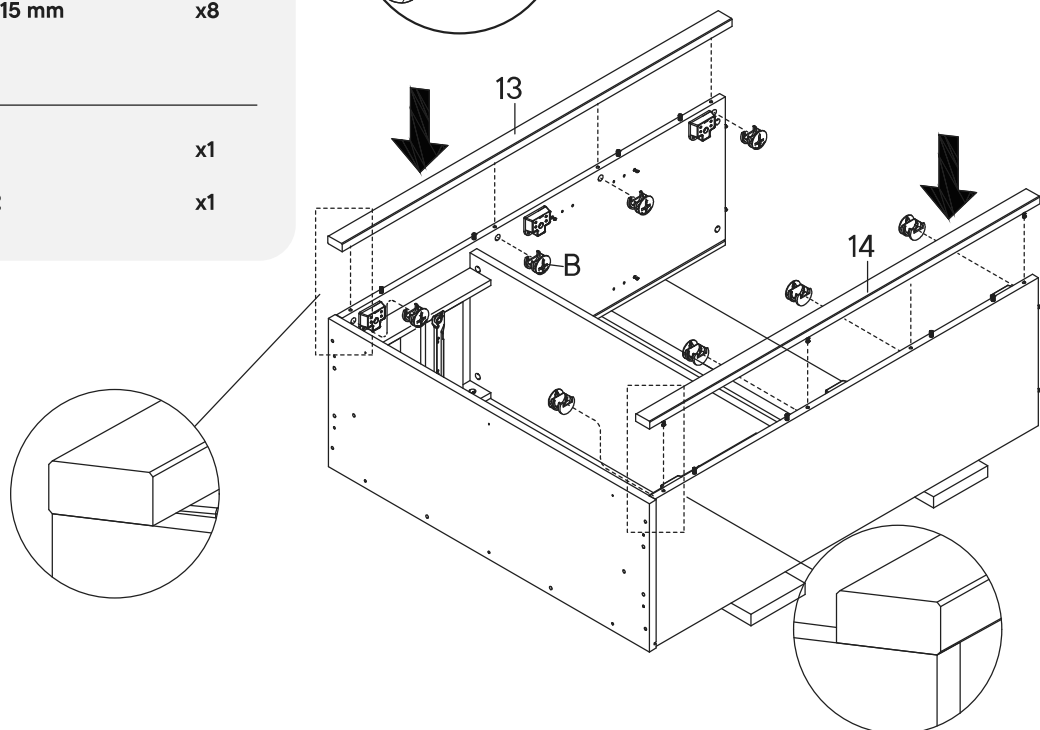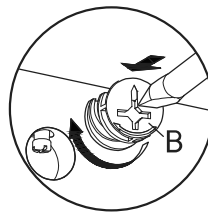

Step 17


HARDWARE

H Screw M 4.5 x 12.5 mm x12

BC410 Corner Brace x4

COMPONENTS

11 Bottom Skirt 3 x2

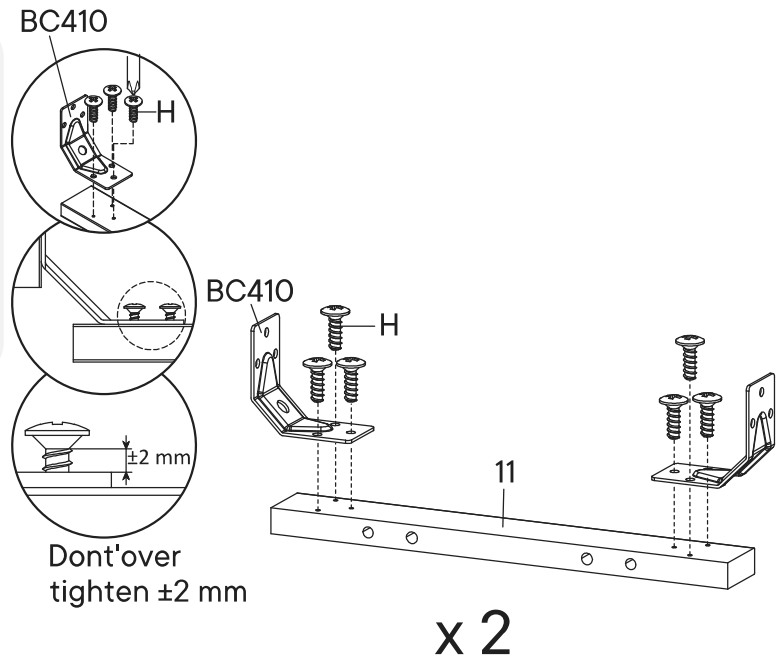

Step 18

HARDWARE


D Screw M 6.4 x 14 mm x3

L Allen Key x1

Q Plate x3

COMPONENTS

9 Bottom Skirt 1 x1

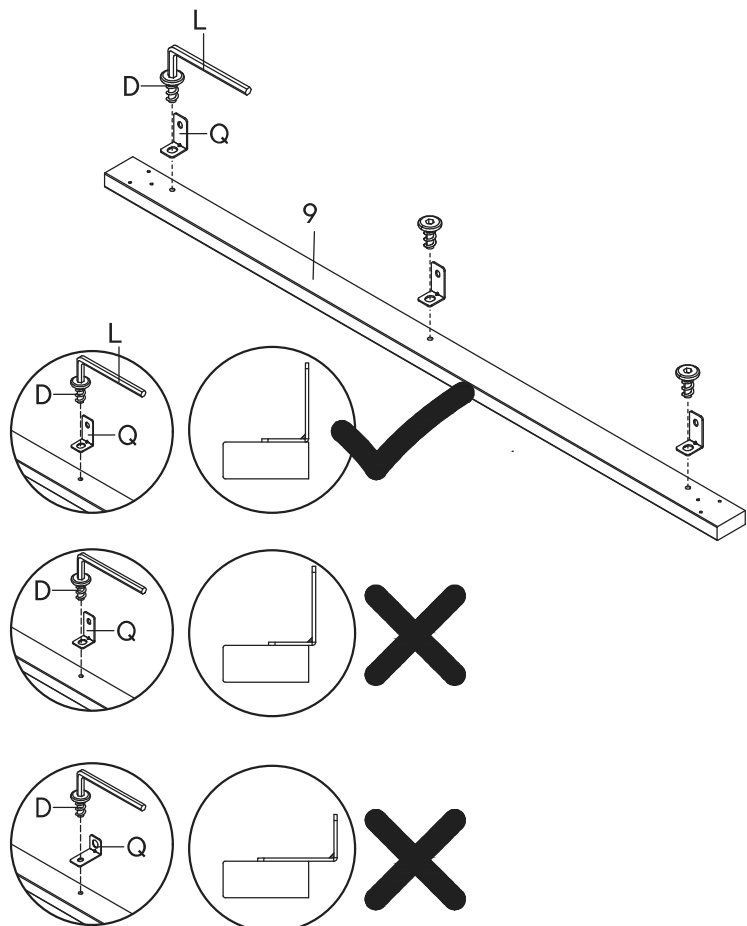

Step 19




HARDWARE

H Screw M 4.5 x 12.5 mm x6

COMPONENTS

10 Bottom Skirt 2 x1

11 Bottom Skirt 3 x2

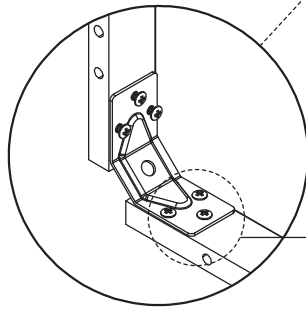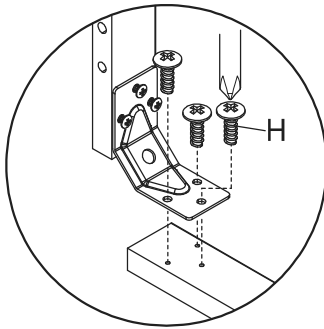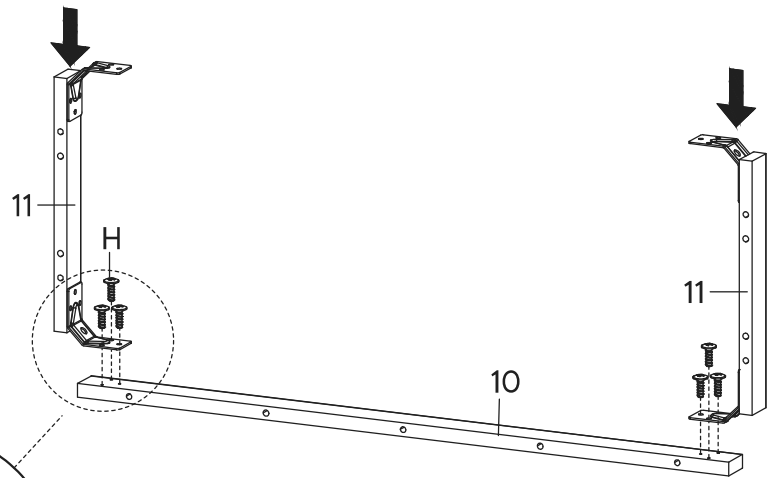

Only this screw is tightened





Step 20

HARDWARE

H Screw M 4.5 x 12.5 mm x6

COMPONENTS

9 Bottom Skirt 1 x1

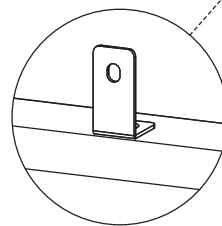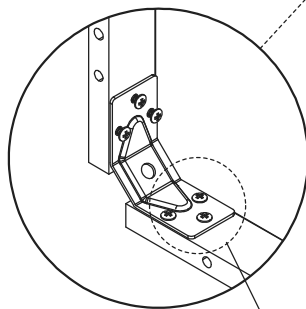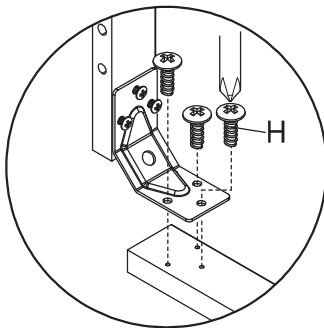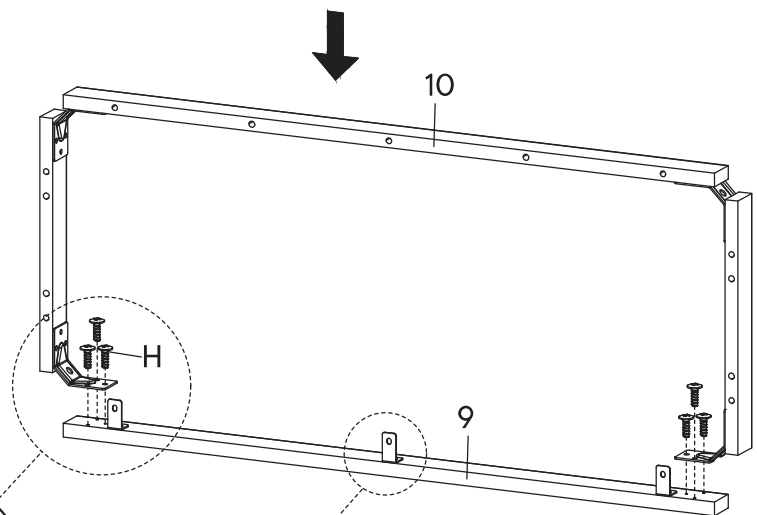


Only this screw is tightened

Step 21

HARDWARE



- C** Wood Dowel Ø8 x 30 mm x6

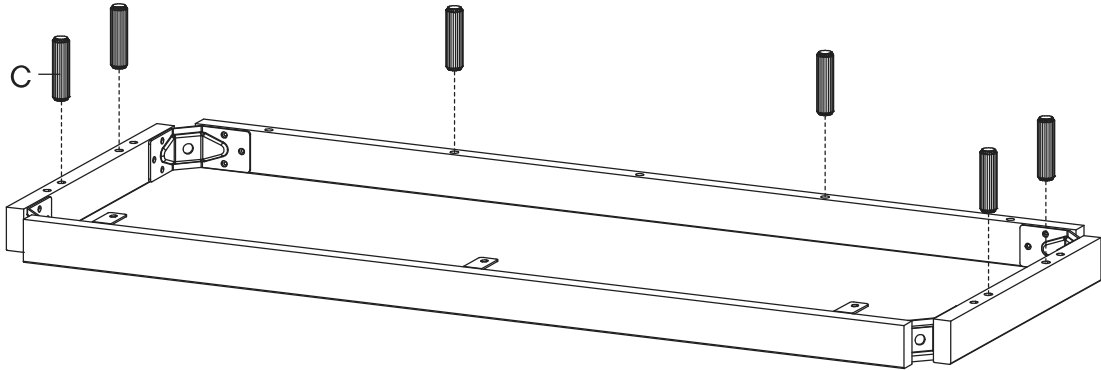

Step 22

HARDWARE

- L** Allen Key x1
R Screw M 6.4 x 53 mm x7

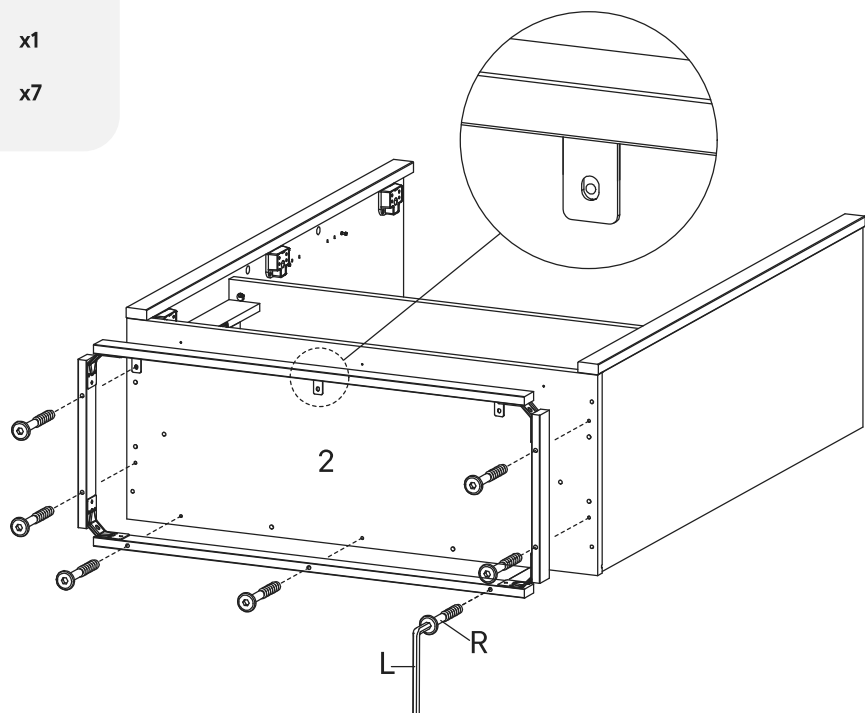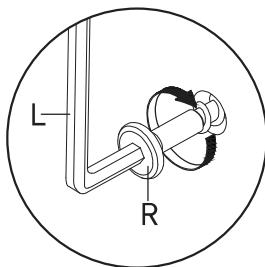




Step 23

HARDWARE

- W** Flange Nut x4
- X** Wrench x1

COMPONENTS



- 12** Leg x4

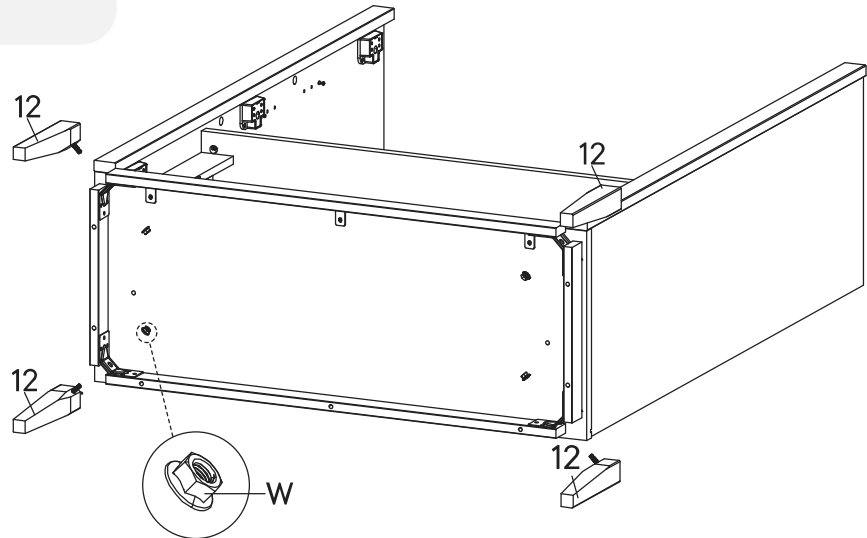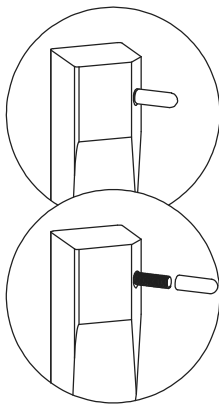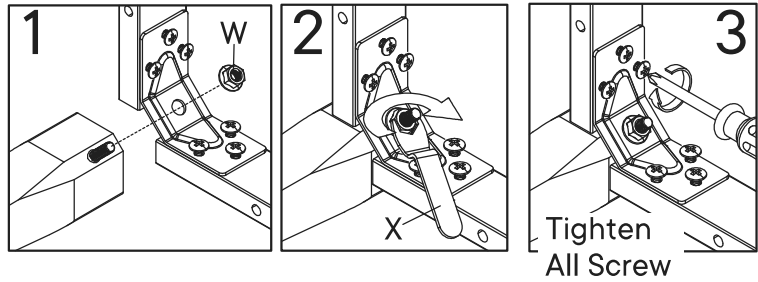

Step 24

HARDWARE

- H** Screw M 4.5 x 12.5 mm x3
- T** Floor Protector x4

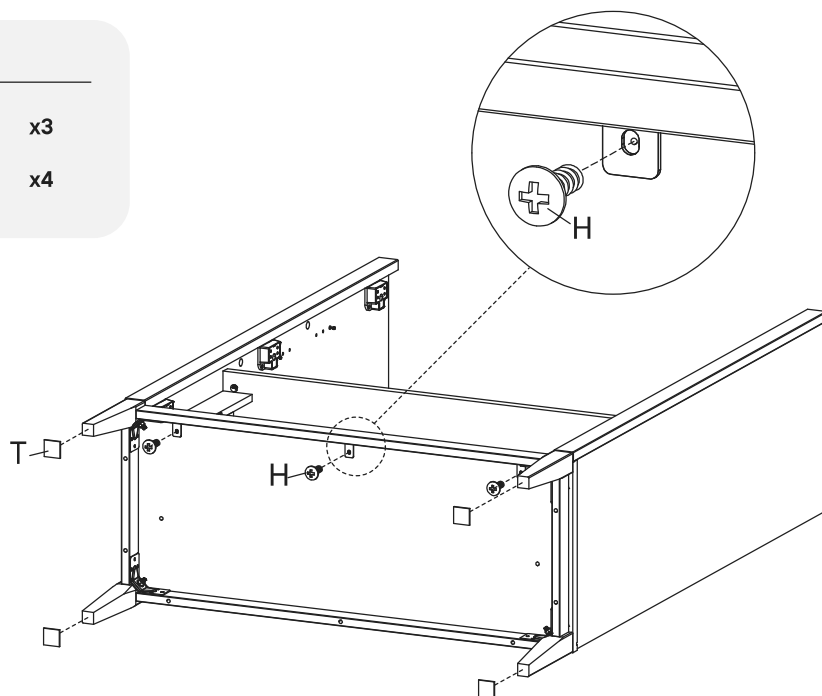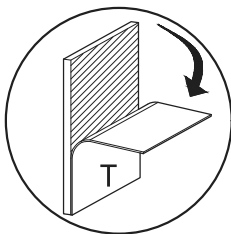






Step 25

HARDWARE

E Joining Strip x1

COMPONENTS

31 Back Board 1 x2

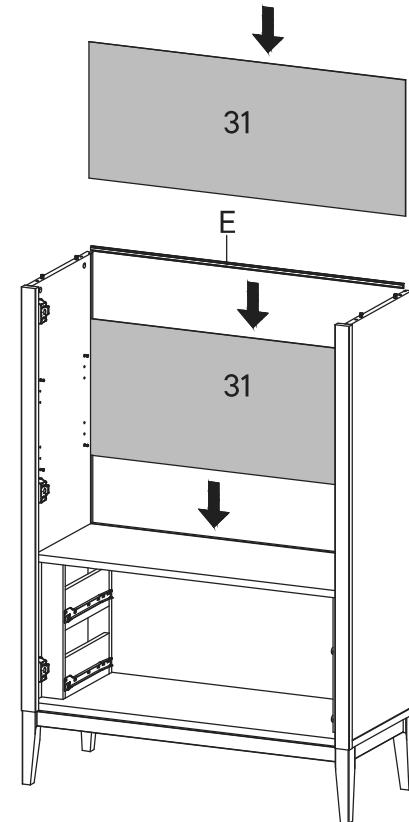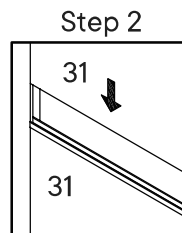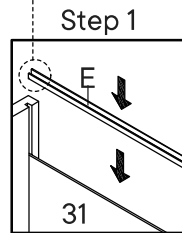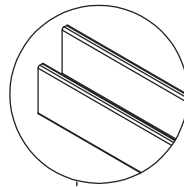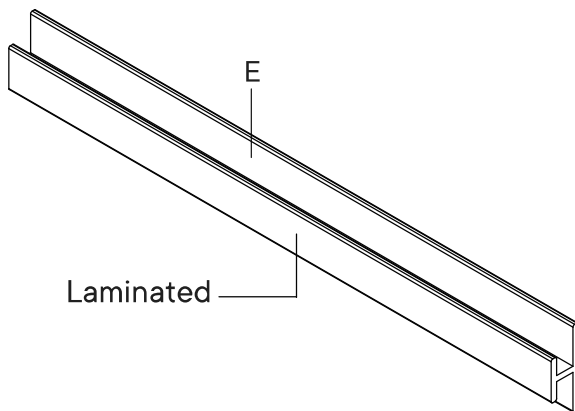

Step 26

HARDWARE

A Cam Bolt $\varnothing 6 \times 35$ mm x8

C Wood Dowel $\varnothing 8 \times 30$ mm x5





COMPONENTS

1 Top Board x1


5 Front Board Hutch x1

6 Support Board Hutch x3

7 Back Board Hutch x1

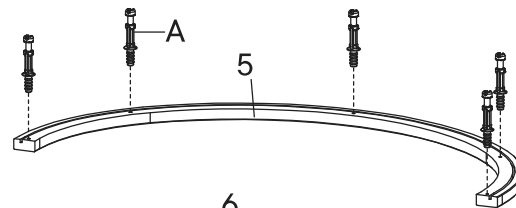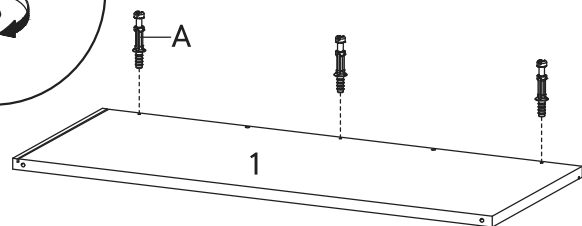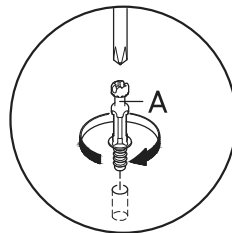

x 3



Step 27


HARDWARE

B Cam Lock Ø15 mm x3

COMPONENTS

5 Front Board Hutch x1

6 Support Board Hutch x3

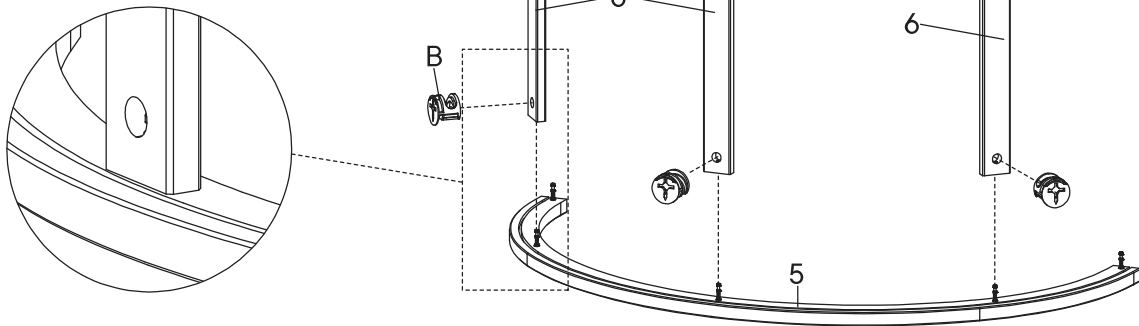


Step 28

HARDWARE

Y Screw M 8 x 39 mm x3

COMPONENTS


7 Back Board Hutch x1

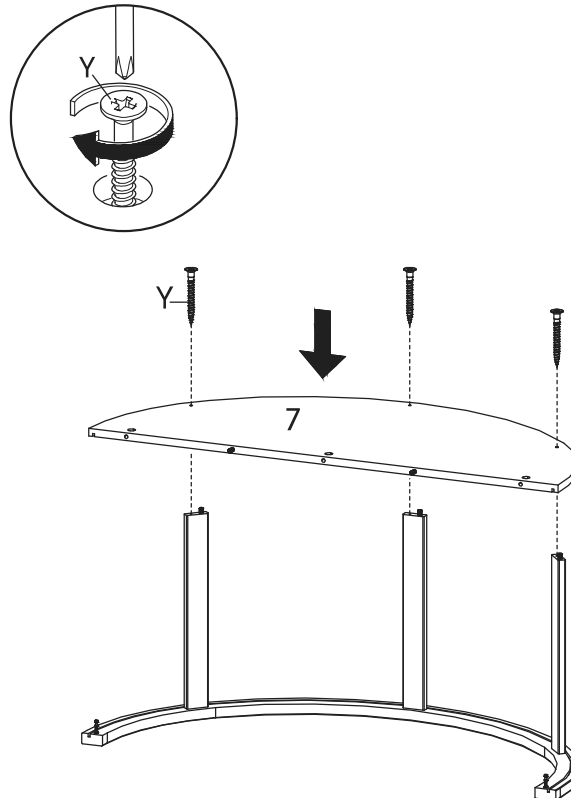

Step 29

COMPONENTS

8 PVC Board x1

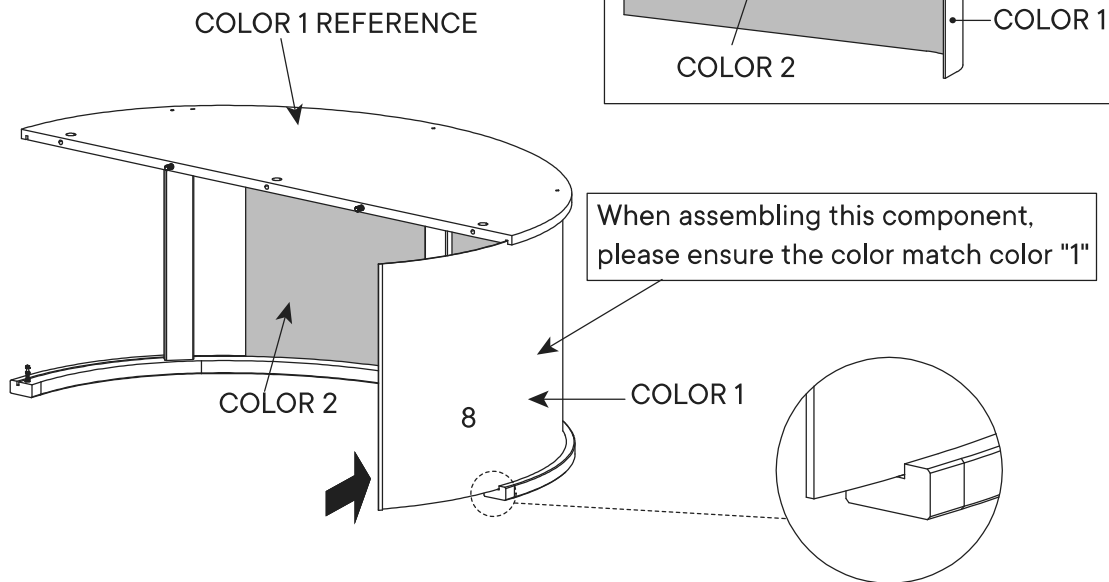


Step 30

HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS


1 Top Board x1

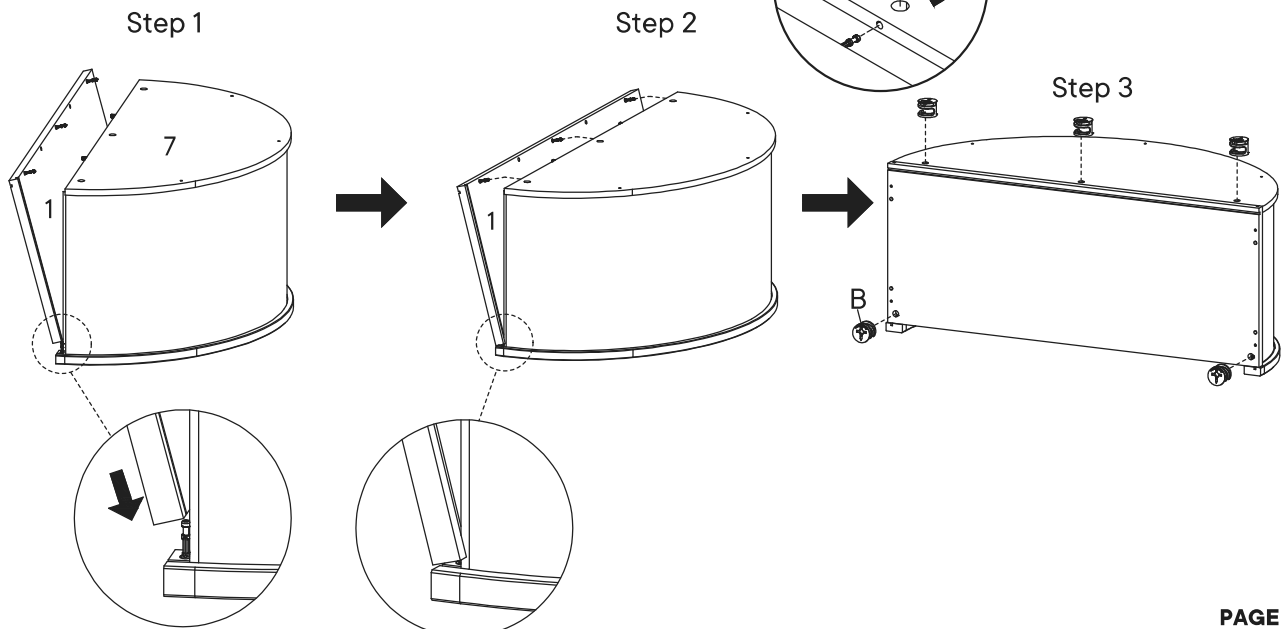

Step 31

HARDWARE


- A** Cam Bolt Ø6 x 35 mm x4

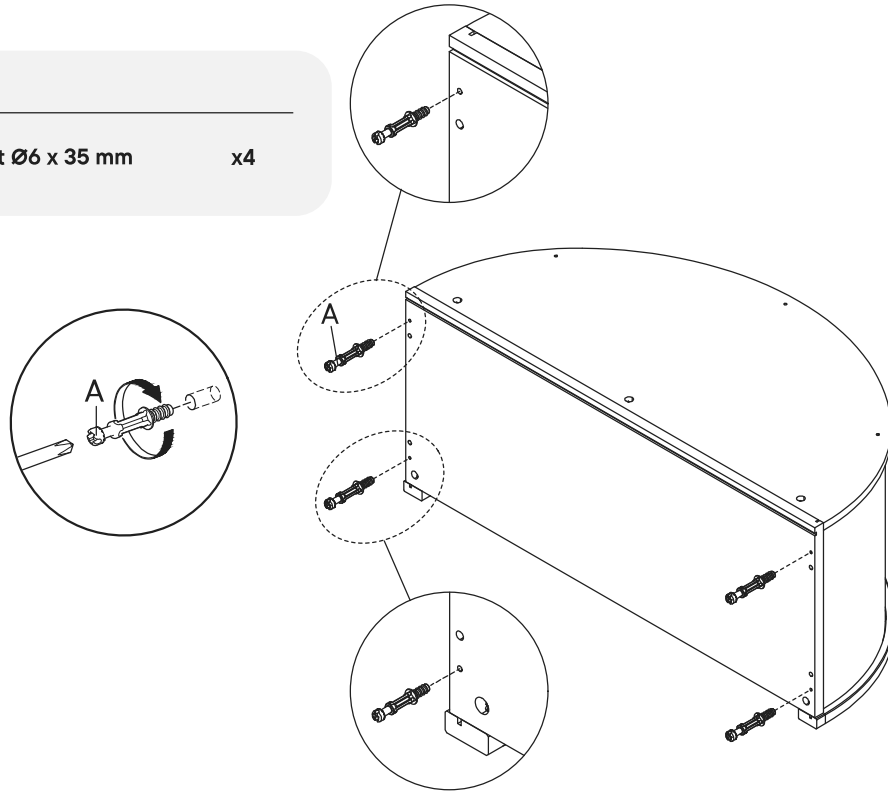



Step 32

HARDWARE

- B** Cam Lock Ø15 mm x4
G Screw Cap Ø15 mm x4

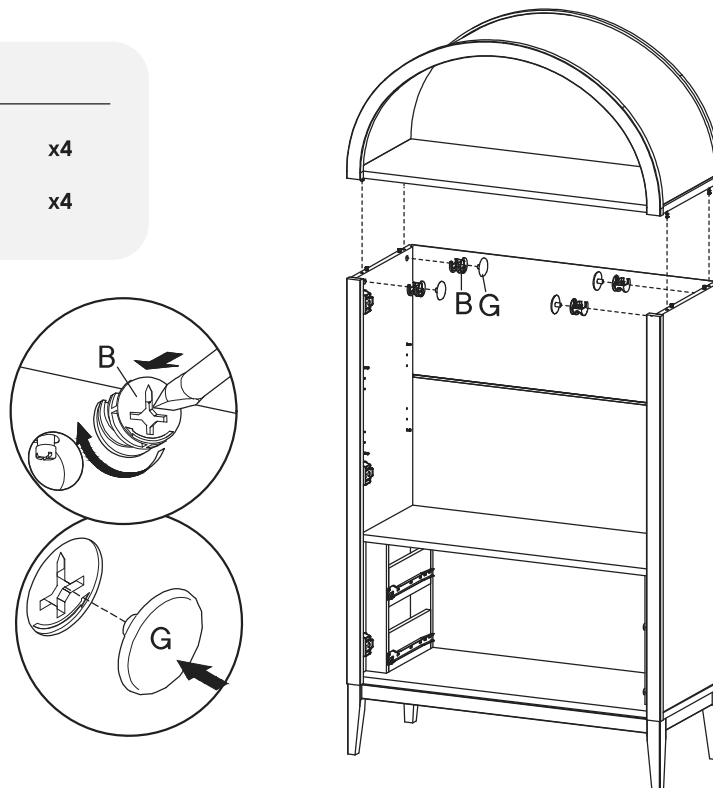



Step 33

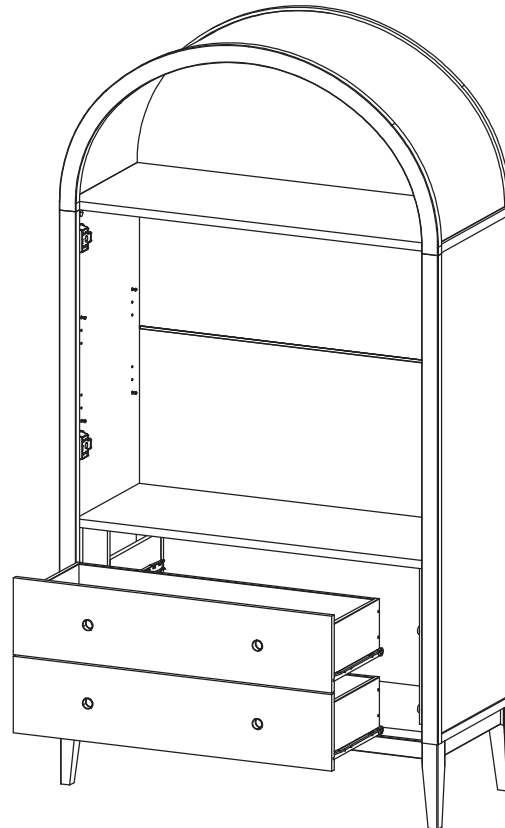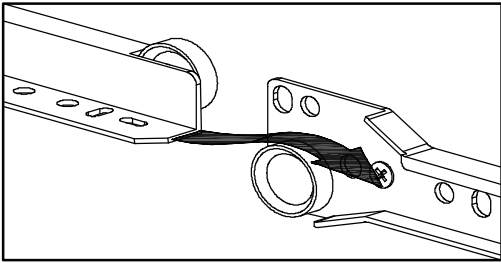

Step 34

COMPONENTS

27 Adjustable Shelf x2

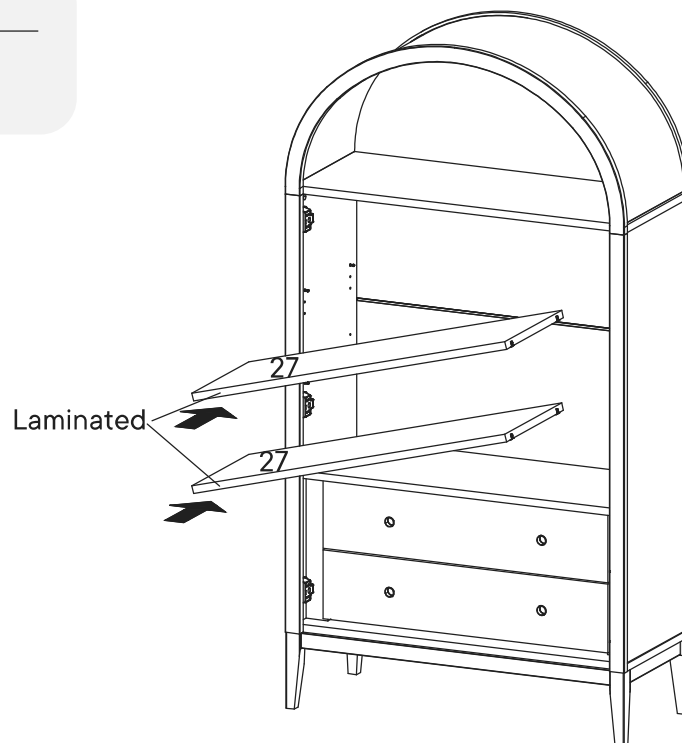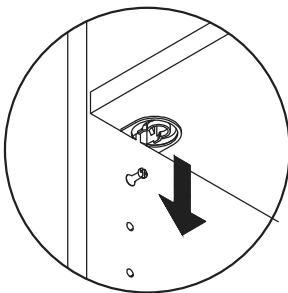


Step 35

HARDWARE

H	Screw M 4.5 x 12.5 mm	x12
HS26C	Hinge	x6

COMPONENTS

15	Door Left	x1
16	Door Right	x1

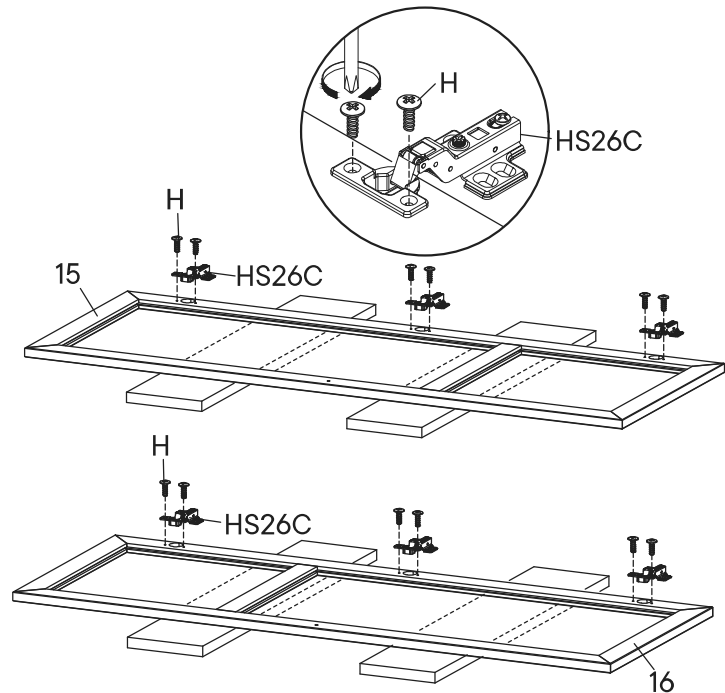






Step 36

HARDWARE

H	Screw M 4.5 x 12.5 mm	x24
I	Handle	x2
J	Screw M 4 x 22 mm	x2
G	Screw Cap Ø15 mm	x8
AC	Silicon Bumper	x4

COMPONENTS


15	Door Left	x1
16	Door Right	x1

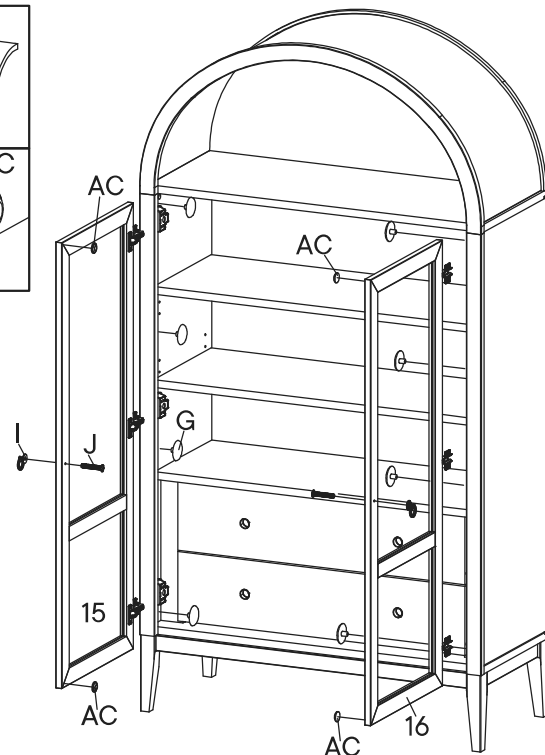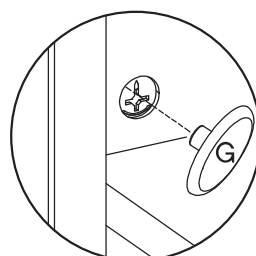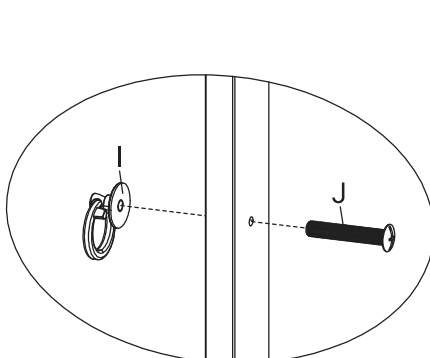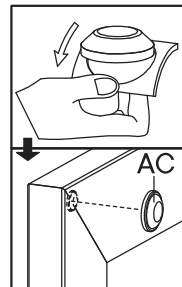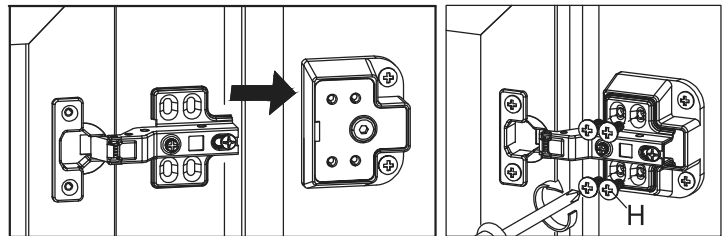

Step 37

HARDWARE


- | | | |
|----------|-----------------------|-----|
| M | Wedge | x22 |
| N | Screw M 3.5 x 15.5 mm | x22 |

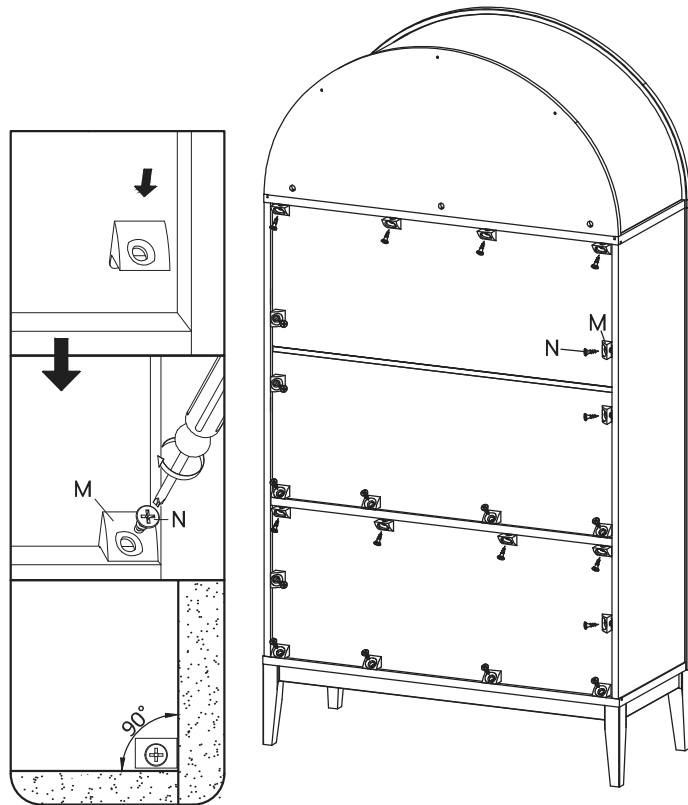

Step 38

HARDWARE

- | | | |
|-----------|------|----|
| AB | List | x2 |
|-----------|------|----|

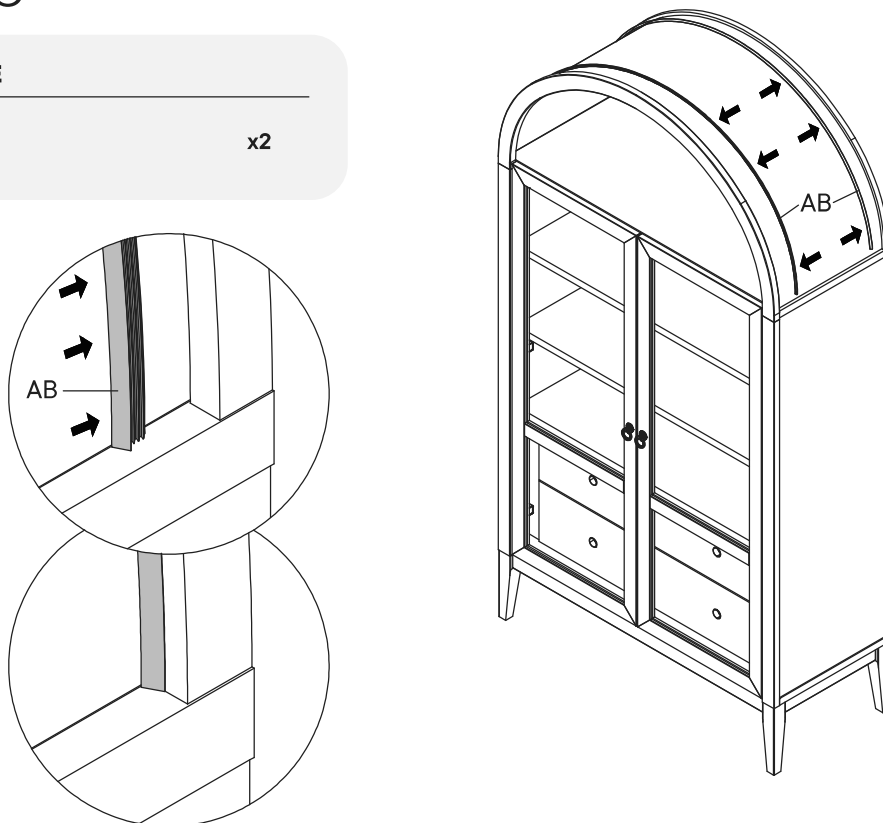

Great job!

Bookcase assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.



Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!


Tag us **@modway_furniture** and **#modway** for a chance to be featured.

Cabinet Door Alignment

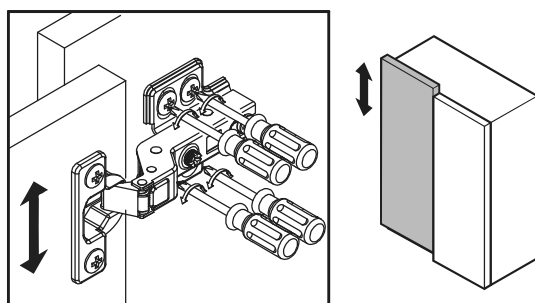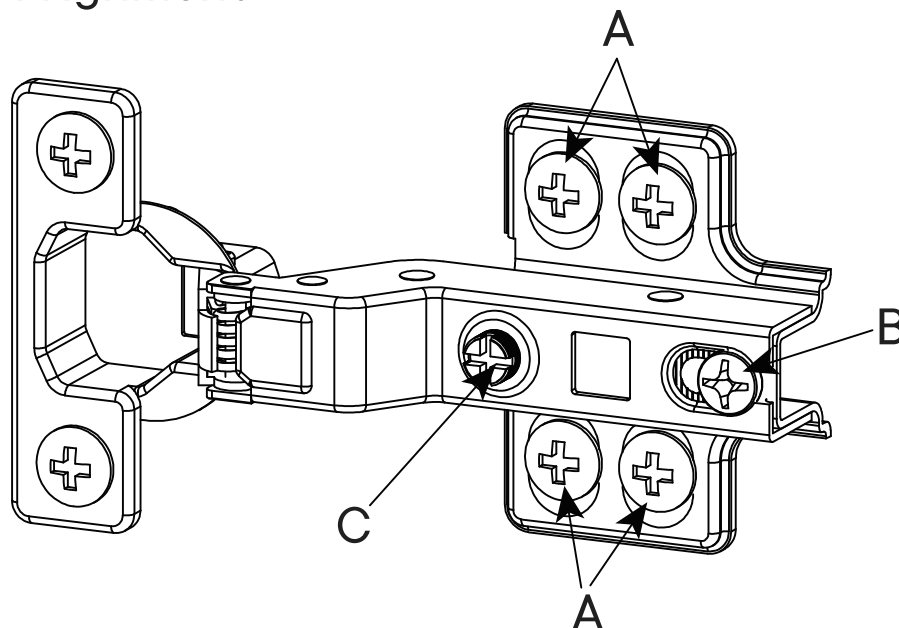


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

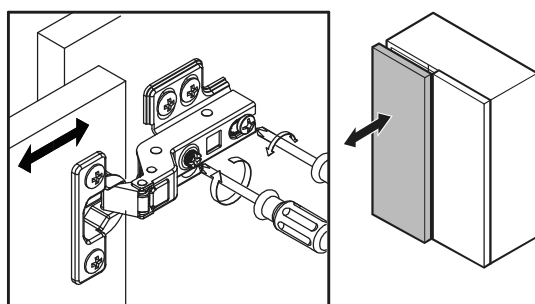

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

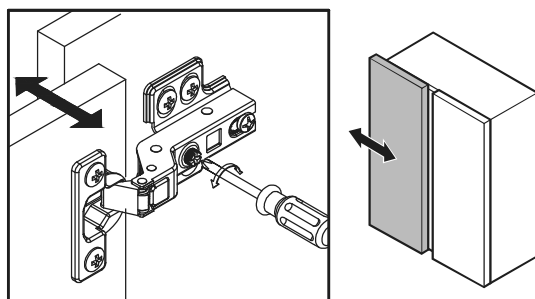

To adjust side ways.



Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

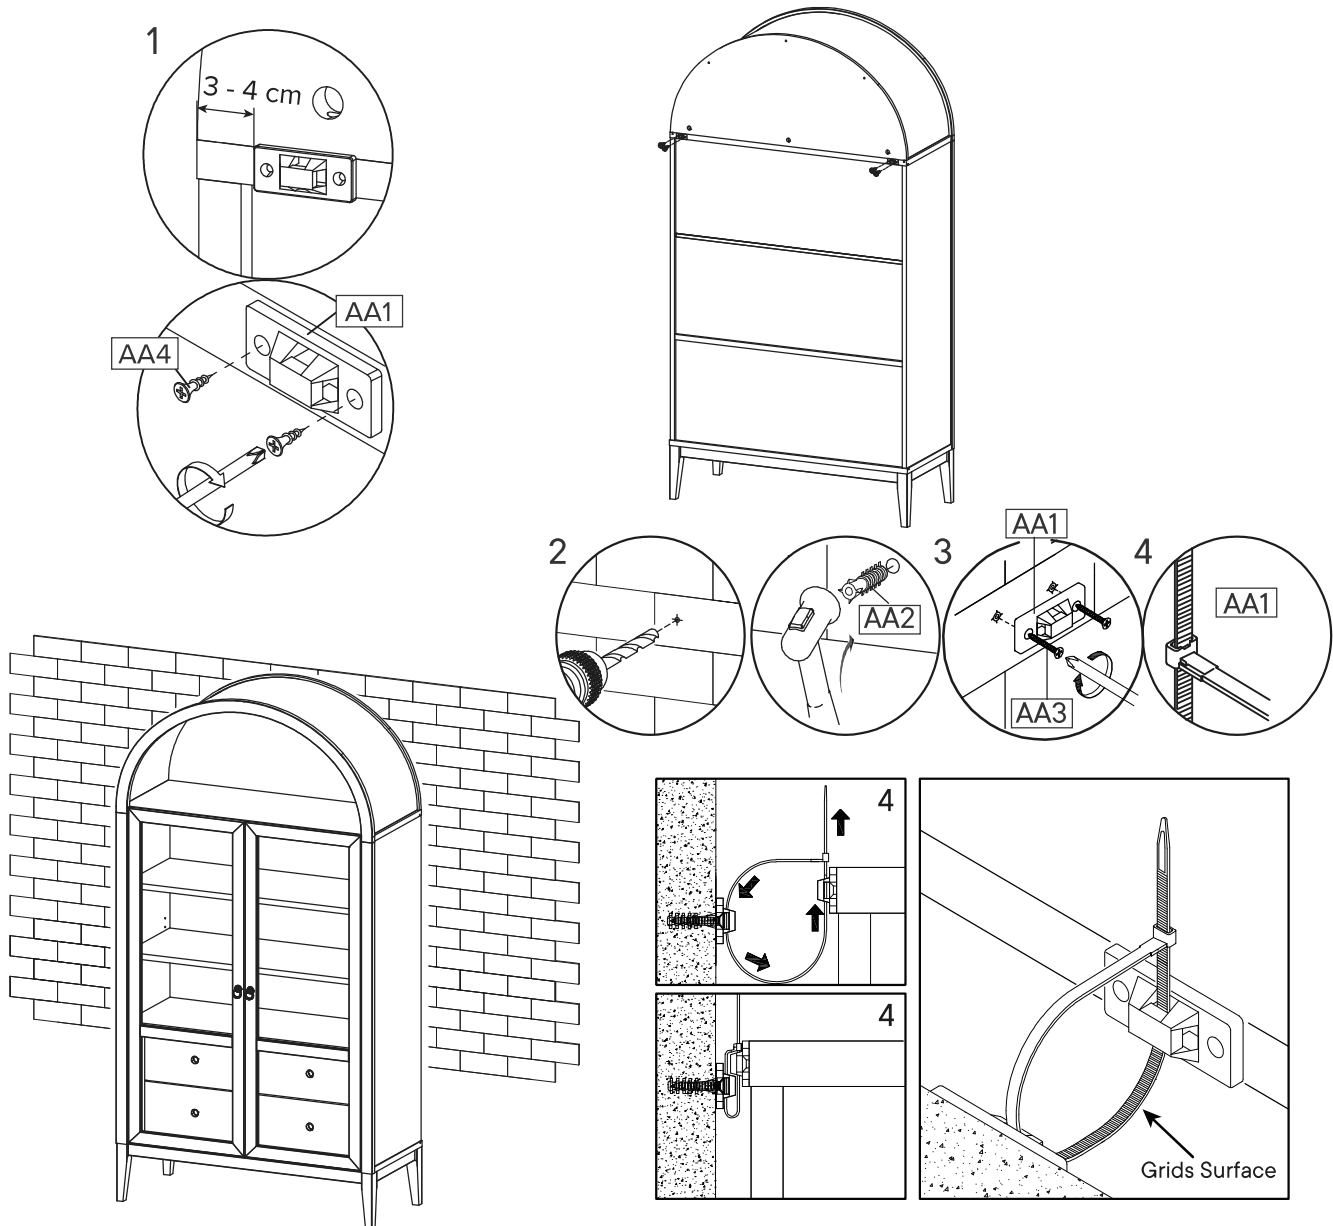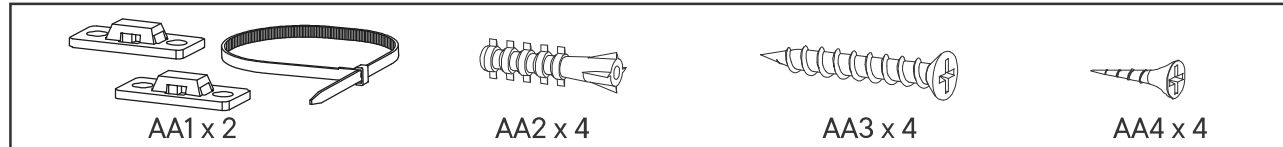

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.