

ASSEMBLY INSTRUCTIONS

EEI-6639

V2.01.21.25



Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.



Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:



1	Top Board	x1	10	Support Board 1 Hutch	x2	19	Side Board Drawer 3	x1
2	Bottom Board	x1	11	Support Board 2 Hutch	x3	20	Side Board Drawer 4	x1
3	Side Board Left	x1	12	Front Board Hutch	x1	21	Front Drawer	x2
4	Side Board Right	x1	13	Back Board Hutch	x1	22	Side Drawer Left	x2
5	Adjustable Shelf	x2	14	PVC Board	x1	23	Side Drawer Right	x2
6	Fixed Shelf	x1	15	Support Board 1	x2	24	Back Drawer	x2
7	Bottom Skirt	x1	16	Support Board 2	x2	25	Bottom Drawer	x2
8	Door Left	x1	17	Side Board Drawer 1	x1	26	Back Board 1	x2
9	Door Right	x1	18	Side Board Drawer 2	x1	27	Back Board 2	x1

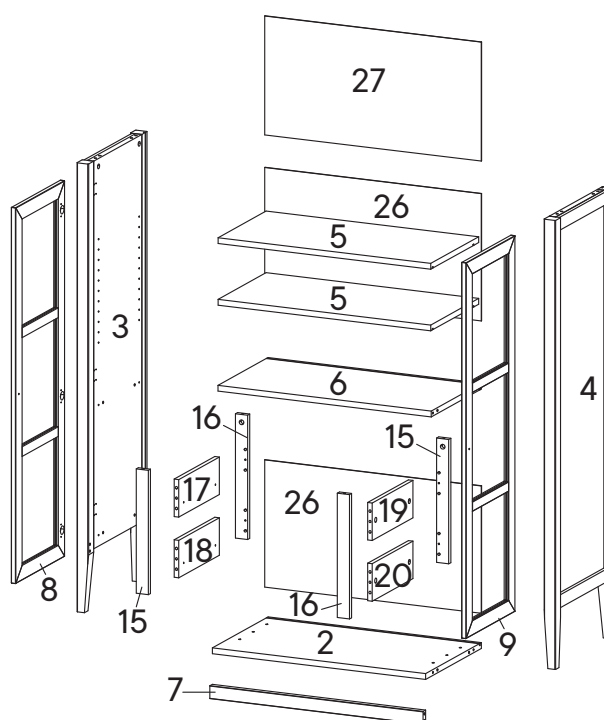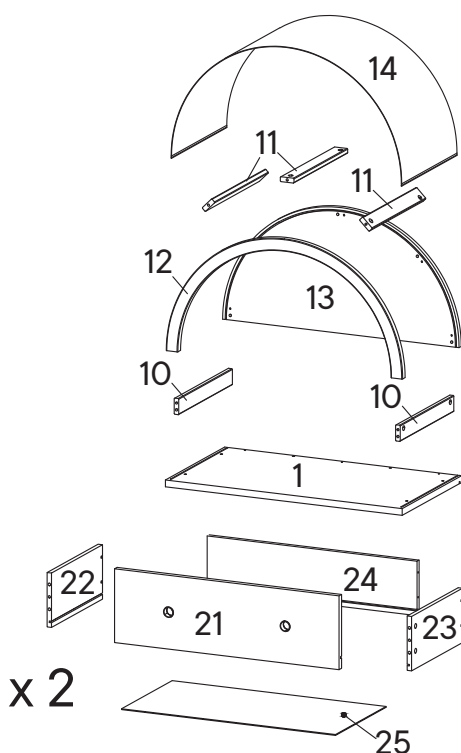

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x45	L		Screw M 4.5 x 12.5 mm	x37	W		Plate	x1
B		Cam Lock Ø15 mm	x37	M		Wedge	x24	X		List	x2
C		Wood Dowel Ø8 x 30 mm	x45	N		Screw M 3.5 x 15.5 mm	x24	RM30A		Drawer Runner	x2
D		Screw M 6.4 x 14 mm	x1	O		Handle	x4	HS26C		Hinge	x6
E		Screw M 8 x 39 mm	x8	P		Allen Key	x2	What you need:  Phillips Head Screwdriver			
F		Shelf Pin	x8	Q		Joining Strip	x1				
G		Screw Cap Ø15 mm	x4	R		Cam Lock Ø12 mm	x8				
H		Stopper	x2	S		Wood Dowel Ø6 x 30 mm	x4				
I		Handle	x2	T		Screw M 7 x 50 mm	x6				
J		Screw M 4 x 20 mm	x2	U		Screw M 6 x 10.5 mm	x8				
K		Floor Protector	x4	V		Screw M 3.5 x 13 mm	x12				

Components Carton Placement

Carton 1 of 2

Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
8	Door Left	x1
9	Door Right	x1
14	PVC Board	x1
26	Back Board 1	x2
27	Back Board 2	x1
	Hardware Pack	x1

Carton 2 of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
5	Adjustable Shelf	x2
6	Fixed Shelf	x1
7	Bottom Skirt	x1
10	Support Board 1 Hutch	x2
11	Support Board 2 Hutch	x3
12	Front Board Hutch	x1
13	Back Board Hutch	x1
15	Support Board 1	x2
16	Support Board 2	x2
17	Side Board Drawer 1	x1

Label	Description	Qty
18	Side Board Drawer 2	x1
19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1
21	Front Drawer	x2
22	Side Drawer Left	x2
23	Side Drawer Right	x2
24	Back Drawer	x2
25	Bottom Drawer	x2

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
- S** Wood Dowel Ø6 x 30 mm x4

COMPONENTS

- 21** Front Drawer x2
- 22** Side Drawer Left x2
- 23** Side Drawer Right x2

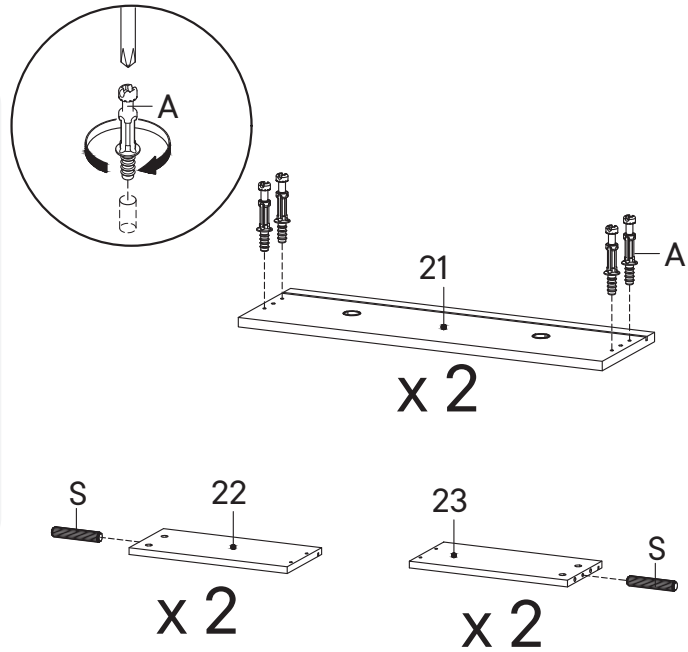


Step 2

HARDWARE

- E** Screw M 8 x 39 mm x8
- R** Cam Lock Ø12 mm x8

COMPONENTS


- 21** Front Drawer x2
- 22** Side Drawer Left x2
- 23** Side Drawer Right x2
- 24** Back Drawer x2
- 25** Bottom Drawer x2

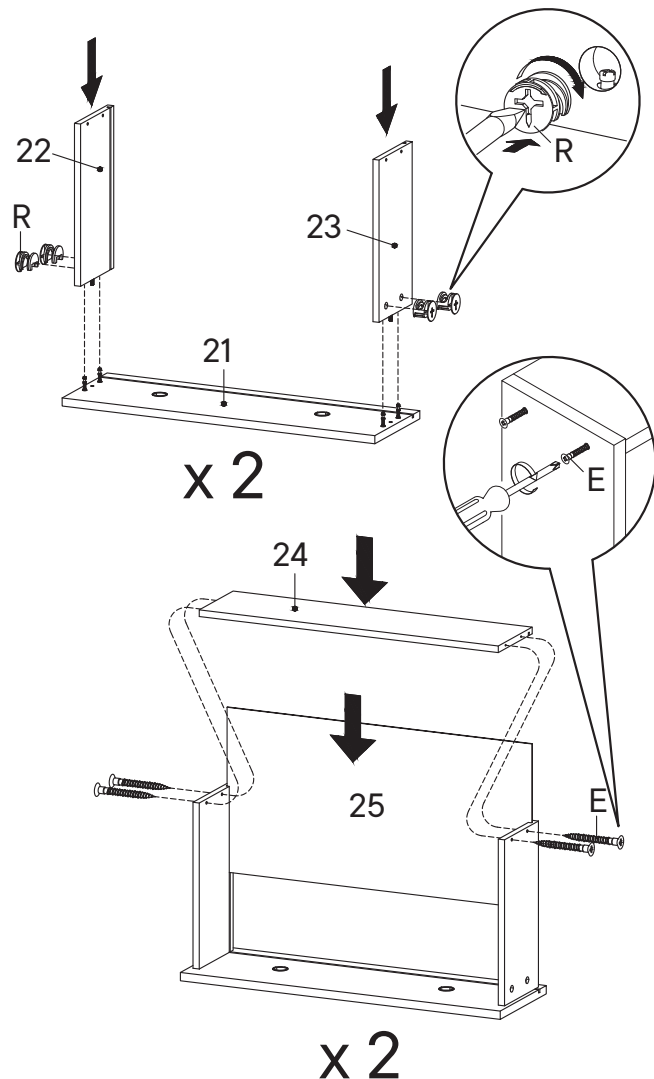

Step 3

HARDWARE



M	Wedge	x8
N	Screw M 3.5 x 15.5 mm	x8
V	Screw M 3.5 x 13 mm	x12
RM30A	Drawer Runner	x2

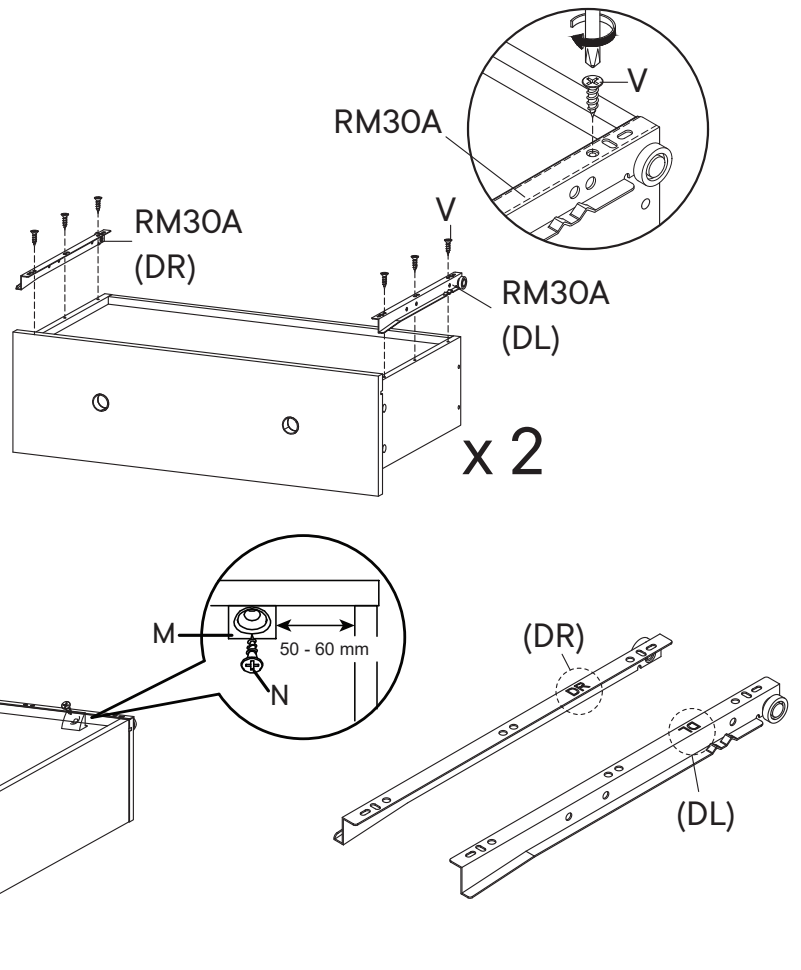

Step 4

HARDWARE

O	Handle	x4
----------	--------	----

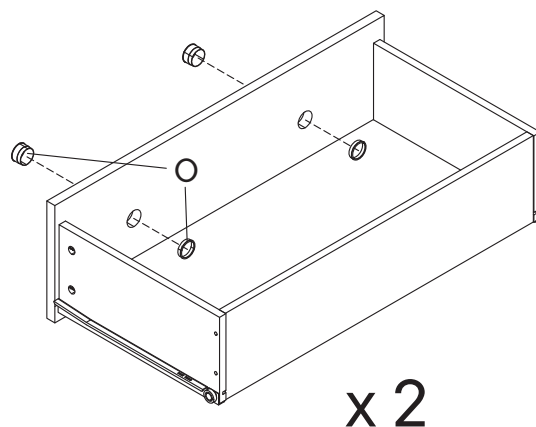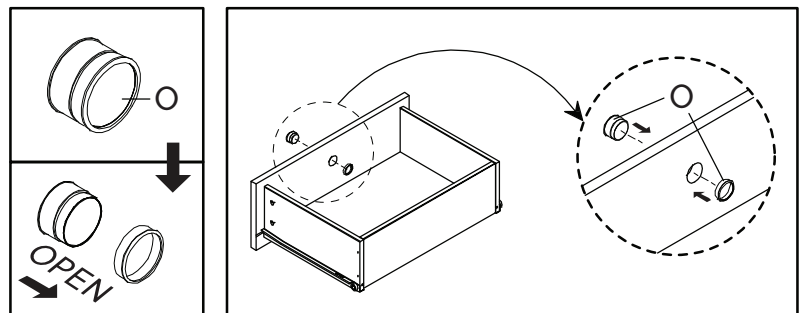


Step 5

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x8
C	Wood Dowel Ø8 x 30 mm	x4
K	Floor Protector	x4

COMPONENTS

3	Side Board Left	x1
4	Side Board Right	x1

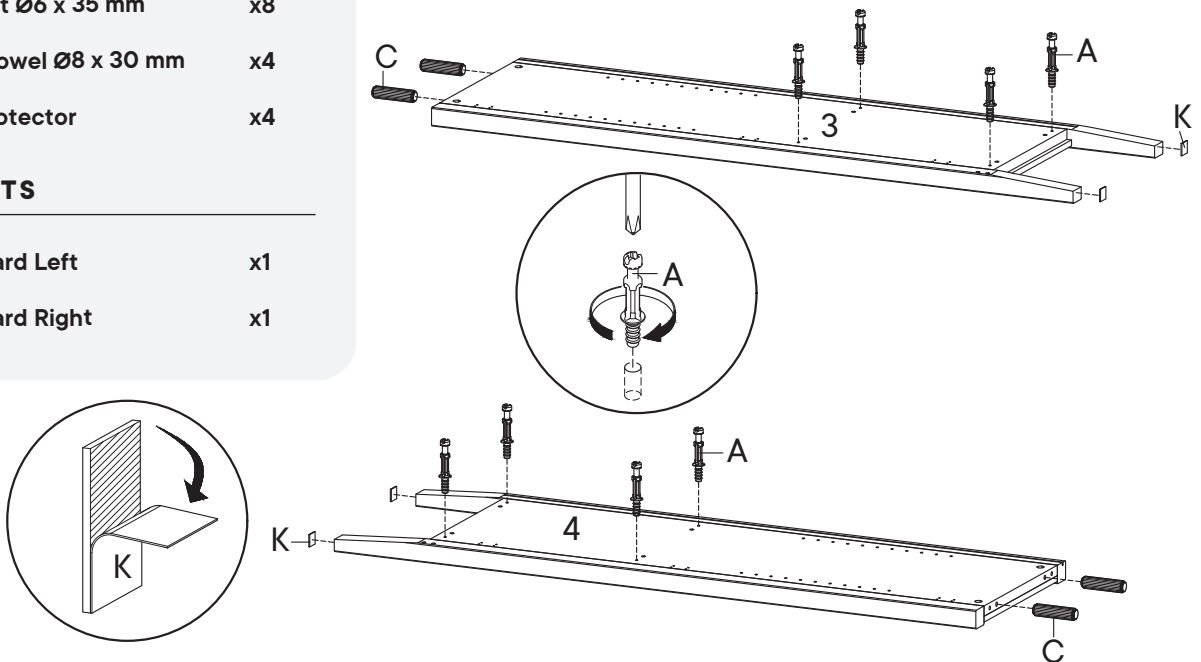


Step 6

HARDWARE

C	Wood Dowel Ø8 x 30 mm	x4
L	Screw M 4.5 x 12.5 mm	x1
W	Plate	x1

COMPONENTS

2	Bottom Board	x1
----------	--------------	----

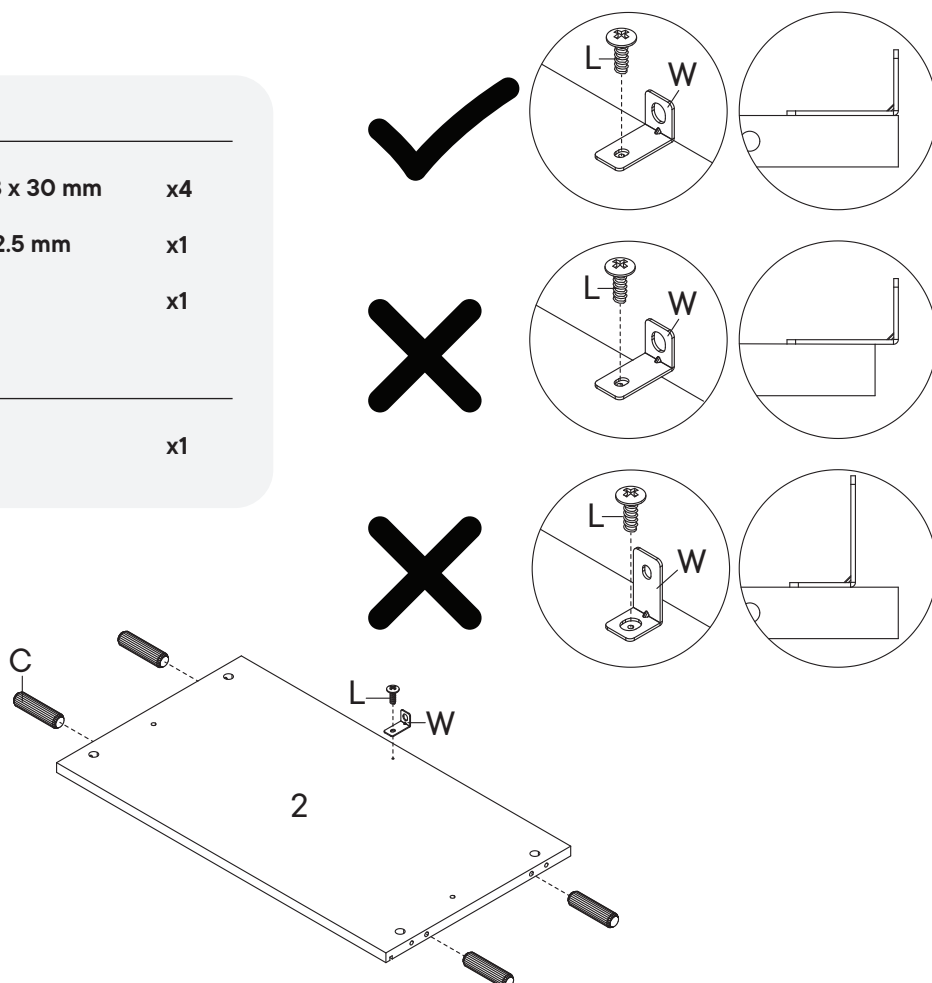


Step 7

HARDWARE

- C** Wood Dowel Ø8 x 30 mm x20

COMPONENTS

- 17** Side Board Drawer 1 x1
18 Side Board Drawer 2 x1
19 Side Board Drawer 3 x1
20 Side Board Drawer 4 x1

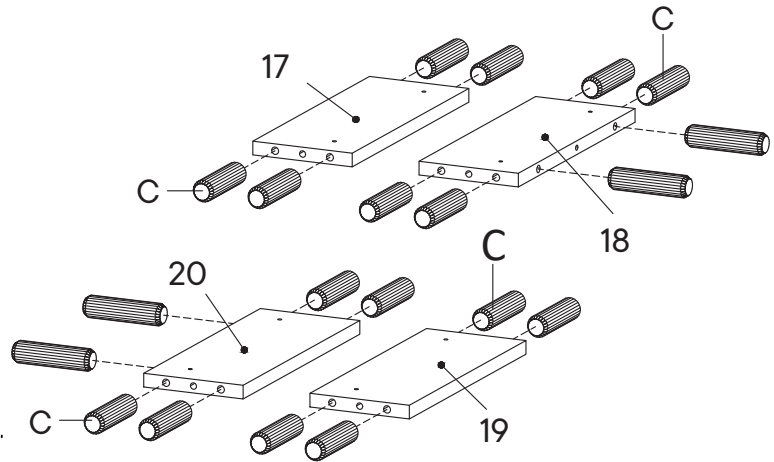



Step 8

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x15
C Wood Dowel Ø8 x 30 mm x8

COMPONENTS

- 1** Top Board x1
6 Fixed Shelf x1
7 Bottom Skirt x1
15 Support Board 1 x2
16 Support Board 2 x2

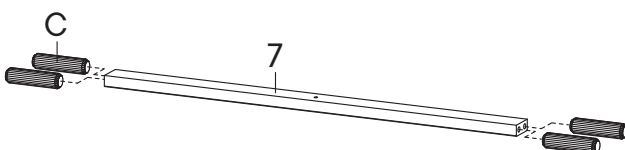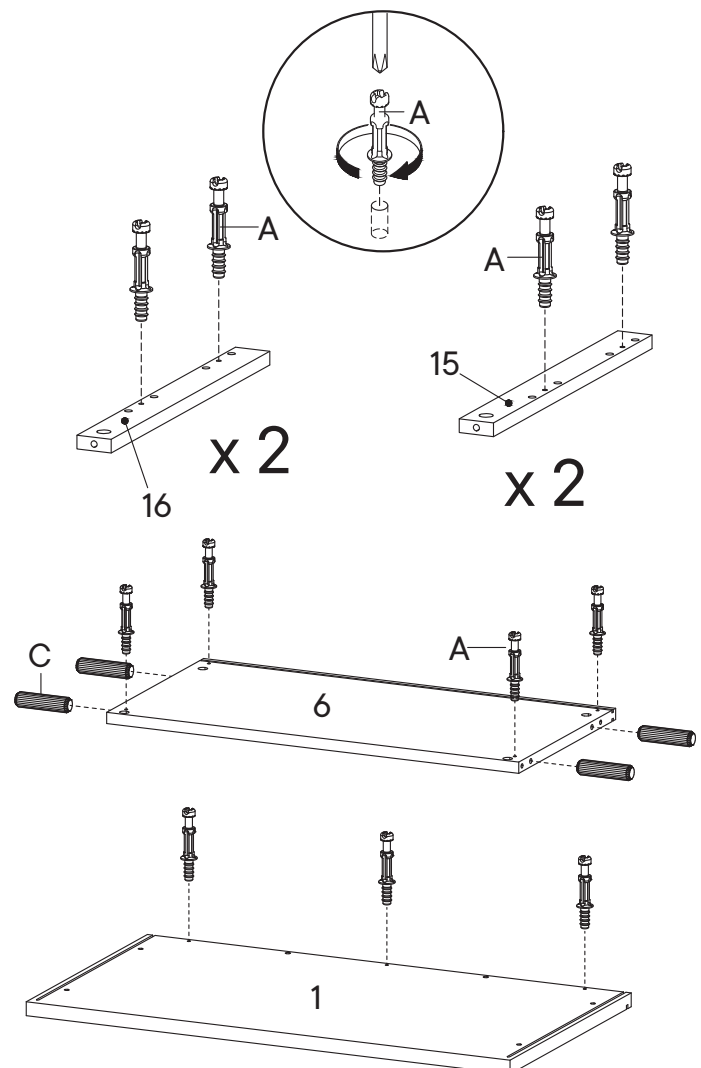




Step 9

HARDWARE

- U** Screw M 6 x 10.5 mm x4
- RM30A** Drawer Runner x2

COMPONENTS

- 15** Support Board 1 x1
- 16** Support Board 2 x1
- 17** Side Board Drawer 1 x1
- 18** Side Board Drawer 2 x1

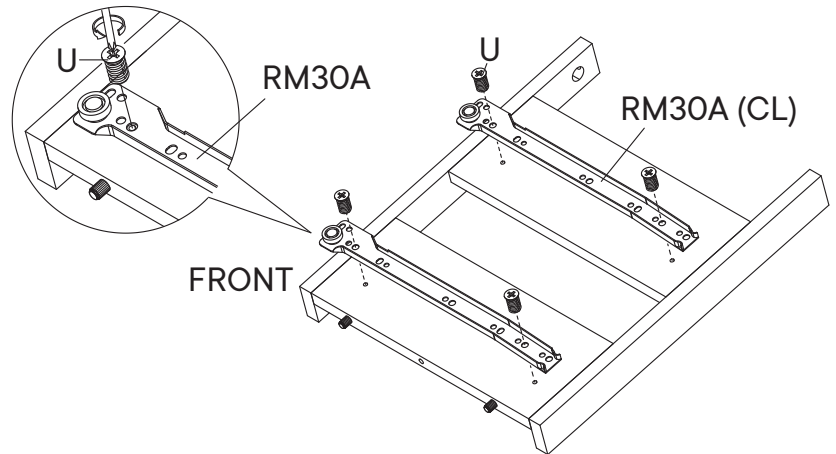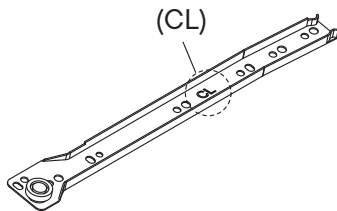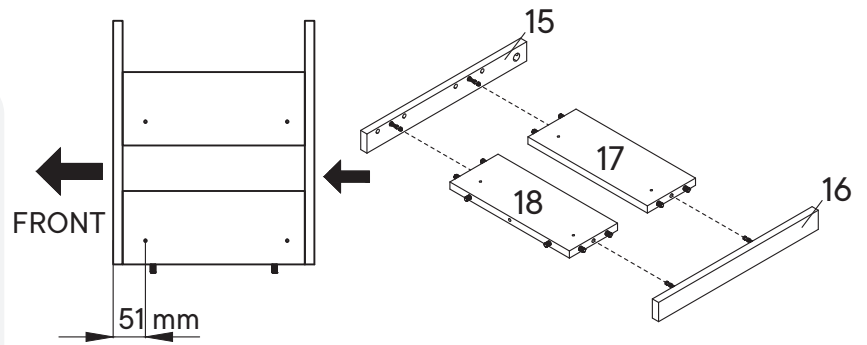




Step 10

HARDWARE

- U** Screw M 6 x 10.5 mm x4
- RM30A** Drawer Runner x2

COMPONENTS



- 15** Support Board 1 x1
- 16** Support Board 2 x1
- 19** Side Board Drawer 3 x1
- 20** Side Board Drawer 4 x1

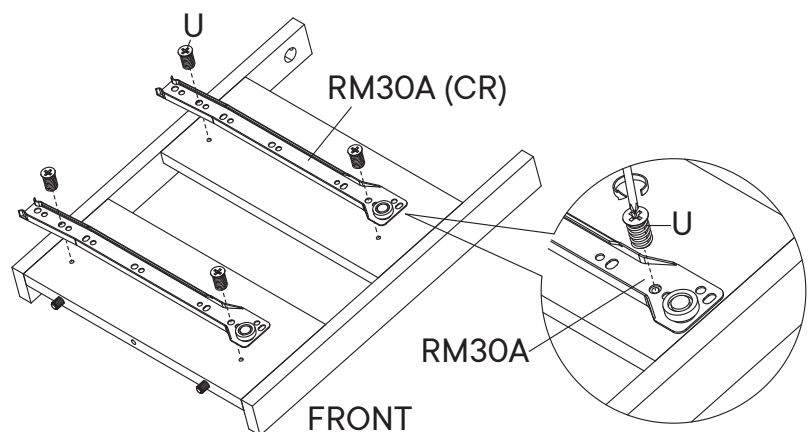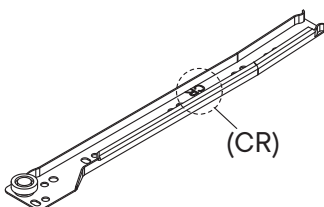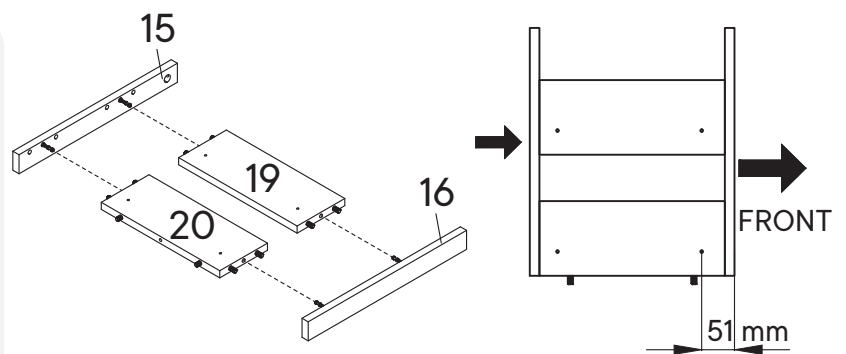

Step 11

HARDWARE

- B** Cam Lock Ø15 mm x8

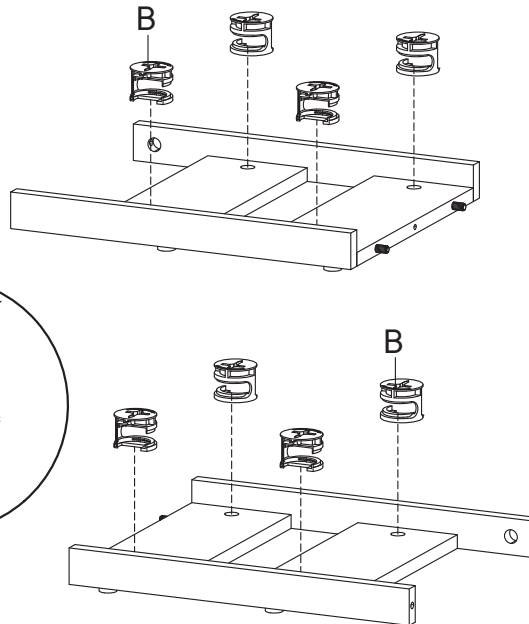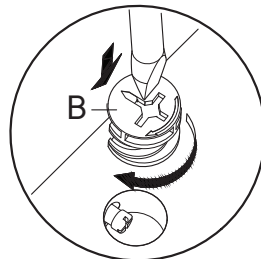


Step 12

HARDWARE

- B** Cam Lock Ø15 mm x4

COMPONENTS

- | | | |
|-----------|---------------------|----|
| 6 | Fixed Shelf | x1 |
| 15 | Support Board 1 | x2 |
| 16 | Support Board 2 | x2 |
| 17 | Side Board Drawer 1 | x1 |
| 18 | Side Board Drawer 2 | x1 |
| 19 | Side Board Drawer 3 | x1 |
| 20 | Side Board Drawer 4 | x1 |

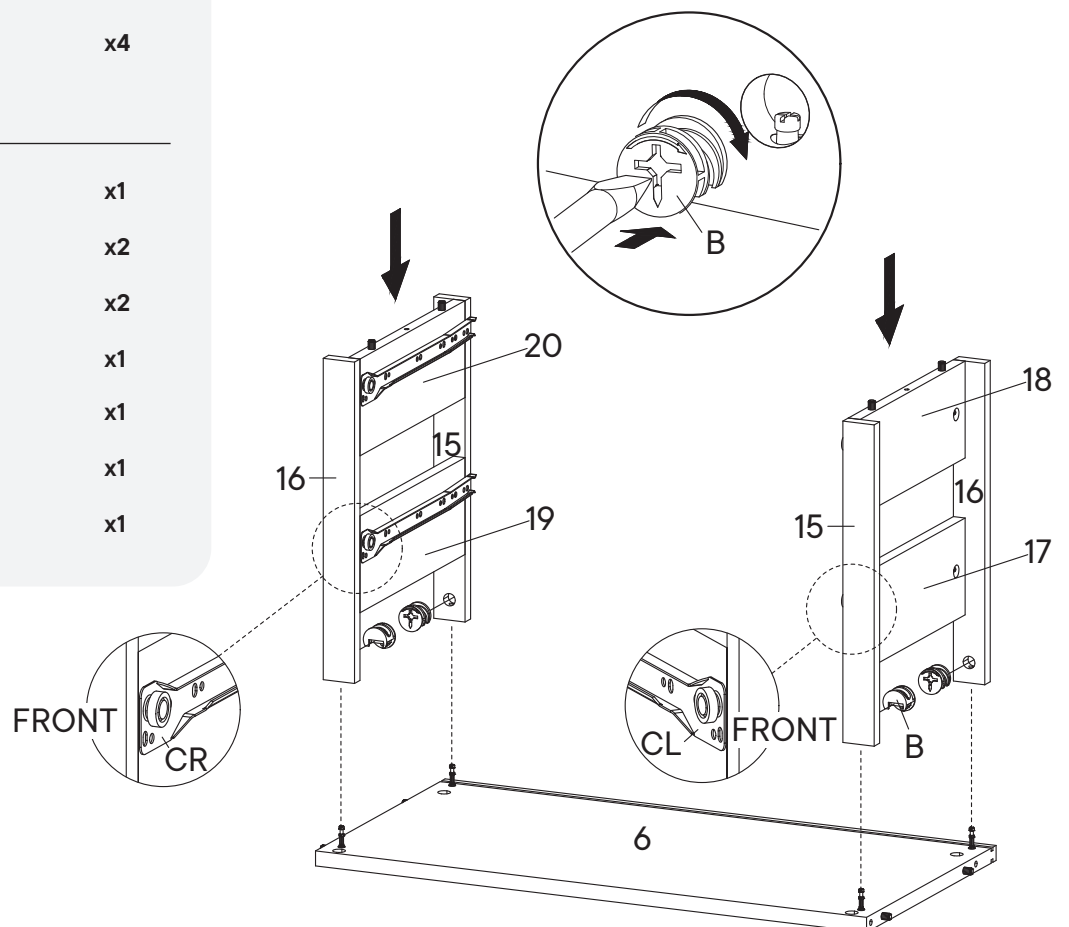



Step 13

HARDWARE

- P** Allen Key x1
- T** Screw M 7 x 50 mm x2

COMPONENTS

- 2** Bottom Board x1

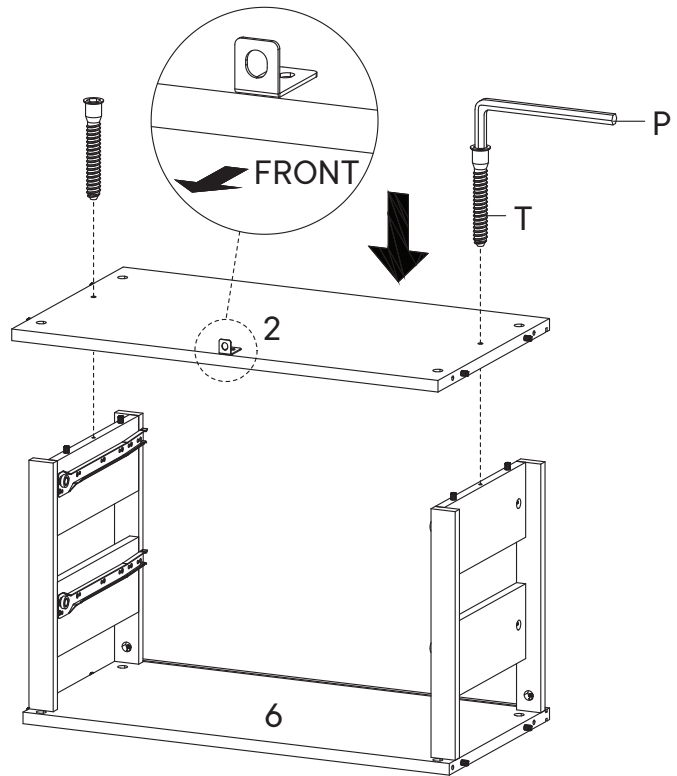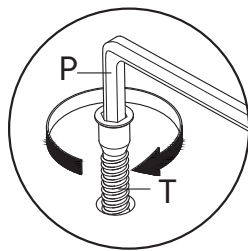



Step 14

HARDWARE

- B** Cam Lock Ø15 mm x4
- P** Allen Key x1

COMPONENTS


- 4** Side Board Right x1

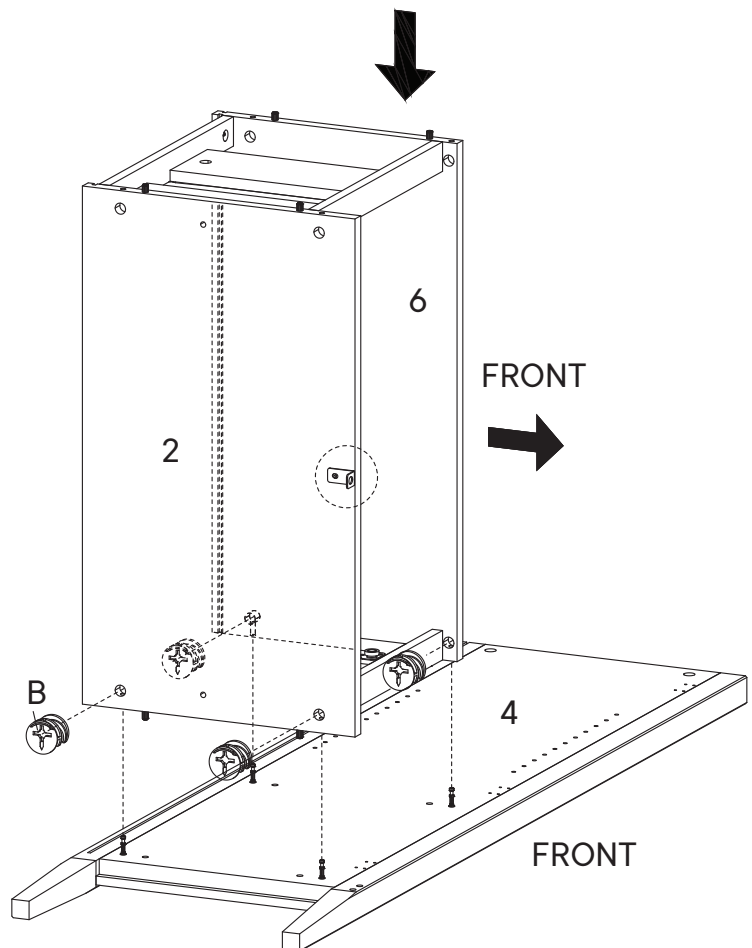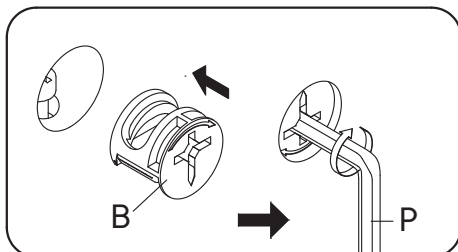

Step 15

COMPONENTS

- | | | |
|----------|--------------|----|
| 7 | Bottom Skirt | x1 |
|----------|--------------|----|

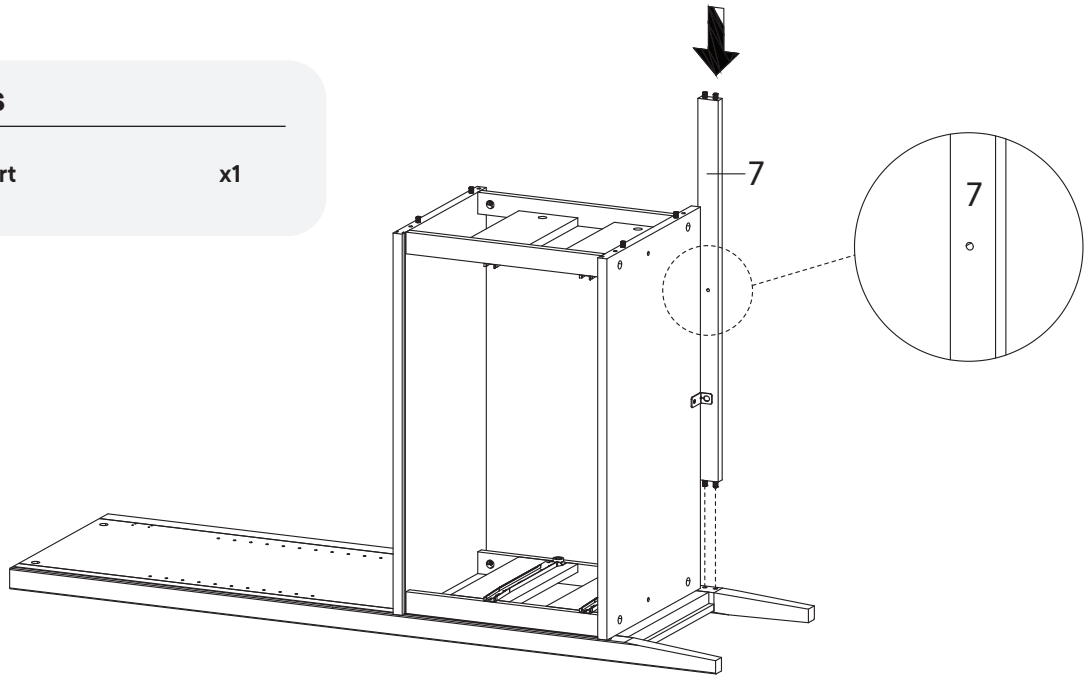



Step 16

HARDWARE

- | | | |
|----------|-----------------|----|
| B | Cam Lock Ø15 mm | x4 |
| P | Allen Key | x1 |

COMPONENTS


- | | | |
|-----------|-----------------|----|
| 3 | Side Board Left | x1 |
| 26 | Back Board 1 | x1 |

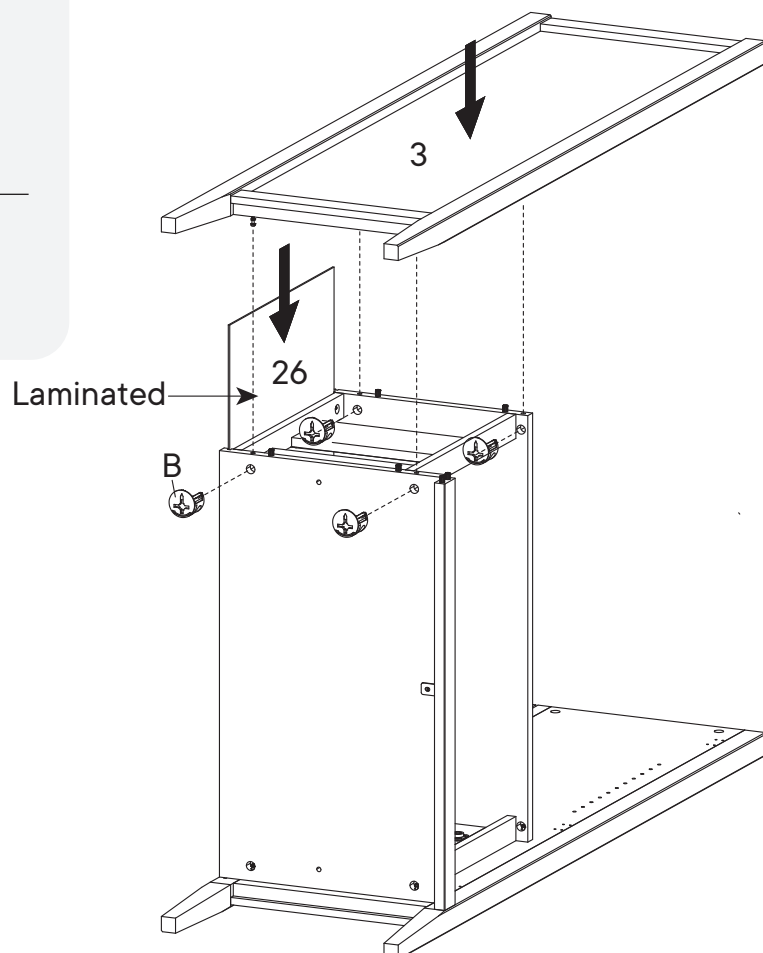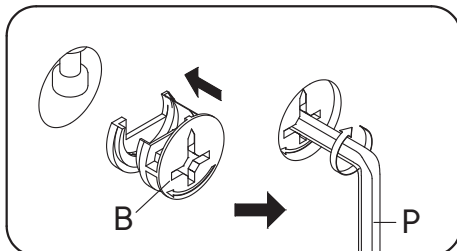

Step 17

HARDWARE

- | | | |
|----------|---------------------|----|
| D | Screw M 6.4 x 14 mm | x1 |
| P | Allen Key | x1 |

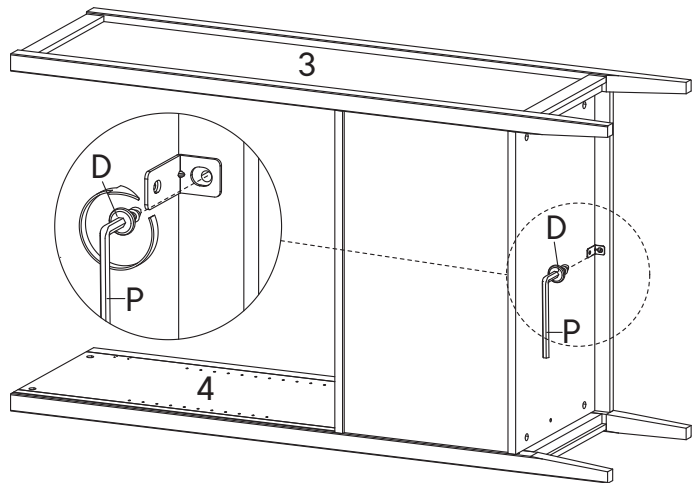


Step 18

HARDWARE

- | | | |
|----------|---------------|----|
| Q | Joining Strip | x1 |
|----------|---------------|----|

COMPONENTS

- | | | |
|-----------|--------------|----|
| 26 | Back Board 1 | x1 |
| 27 | Back Board 2 | x1 |

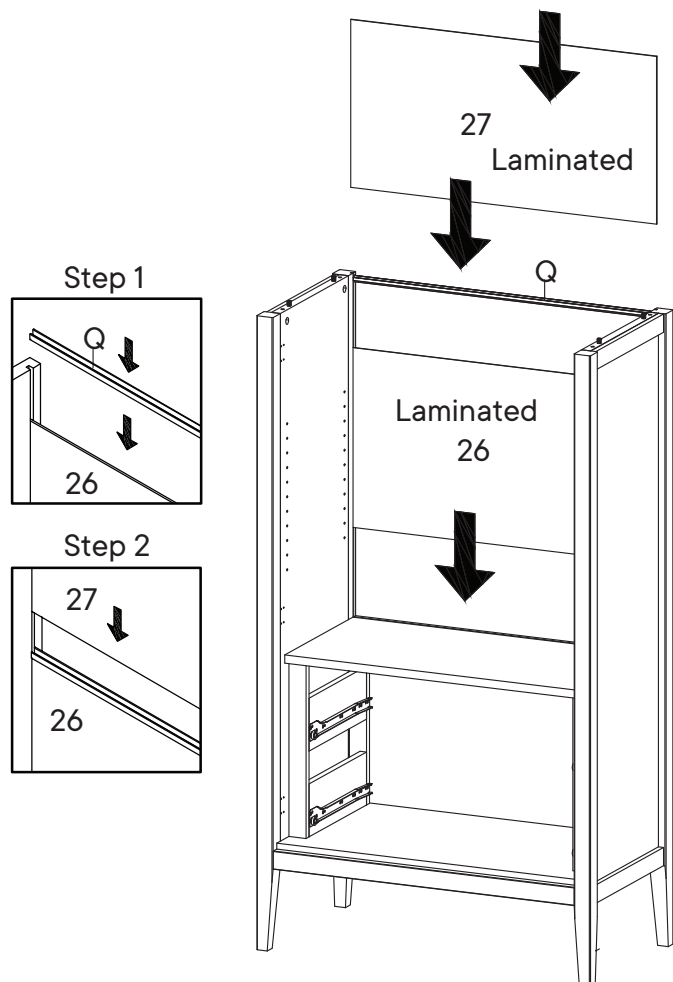


Step 19

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x10
- C** Wood Dowel Ø8 x 30 mm x9

COMPONENTS

- 10** Support Board 1 Hutch x2
- 11** Support Board 2 Hutch x3
- 12** Front Board Hutch x1
- 13** Back Board Hutch x1

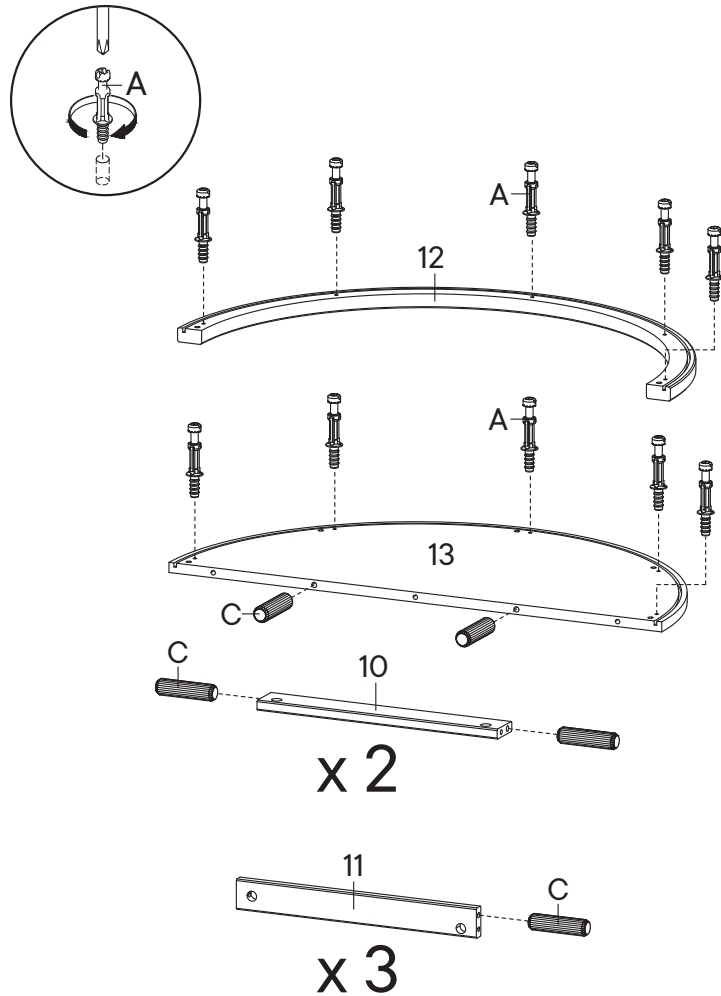


Step 20

HARDWARE

- B** Cam Lock Ø15 mm x5

COMPONENTS

- 10** Support Board 1 Hutch x2
- 11** Support Board 2 Hutch x3
- 13** Back Board Hutch x1

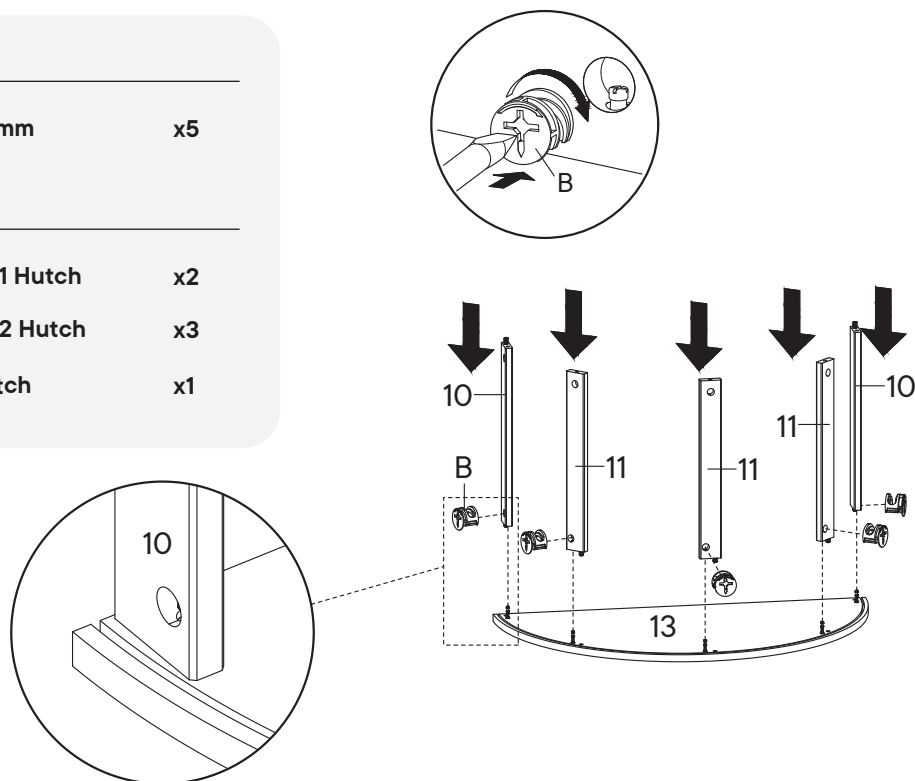


Step 21

HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS


12 Front Board Hutch x1

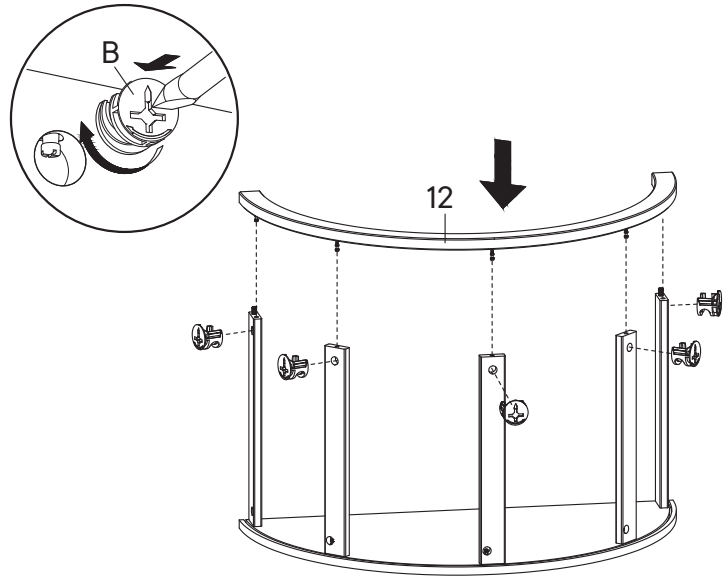

Step 22

COMPONENTS

14 PVC Board x1

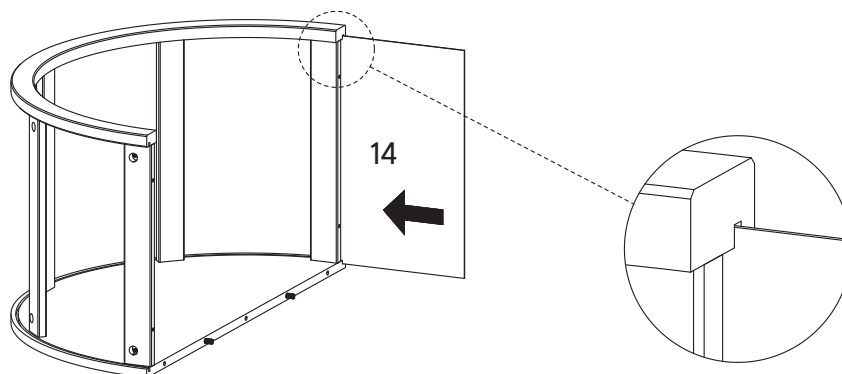


Step 23

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x4
B	Cam Lock Ø15 mm	x3
T	Screw M 7 x 50 mm	x4
H	Stopper	x2
P	Allen Key	x1

COMPONENTS


1	Top Board	x1
----------	-----------	----

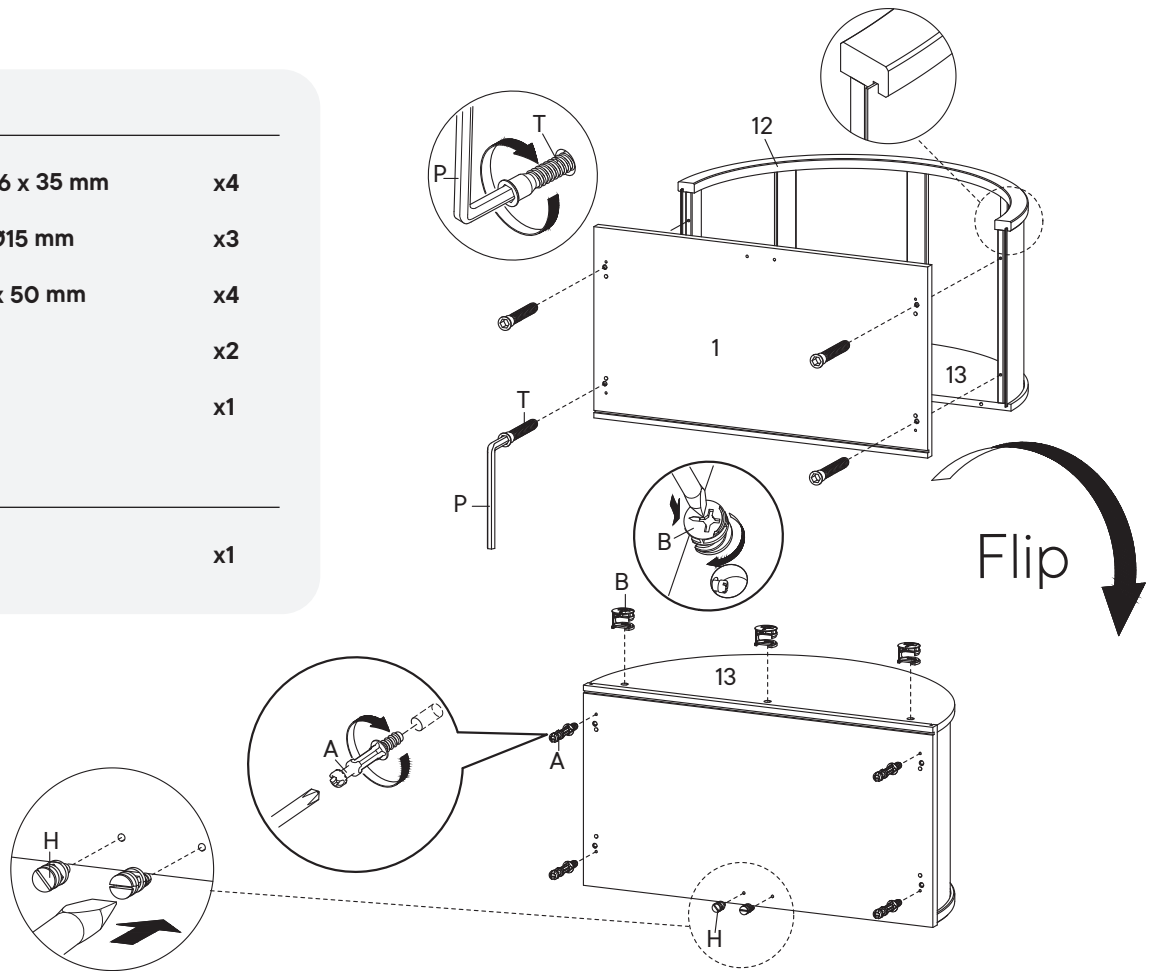

Step 24

HARDWARE

B	Cam Lock Ø15 mm	x4
G	Screw Cap Ø15 mm	x4

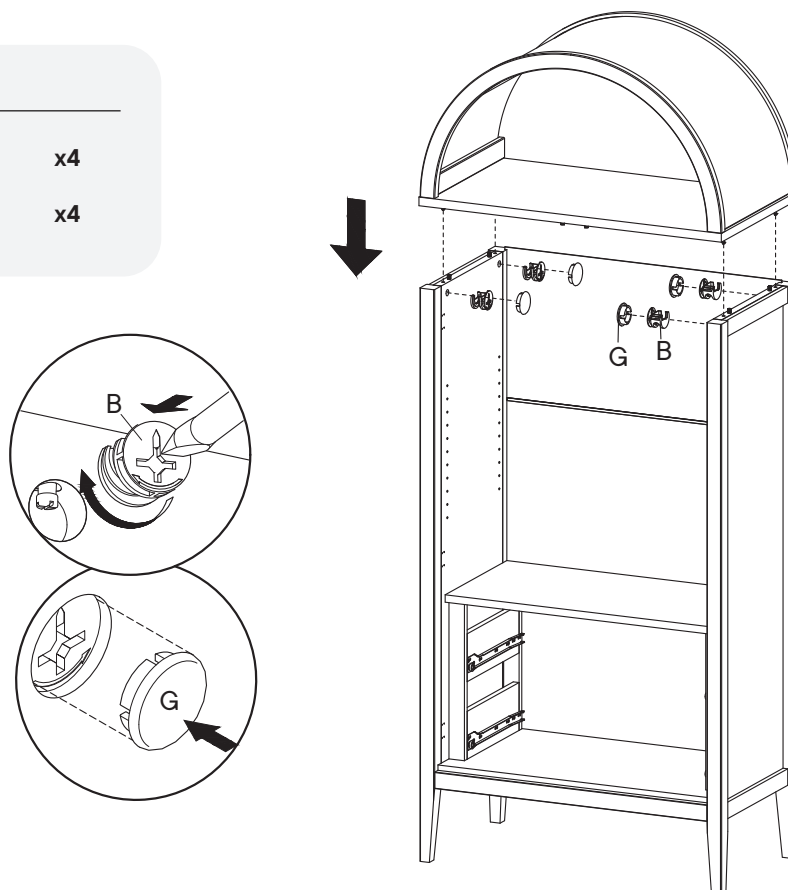


Step 25

HARDWARE



F Shelf Pin x8

COMPONENTS

5 Adjustable Shelf x2

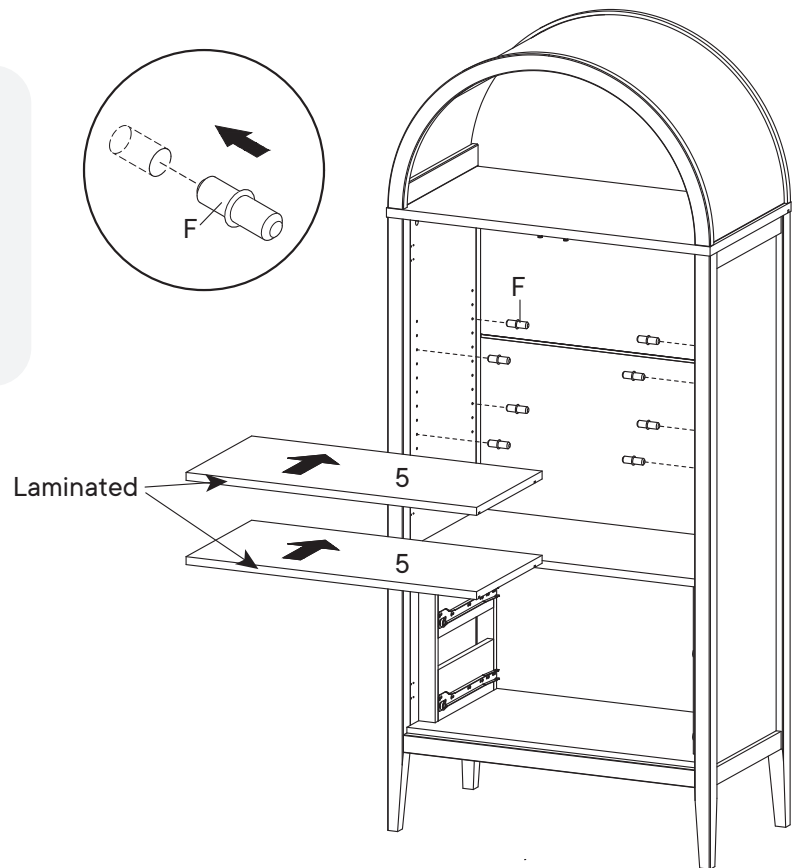

Step 26

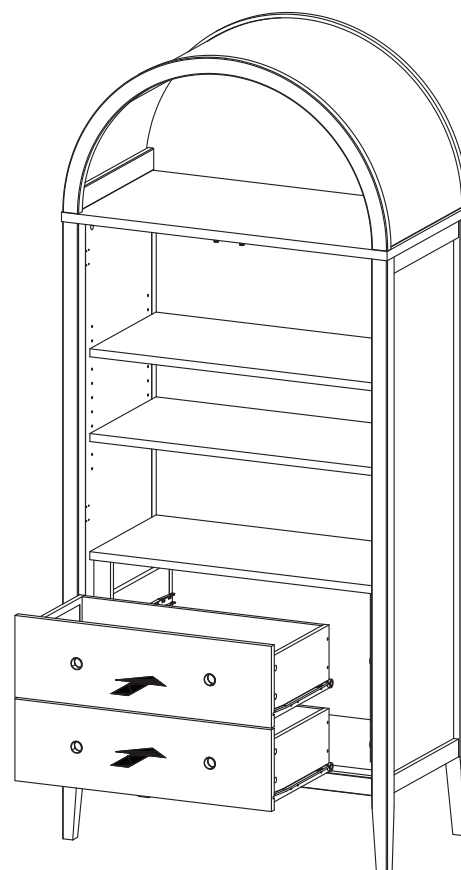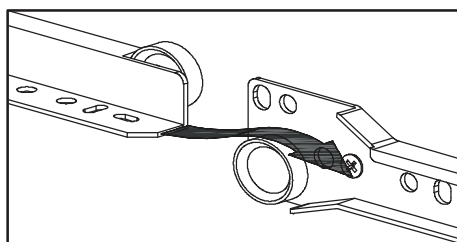


Step 27

HARDWARE

L	Screw M 4.5 x 12.5 mm	x12
HS26C	Hinge	x6

COMPONENTS

8	Door Left	x1
9	Door Right	x1

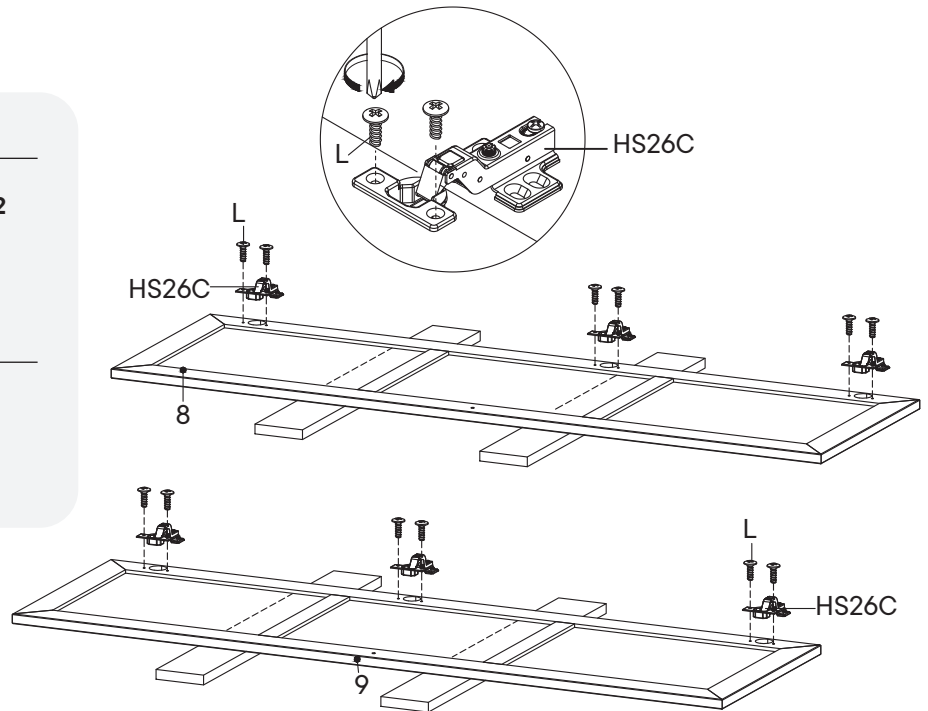


Step 28

HARDWARE


I	Handle	x2
J	Screw M 4 x 20 mm	x2
L	Screw M 4.5 x 12.5 mm	x24

COMPONENTS

8	Door Left	x1
9	Door Right	x1

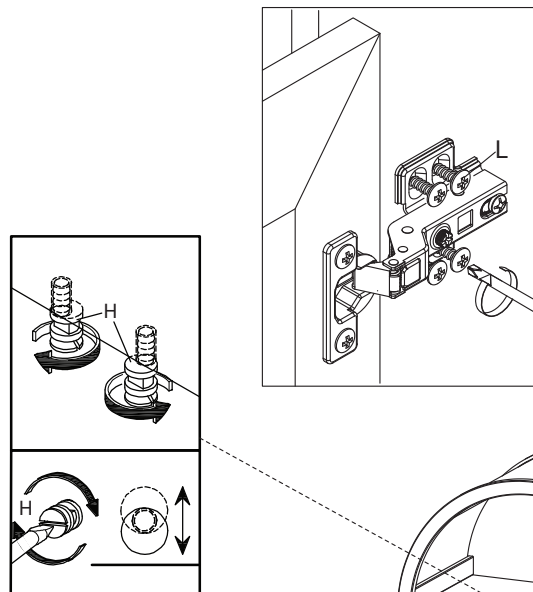

The door stopper position is adjustable (H). Please use screwdriver to adjust it as needed, so the doors are aligned when closed

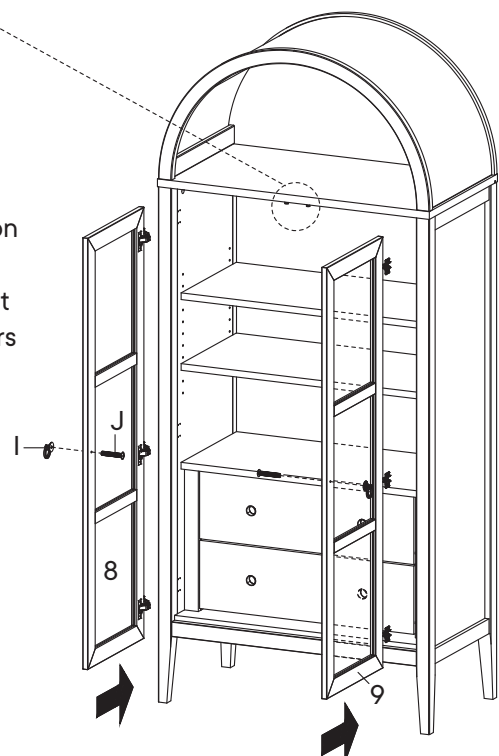


Note:

Door alignment can be adjusted after all cabinet parts are secured. Refer page 20 OF 20

Step 29

HARDWARE



- | | | |
|----------|-----------------------|-----|
| M | Wedge | x16 |
| N | Screw M 3.5 x 15.5 mm | x16 |

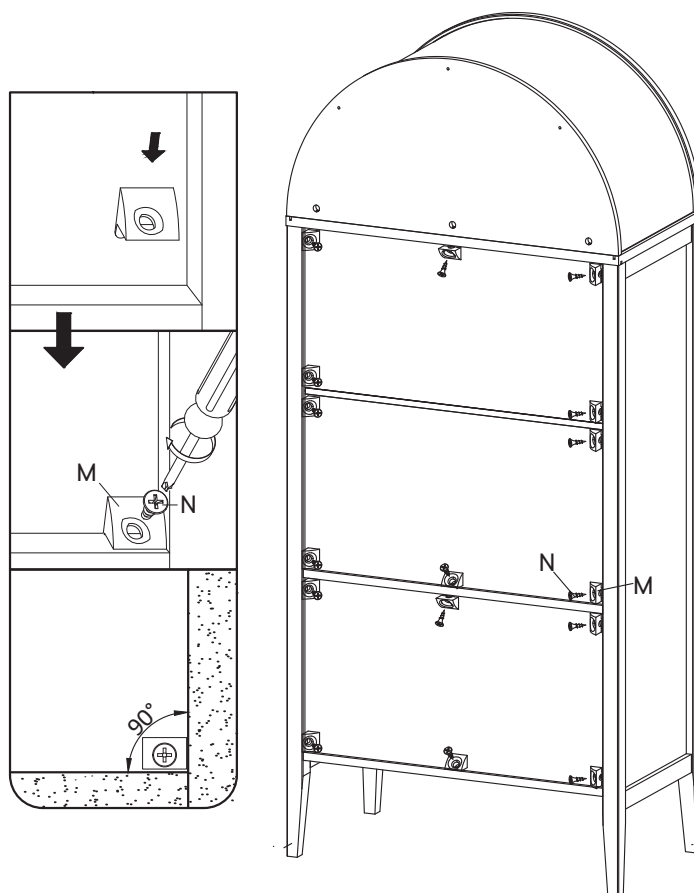

Step 30

HARDWARE

- | | | |
|----------|------|----|
| X | List | x2 |
|----------|------|----|

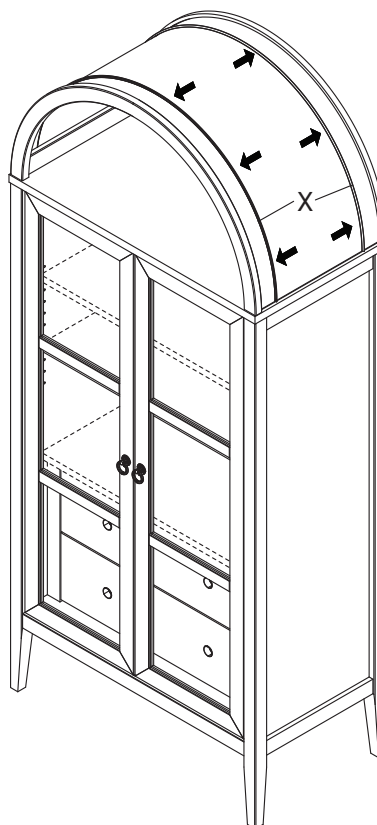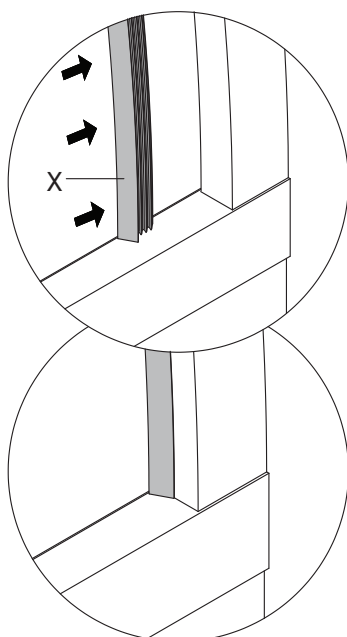

Great job!

Bookcase assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.


Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!



Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

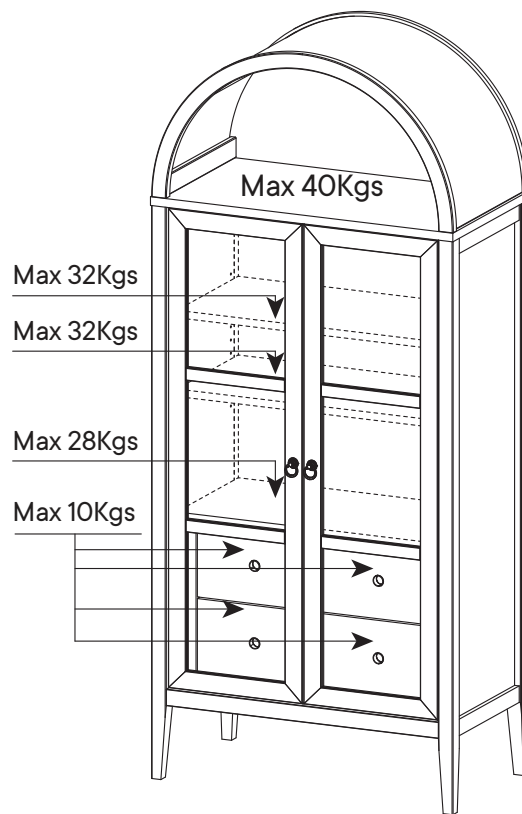


Cabinet Door Alignment

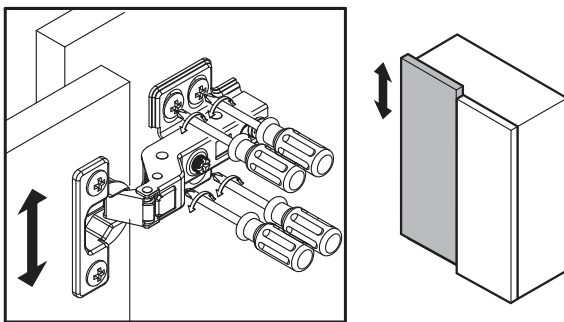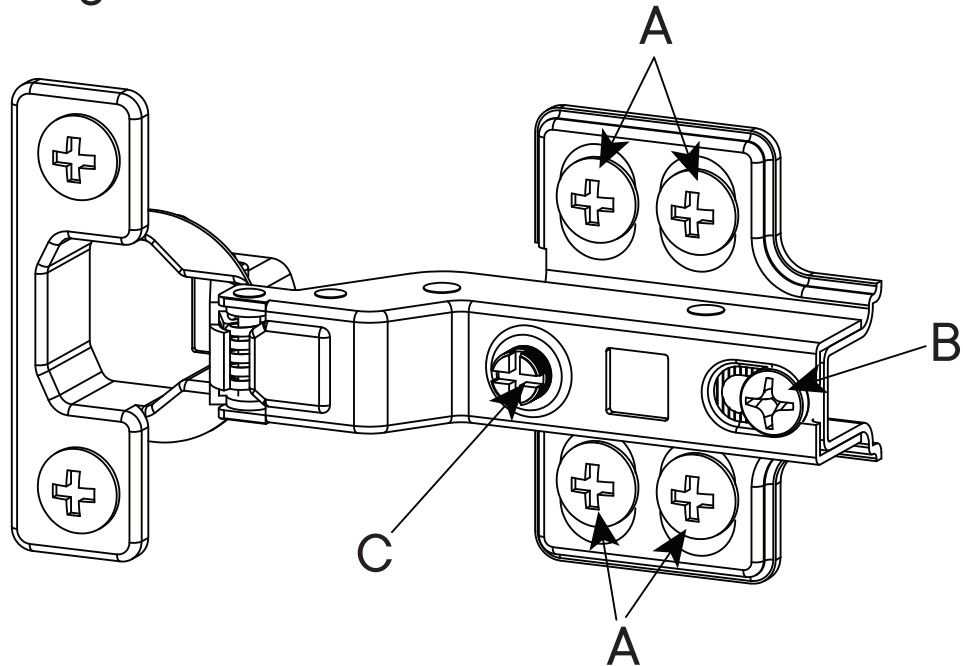


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

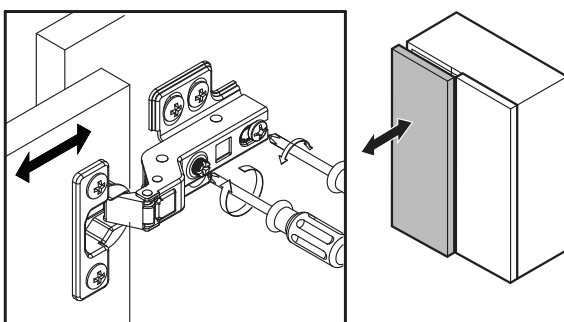

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

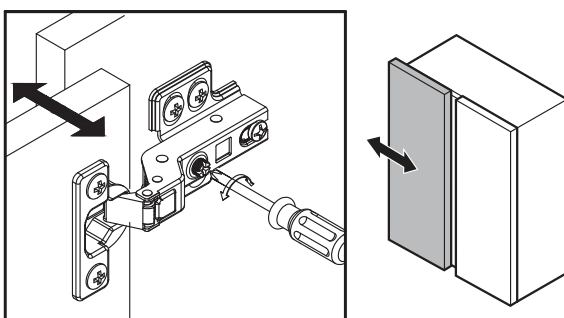

To adjust side ways.



Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

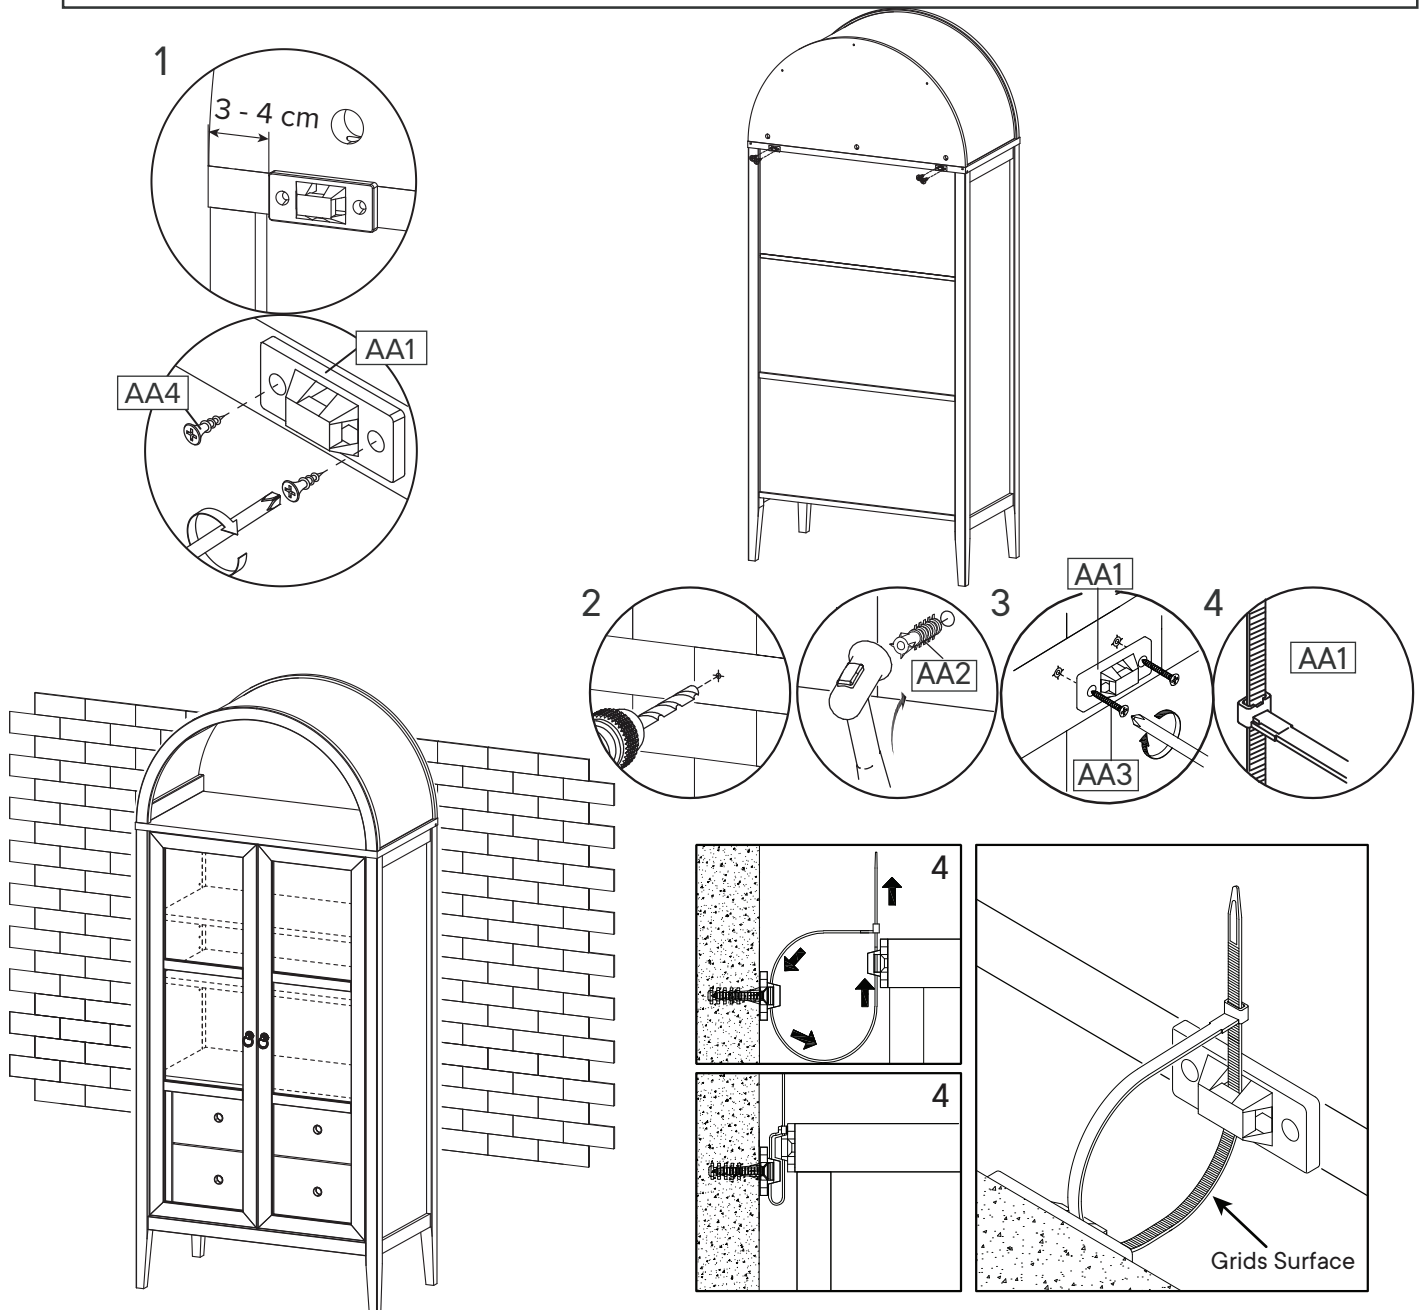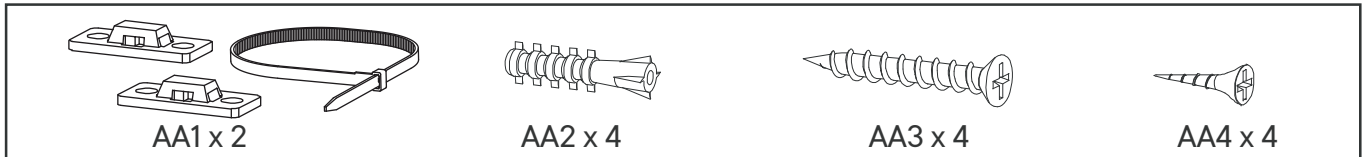

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 3 - 4 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.