


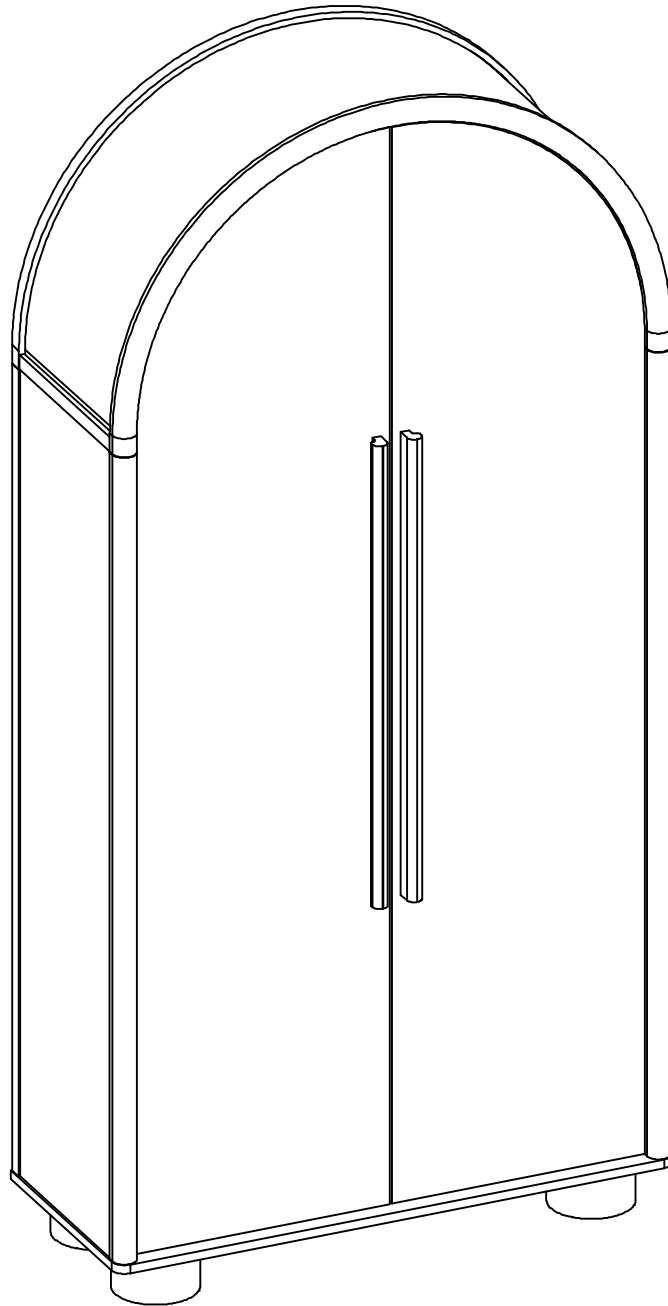

ASSEMBLY INSTRUCTIONS

Bookcase

EEI-7313 / V0.24.04.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.






Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A.		Cam Bolt Ø6 x 32 mm	x30
B.		Cam Lock Ø15 x 12 mm	x39
C.		Cover cap	x12
D.		Dowel Ø7.8 x 32 mm	x56
E.		Dowel Ø7.8 x 18 mm	x4
F.		Connecting bolt	x9
G.		Connecting nut	x9
H.		Sticker	x14
I.		Assembly Screw	x20
J.		Hinge	x6
K.		Screw Ø7 x 13 mm	x12
L.		Screw Ø8 x 25 mm	x16
M.		Allen key	x1
N.		Screw Ø4 x 12 mm	x11
O.		Screw Ø12 x 25 mm	x12
P.		Screw Ø6 x 19 mm	x24
Q.		Bolt M6 x 30 mm	x1
R.		Shelf pin	x4
S.		Adjustable leveller	x1

HARDWARE INCLUDED IN THE BOX:

T.		Barrel nut	x1
U.		Metal support	x3
V.		Wall fixing	x2
W.		Screw Ø6 x 12 mm	x2
X.		Felt Ø25 x 2 mm	x16
Y.		Door assembly spacer	x2


WHAT YOU NEED:



Phillips



Phillips Head Screwdriver



Flat Head Screwdriver

YOU MAY ALSO NEED:

+ Power Drill

+ Level


FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 4 of 22

All parts are numbered with a sticker according to this list.

Carton 1 of 2

2	Middle top panel	x1
3	Bottom panel	x1
6	Fix shelf	x1
9	Right divider	x1
10	Left divider	x1
12	Back crown	x1
15	Front crown	x1
18	Adjustable shelf	x1
19	Leg	x4
21	Top back panel	x1
22	Right back panel	x1
23	Left back panel	x1
	Hardware	x1

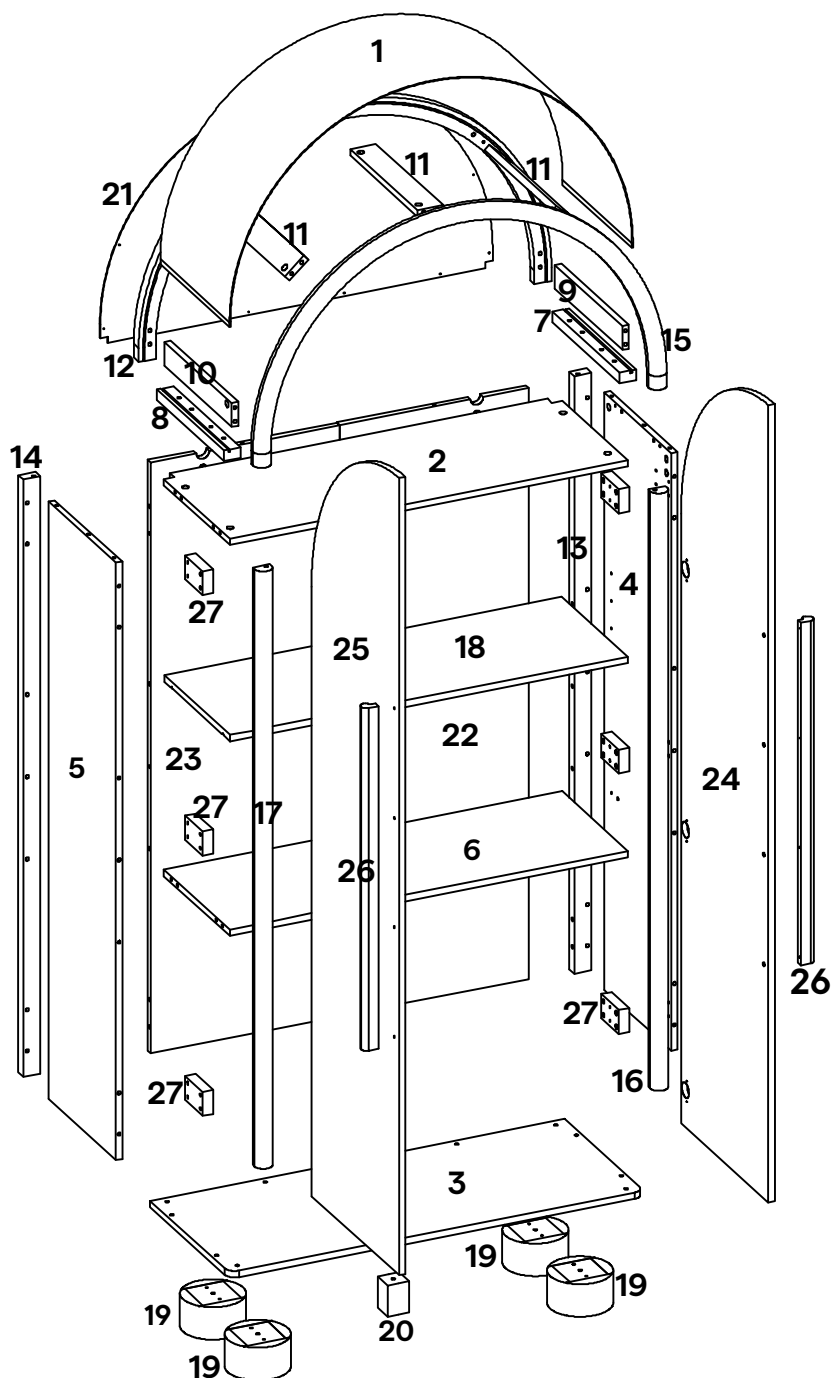

Carton 2 of 2


1	Top panel	x1
4	Right side panel	x1
5	Left side panel	x1
7	Right support	x1
8	Left support	x1
11	Top support	x3
13	Right back support	x1
14	Left back support	x1
16	Right front support	x1
17	Left front support	x1
20	Bottom support	x1
24	Right door panel	x1
25	Left door panel	x1
26	Handle	x2
27	Hinge Support	x6

HARDWARE

D Dowel Ø7.8 x 32 mm	x12
F Connecting Bolt	x3
G Connecting Nut	x3

COMPONENTS


22 Right Back Panel	x1
23 Left Back Panel	x1

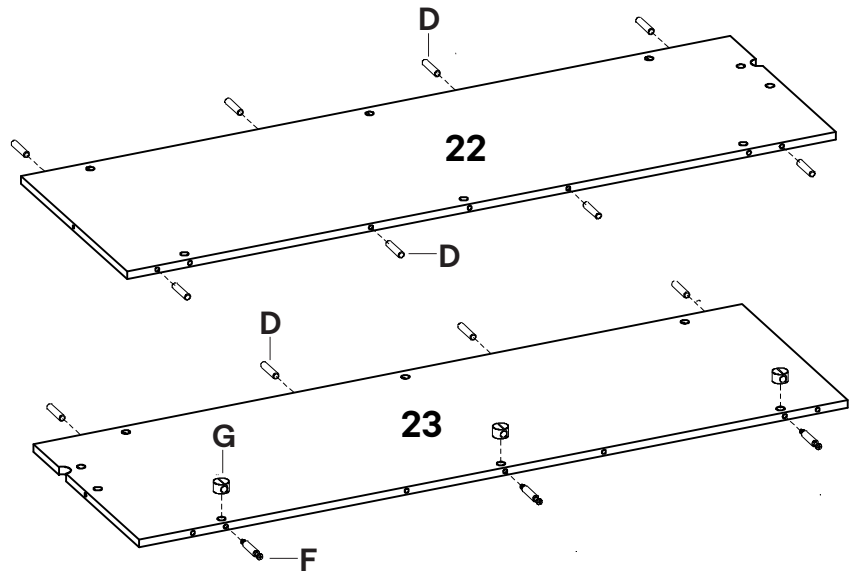

1.1 Insert 8x **Dowels (D)** into the holes on long edge of the **Right Back Panel (22)**.

1.2 Insert 4x **Dowels (D)** into the holes on long edge of the **Left Back Panel (23)**.

1.3 Insert 3x **Connecting Nuts (G)** into the **Left Back Panel (23)**. Insert and rotate 3x **Connecting Bolts (F)** into the holes on **Connecting Nuts (G)**.

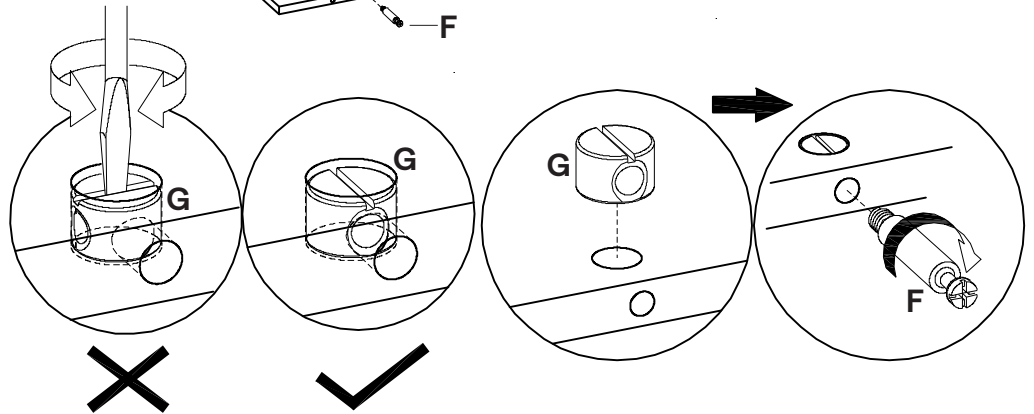


STEP 02

HARDWARE


B Cam Lock Ø15 mm x 12 mm	x3
----------------------------------	----

COMPONENTS

22 Right Back Panel	x1
23 Left Back Panel	x1

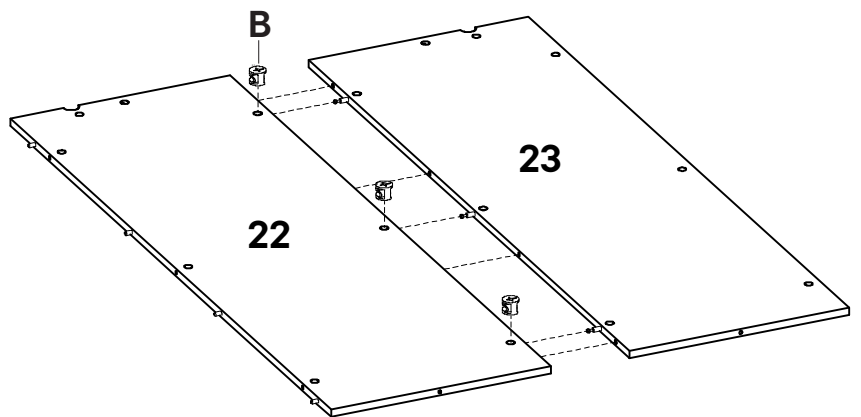

2.1 Connect **Right Back Panel (22)** and **Left Back Panel (23)** by inserting 3x **Cam Locks (B)** to the corresponding holes.

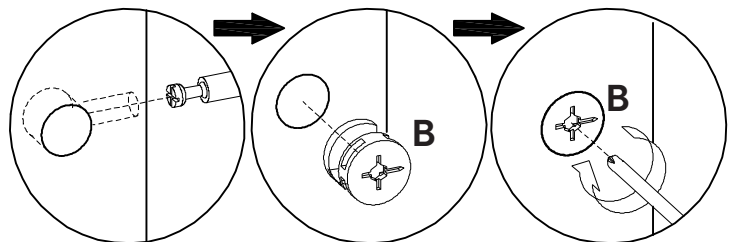

HARDWARE

A Cam Bolt Ø6 x 32mm	x4
D Dowel Ø7.8 x 32 mm	x10
F Connecting Bolt	x3
G Connecting Nut	x3


COMPONENTS

4 Right Side Panel	x1
13 Right Back Support	x1

3.1 Insert and screw 10x **Cam Bolts (A)** into the bottom hole of the **Right Side Panel (4)**.

3.2 Insert 10x **Dowels (D)** into the holes on long edge of the **Right Side Panel (4)**.

3.3 Insert 3x **Connecting Nuts (G)** into the **Right Back Support (13)**. Insert and rotate 3x **Connecting Bolts (F)** into the holes on **Connecting Nut (G)**.

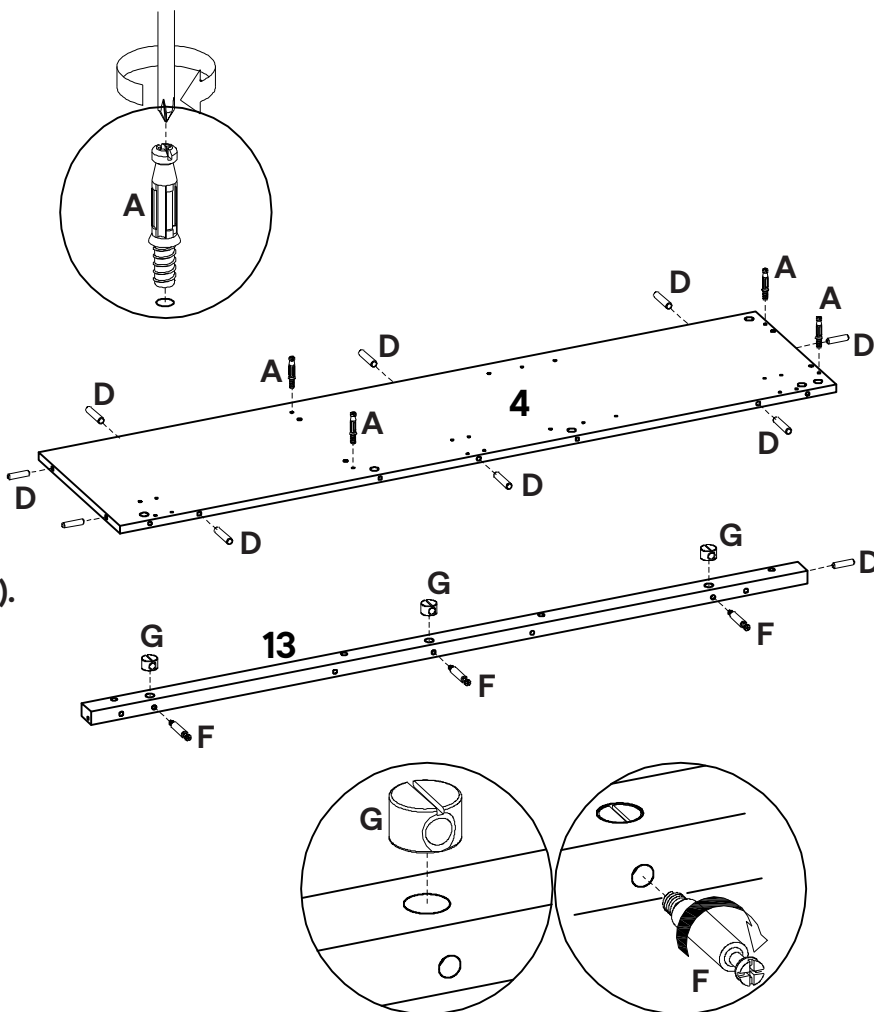

STEP 02


HARDWARE

I Assembly Screw	x4
-------------------------	----

COMPONENTS

4 Right Side Panel	x1
13 Right Back Support	x1

4.1 Connect **Right Back Support (13)** onto **Right Side Panel (4)** with and secure it by tightening 4x **Assembly Screws (I)**.

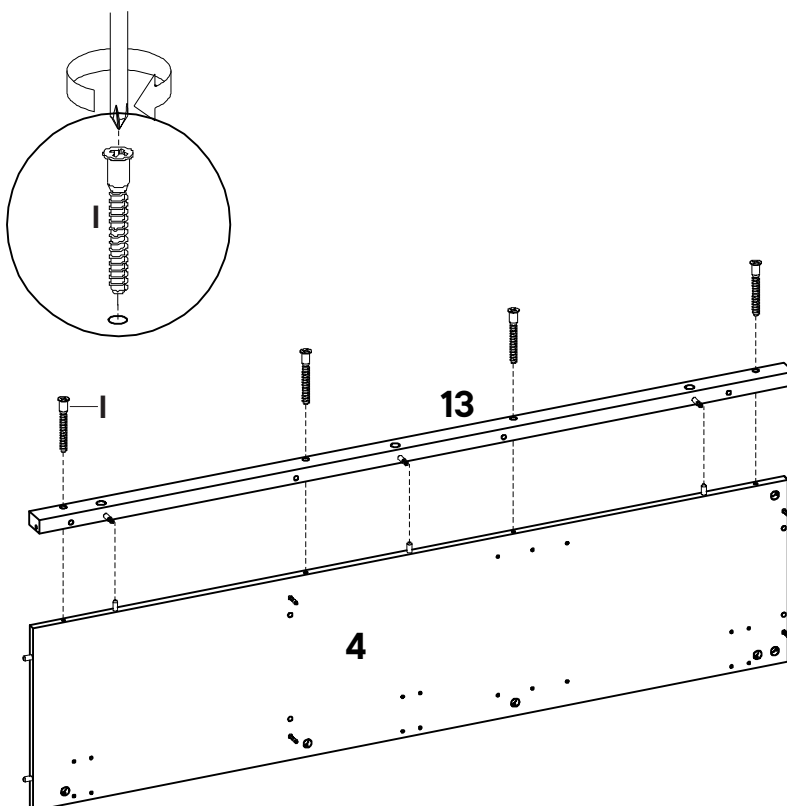


HARDWARE

A Cam Bolt Ø6 x 32mm	x4
D Dowel Ø7.8 x 32 mm	x10
F Connecting Bolt	x3
G Connecting Nut	x3

COMPONENTS

5 Left Side Panel	x1
14 Left Back Support	x1

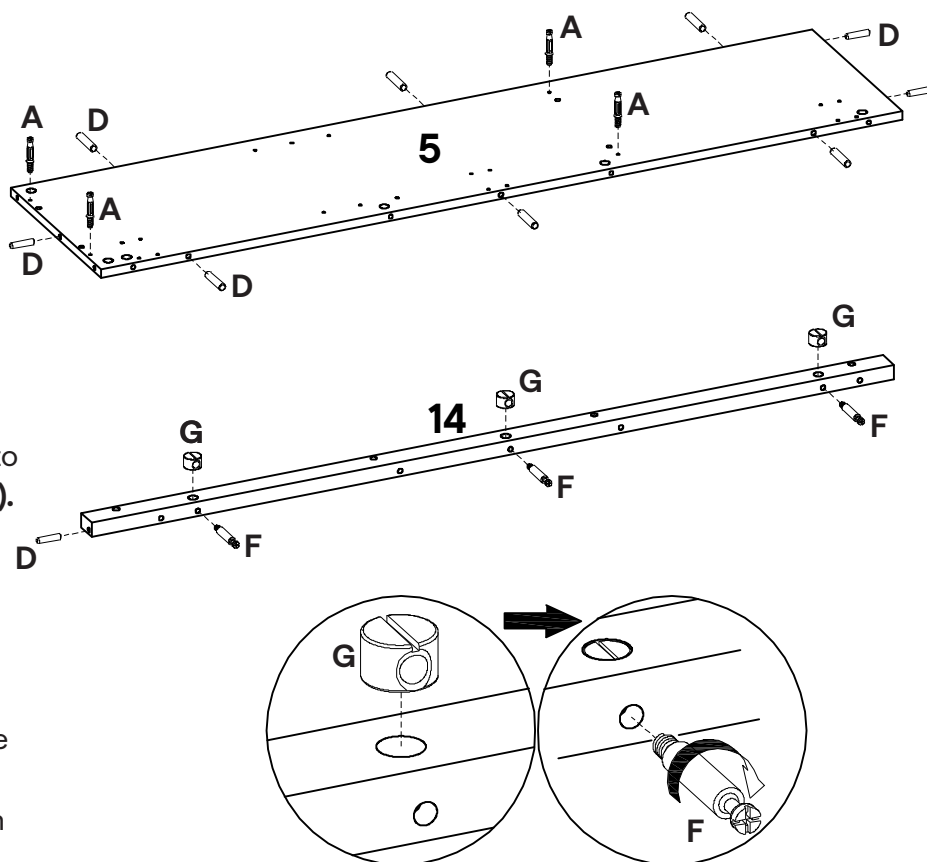

5.1 Insert and screw 10x **Cam Bolts (A)** into the bottom hole of the **Left Side Panel (5)**.

5.2 Insert 10x **Dowels (D)** into the holes on long edge of the **Left Side Panel (5)**.

5.3 Insert 3x **Connecting Nuts (G)** into the **Left Back Support (14)**. Insert and rotate 3x **Connecting Bolts (F)** into the holes on **Connecting Nuts (G)**.

STEP 06


HARDWARE

I Assembly Screw	x4
-------------------------	----

COMPONENTS

5 Left Side Panel	x1
14 Left Back Support	x1

6.1 Connect **Left Back Support (14)** onto **Left Side Panel (5)** with and secure it by tightening 4x **Assembly Screw (I)**.


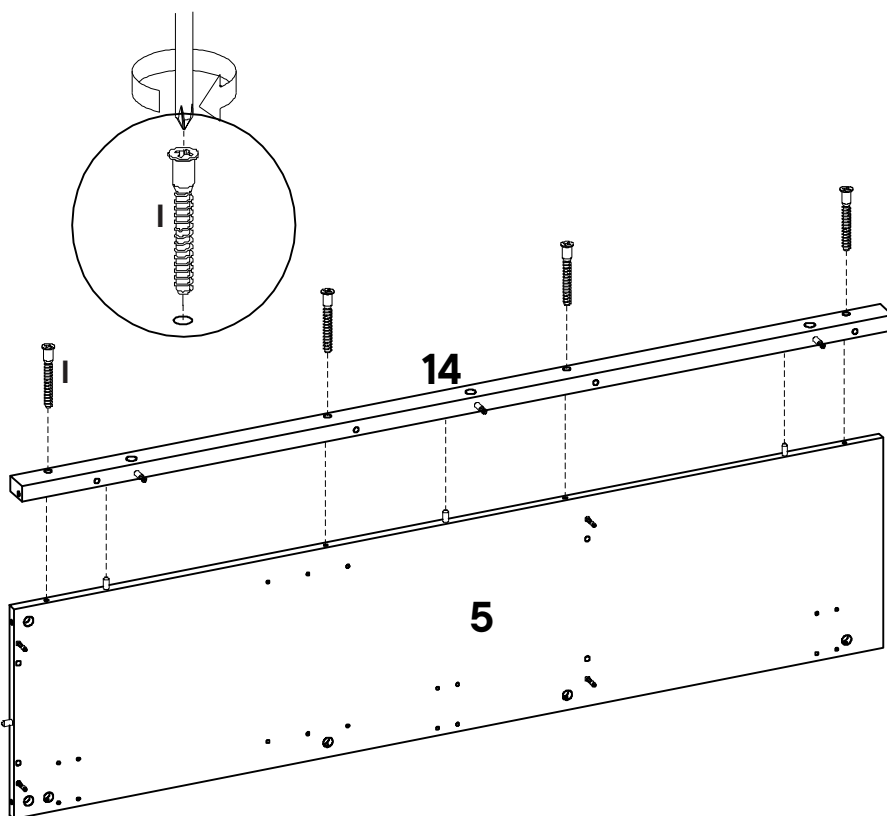


HARDWARE

A	Cam Bolt Ø6 x 32mm	x2
D	Dowel Ø7.8 x 32 mm	x8
O	Screw Ø12 x 25 mm	x8
U	Metal support	x2

COMPONENTS


2	Middle Top Panel	x1
6	Fix Shelf	x1

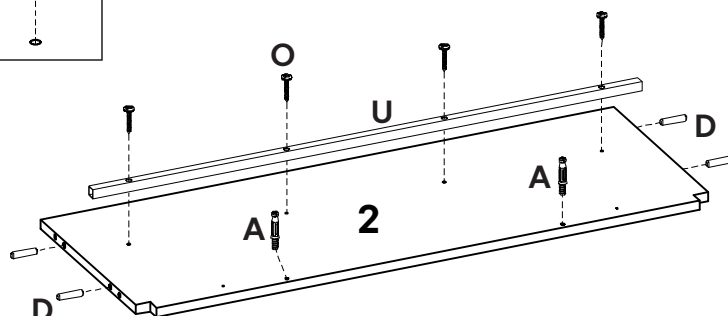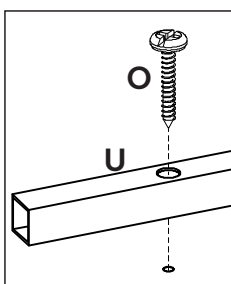

7.1 Insert and screw 2x **Cam Bolts (A)** into the bottom hole of the **Middle Top Panel (5)**.

7.2 Insert 8x **Dowels Ø7.8 x 32 mm (D)** into the holes on long edge of the **Middle Top Panel (5)** & **Fix Shelf (6)**.

7.3 Fasten 2x **Metal supports (U)** with 8x **Screws Ø12 x 25 mm (O)** onto the **Middle Top Panel (2)** & **Fix Shelf (6)**.

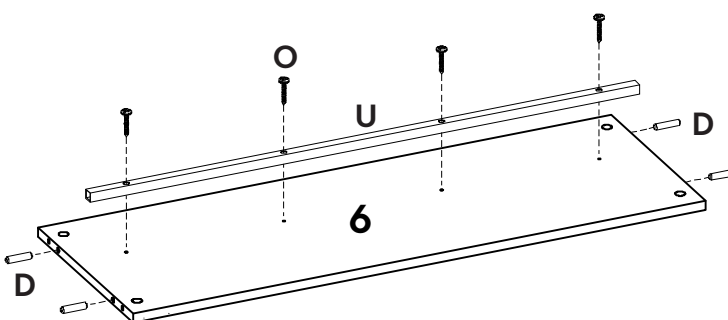



STEP 08

COMPONENTS


2	Middle Top Panel	x1
----------	------------------	----

8.1 Connect **Middle Top Panel (2)** onto the **Back Panel Assembled**.

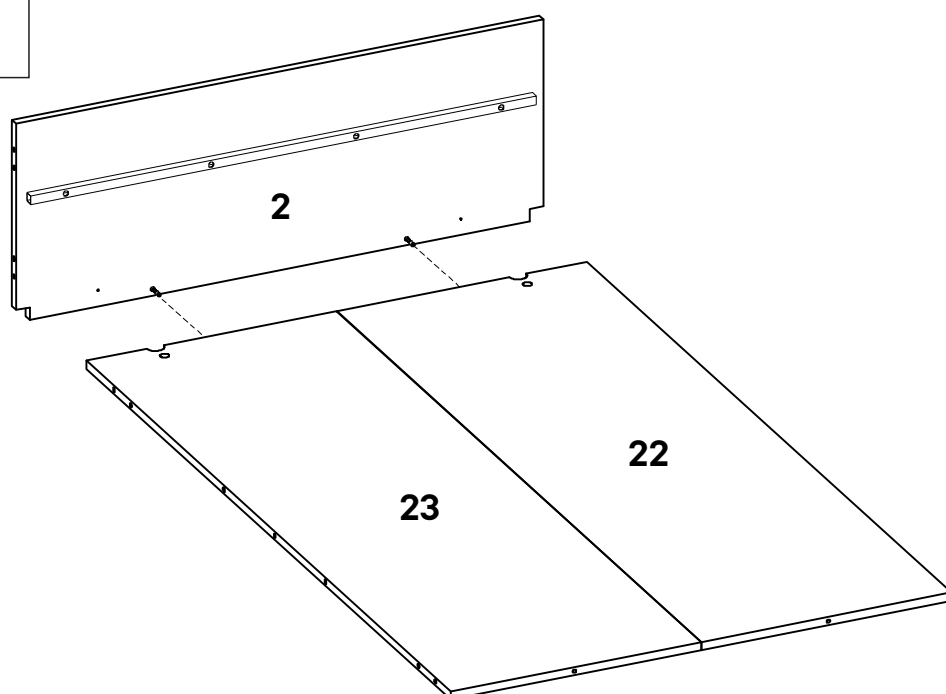


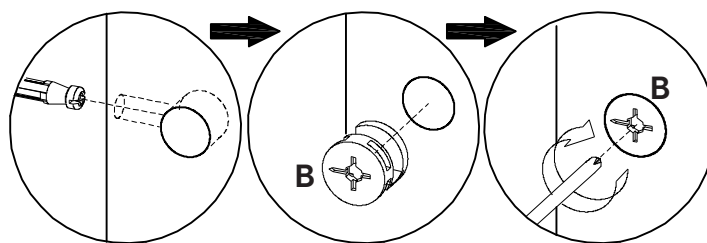HARDWARE**(B)** Cam Lock Ø15 mm x 12 mm x2**COMPONENTS****(4)** Right Side Panel x1

9.1 Connect **Right side panel (4)** to the **Assembled Unit** by inserting 2x **Cam Locks (B)** to the corresponding holes.

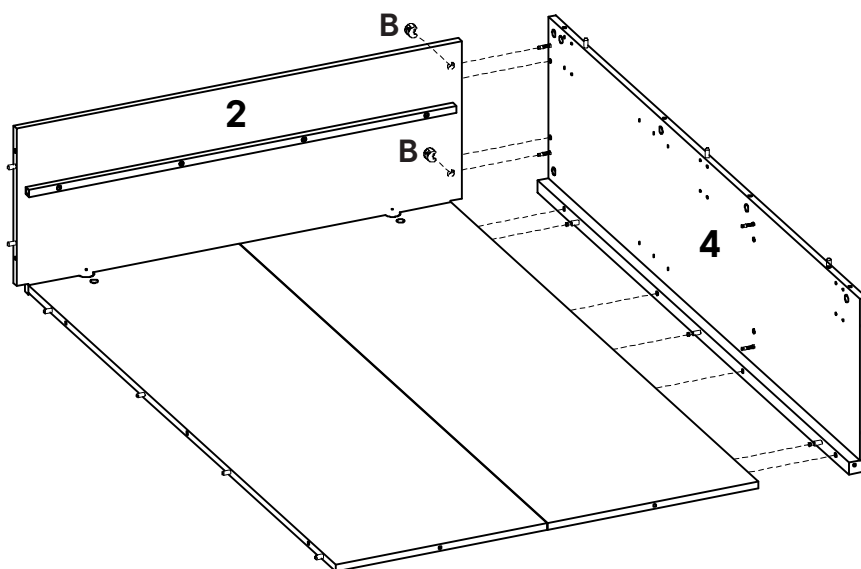


STEP 10

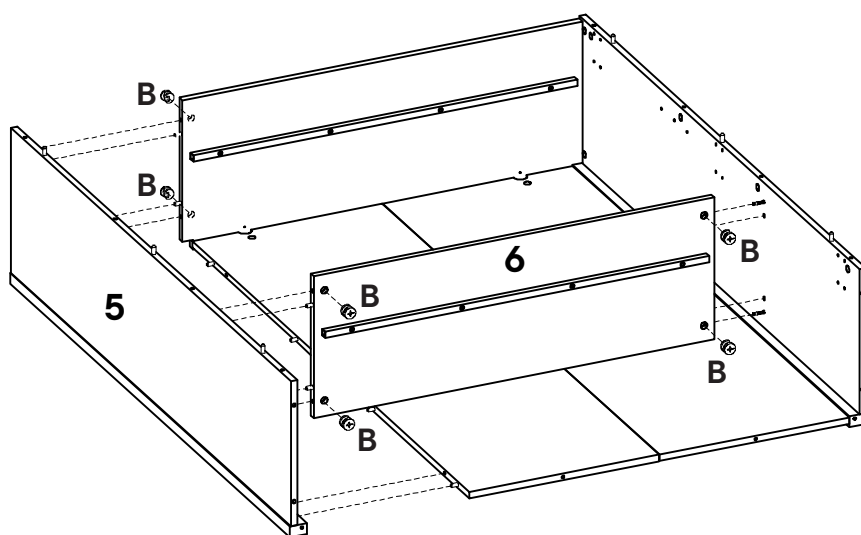HARDWARE**(B)** Cam Lock Ø15 mm x 12 mm x6**COMPONENTS****(5)** Left Side Panel x1**(6)** Fix Shelf x1

10.1 Connect **Fix Shelf (6)** to the **Assembled Unit** by inserting 2x **Cam Locks (B)** to the corresponding holes.

10.2 Connect **Left Side Panel (5)** to the **Assembled Unit** by inserting 4x **Cam Locks (B)** to the corresponding holes.

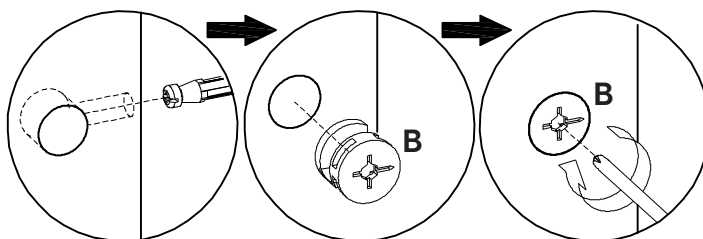


HARDWARE

- (A)** Cam Bolt Ø6 x 32mm x8
(D) Dowel Ø7.8 x 32 mm x2

COMPONENTS

- (16)** Right front support x1
(17) Left front support x1

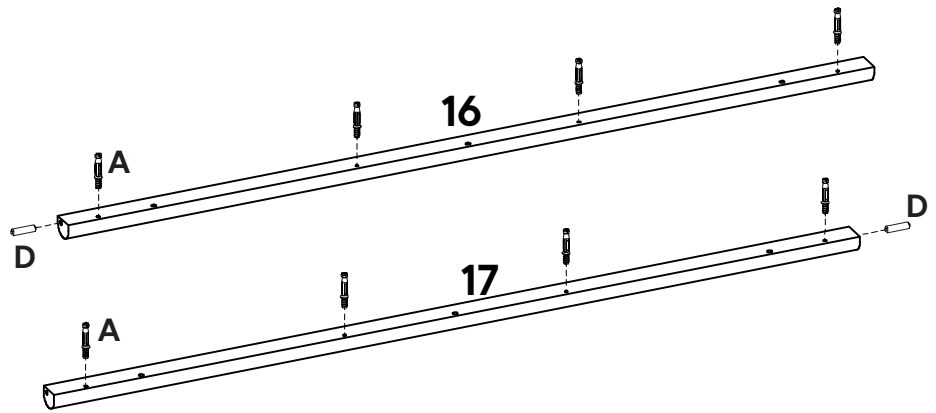

11.1 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Right Front Support (16)**.

11.2 Insert **Dowel Ø7.8 x 32 mm (D)** into hole on side edge of the **Right Front Support (16)**.

11.3 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Left Front Support (17)**.

11.4 Insert **Dowel Ø7.8 x 32 mm (D)** into hole on side edge of the **Left Front Support (17)**.


STEP 12

HARDWARE

- (B)** Camlock Ø15 mm x 12 mm x6


COMPONENTS

- (16)** Right front support x1
(17) Left front support x1

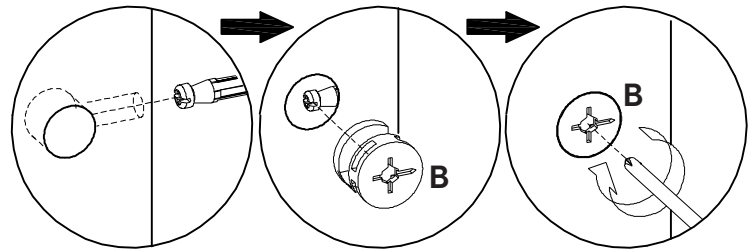

12.1 Connect **Right Front Support (16)** to the **Assembled Unit** by inserting 4x **Cam Locks (B)** to the corresponding holes.

12.2 Connect **Left Front Support (17)** to the **Assembled Unit** by inserting 4x **Cam Locks (B)** to the corresponding holes.

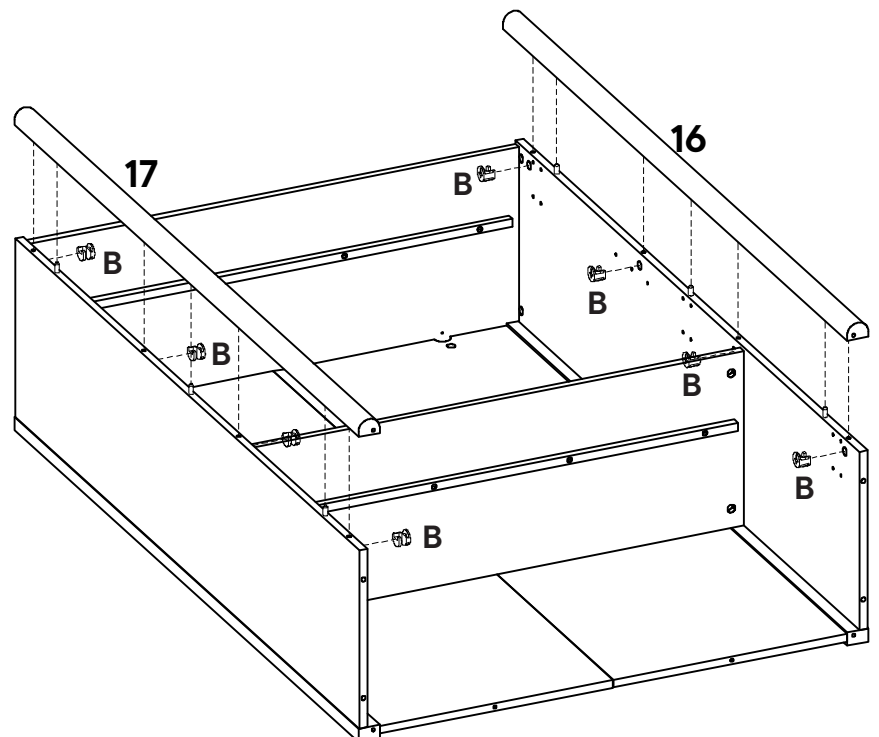


HARDWARE

(M) Allen key	x1
(S) Barrel nut	x1
(T) Adjustable leveller	x1
(Q) Bolt M6 x 30 mm	x1


COMPONENTS

(3) Bottom Panel	x1
(20) Middle Support	x1

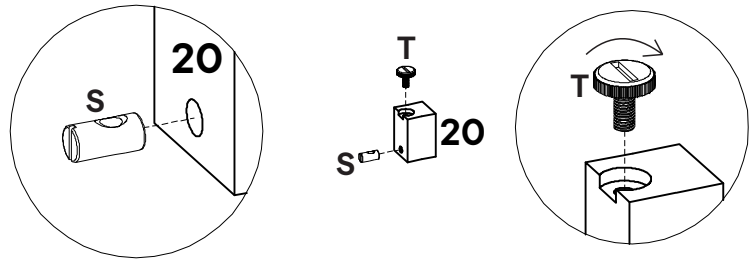

The adjustable leveler should be oriented towards the back

13.1 Insert and rotate **Adjustable leveller (T)** into the hole of the **Middle Support (20)**. And Insert **Barrel Nut (S)**.

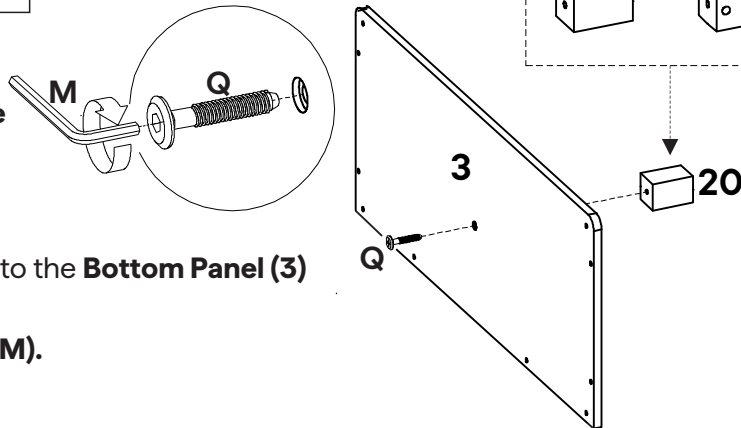

13.2 Connect **Middle Support (20)** onto the **Bottom Panel (3)** with and secure it by tightening **Bolt (Q)** with the provided **Allen Key (M)**.

STEP 14

HARDWARE

(E) Dowel Ø7.8 x 18 mm	x4
(L) Screw Ø8 x 25 mm	x8
(X) Felt Ø25 x 2 mm	x16


COMPONENTS

(19) Leg	x1
-----------------	----

14.1 Place 4x **Felt Ø25 x 2 mm (X)** onto **Leg (19)** of the bottom side. Repeat this step on the same components.

14.2 Insert **Dowel (E)** into the holes of the **Leg (19)**. Repeat this step on the same components.


14.3 Fasten 4x **Leg (19)** onto the **Bottom Panel (2)** with and secure it by tightening 8x **Screws (L)** with Phillips Head screwdriver.

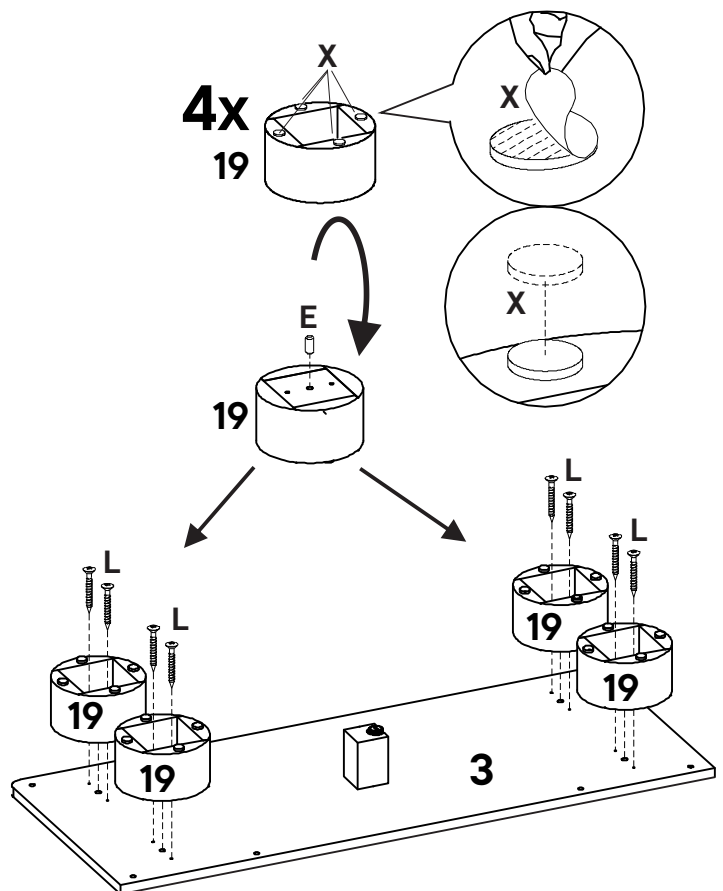

HARDWARE

I Assembly Screw x6

15.1 Position **Bottom Panel (2)** onto Assembled Unit. Fasten with 6x **Assembly Screws (I)**.

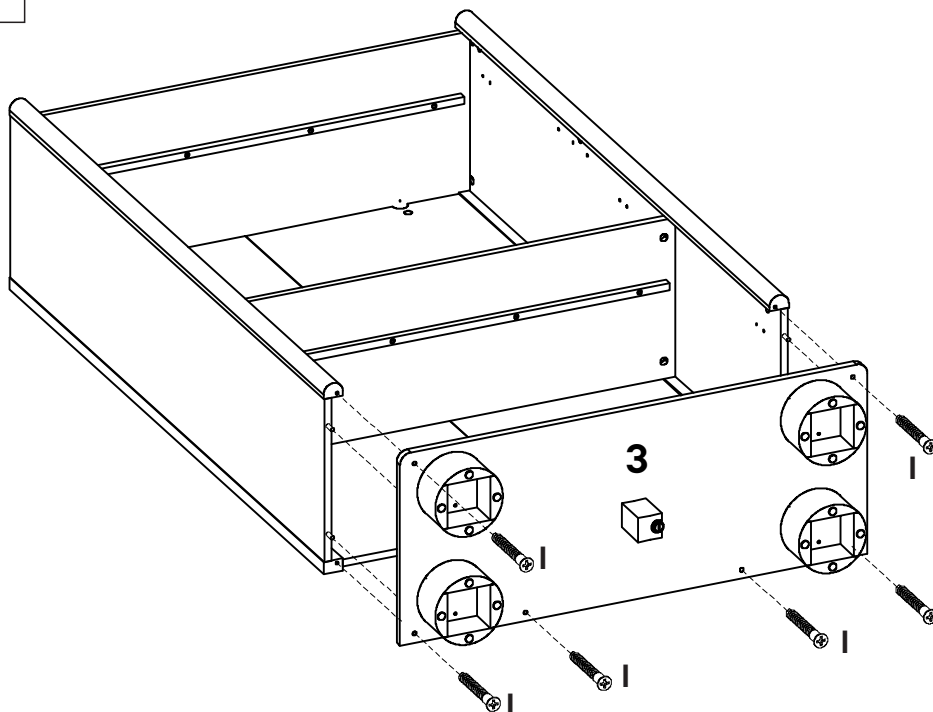

STEP 16


HARDWARE

B Cam Lock Ø15 x 12 mm x8

H Sticker x4

16.1 Insert 8x **Cam Lock (B)** onto the **Assembled Unit** with arrow pointing towards nearest edge. Turn **Camlock (B)** clockwise to lock.

16.2 Place 4x **Stickers (H)** onto the Top Panel Camlock.

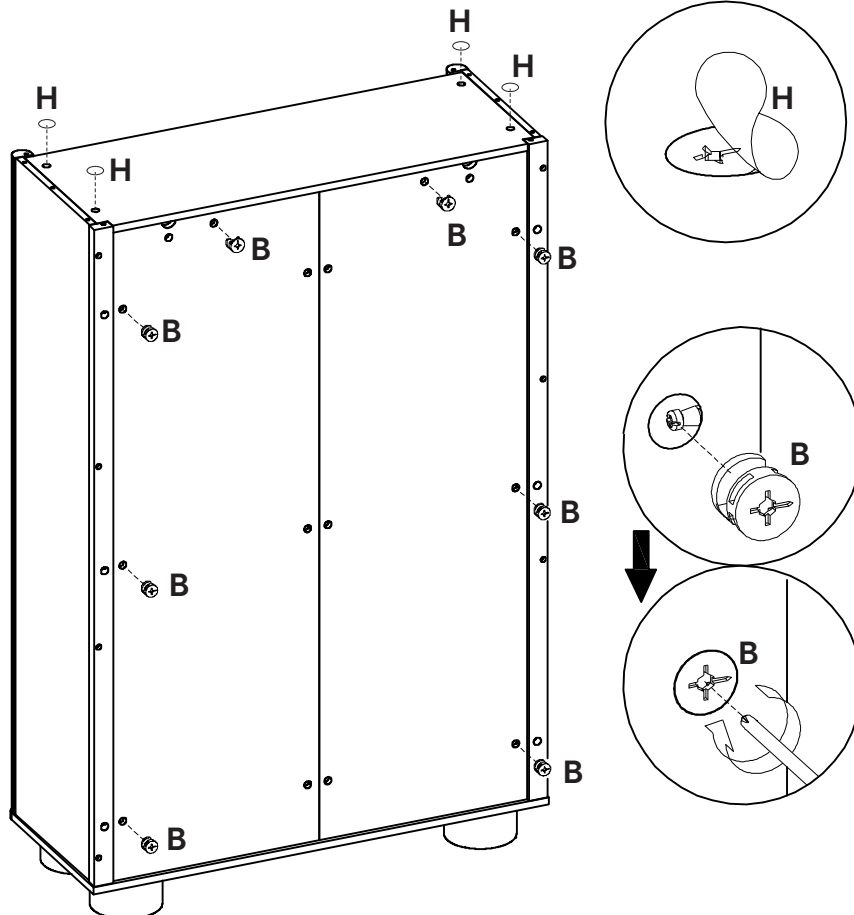

HARDWARE


- (A)** Cam Bolt Ø6 x 32mm x8
(D) Dowel Ø7.8 x 32 mm x14

COMPONENTS

- (9)** Right divider x1
(10) Left divider x1
(11) Top support x3
(12) Back crown x1
(15) Front crown x1

17.1 Insert and screw 8x **Cam Bolts (A)** into the bottom hole of the **Back crown (12)** & **Front Crown (15)**.

17.2 Insert 14x **Dowels (D)** into the holes on long edge of the **Top support (11)**, **Back Crown (12)** & **Front Crown (15)**.

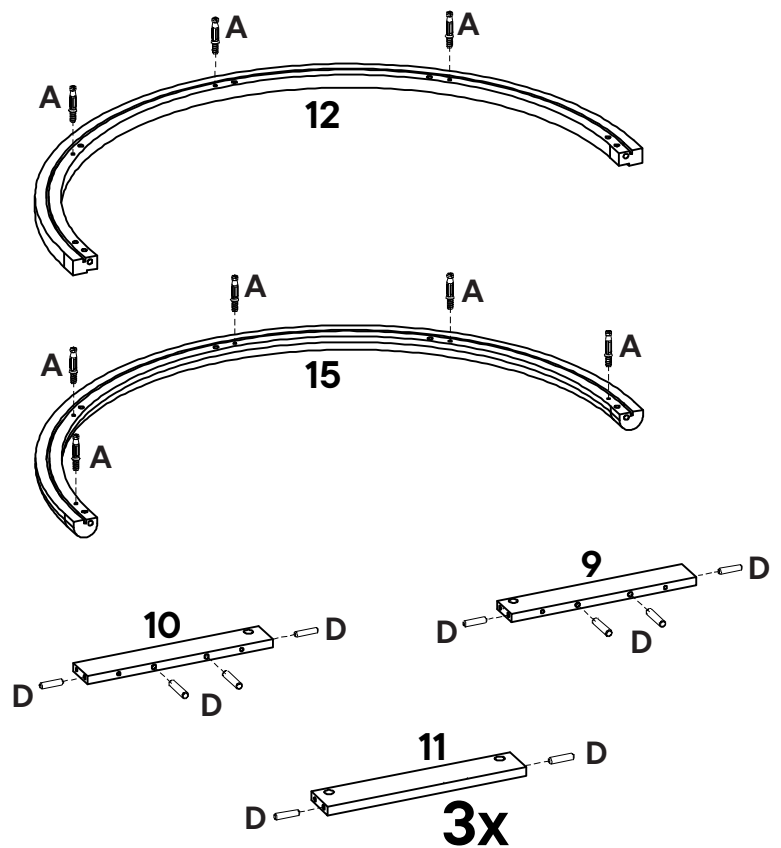

STEP 18

HARDWARE


- (B)** Camlock Ø15 x 12 mm x8
(I) Assembly Screw x2

COMPONENTS

- (9)** Right divider x1
(10) Left divider x1
(11) Top support x3
(12) Back crown x1
(15) Front crown x1


18.1 Connect **Right divider (9)**, **Left divider (10)**, **Top support (11)** and **Back crown (12)** onto **Front crown (15)** by inserting 8x **Cam Locks (B)** to the corresponding holes.

18.2 Fasten with 2 x **Assembly Screws (I)** onto the Assembled Unit.

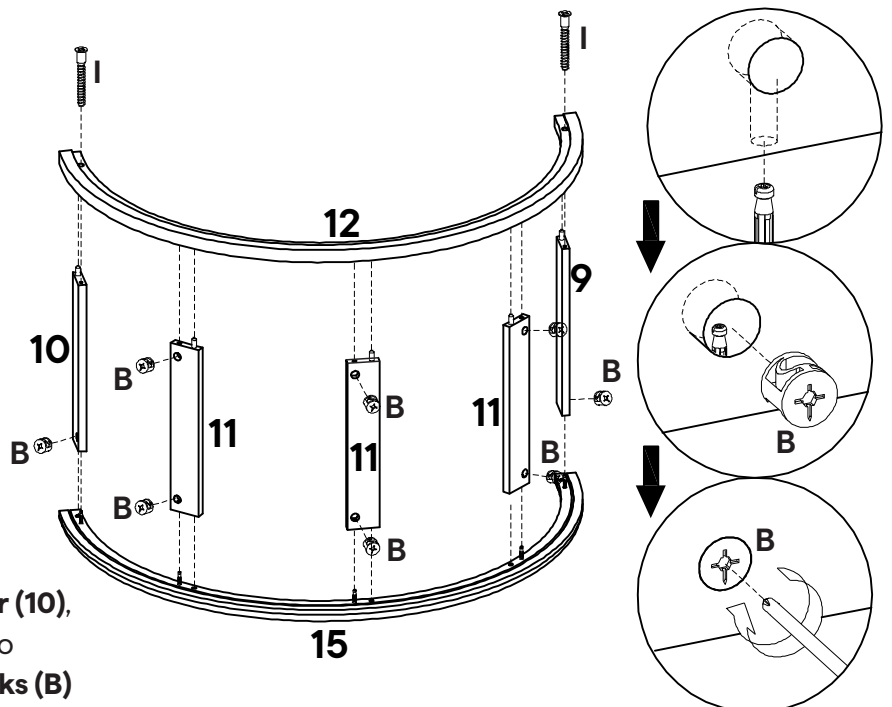

COMPONENTS

1 Top Panel x1

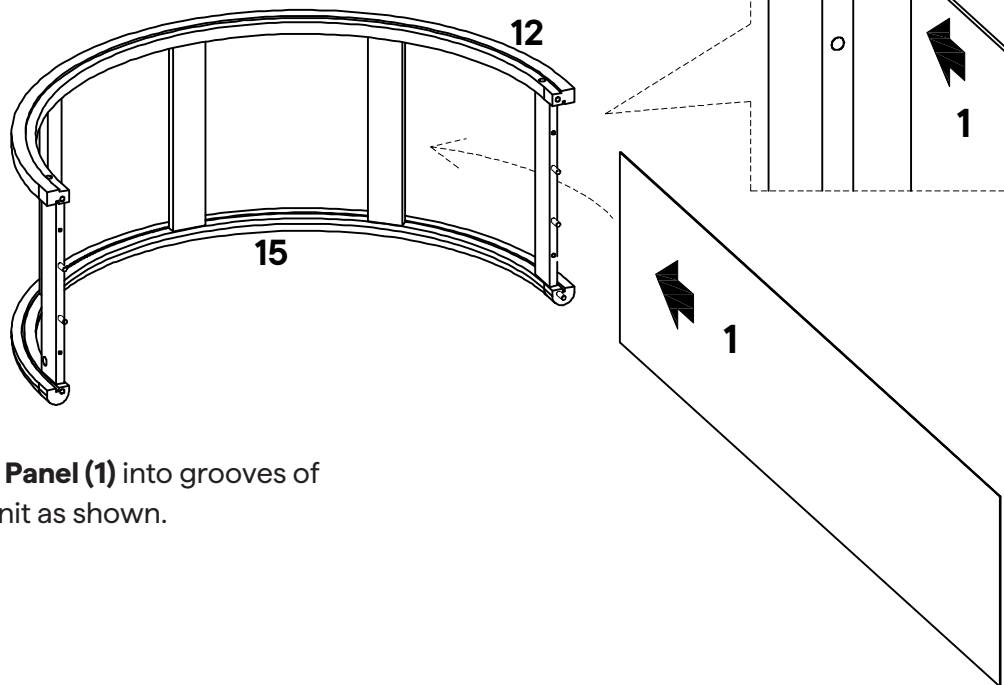

19.1 Slide **Top Panel (1)** into grooves of Assembled Unit as shown.

STEP 20

HARDWARE


A Cam Bolt Ø6 x 32mm x4

I Assembly Screw x4

COMPONENTS


7 Right Support x1

8 Left Support x1

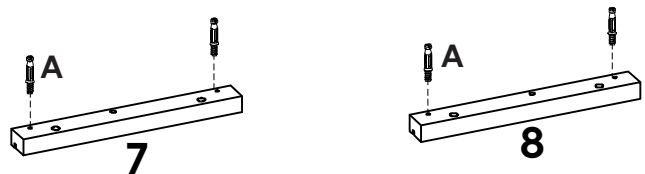

20.1 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Right Support (7)** & **Left Support (8)**.


20.2 Fasten **Right Support (7)** & **Left Support (8)** onto the **Assembled Unit** with 4x **Assembly Screws (I)**.

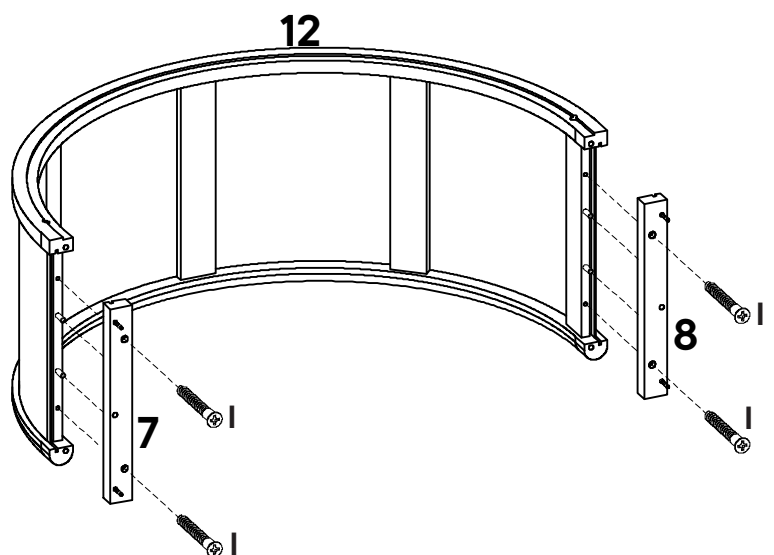

HARDWARE

(B) Cam Lock Ø15 x 12 mm x4

18.1 Connect **Top Assembled** onto Base Assembled by inserting 4x **Cam Locks (B)** to the corresponding holes.

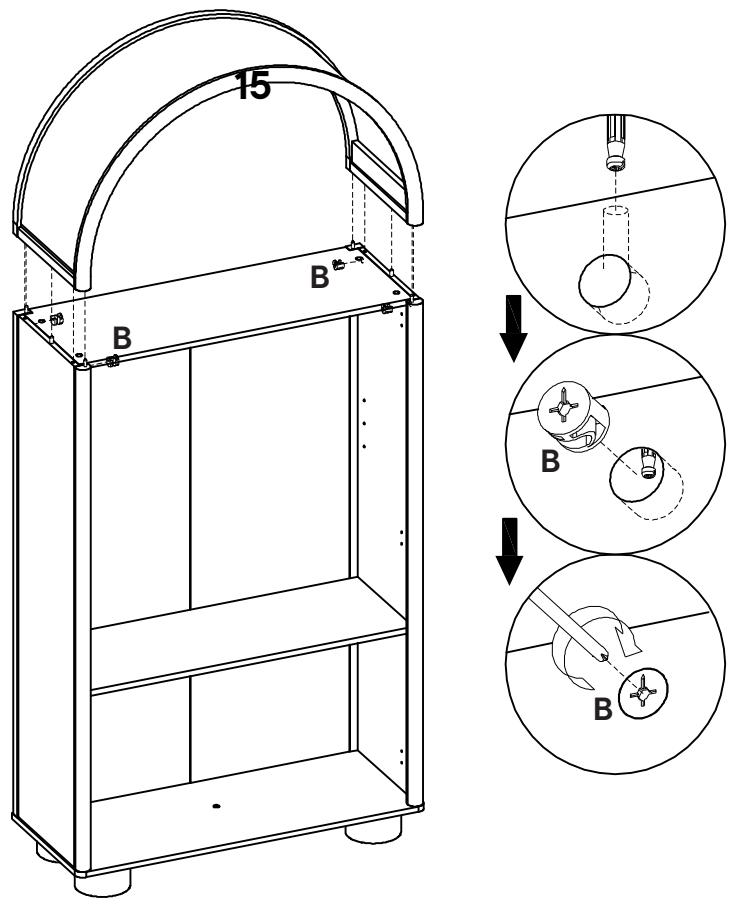

STEP 22


HARDWARE

(N) Screw Ø4 x 12 mm x11

COMPONENTS

(21) Top Back Panel x1

14.2 Connect Top **Back Panel (21)** onto the Assembled Unit with secure it by tightening 11x **Screws Ø4 x 12 mm (N)**.

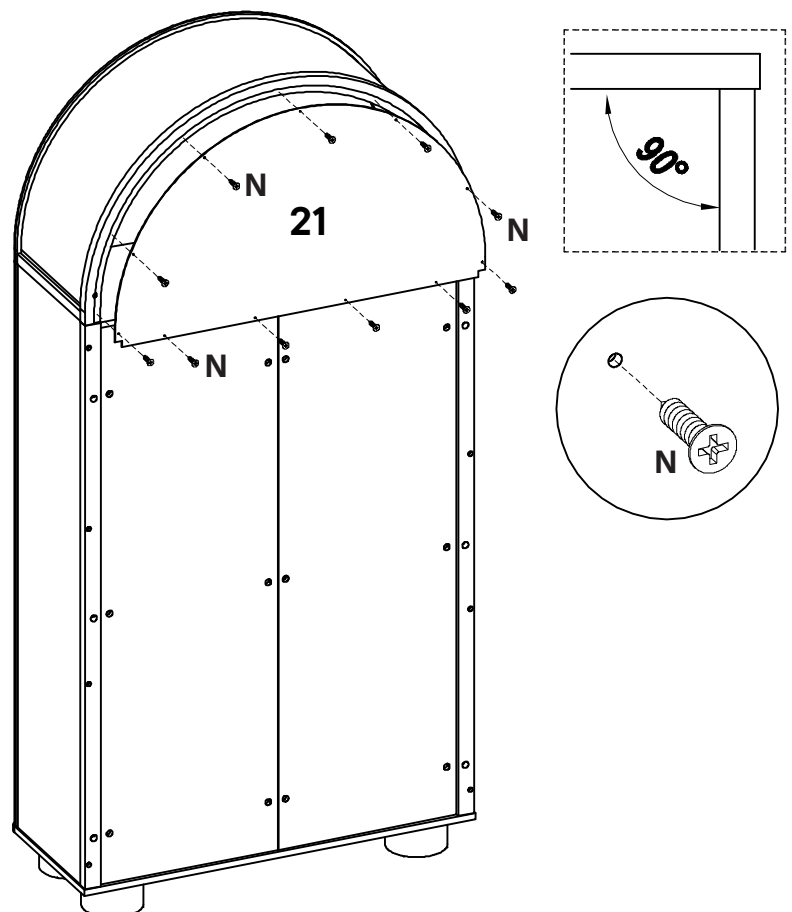



HARDWARE

P Screw Ø6 x 19 mm x24

COMPONENTS

27 Hinge support x6

23.1 Fasten 6x **Hinge Supports (27)** onto the Assembled Unit with and secure it by tightening 24x **Screws Ø6 x 19 mm (P)**.

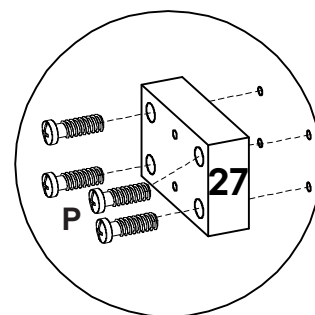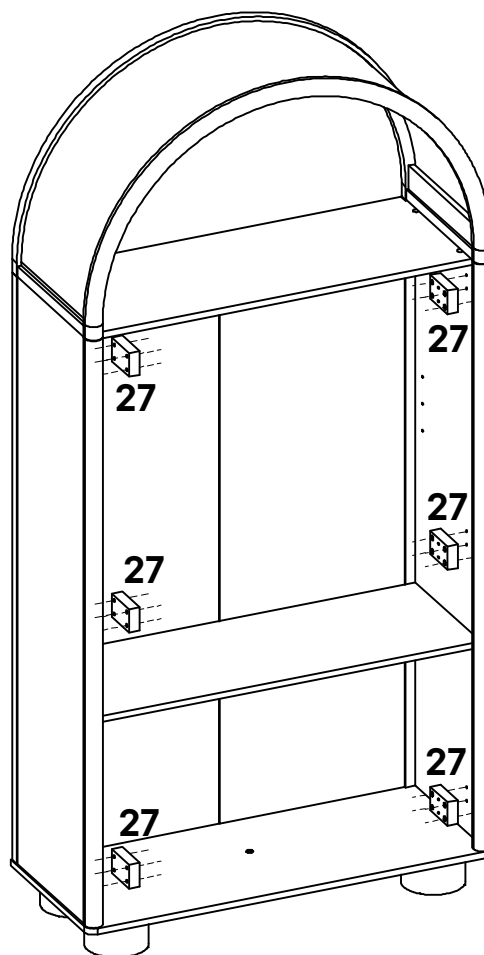

STEP 24

HARDWARE



O Screw Ø12 x 25 mm x4

U Metal Support x1

COMPONENTS

18 Adjustable Shelf x1

24.1 Fasten **Metal Support (U)** onto the **Adjustable shelf (18)** with and secure it by tightening 4x **Screws Ø12 x 25 mm (O)**.

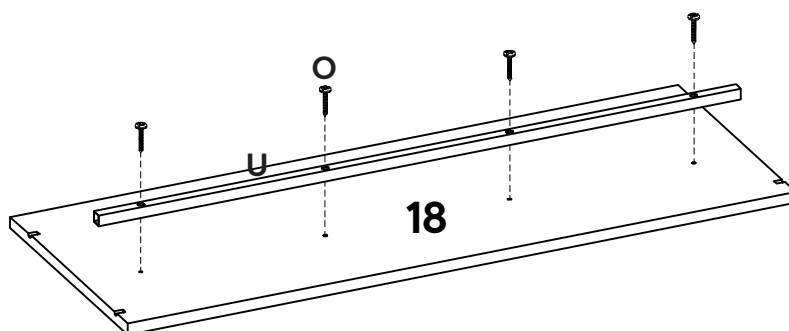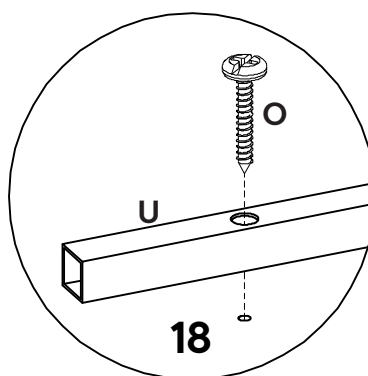

HARDWARE


(R) Shelf Pin x4

COMPONENTS

(8) Adjustable Shelf x1

25.1 Insert **Shelf Pins (R)** onto Side and in the desired positions.

25.2 Slide **Adjustable Shelf (8)** and diagonally in and rest on the **Shelf Pins**.

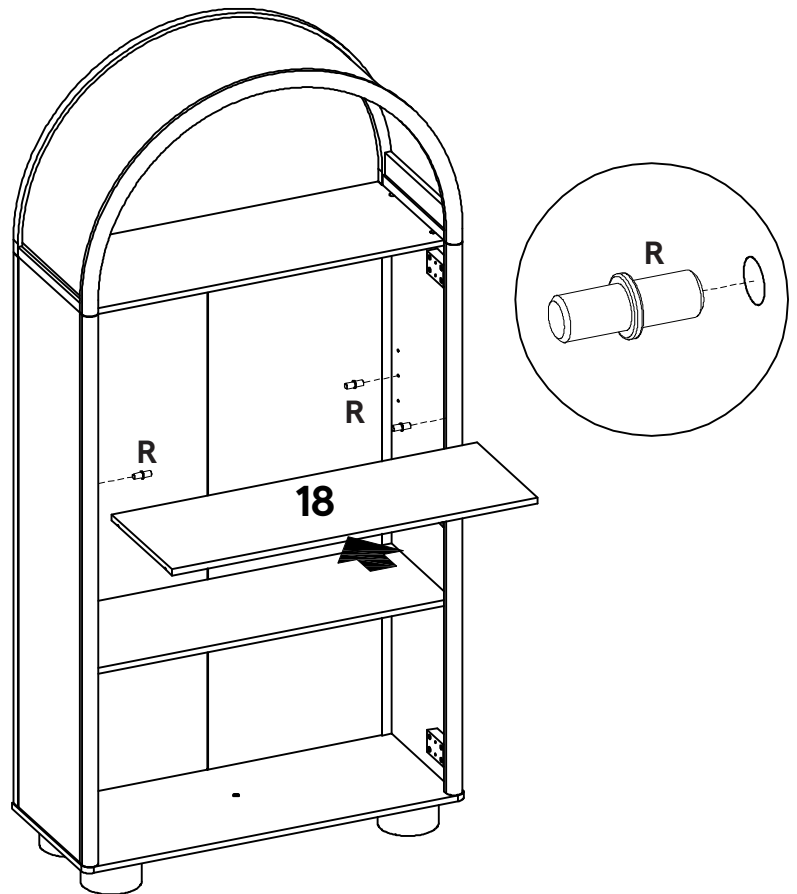


STEP 26

HARDWARE

(V) Wall Fixing x2

(W) Screw Ø6 x 12 mm x2

26.1 Fasten 2x **Wall Fixings (V)** onto the Assembled Unit with and secure it by tightening 2x **Screws (W)**.

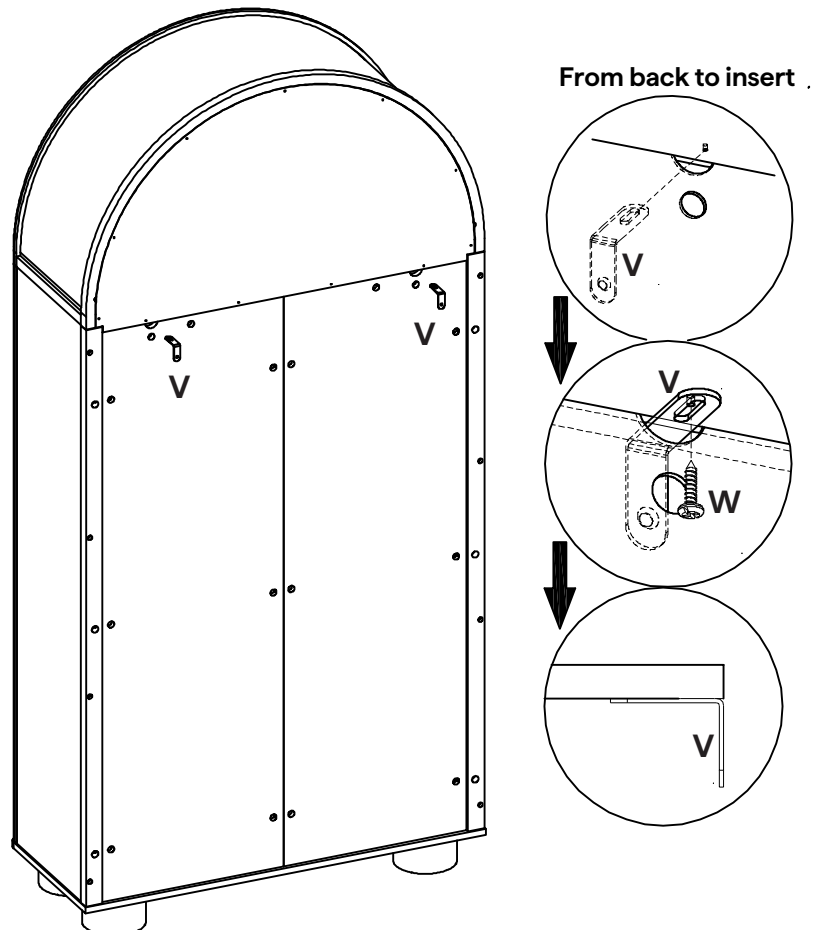


HARDWARE

J Hinge	x6
K Screw Ø7 x 13 mm	x12
L Screw Ø8 x 25 mm	x8

COMPONENTS

24 Right Door Panel	x1
25 Left Door Panel	x1
26 Handle	x2

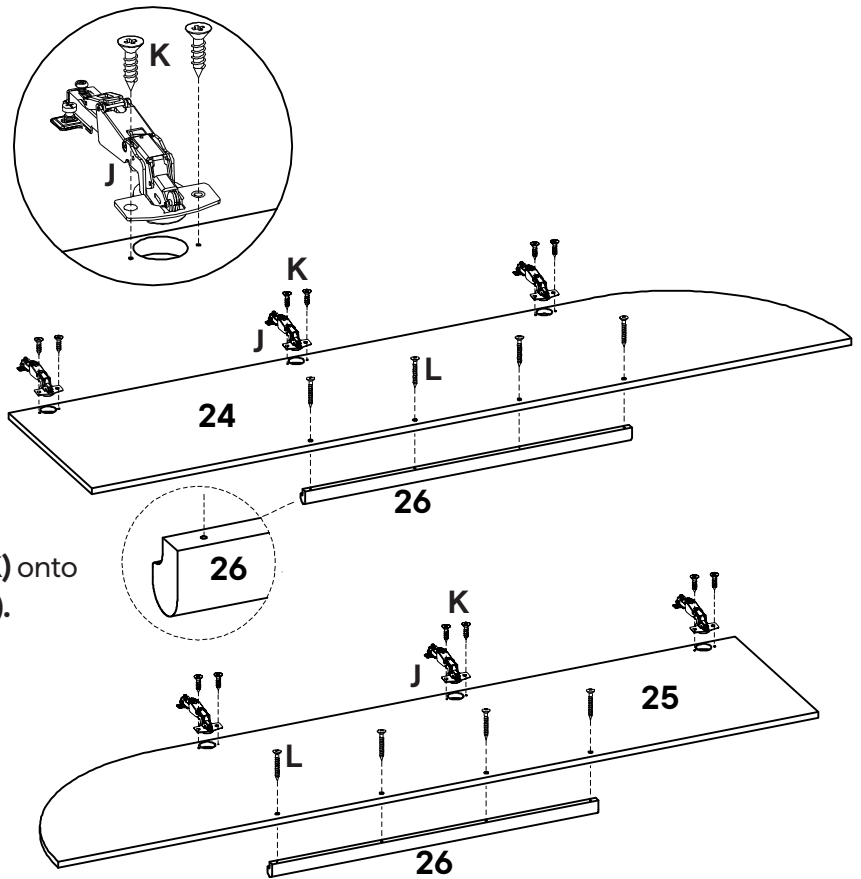

27.1 Fasten 6x **Hinges (J)** with **12x Screws (K)** onto **Right Door Panel (24) & Left Door Panel (25)**.

27.2 Fasten 2x **Handles (26)** with **8x Screws (L)** onto **Right Door Panel (19) & Left Door Panel (20)**.

STEP 28

HARDWARE


Y Door assembly spacer	x2
-------------------------------	----

COMPONENTS




24 Right Door Panel	x1
25 Left Door Panel	x1

28.1 Carefully align each **Doors (24 and 25)** to the edge of the assembled, place **2x Door assembly spacer (Y)** under to the Doors, and secure each **Door Hinges**.

Remove door assembly spacer after securing all hinges.


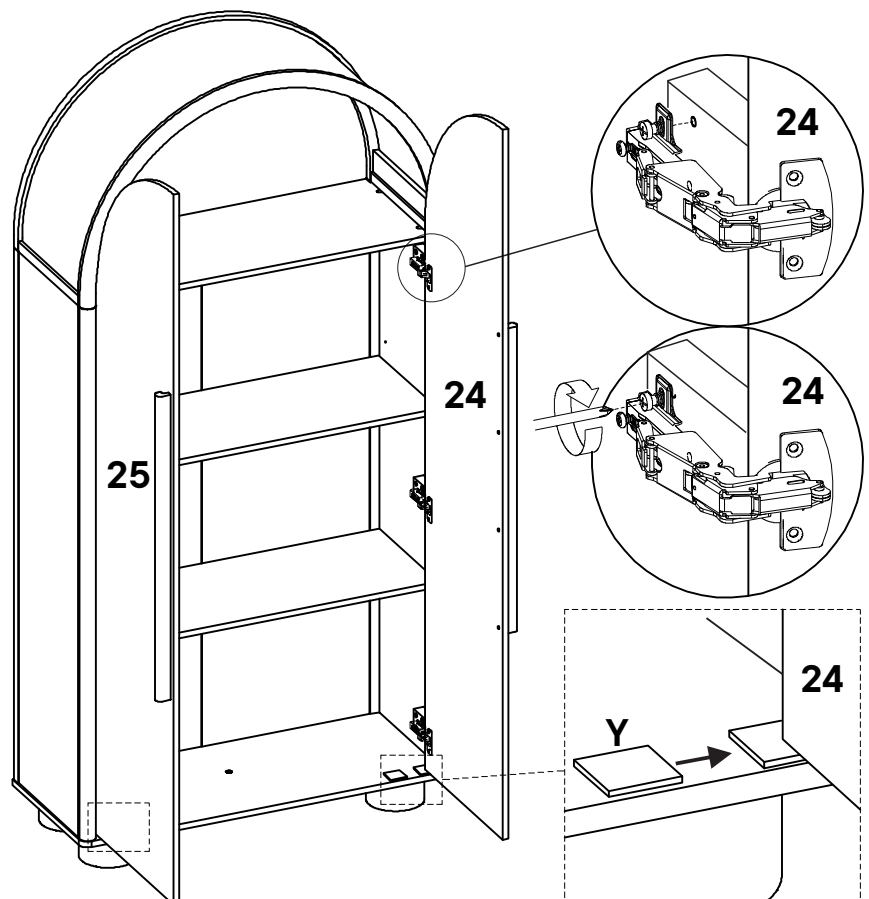


Bookcase Door Alignment

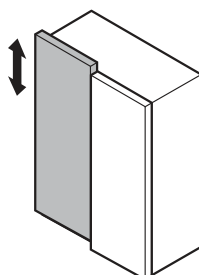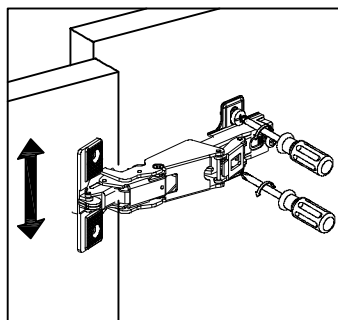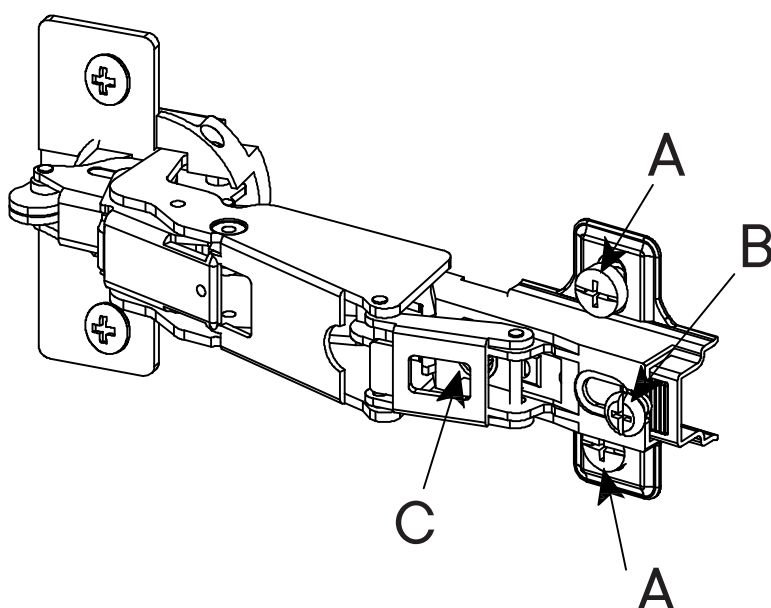



To adjust the vertical height.

Loosen the two screws A on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

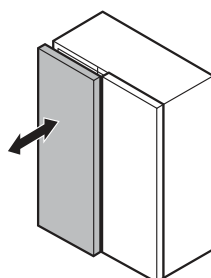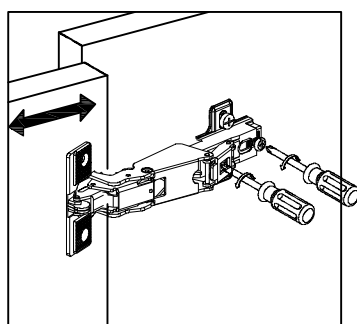

To adjust depth.

Loosen screw B and adjust door, if the door can not be adjusted, please loosen screw C, then try again. Tighten screw B and C.

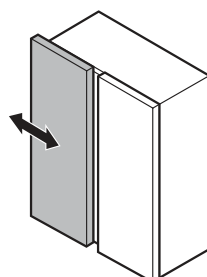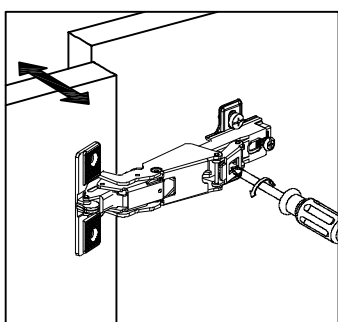


To adjust side ways.

Turn screw C on BOTH hinges on each door.

HARDWARE

C Cover cap x12

29.1 Place 2x **Cover cap (C)** onto the camlock.

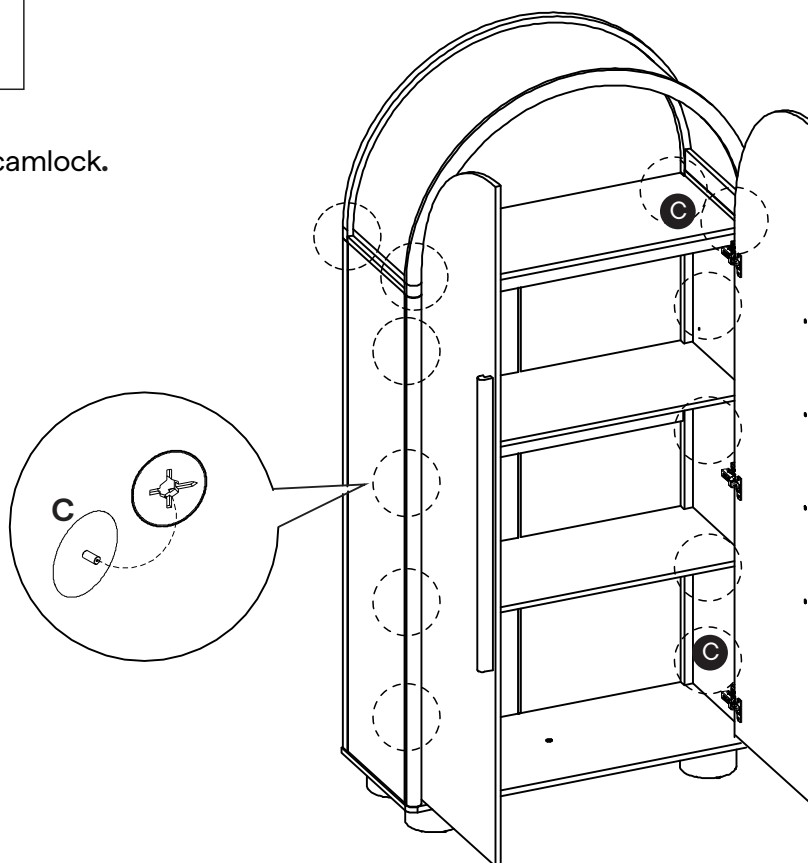


STEP 30

HARDWARE

H Sticker x9

30.1 Place 9x **Stickers (H)** onto the Bolt.

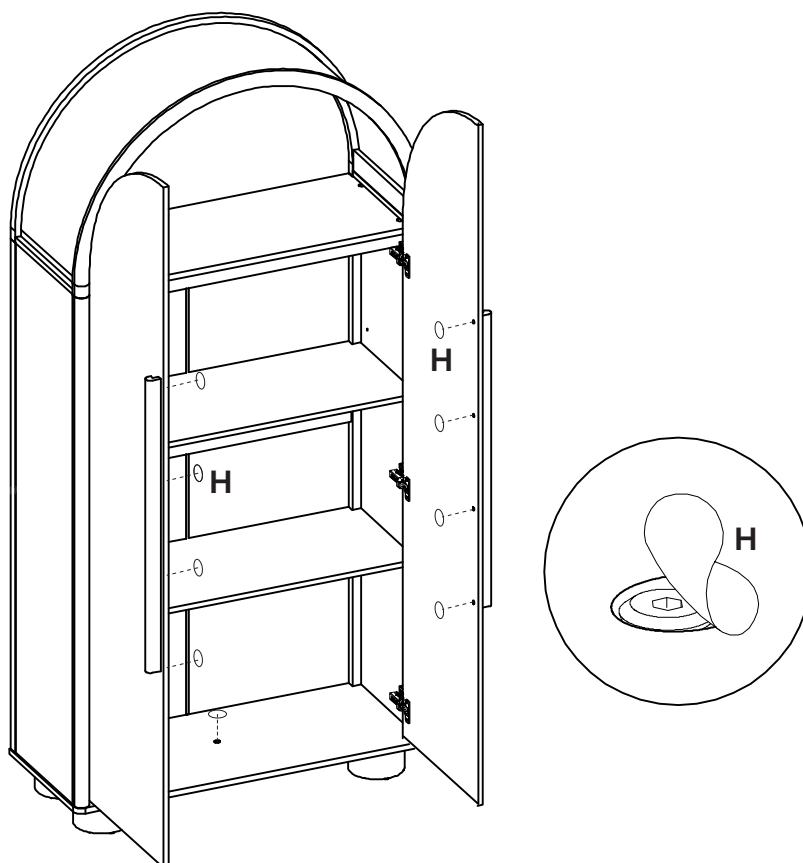


HARDWARE**H** Sticker**x2**

30.1 Place 2x **Stickers (H)** onto the Wall fixing hole.

Important : For your safety it is imperative to fix your furniture to the wall.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

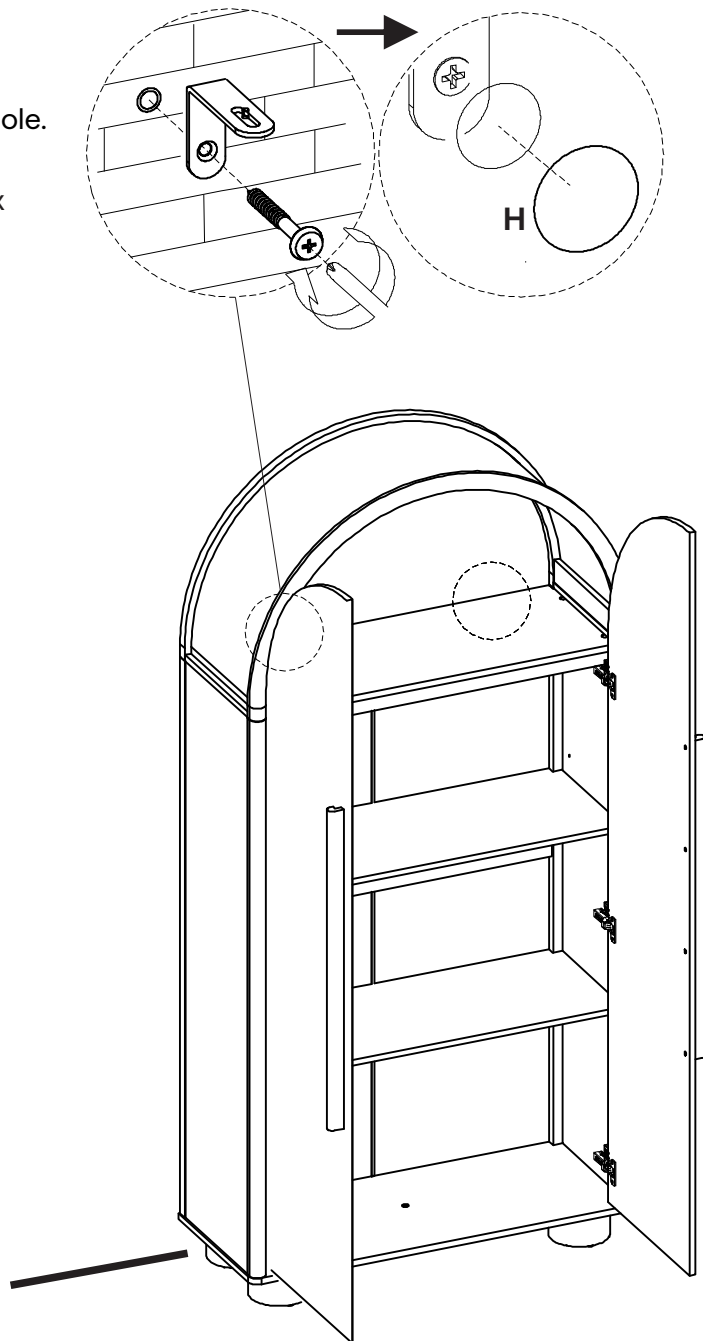


Great job!

Bookcase assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

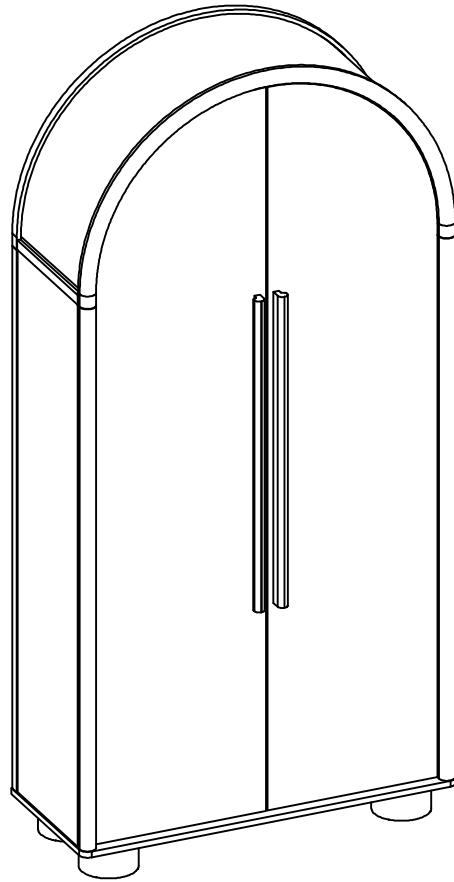

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000

cs@modway.com