



**L-SHAPE HOME OFFICE TWO-TONE DESK WITH STORAGE**

# **MODEL RTA-739DL**

## **ASSEMBLY INSTRUCTIONS**

**Thank you for purchasing our product.**

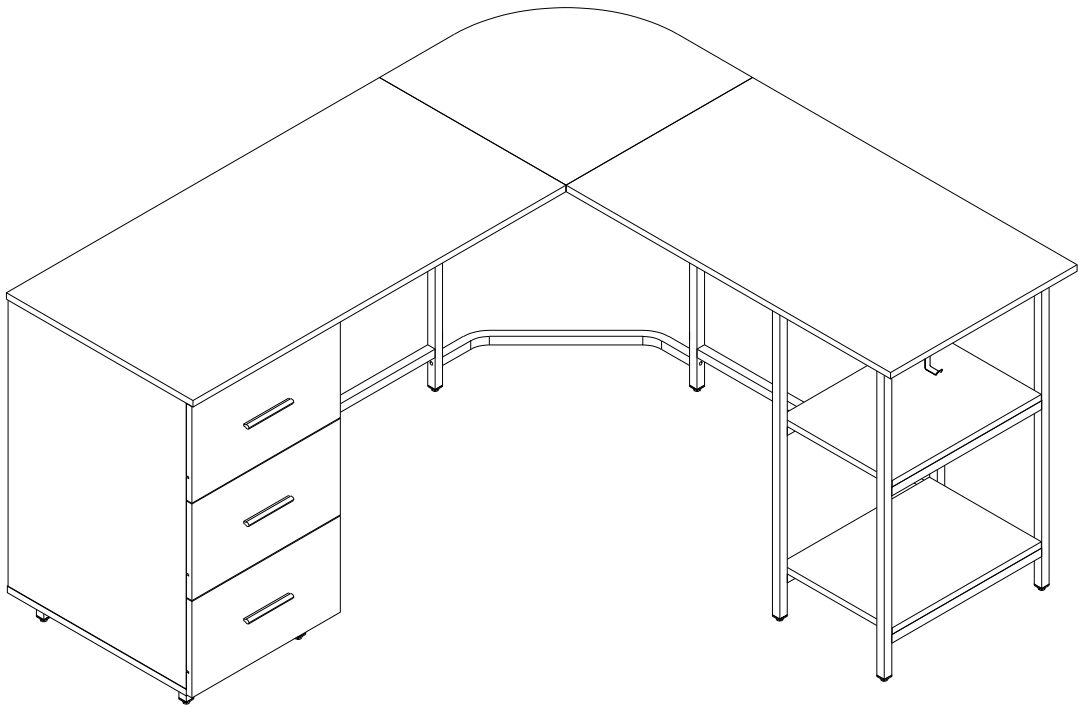

**Please note that this  
product comes packaged  
in 2 separate boxes.**



Scan QR code to  
view assembly video

REV.PFT-6839-0822



|     |           |     |
|-----|-----------|-----|
| P.1 | RTA-739DL | P.1 |
|-----|-----------|-----|



- The product comes packaged in 2 separate boxes.



- Please read carefully the assembly instructions before the installation.



- Do not discard this manual or any of the packaging material until the unit has been completely assembled.















- Might require of two people for the assembly.
















- Scan the above QR code to view the complete assembly video online.
- For individual Step videos – please use the QR code found on the corresponding step within the manual.

|     |           |     |
|-----|-----------|-----|
| P.2 | RTA-739DL | P.2 |
|-----|-----------|-----|


|                                                                                                                                                                            |                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Do a quick inventory of all the parts and hardware listed in the following pages.</p>  | <p>Missing, damaged and defective parts can be replaced at no cost to you. Please refer to the last pages on this manual.</p>  | <p>The replacement parts service is limited to the 48 contiguous United States. If you reside in AK, HI, PR, U.S. territories or other countries, please contact the supplier from where the unit was purchased.</p>  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
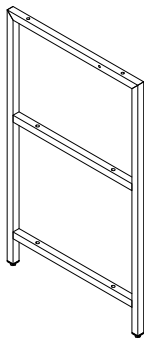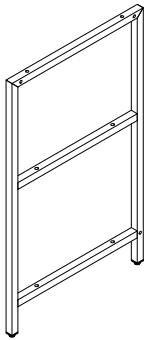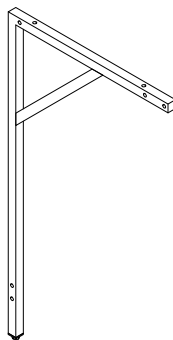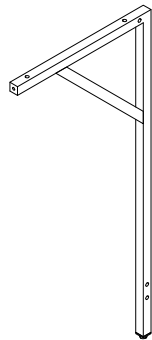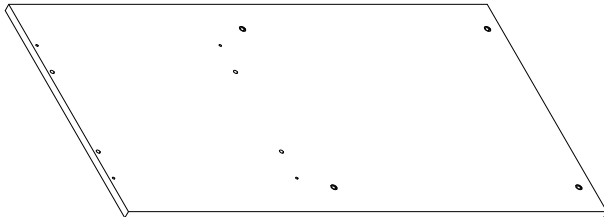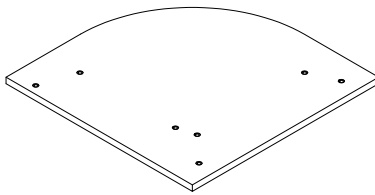
| MAIN PARTS LIST                                                                     |                         |                                                                                      |            |                                                                                       |                                                                                      |                                                                                      |                  |
|-------------------------------------------------------------------------------------|-------------------------|--------------------------------------------------------------------------------------|------------|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|------------------|
| 1<br>x1                                                                             | Right frame             | 2<br>x1                                                                              | Left frame | 3<br>x1                                                                               | Center-left leg                                                                      | 4<br>x1                                                                              | Center-right leg |
|   |                         |    |            |     |                                                                                      |  |                  |
| 5<br>x1                                                                             | Left-top-back tube      |                                                                                      |            | 6<br>x1                                                                               | Left-bottom-back tube                                                                |                                                                                      |                  |
|  |                         |  |            |                                                                                       |                                                                                      |                                                                                      |                  |
| 7<br>x1                                                                             | Left-top-front tube     |                                                                                      |            | 8<br>x1                                                                               | Right-top-back tube                                                                  |                                                                                      |                  |
|  |                         |  |            |                                                                                       |                                                                                      |                                                                                      |                  |
| 9<br>x1                                                                             | Right-bottom-back tube  |                                                                                      |            | 10<br>x1                                                                              | Right-top-front tube                                                                 |                                                                                      |                  |
|  |                         |  |            |                                                                                       |                                                                                      |                                                                                      |                  |
| 11<br>x1                                                                            | Corner-bottom-back tube |                                                                                      |            | 12<br>x4                                                                              | Foot                                                                                 | 13<br>x1                                                                             | Earphones hook   |
|  |                         |   |            |  |                                                                                      |                                                                                      |                  |
| 14<br>x1                                                                            | Left tabletop           |                                                                                      |            |                                                                                       | 15<br>x1                                                                             | Corner top                                                                           |                  |
|  |                         |                                                                                      |            |                                                                                       |  |                                                                                      |                  |

### MAIN PARTS LIST (Continue)

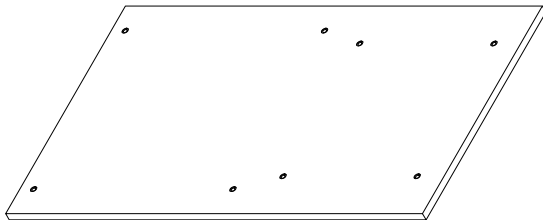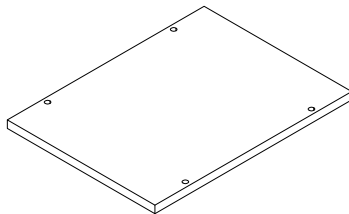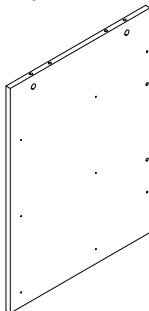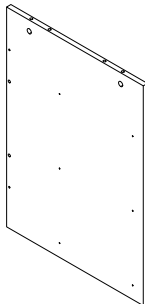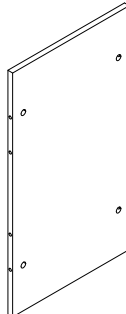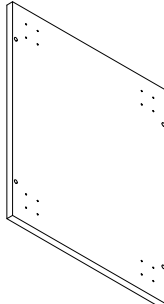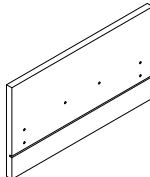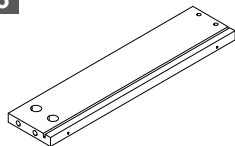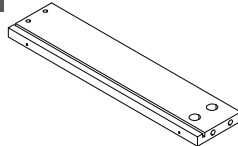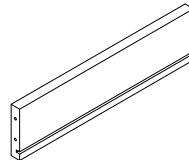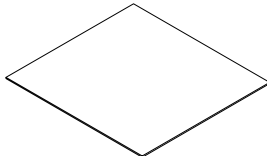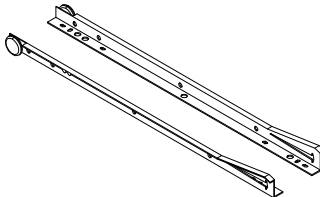
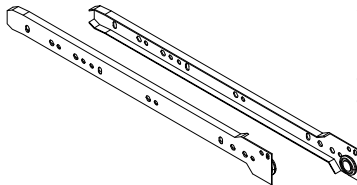
|                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                          |                                                                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>16</div> <div>x1</div> <div>Right tabletop</div> <div></div>        | <div>17</div> <div>x2</div> <div>Right shelf panel</div> <div></div>                                                                                                                                                                                                                                                                                          |                                                                                                                                                          |                                                                                                                                                           |
| <div>18</div> <div>x1</div> <div>Left panel</div> <div></div>            | <div>19</div> <div>x1</div> <div>Right panel</div> <div></div>                                                                                                                                                                                                                                                                                                | <div>20</div> <div>x1</div> <div>Back panel</div> <div></div>          | <div>21</div> <div>x1</div> <div>Bottom panel</div> <div></div>       |
| <div>22</div> <div>x3</div> <div>Drawer front panel</div> <div></div>  | <div>23</div> <div>x3</div> <div>Drawer left panel</div> <div></div>                                                                                                                                                                                                                                                                                         | <div>24</div> <div>x3</div> <div>Drawer right panel</div> <div></div> | <div>25</div> <div>x3</div> <div>Drawer back panel</div> <div></div> |
| <div>26</div> <div>x3</div> <div>Drawer bottom board</div> <div></div> | <div>27</div> <div>x3</div> <div>Sets</div> <div>Sliders*, each set of 4 pcs</div> <div></div> <div>* 24 pcs of screws D come packaged together with these pieces.</div> <div>"Flat": 2 pcs, go inside the cabinet</div> <div>"L shaped": 2 pcs, go on the drawers</div> |                                                                                                                                                          |                                                                                                                                                           |

MAIN PARTS LAYOUT (FOR REFERENCE):

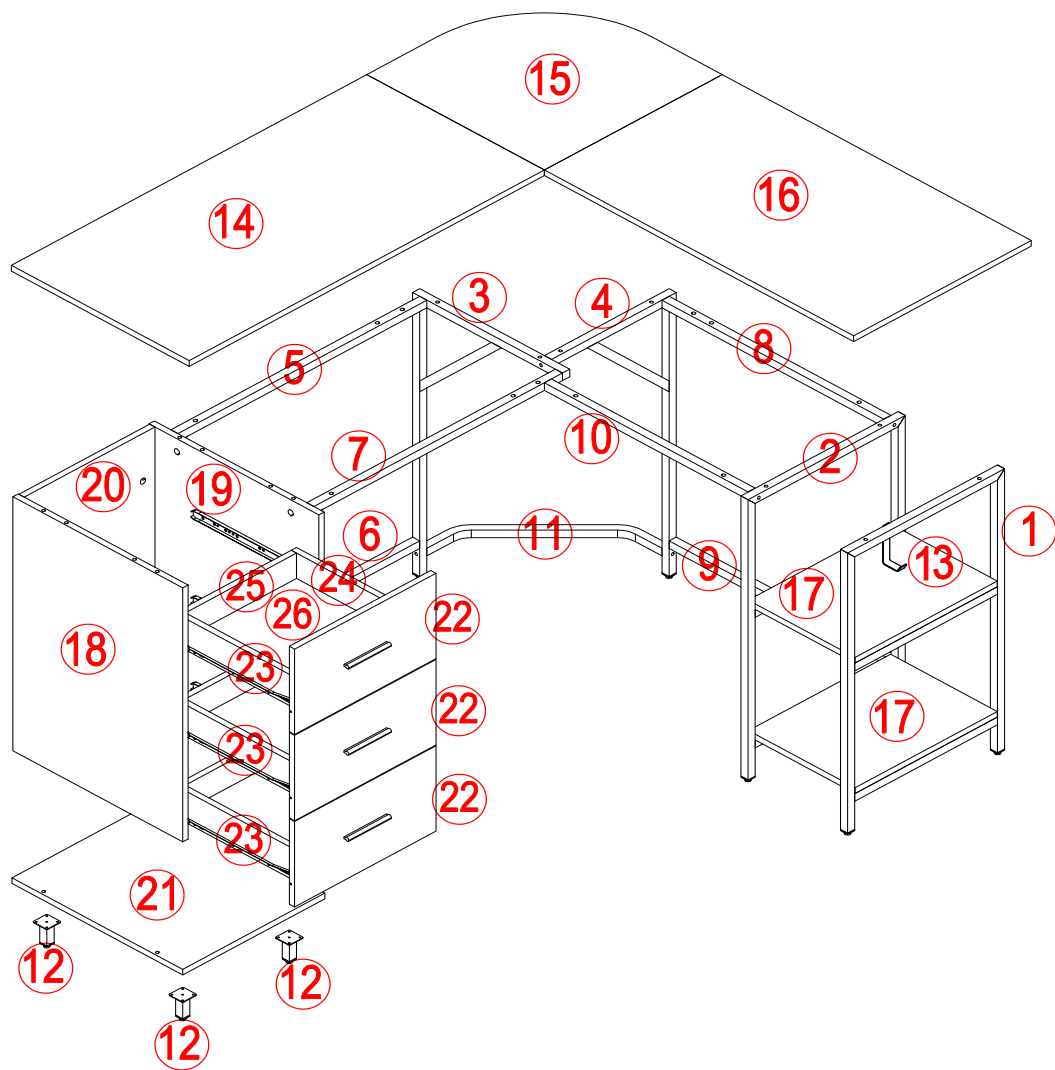


|     |           |     |
|-----|-----------|-----|
| P.5 | RTA-739DL | P.5 |
|-----|-----------|-----|

**LIST OF HARDWARE, SCREWS AND FITTINGS**

| PART | QTY | ITEM             |                                                                                                                                                       |
|------|-----|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| A    | 20  | M5x42 bolts      |                                                                      |
| B    | 20  | Ø15x12 Cam locks |                                                                      |
| C    | 8   | Ø8x40 Dowels     |                                                                      |
| D    | 40  | M3.5x14          |  * 24 pcs of these come with the sliders 27                          |
| E    | 4   | M7x50            |                                                                      |
| F    | 7   | M6x12            |                                                                      |
| G    | 12  | M6x40            |                                                                      |
| H    | 27  | M6x30            |                                                                      |
| I    | 12  | M5x40            |                                                                    |
| J    | 6   | M4x18            |                                                                    |
| K    | 3   | 96mm Handle*     |  * Desk colors Sand and Walnut use only this shape in color Silver |
|      |     |                  |  * Desk color Gold uses only this shape in color Gold              |
| L    | 3   | Metal bracket    |                                                                    |
|      | 1   | Screwdriver      |                                                                    |
|      | 1   | Allen Wrench     |                                                                    |

**OTHER TOOLS THAT ARE REQUIRED (But not included with the product)**


|        |                                                                                     |
|--------|-------------------------------------------------------------------------------------|
| Hammer |  |
| Or     |                                                                                     |
| mallet |                                                                                     |

**CAM BOLT AND CAM LOCK TUTORIAL**  
*THE INSTRUCTIONS BELOW ARE NOT ACTUAL ASSEMBLY STEPS.*




This is a tutorial that explains how to use this kind of hardware on the steps where they are required.

1. Screw the bolt into the indicated hole on the indicated panel (as example, panel "A").

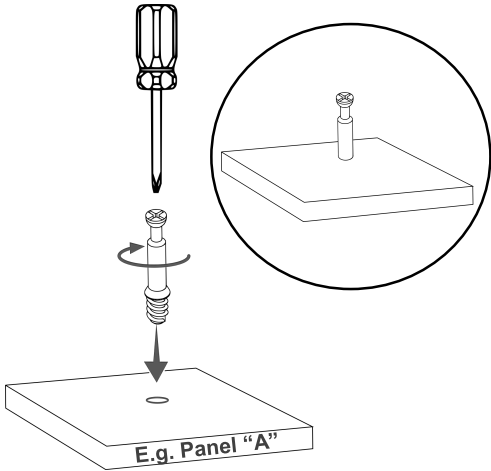


2. Join the other panel (as example, panel "B") to panel "A". If panel "B" comes with the cam lock pre-installed, make sure it is aligned to receive the bolt's head (refer to point 3). There might be a very small gap between the panels which is normal.

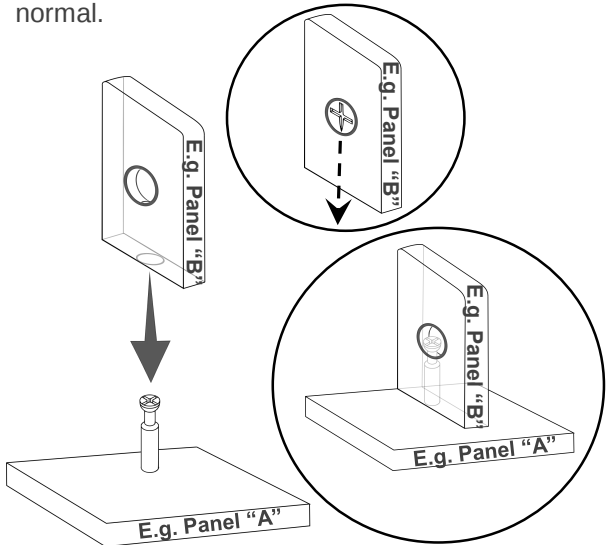


3. Insert the cam lock on panel "B" making sure it goes aligned to receive the bolt's head.

**Alignment:** The cross points towards the panel "A" with the bolt.

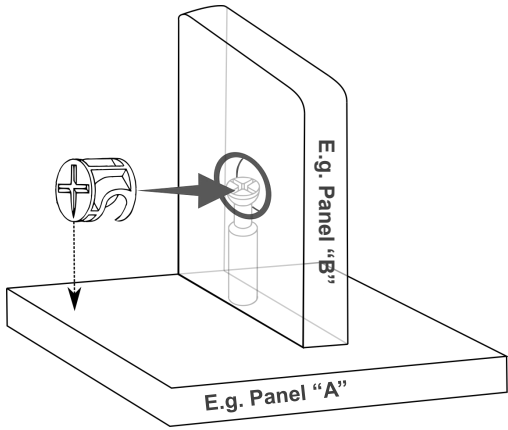

4. Turn the cam lock clockwise. This will lock the parts together and will close any gaps.

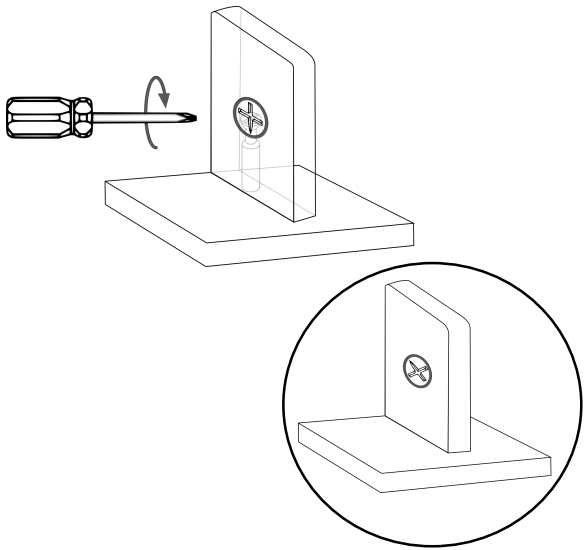

**BEFORE YOU START THE ASSEMBLY, PLEASE READ THE FOLLOWING TIPS AND WARNINGS.**


- If during assembly you find an issue or need clarification, please contact our Customer Service for assistance. Please refer to the last pages on this manual.




- On each step read the instructions thoroughly and analyze the illustrations before proceeding to do the assembly.
- Follow the instructions step by step and do not skip any unless our Customer Service advises it is OK to do so.




- Make sure you understand which hardware will be used on each step. Using the wrong size of screw, bolt or pin might strip the threads or cause damage to the part in which it is being used.

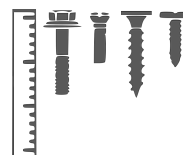

- To avoid misalignments, always leave the screws loose and tighten them until all pieces are positioned correctly.

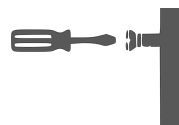

- Do not overtighten or force the screws as they might break, strip, damage the threads of the holes or get stuck inside the part.

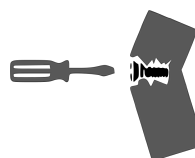

- Sometimes on wooden panels, the laminate might cover partially or entirely the screw hole. If the hole is not visible, pass and press the tip of your finger over the area where it is supposed to be located to feel the indentation, and once found, carefully pierce the laminate to reveal the hole underneath.



- If the hole seems too small for the screw, first make sure you are using the correct size of screw and that it's been installed in the correct hole. If the hole still appears to be too small, carefully pierce the laminate to reveal the hole's actual size.




## ASSEMBLY STEPS


| STEP 1 | <p>Grab all the sets of sliders <b>27</b> and separate them into 2 groups according to their shape:</p> <ul style="list-style-type: none"> <li>- The “Flat” ones will be used on the next step.</li> <li>- The “L Shaped” will be used until step 18, set them aside.</li> </ul> |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



Scan QR Code  
to view this step



(Front)




(Front)

The “Flat” ones will  
be used on step 2.



(Front)



(Front)

The “L-Shaped” will  
be used on step 18,  
set them aside.

| STEP 2 | <p>Assemble the “Flat” sliders <b>27</b> to the cabinet panels <b>18</b> and <b>19</b> with screws <b>D</b>, making sure the wheel faces towards the front of the panel. Please note the sliders attach at the front on the 4<sup>th</sup> hole and the wheel faces down with 2 empty holes above it.</p> |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Hardware:

**D**




M3.5x14


12  
Pcs




Scan QR Code  
to view this step

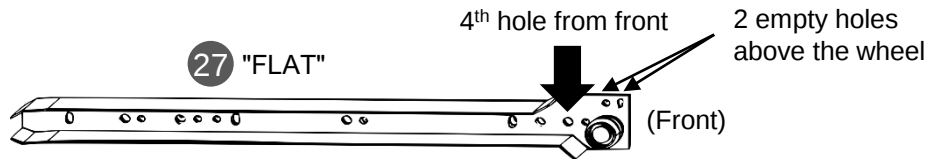

(Front)

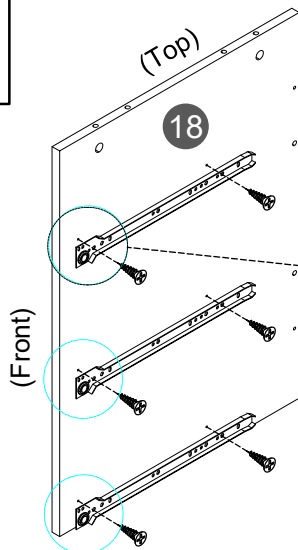


(Front)

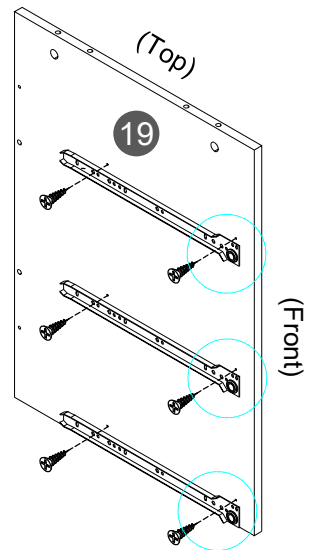

(Front)


| STEP 3                                                                                                                  |                                                                                                         |          |
|-------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|----------|
| Hardware:                                                                                                               |                                                                                                         |          |
| <b>A</b>                                                                                                                | <br>M5x42<br>Bolt      | 4<br>Pcs |
| <b>B</b>                                                                                                                | <br>Ø15x12<br>Cam lock | 4<br>Pcs |
| <b>C</b>                                                                                                                | <br>Ø8x40<br>Dowel     | 4<br>Pcs |
|                                        |                                                                                                         |          |
| Tools required<br>(But not included)                                                                                    |                                                                                                         |          |
|                                        |                                                                                                         |          |
| <br>Scan QR Code<br>to view this step |                                                                                                         |          |

- Insert the dowels **C** in the indicated holes on panels **18** and **19**.
- Attach the bolts **A** into the indicated holes on panels **18** and **19**.
- Join panels **18** and **19** to panel **20**, insert the cam locks **B** on panel **20** and turn them to lock the pieces as explained in page **6**.

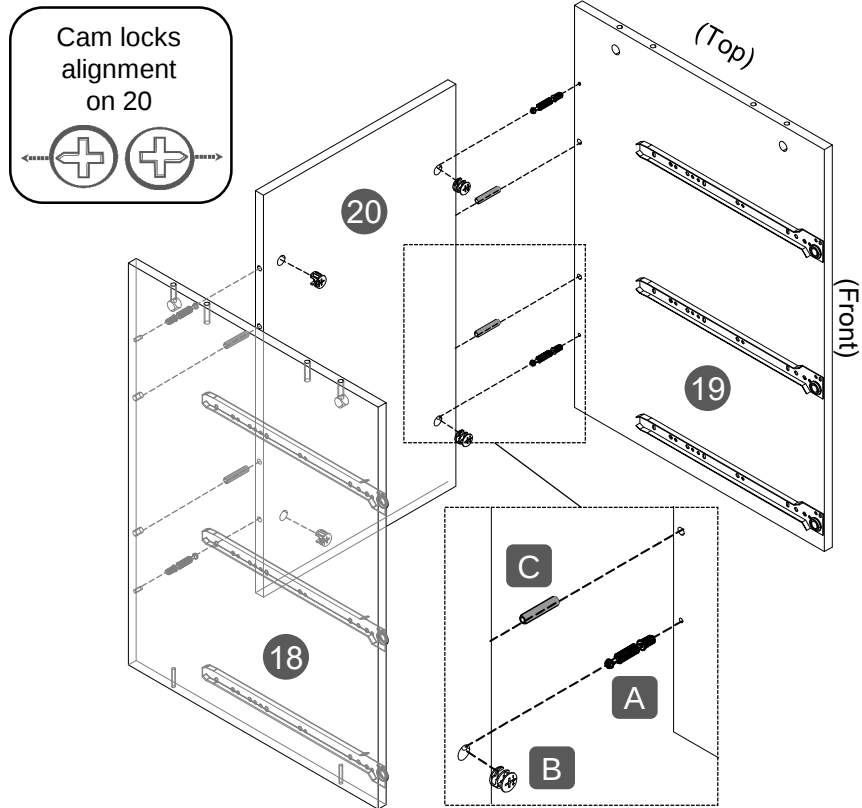



| STEP 4                                                                                                                   |                                                                                              |          |
|--------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|----------|
| Hardware:                                                                                                                |                                                                                              |          |
| <b>E</b>                                                                                                                 | <br>M7x50 | 4<br>Pcs |
|                                       |                                                                                              |          |
| <br>Scan QR Code<br>to view this step |                                                                                              |          |

- Turn the cabinet upside-down and assemble the bottom panel **21** to the panels **18** and **19** with screws **E**.

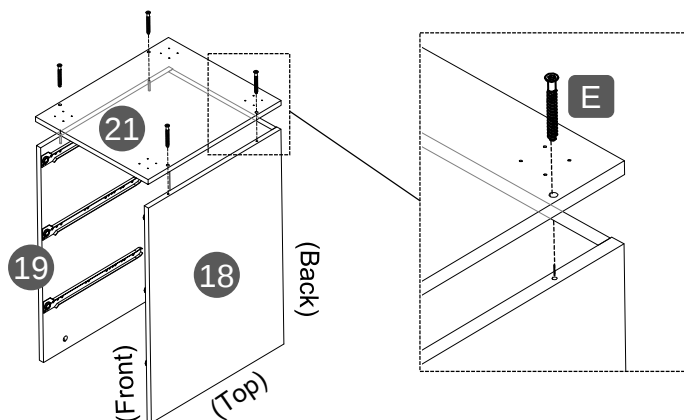



|                                                                                   |                                                                                              |           |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|-----------|
| STEP 5                                                                            |                                                                                              |           |
| Hardware:                                                                         |                                                                                              |           |
| D                                                                                 | <br>M3.5x14 | 16<br>Pcs |
|  |                                                                                              |           |
|  |                                                                                              |           |
| Scan QR Code<br>to view this step                                                 |                                                                                              |           |

Attach the feet **12** to the bottom panel **21** with screws **D**.

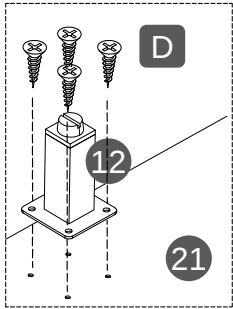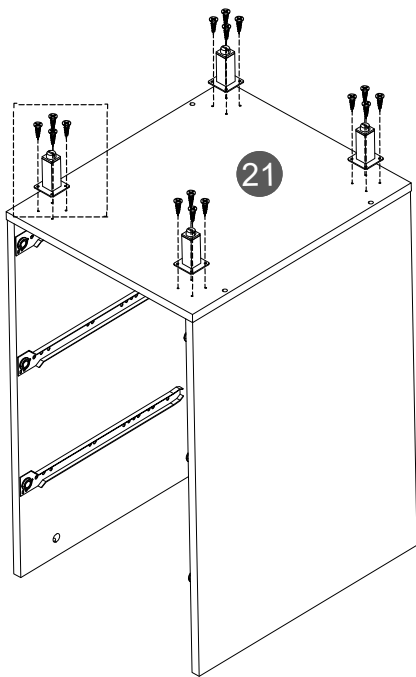

|                                                                                     |                                                                                                 |          |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|----------|
| STEP 6                                                                              |                                                                                                 |          |
| Hardware:                                                                           |                                                                                                 |          |
| F                                                                                   | <br>M6x12    | 3<br>Pcs |
| L                                                                                   | <br>Brackets | 3<br>pcs |
|  |                                                                                                 |          |
|  |                                                                                                 |          |
| Scan QR Code<br>to view this step                                                   |                                                                                                 |          |

Bring the cabinet upright and attach the brackets **L** to panel **19** facing **UP** with screws **F**.

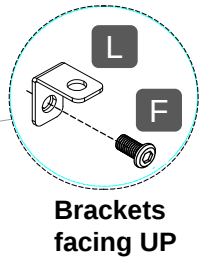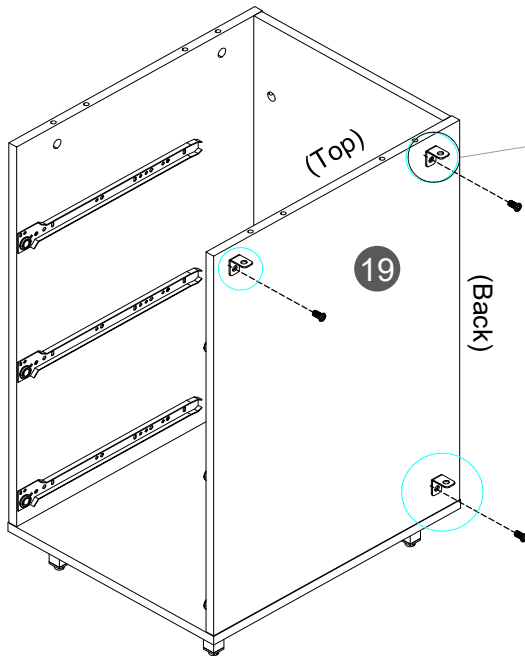

STEP 7

Hardware:


|   |                                                                                            |          |
|---|--------------------------------------------------------------------------------------------|----------|
| F | <br>M6x12 | 3<br>Pcs |
| G | <br>M6x40 | 3<br>Pcs |



  
Scan QR Code to view this step


**DO NOT TIGHTEN ANY SCREWS UNTIL THE END OF STEP 13.**

- Place the tubes **5**, **6** and **7** on top of the brackets **L** in their respective positions and assemble them with screws **F** as shown.
- Assemble the leg **3** to the tubes **5**, **6** and **7** with screws **G**.

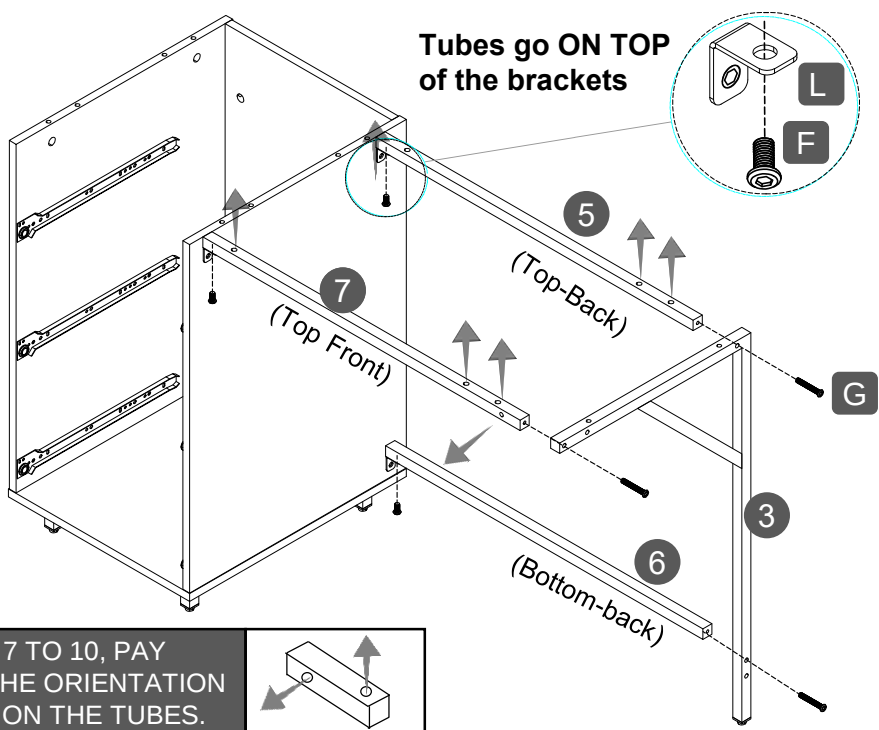

**Tubes go ON TOP of the brackets**

FROM STEP 7 TO 10, PAY ATTENTION TO THE ORIENTATION OF THE HOLES ON THE TUBES.



STEP 8


Hardware:

|   |                                                                                              |          |
|---|----------------------------------------------------------------------------------------------|----------|
| G | <br>M6x40 | 3<br>Pcs |
|---|----------------------------------------------------------------------------------------------|----------|



  
Scan QR Code to view this step

- Assemble the leg **4** to leg **3** with a screw **G**.
- Assemble the corner bottom tube **11** to legs **3** and **4** with screws **G**.

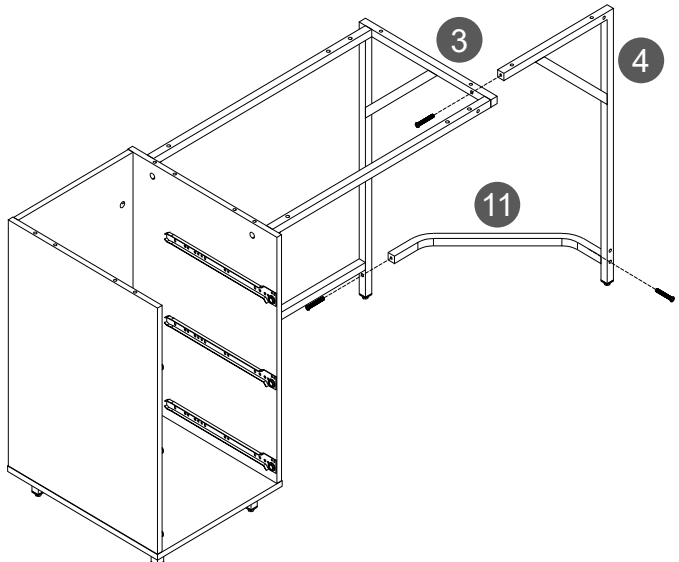

STEP 9


Hardware:

|   |                                                                                            |          |
|---|--------------------------------------------------------------------------------------------|----------|
| F | <br>M6x12 | 1<br>Pc  |
| H | <br>M6x30 | 8<br>Pcs |



  
Scan QR Code  
to view this step

- Assemble the shelves **17** to the frames **1** and **2** with screws **H** from underneath as shown.
- Attach the hook **13** to the frame **1** with screw **F** from inside.

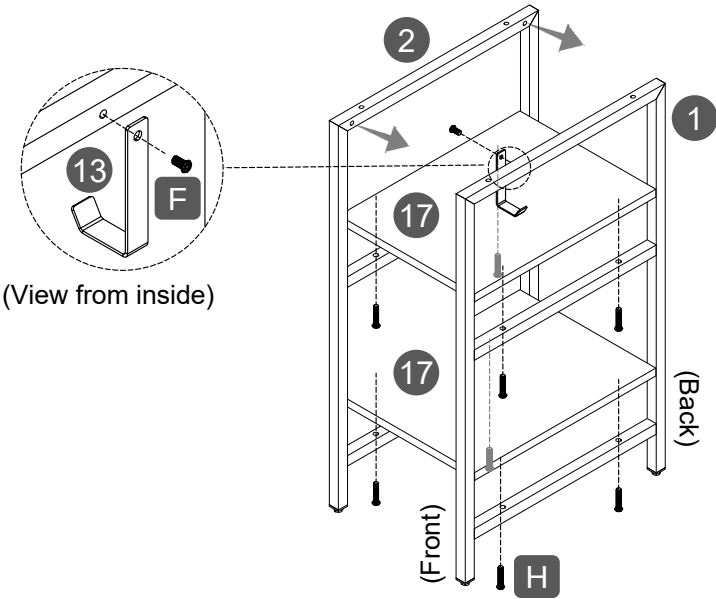

STEP 10


Hardware:

|   |                                                                                              |          |
|---|----------------------------------------------------------------------------------------------|----------|
| G | <br>M6x40 | 6<br>Pcs |
|---|----------------------------------------------------------------------------------------------|----------|




  
Scan QR Code  
to view this step

- Use screws **G** to:
- Assemble the tubes **8** and **9** to the leg **4** in their respective positions.
  - Assemble the tube **10** to tube **7**.
  - Assemble the frame **2** to the tubes **8**, **9** and **10**.

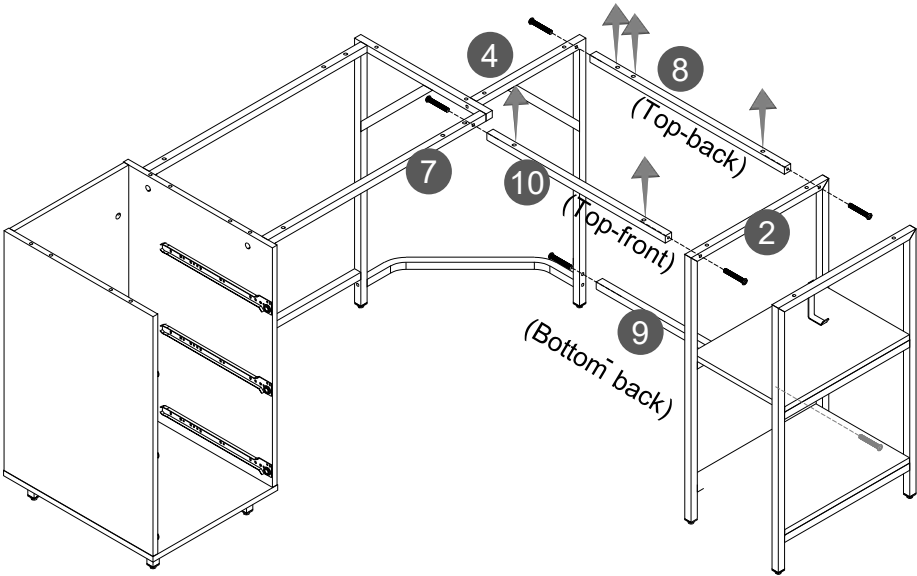


|                                                                                   |                                                                                                      |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| <b>STEP 11</b>                                                                    |                                                                                                      |
| Requires<br>of 2<br>persons                                                       |                     |
| Hardware:                                                                         |                                                                                                      |
| <b>H</b>                                                                          |  15<br>Pcs<br>M6x30 |
|  |                                                                                                      |
|  |                                                                                                      |
| Scan QR Code<br>to view this step                                                 |                                                                                                      |

- With the help of another person, place the corner top **15** and the right tabletop **16** over the structures.
- Using screws **H** from underneath, secure the corner top **15** to the tubes **3**, **4**, **5**, **7** and **8**, and secure the right tabletop **16** to the frames **1** and **2** and to the tubes **8** and **10**, but **LEAVE THEM ALL LOOSE** to allow flexibility and be able correct any misalignments later on.

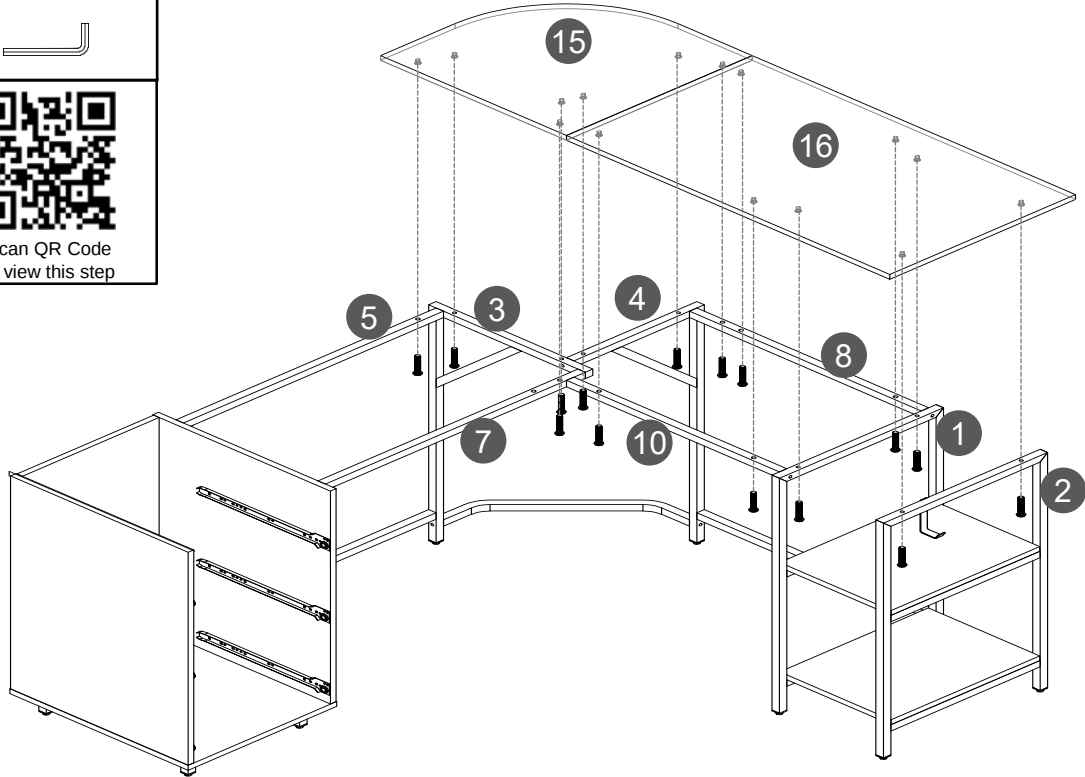

|                                                                                     |                                                                                                                |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>STEP 12</b>                                                                      |                                                                                                                |
| Hardware:                                                                           |                                                                                                                |
| <b>A</b>                                                                            |  4<br>Pcs<br>M5x42          |
| <b>C</b>                                                                            |  4<br>Pcs<br>Ø8x40<br>Dowel |
|  |                                                                                                                |
|  |                                                                                                                |
| Scan QR Code<br>to view this step                                                   |                                                                                                                |

- Attach the bolts **A** and the dowels **C** on the indicated holes on the left tabletop **14**.

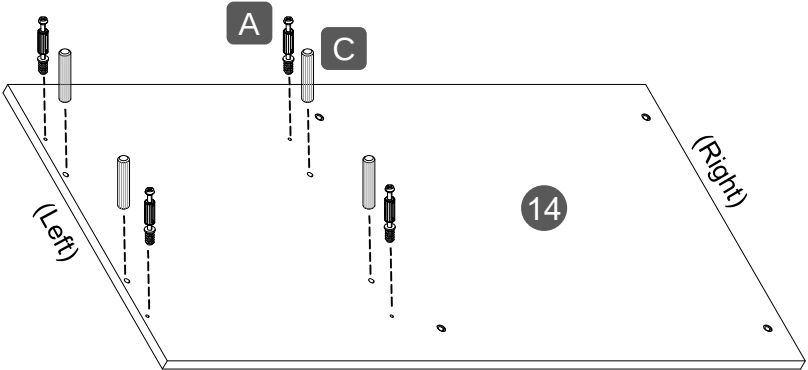

STEP 13

Requires  
of 2  
persons

Hardware:

|   |                        |          |
|---|------------------------|----------|
| B | <br>Ø15x12<br>Cam lock | 4<br>Pcs |
| H | <br>M6x30              | 4<br>Pcs |

Scan QR Code  
to view this step

- With the help of another person, carefully place the left tabletop **14** over the left cabinet making sure the bolts and dowels enter into the holes of panels **18** and **19**.
- Insert the cam locks **B** in panels **18** and **19**, and turn them to lock the tabletop to the side panels as explained in page **6**.
- Secure the tabletop **14** to the tubes **5** and **7** with screws **H** from underneath, but **LEAVE THEM ALL LOOSE** to allow flexibility.


- If the panels require alignment, push/pull/lift to get them as aligned as possible with minimal gaps between them.
- Please note that the tops might not end up 100% perfectly aligned, and it should not be of concern unless the difference in levels and gaps are considerable that will not allow the desk to function properly.

- Proceed to tighten all the screws left loose from step **7** through this step **13** inclusive.


|                                                                                                                     |                                                                                                   |
|---------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| <b>STEP 14</b>                                                                                                      |                                                                                                   |
| <b>Hardware:</b>                                                                                                    |                                                                                                   |
| <b>I</b>                                                                                                            |  12 Pcs<br>M5x40 |
|                                    |                                                                                                   |
| <br>Scan QR Code to view this step |                                                                                                   |

For each of the 3 drawers, assemble the side panels **23** and **24** to the back panel **25** with screws **I**. Please note the alignment of the grooves at the bottom of the panels.

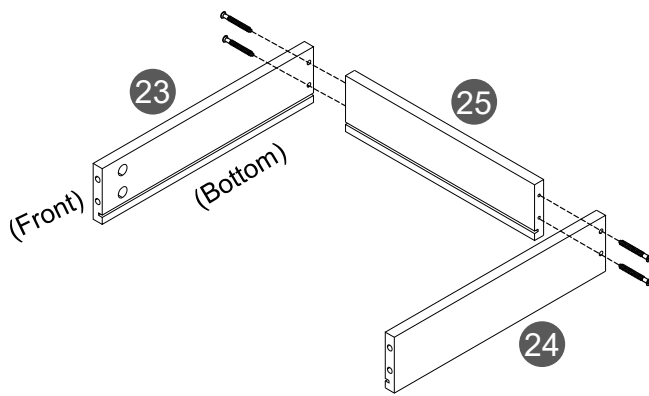

|                                                                                                                     |  |
|---------------------------------------------------------------------------------------------------------------------|--|
| <b>STEP 15</b>                                                                                                      |  |
| <br>Scan QR Code to view this step |  |

For each of the 3 drawers, slide the bottom panel **26** through the grooves of the side panels and into the back panel as shown.

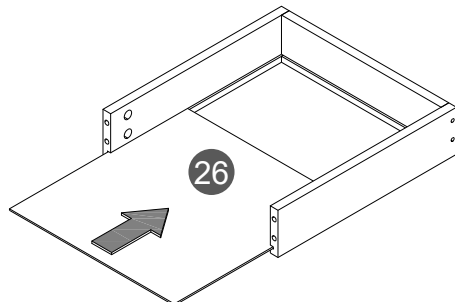


|                                                                                                                       |                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>STEP 16</b>                                                                                                        |                                                                                                                                                                                  |
| <b>Hardware:</b>                                                                                                      |                                                                                                                                                                                  |
| <b>J</b>                                                                                                              |  6 Pcs<br>M4x18                                                                               |
| <b>K</b>                                                                                                              |  Or  3 Pcs |
|                                    |                                                                                                                                                                                  |
| <br>Scan QR Code to view this step |                                                                                                                                                                                  |

For each of the 3 drawers, assemble the handle **K** that corresponds to your desk to the front surface of the front panel **22** with screws **J** as shown.

**Gold handles: For desk in Gold only.**

**Silver handles: For desks colors Walnut and Sand.**

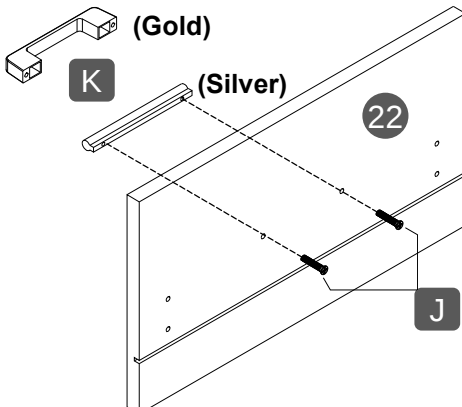

**STEP 17**

**Hardware:**


|          |                                                                                             |           |
|----------|---------------------------------------------------------------------------------------------|-----------|
| <b>A</b> | <br>M5x42  | 12<br>Pcs |
| <b>B</b> | <br>Ø15x12 | 12<br>Pcs |




  
Scan QR Code  
to view this step

- For each of the 3 drawers, assemble the front panel **22** to panels **23** and **24** with bolts **A** and cam locks **B** as explained in page 6. Please note that the bottom panel **26** will enter into the groove of panel **22**.

Cam locks  
alignment  
on 23 & 24  

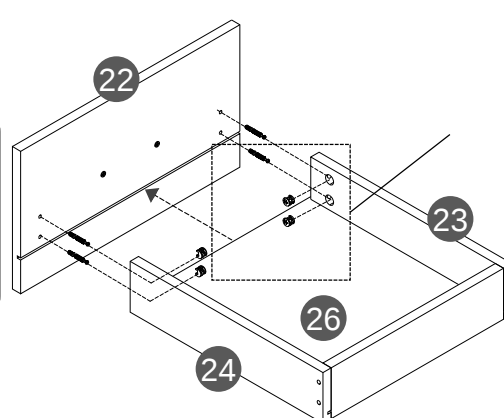

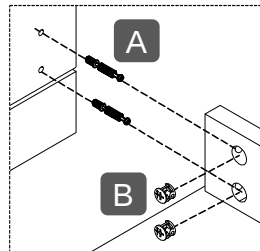**STEP 18**


**Hardware:**

|          |                                                                                              |           |
|----------|----------------------------------------------------------------------------------------------|-----------|
| <b>D</b> | <br>M3.5x14 | 12<br>Pcs |
|----------|----------------------------------------------------------------------------------------------|-----------|



  
Scan QR Code  
to view this step

For each of the 3 drawers, flip them upside-down and assemble the “L” shaped sliders **27** with screws **D**, making sure the wheel goes towards the back, and that they don't protrude, otherwise, the drawer raises 1" and won't fit in the cabinet.

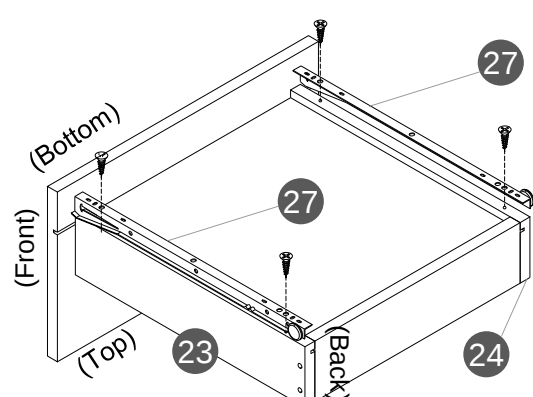


When finished, the sliders should look like this from the back of the drawer:

Sliders

  
✓

The following is incorrect, will raise 1" and the drawer won't fit:

Sliders


  
X


**STEP 19**

  
Scan QR Code  
to view this step


Insert the drawers into the cabinet, starting with the bottom one, then middle, then top. Insert and an angle with their fronts facing down, making sure the wheels from the drawer slide in the middle of the sliders inside the cabinet.

**On the left side:**

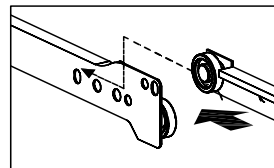

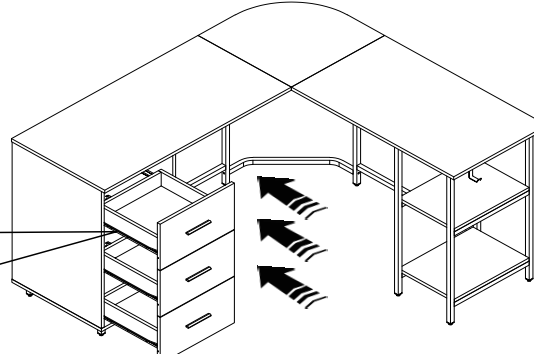


**On the right side:**

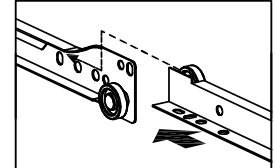

|      |           |      |
|------|-----------|------|
| P.17 | RTA-739DL | P.17 |
|------|-----------|------|

### WEIGHT LIMITS

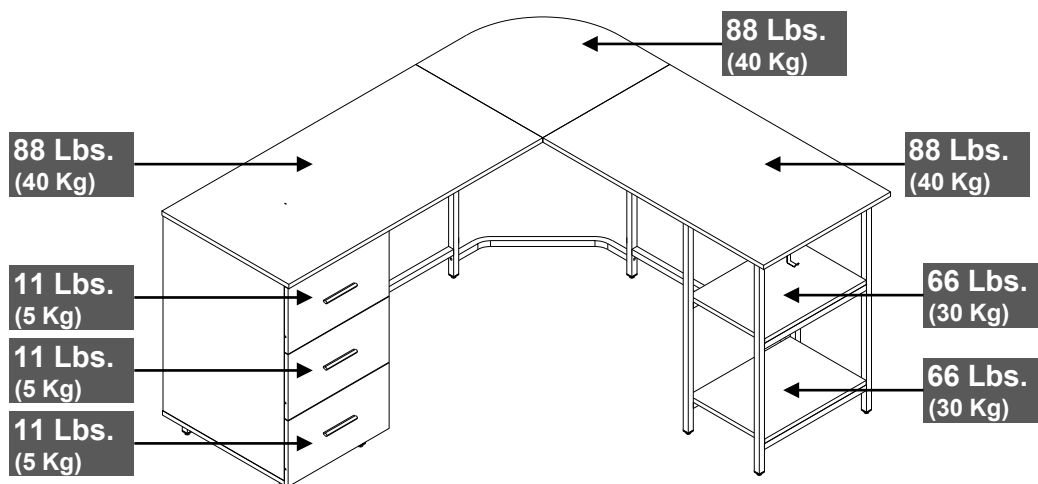

### CARE, MAINTENANCE AND SAFETY WARNINGS:

- Do not exceed the indicated weight limits.
- Do not expose the surfaces to direct sunlight or to extreme environmental conditions.
- Clean the surfaces preferable with a clean cloth damped in a solution of mild soap and water, then dry with a clean towel.
- Do not use solvents or abrasive materials to clean the unit.
- If you decide to use a cleaning agent, test first on an area hidden from view such as underneath the tabletop.
- Do not sit on the unit or lean against it.
- Do not allow small children to play under or over the unit.
- Do not allow small children to reach inside the drawers or shelves without your supervision.
- Do not pull, push or drag the unit to move it for more than 1 feet. The unit must be lifted by at least 2 persons when moving in the same or adjacent rooms.
- Before moving the unit, make sure to secure or remove any object that is heavy or might fall off. Please note that lifting from the tabletop with too much weight on the product might lead to part damage/separation.
- When lifting the unit, use both hands and bend your knees, not your backs.
- When transporting the unit to places far away, protect and secure the unit to avoid damage in transit.
- Shall any part of the unit become defective during the warranty period, replacement parts might be available to you at no charge. Please refer to the last pages on this manual.
- The warranty does not extend to regular wear and tear, nor the manufacturer assumes liability for damages or consequences due to accidents, incorrect assembly, negligence, improper use, modifications, or not heeding the above warnings.

|      |           |      |
|------|-----------|------|
| P.18 | RTA-739DL | P.18 |
|------|-----------|------|

## TECHNI MOBILI DESK WARRANTY

### DESKS/LAPTOP CARTS/FILE CABINETS: LIMITED 5-YEAR WARRANTY

RTA Products, LLC warrants to the Original Purchaser who acquired a new product from RTA Products or its authorized resellers that this product will be free from defects in its workmanship and materials, under normal use and service conditions, as described herein. "Defects" as used in this warranty, is defined as any imperfections that impair the use of the furniture or product. RTA Products LLC will replace any defective part, at its discretion, and without charge to the original purchaser other than the freight from the end consumer to RTA Products.

Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty will be effective for the applicable time period beginning the date of purchase on your original sales receipt. RTA product's obligation under this warranty is limited to repairing or replacing products or parts as provided herein. This product has been designed for and is intended for office and home-office use only. This warranty is Original Purchaser's sole remedy for product defects, and this warranty does not extend to any product, or damage to any product, caused by or attributed to abuse or misuse, products used for commercial or rental purposes, use modifications of, or attachments to the product, and products or parts not used, maintained, or extended hereunder is in lieu of any and all other warranties, express or implied, including without limitations any implied warranty or merchantability or of fitness for a particular purpose. Please note, all desks made with PVC Laminate surface should not be exposed to direct sunlight, as it may damage the material. Damage of this nature is not covered under this warranty.

RTA Products will not be responsible for indirect, special, incidental or consequential damages. This warranty is limited to merchandise purchased in the Continental United States, excludes AK, HI and PR. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from state to state.

RTA Products will advise you of the procedure to follow in making warranty claims. The following are the procedures for warranty claims:

- a. Call us Monday – Friday, from 9am-5pm (Eastern Time) at (866) 782-5520 to explain the defect and give your name, address and phone number. Please have ready the model number of our product, date and place of purchase. You can also write to us by e-mail to [warranty@rtaproducts.com](mailto:warranty@rtaproducts.com) and include the same information.
- b. If we determine that replacement will remedy the situation, and in order to determine the extent or the cause of the defect, purchaser will need to send the part in question at purchaser's expense. Once we receive the part, we will examine it and determine whether the claim is valid (or not), and then proceed to send the replacement. We will ship the replacement at our expense.

# FOR SEVERAL HELP OPTIONS INCLUDING REPLACEMENT PARTS ORDERS

---

VISIT: [WWW.TECHNIMOBILI.COM](http://WWW.TECHNIMOBILI.COM)



AND CLICK ON SUPPORT TAB

Or scan the following QR Code:



Scan the following QR Code to order replacement parts:



EMAIL US:

[SUPPORT@RTAPRODUCTS.COM](mailto:SUPPORT@RTAPRODUCTS.COM)

