




## Assembly side rail stabilization Option for applications where center rail cannot be used

### ASSEMBLY INSTRUCTIONS

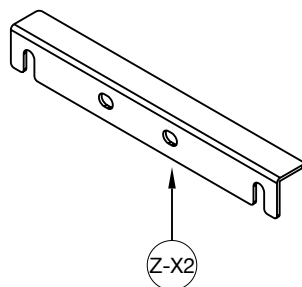


M6 x 35mm




4mm Allen Key x 1

#### STEP 1

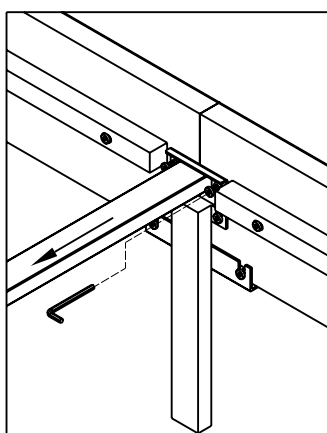


Using Allen wrench M to remove the screws supporting the center rail. Remove the center rail too.

#### STEP 2

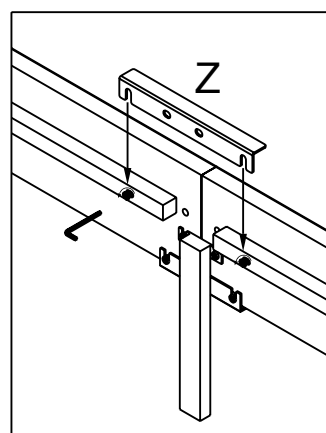


- 1). Loosen the two screws on the two ends of the side support rails but do not remove.
- 2). Slide the bracket down with the two slots engaging these loosened screws

#### STEP 3

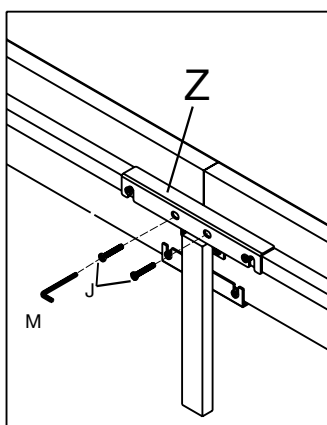

- 1). Install two screws (J) into the two empty holes in the stabilization bracket and tighten.
- 2). Tighten the two screws on either side of the stabilization bracket

#### STEP 4

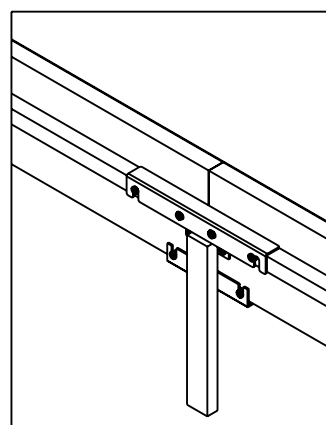

Completed view of installed stabilization bracket

#### STEP 5: Repeat operation for other side of bed frame