


Modern Adirondack Chair



Assembly Guide

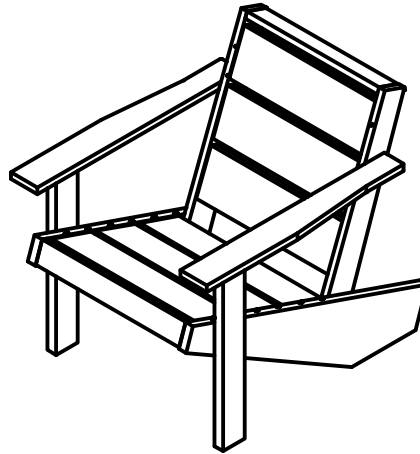


*Actual Style May Vary from
the One Pictured in this Guide

CHRADH1

HARDWARE INCLUDED

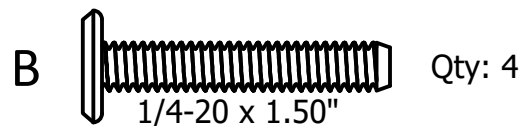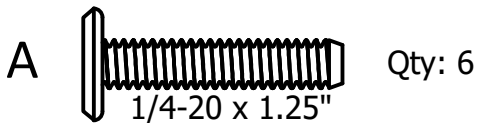


TOOLS INCLUDED

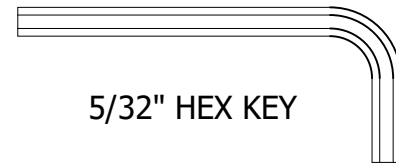


5/32" HEX KEY

IMPORTANT!

DO NOT fully tighten bolts until all bolts are started.

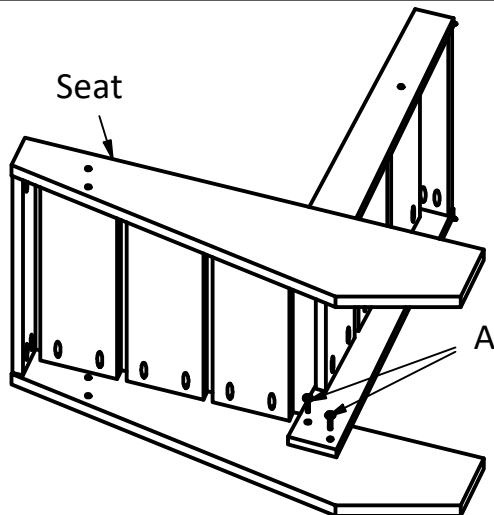

- 1) Slide the Back into the Seat. Attach the Back to the Seat with (2) A Bolts.
- 2) Repeat Step 1 on opposite side.

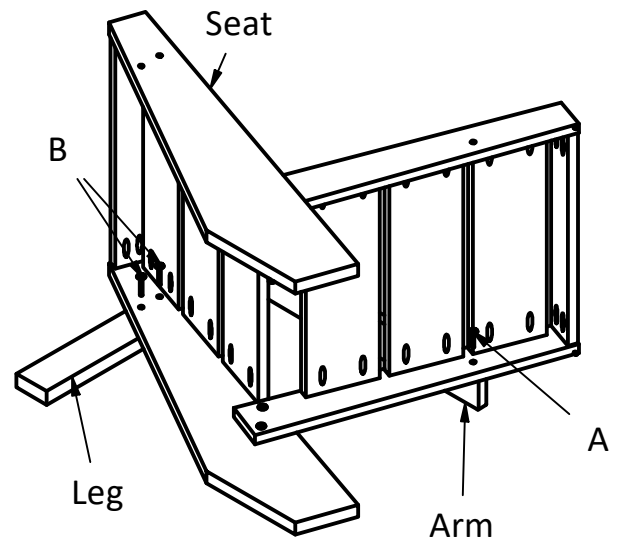

- 3) Attach the Leg to the Seat with (2) B Bolts and the Arm to the Back with (1) A Bolt.

- 4) Repeat Step 3 on opposite side.