


Modern Dining Chairs




Assembly Guide

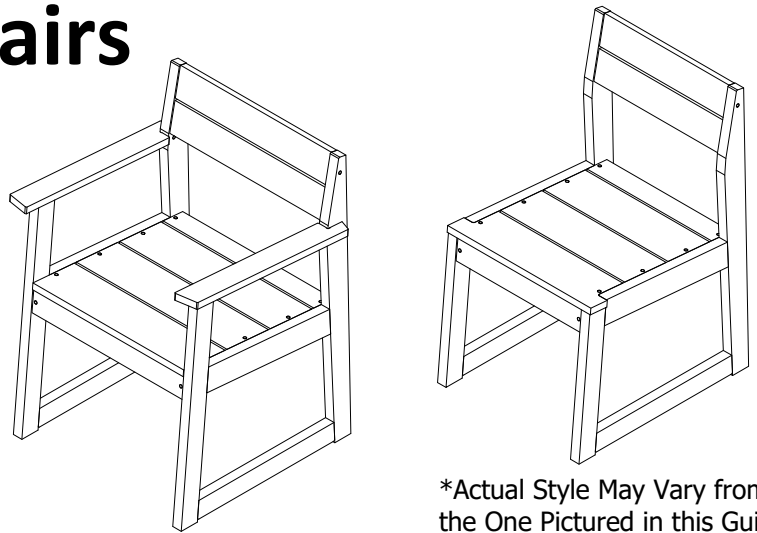


CHDH1
CHDH2

*Actual Style May Vary from
the One Pictured in this Guide

HARDWARE INCLUDED

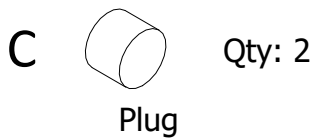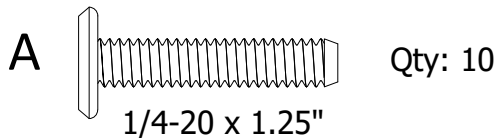

TOOLS INCLUDED



CUSTOMER SUPPLIED TOOLS


Cordless screwdriver/drill OR
multi-bit handle for the square bit

IMPORTANT!

DO NOT fully tighten bolts until all bolts are started.


SEAT ASSEMBLY

LEG ASSEMBLY

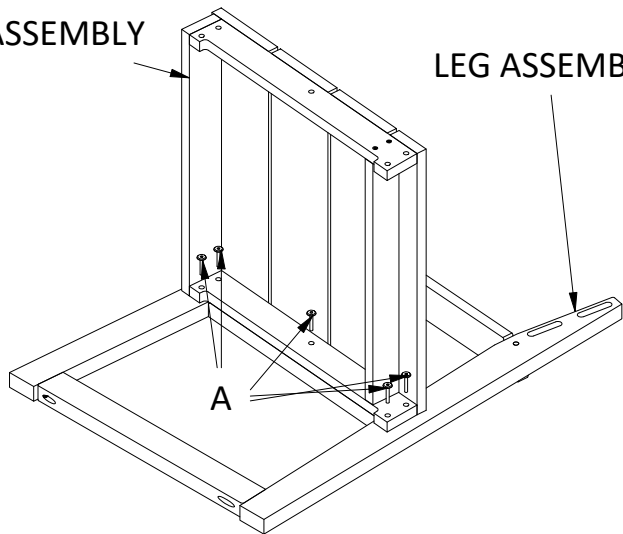


1) Place Leg Assembly down as shown here.

2) Attach the Seat Assembly to the Leg Assembly with (5) A Bolts.

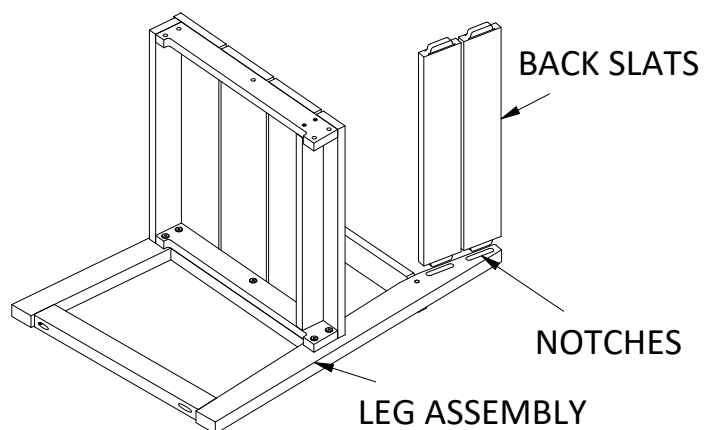


3) With the Chair on its side, place the Back Slats in the notches in the Leg Assembly.

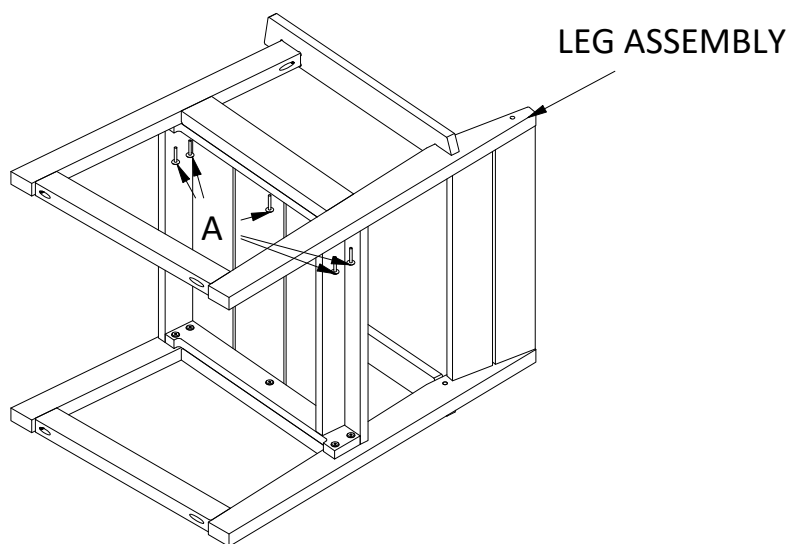


4) Attach the Leg Assembly to the Seat Assembly with (5) A Bolts as shown here.

Note: The Back Slats will sit in the Notches of both Leg Assemblies.

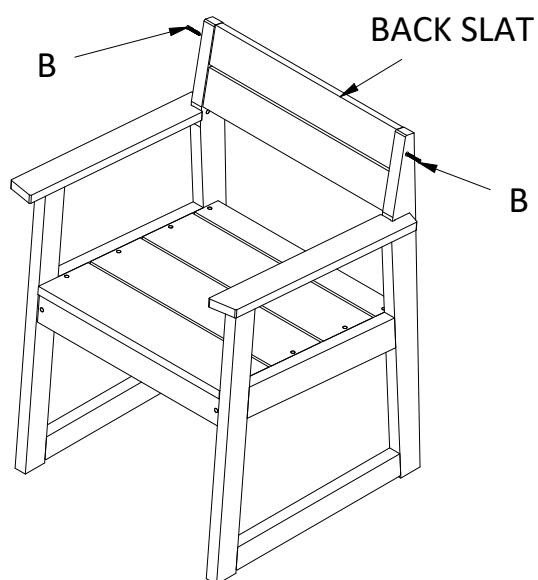

5) Attach the Back Slats to the Leg Assemblies with (2) B Screws as shown here.

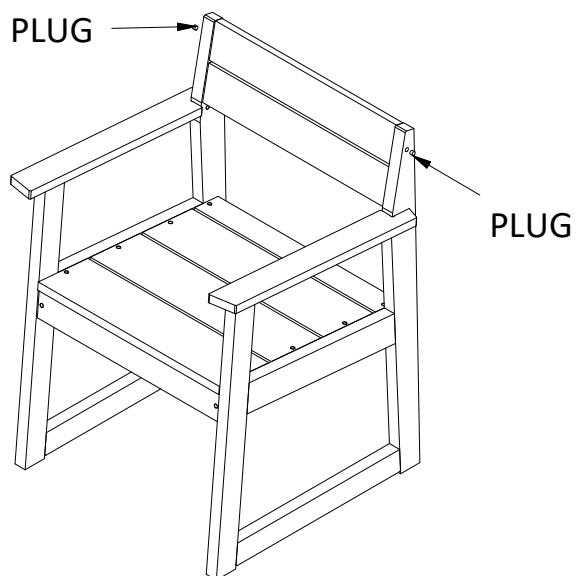

Optional: Take the (C) Plug and push it in the hole to cover the screw. Use a flat object to make the Plug flush with the rest of the Leg.