


Adirondack Collection

Barcelona Double Wide Modern Adirondack Chair

Assembly Guide

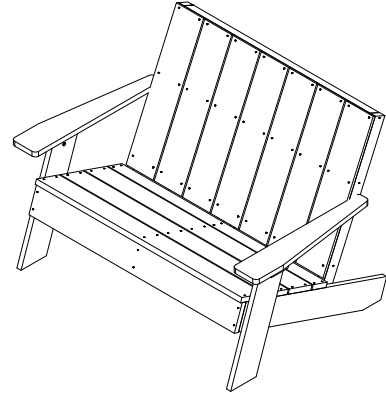


IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started.
Once all bolts are inserted, go back & tighten all the bolts.

HARDWARE INCLUDED

A


Qty: 6



1/4\"-20 x 1-1/2"

B

Qty: 8



1/4\"-20 x 1-3/4"


TOOLS INCLUDED




5/32\" HEX KEY

CUSTOMER SUPPLIED TOOLS

Cordless screwdriver/drill OR
Multi-bit handle for the Torx Bit

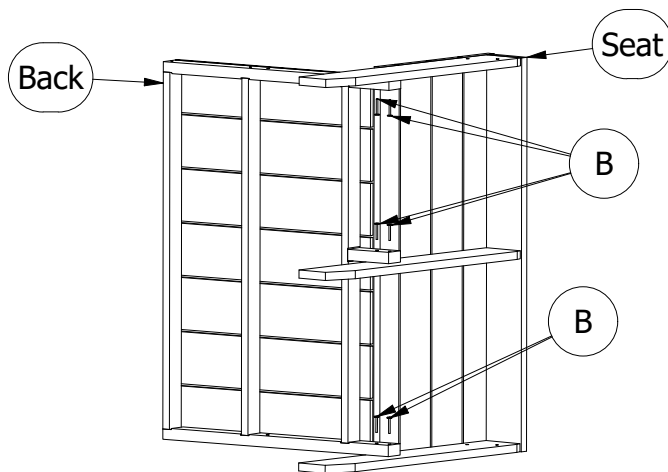


1) Attach Back to Seat Using (6) "B" Bolts.

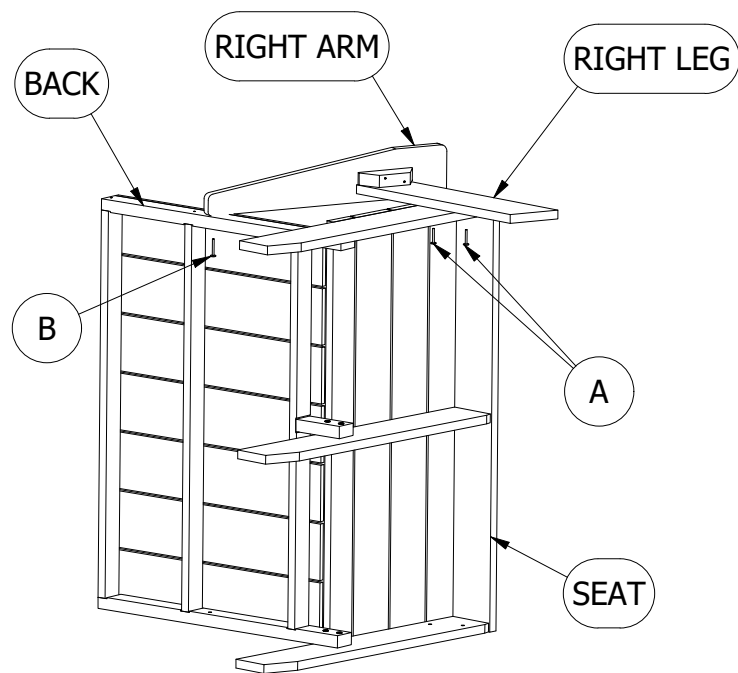

2) Position the Right Leg Holes with Seat holes as shown and attach them using (2) "A" Bolts. Repeat this Step for the Left Leg

3) Position the Right Arm Holes with the back Holes as shown and attach them using (1) "B" Bolts. Repeat this step for the Left Arm.

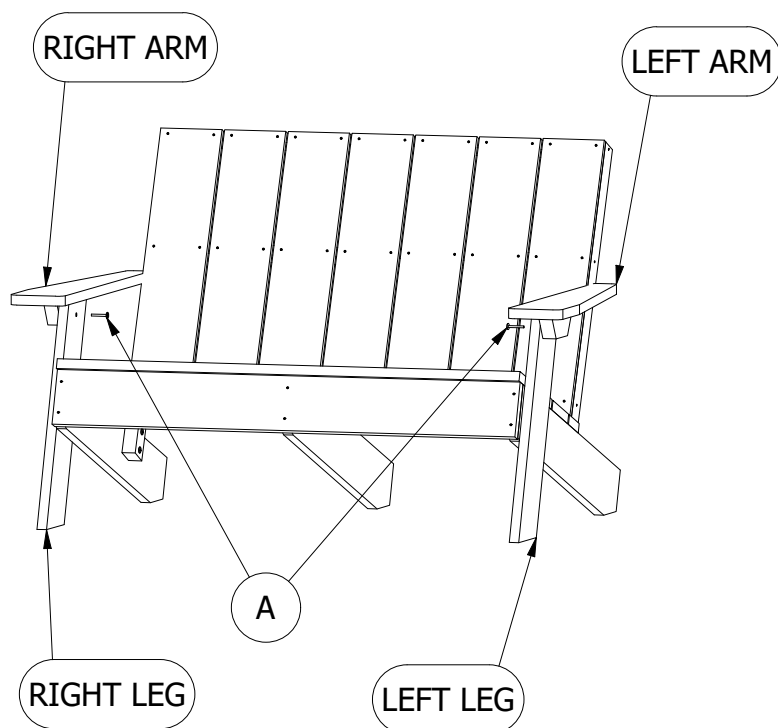

4) Align the Arm holes with the Leg holes and attach them with (1) "A" Bolt on each side.