

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

 **SAFAVIEH**  
O U T D O O R


**Weight Capacity : 40 Ibs**

**Warning : Do not stand on table**

**Warning : Do not over torque bolts / screws**




## Part List and Hardware List
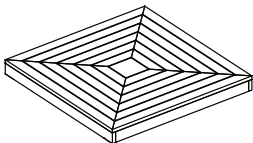
| PIECE | DESCRIPTION | PICTURE                                                                                             | QUANTITY |
|-------|-------------|-----------------------------------------------------------------------------------------------------|----------|
| A     | Frame Table |                    | 1X       |
| B     | Leg Table   |                    | 4X       |
| C     | Bolt        | <br>M8x65 mm      | 12X      |
| D     | Washer      | <br>Ø 8.5x20x2mm | 12X      |
| E     | Allen key   | <br>LG4          | 1X       |

Model# PAT7054A

Product Dimensions: 34.25" W x 34.25" D x 12.60" H

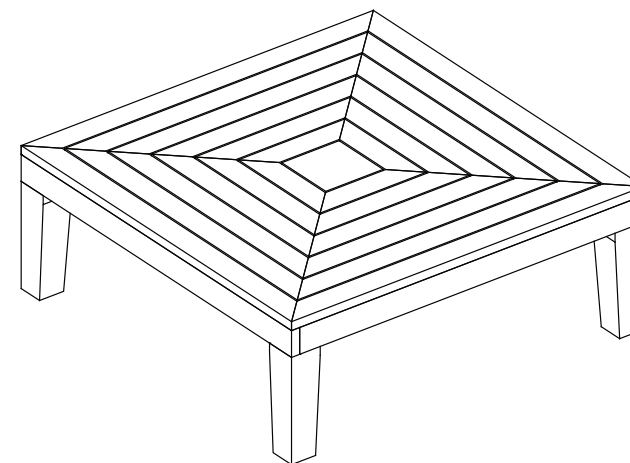


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

1

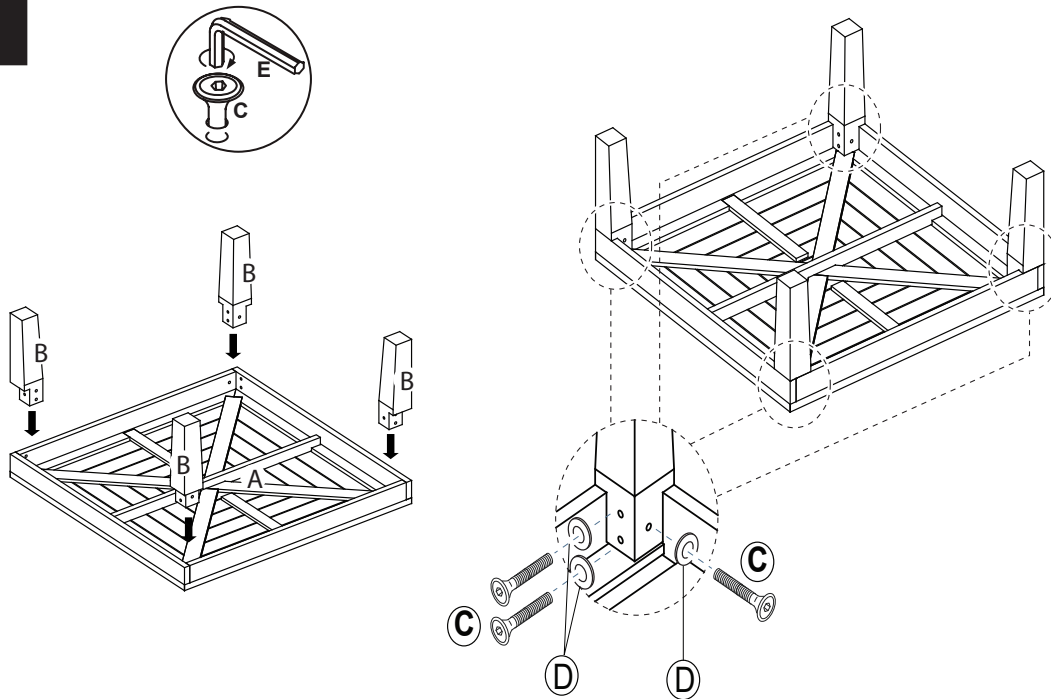

2

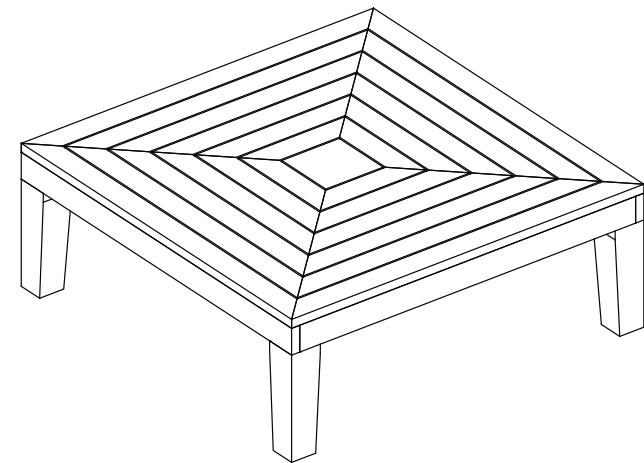

### Step 1

Place the Table top (A) with its underside skywards onto a clean, soft surface to avoid any scratch or damage to the product.

Affix loosely the Legs (B) into the mounting position at the corners of the Table Top (A), using the Bolts (C) with Flat Washers (D), with the Allen Key(E), as shown in the picture.

### Step 2

Complete.

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

 **SAFAVIEH**  
O U T D O O R



Weight Capacity : 600 Ibs

Warning : Do not stand on chair

Warning : Do not over torque bolts / screws




## Part List and Hardware List

| PIECE | DESCRIPTION  | PICTURE                                                                                          | QUANTITY |
|-------|--------------|--------------------------------------------------------------------------------------------------|----------|
| A     | Leg Frame    |                 | 4X       |
| B     | Back frame   |                 | 1X       |
| C     | Seat Frame   |                 | 1X       |
| D     | Cushion Seat |                 | 1X       |
| E     | Cushion Back |               | 1X       |
| E1    | Pillow       |               | 1X       |
| F     | Bolt         | <br>M8x65     | 12X      |
| G     | Bolt         | <br>M8x35     | 4X       |
| H     | Inset Nut    | <br>M8x15     | 4X       |
| I     | Washer       | <br>M8.5/20x2 | 12X      |
| K     | Allen key    | <br>LG4       | 2X       |

Model# PAT7054A

Product Dimensions: 26.27" W x 29.92" D x 30.71" H

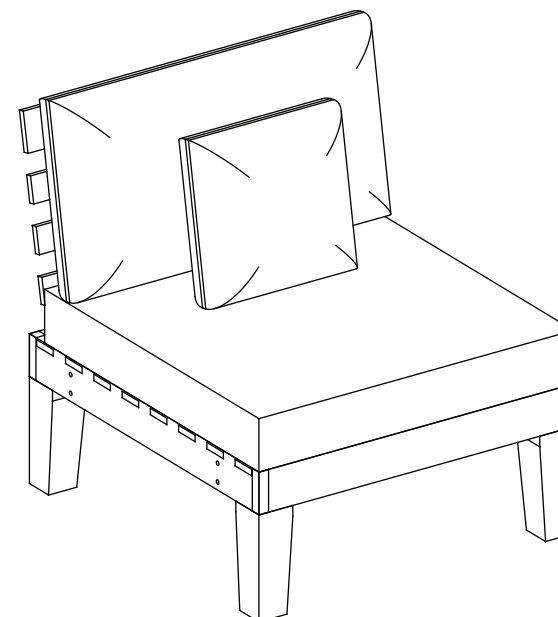


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

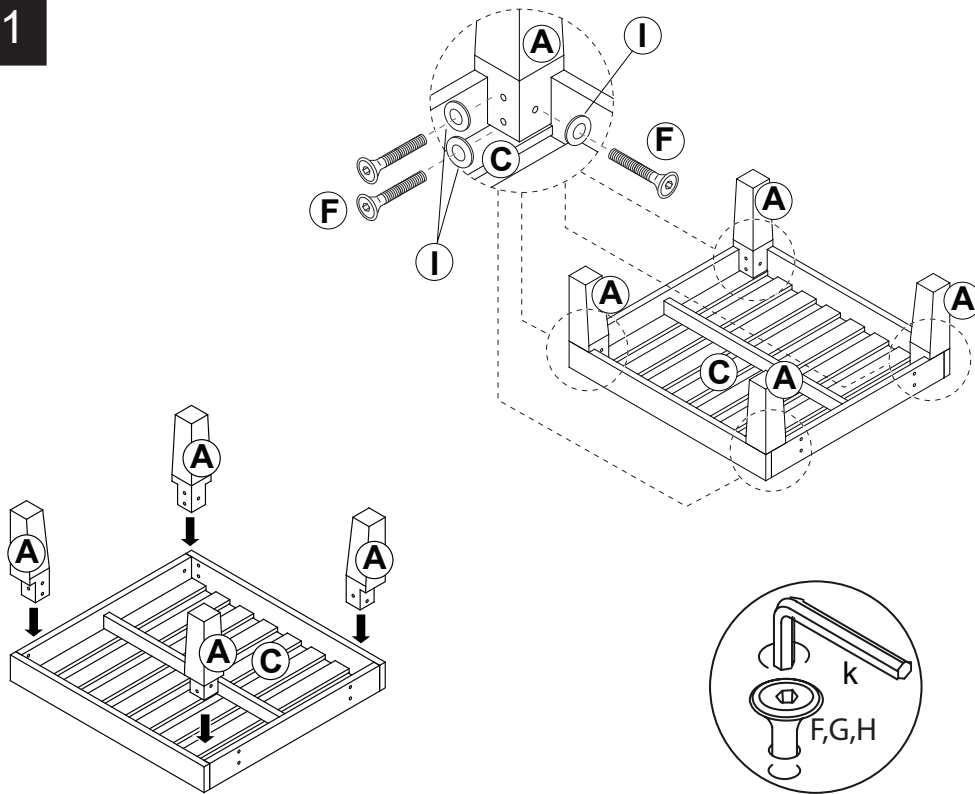

### Step 1

Attach leg frame (A) to Frame seat (C) ,use Bolt (F) and Washer (I),tighten with allen key (K).

2

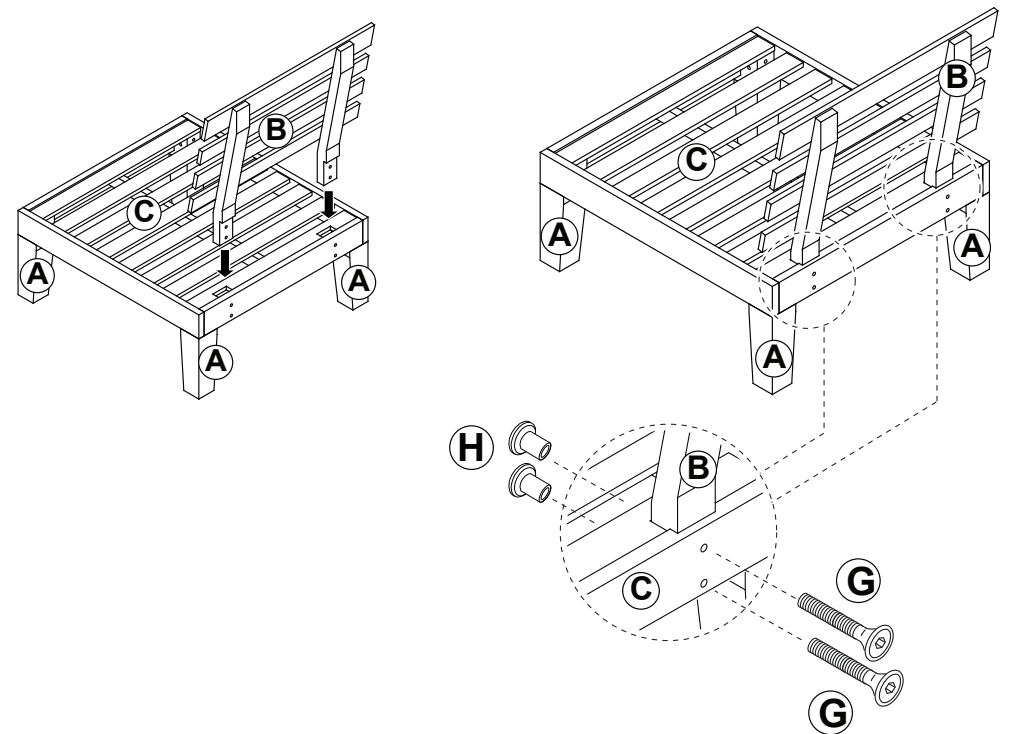

### Step 2

Tighten Bolt (G) and Insert nut (H) with allen key (K) to attach seat frame (C) and back frame (B)


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.


Tools Required for Assembly (included): Allen Key

3

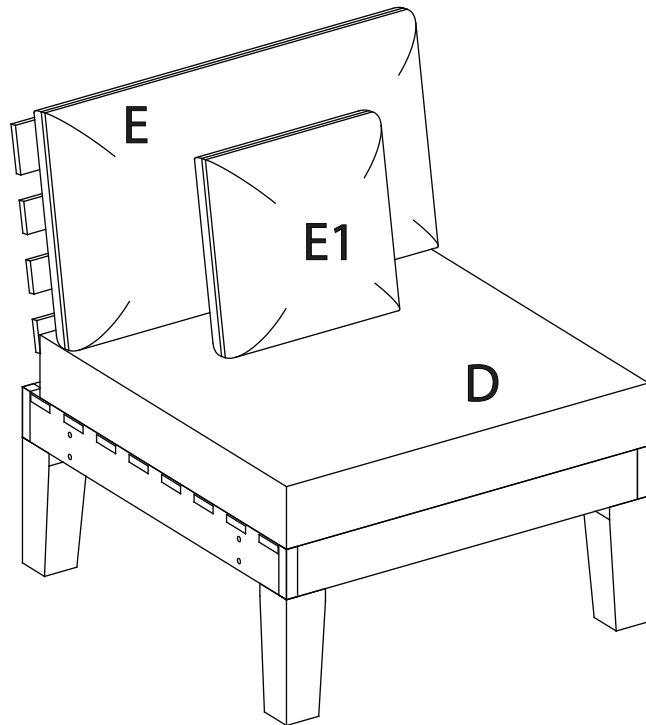

Step 3  
Attach cushion seat and cushion back

4

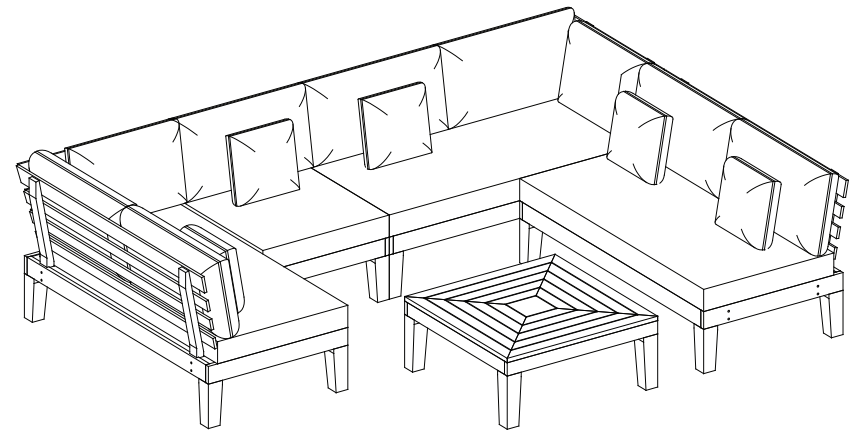

Step 4  
Complete

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

 **SAFAVIEH**  
O U T D O O R



**Weight Capacity : 600 lbs**

**Warning : Do not stand on chair**

**Warning : Do not over torque bolts / screws**




## Part List and Hardware List

| PIECE | DESCRIPTION  | PICTURE                                                                                          | QUANTITY |
|-------|--------------|--------------------------------------------------------------------------------------------------|----------|
| A     | Leg Frame    |                 | 4X       |
| B     | Back frame   |                 | 1X       |
| C     | Seat Frame   |                 | 1X       |
| D     | Cushion Seat |                 | 1X       |
| E     | Cushion Back |               | 1X       |
| E1    | Pillow       |               | 2X       |
| F     | Bolt         | <br>M8x65     | 12X      |
| G     | Bolt         | <br>M8X35     | 4X       |
| H     | Inset Nut    | <br>M8X15     | 4X       |
| I     | Washer       | <br>M8.5/20X2 | 12X      |
| K     | Allen key    | <br>LG4       | 2X       |

Model# PAT7054A

Product Dimensions:29.13" W x 51.18" D x 27.16" H

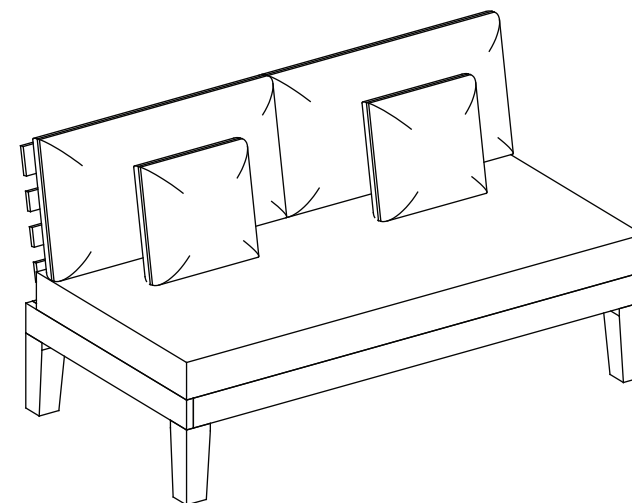


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

1

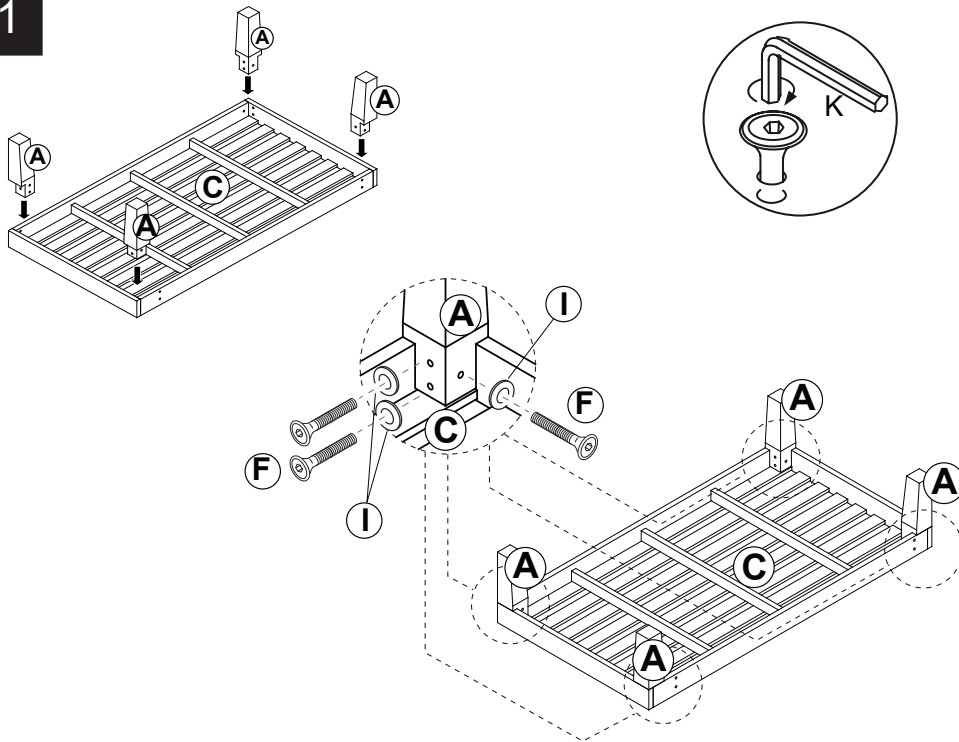

2

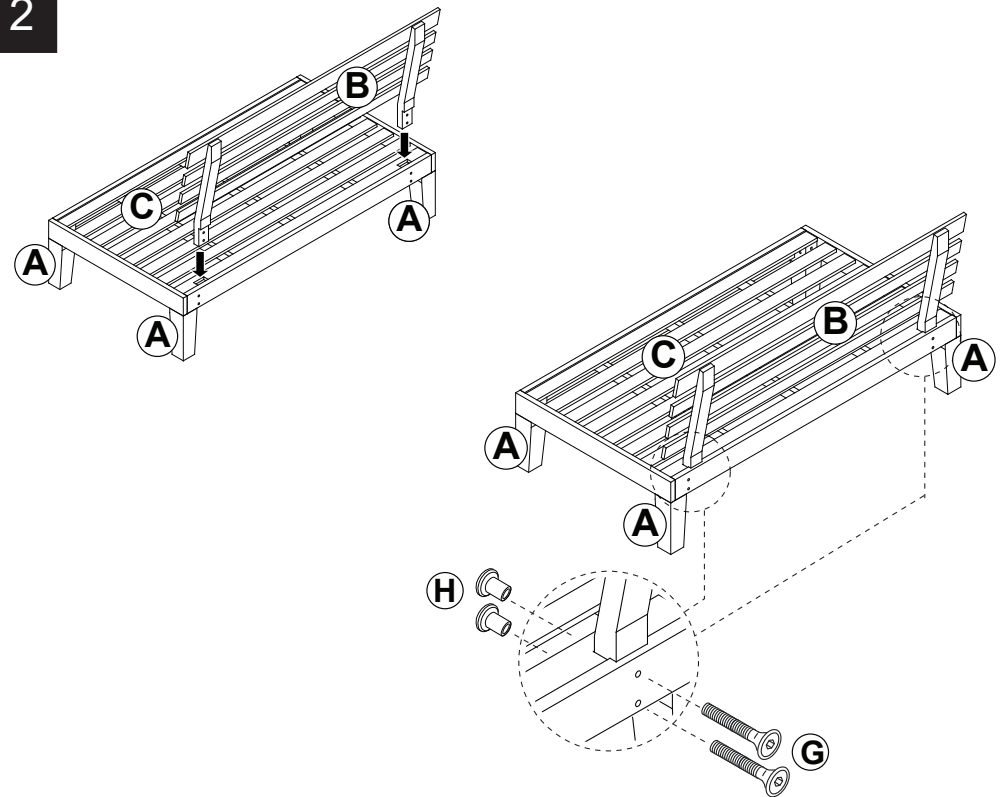

### Step 1

Attach leg frame (A) to Frame seat (C) ,use Bolt (F) and Washer (I),tighten with allen key (K).

### Step 2

Tighten Bolt (G) and Insert nut (H) with allen key (K) to attach seat frame (C) and back frame (B)


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.


Tools Required for Assembly (included): Allen Key

3

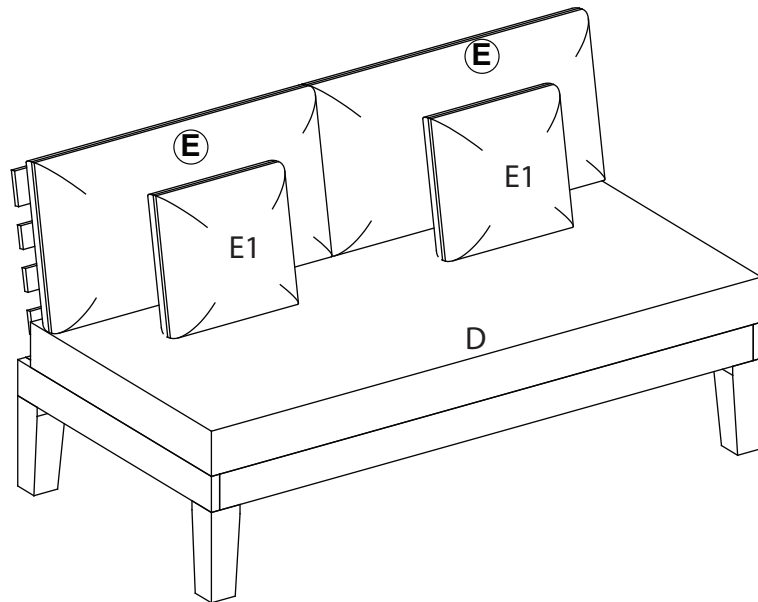

Step 3  
Attach cushion seat and cushion back

4

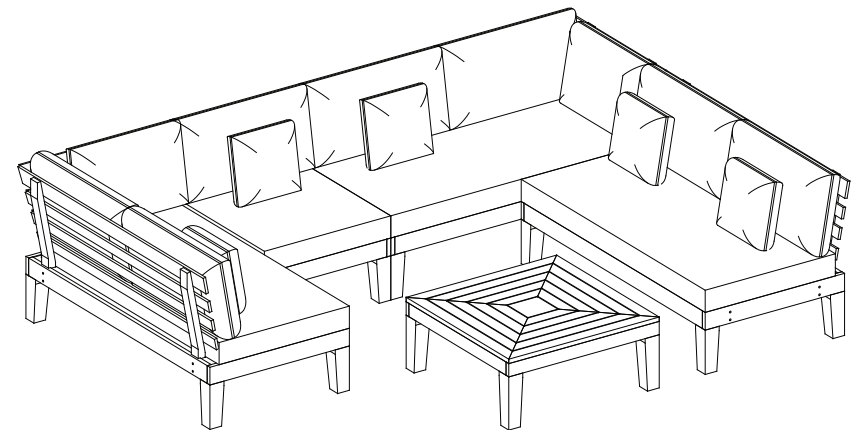

Step 4  
Complete

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

 **SAFAVIEH**  
O U T D O O R






**Weight Capacity : 600 Ibs**

**Warning : Do not stand on chair**

**Warning : Do not over torque bolts / screws**




## Part List and Hardware List

| PIECE | DESCRIPTION  | PICTURE                                                                                           | QUANTITY |
|-------|--------------|---------------------------------------------------------------------------------------------------|----------|
| A     | Leg Frame    |                  | 4X       |
| B     | Back frame   |                  | 1X       |
| C     | Side frame   |                  | 1X       |
| D     | Seat Frame   |                  | 1X       |
| E     | Cushion Seat |                  | 1X       |
| F     | Cushion Back |                | 2X       |
| F1    | Cushion Side |                | 1X       |
| G     | Pillow       |                | 1X       |
| H     | Bolt         | <br>M8x65      | 12X      |
| I     | Bolt         | <br>M8x35      | 8X       |
| K     | Inset Nut    | <br>M8x15      | 8X       |
| L     | Washer       | <br>M8.5/20x15 | 12X      |
| M     | Allen key    | <br>LG4        | 2X       |

Model# PAT7054A

Product Dimensions: 29.13" W x 54.72" D x 27.16" H

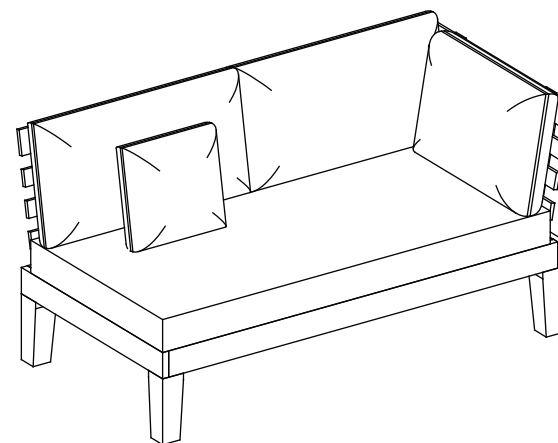


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

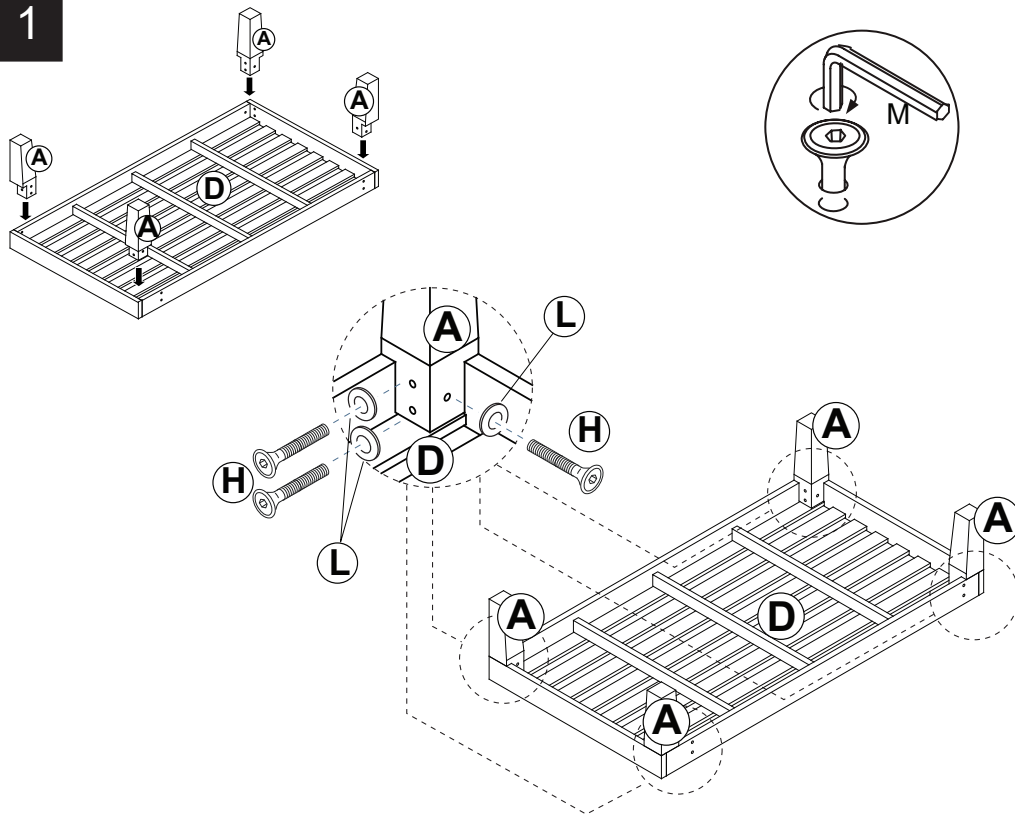

### Step 1

Attach leg frame (A) to Frame seat (D) ,use Bolt (H) and Washer (I),tighten with allen key (M).

2

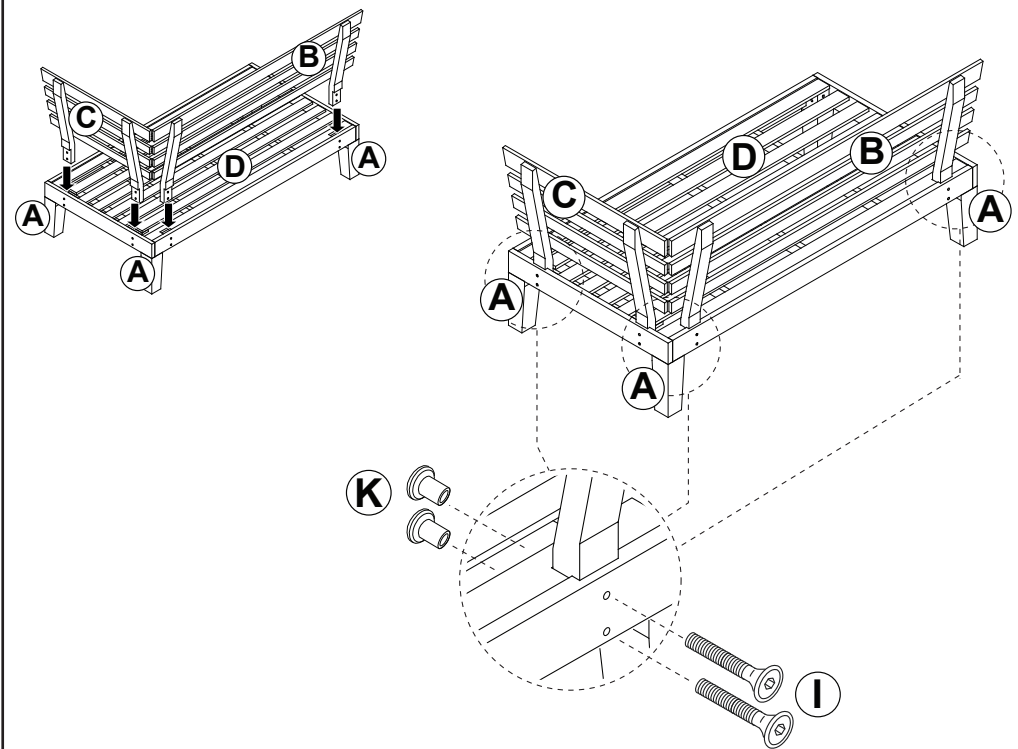

### Step 2

Tighten Bolt (I) and Insert nut (K) with allen key (M) to attach seat frame (D) and back frame (B), side frame (C).


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.


Tools Required for Assembly (included): Allen Key

3

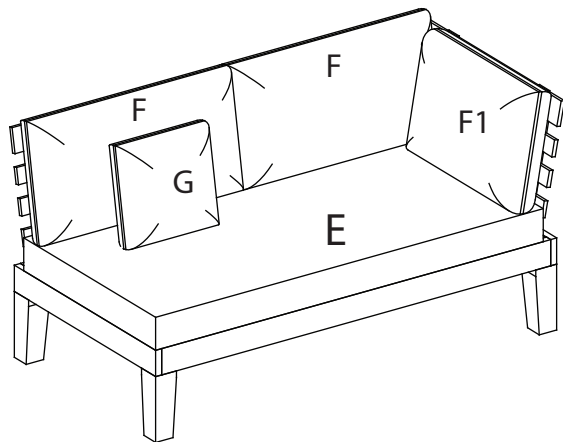

**Step 3**  
Attach cushion seat and cushion back, Side cushion.

4

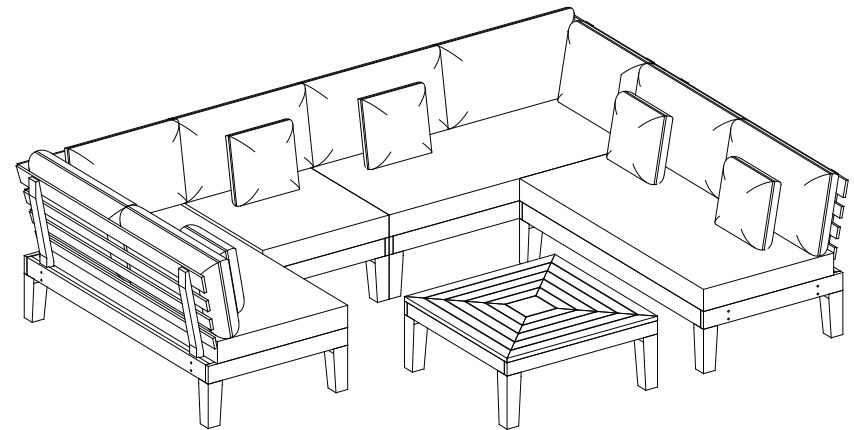

**Step 4**  
Complete