


INSTRUCTION MANUAL

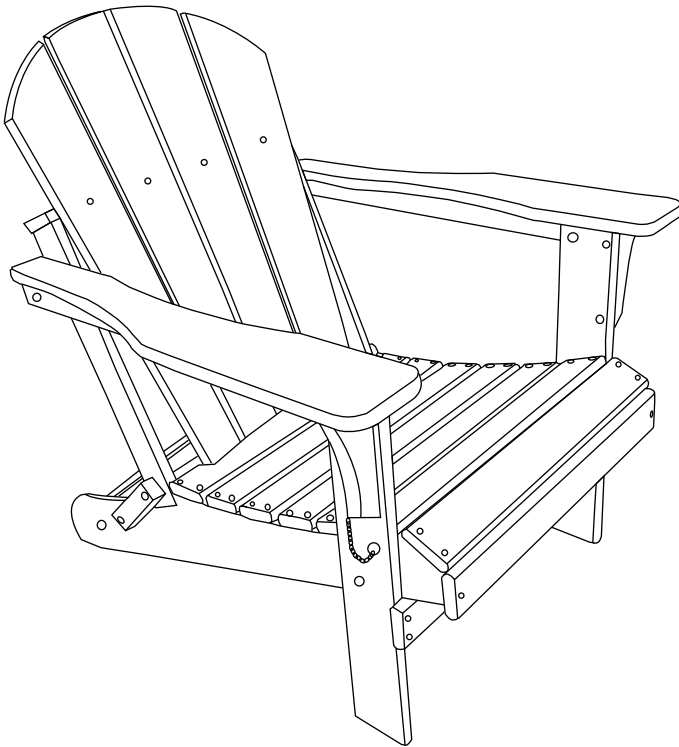

Outdoor Folding Poly Adirondack Chair
SKU: 2001

V1.0

! NOTICE

Do not overtighten screws. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be very careful when folding chair to avoid smashing your hands or fingers.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



CHAIR
330 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

HARDWARE

1

M6 x 60mm
BOLT



4 PCS

2

M6 x 50mm
BOLT



6 PCS

3

M6 x 40mm
BOLT



2 PCS

4

M6 x 30mm
BOLT



4 PCS

5

M6 NUT



8 PCS

6

M6 WASHER



8 PCS

7

WRENCH



1 PC

8

ALLEN
WRENCH




1 PC

PARTS

A


CHAIR SEAT

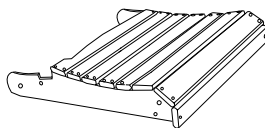

1 PC

B


RIGHT CHAIR LEG

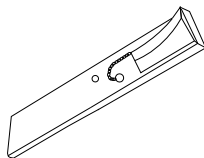

1 PC

C

LEFT CHAIR LEG

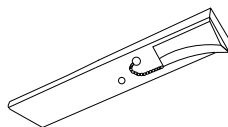


1 PC

PARTS

D


RIGHT CHAIR ARM

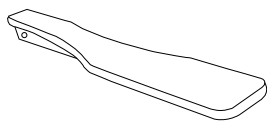

1 PC

E


LEFT CHAIR ARM



1 PC

F


CHAIR BACKREST

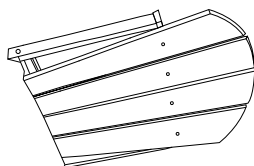

1 PC

G


BACK RAIL

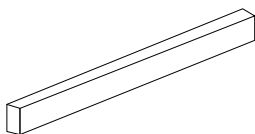

1 PC

H

FRONT RAIL



1 PC

I

LOCKING BLOCK




2 PCS

PRODUCT ASSEMBLY - OVERALL VIEW

1

Look at following overall view of this chair and learn the exact position of each parts to be assembled.

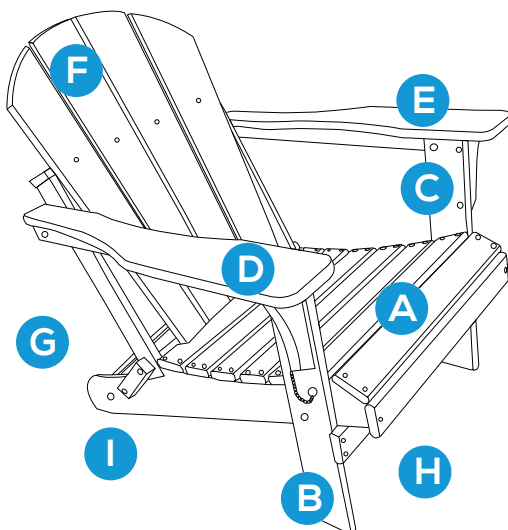


PRODUCT ASSEMBLY

1


Attach part C Left Chair Leg to part E Left Chair Arm with 1 PC of part 1 bolt and part 6 washer and part 5 Nut. Do same to part B Right Chair Leg and part D Right Chair Arm. Attach the locking stick to Chair legs with a screw driver before assembly.

Do not tighten screws too much at this stage.

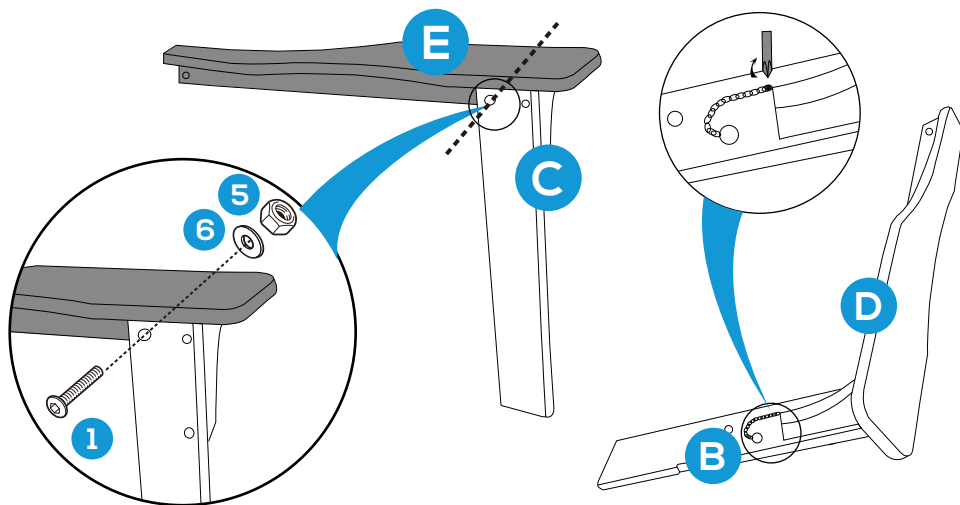

2

Attach part B right Chair Leg and part C Left Chair Leg to part A Chair Seat with 2 PCS of part 1 bolt and part 6 washer and part 5 Nut.

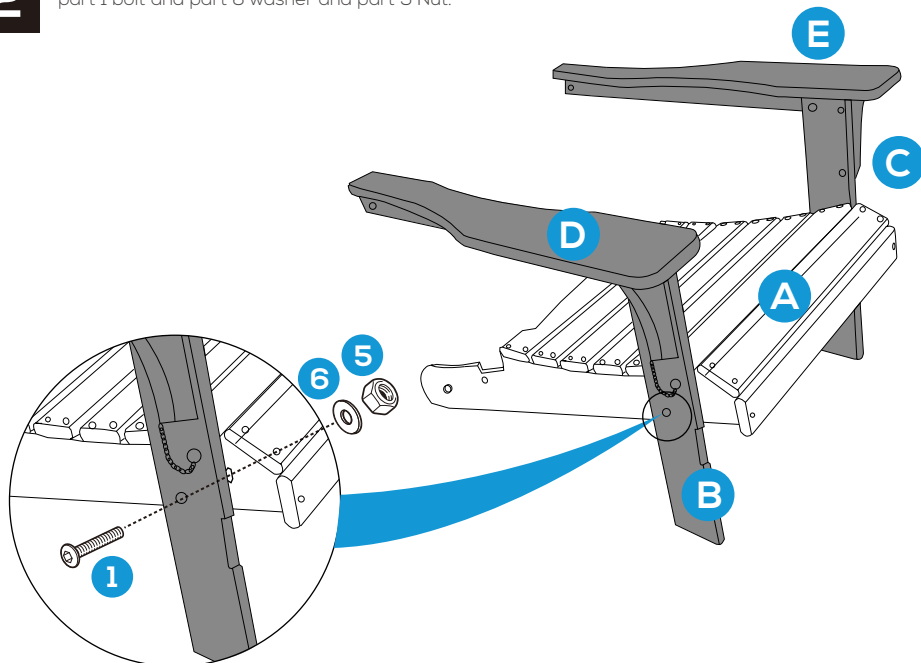


PRODUCT ASSEMBLY

3

Fix part F Backrest into part A Chair Seat and then attach part F Chair Backrest to part D Right Chair Arm with 1 PC of part 2 bolt and part 6 washer and part 5 Nut.


Do the same to attach part F Backrest to part E Left Chair Leg.

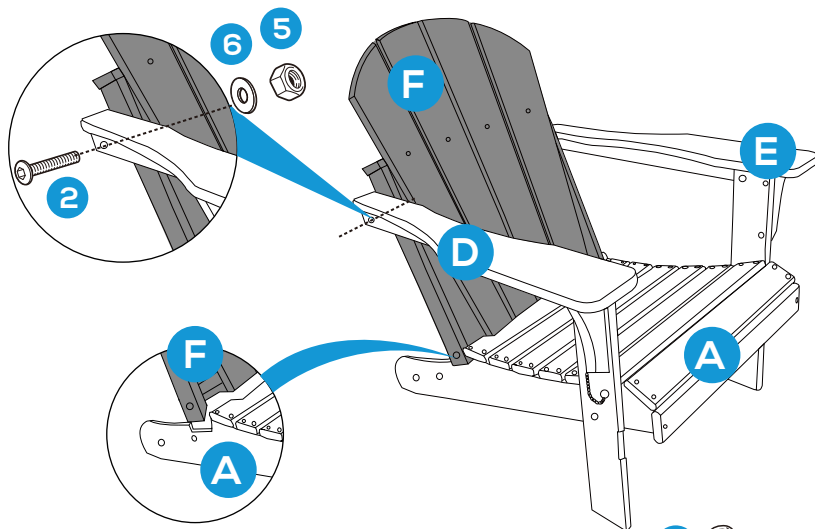

4

Attach part I Locking Blocks to part F Chair Backrest and part A Chair Seat (Both sides) with 4 PCS of part 2 bolt and part 6 washer and part 5 Nut.

Pay attention that washer and nut is only needed for lower hole.

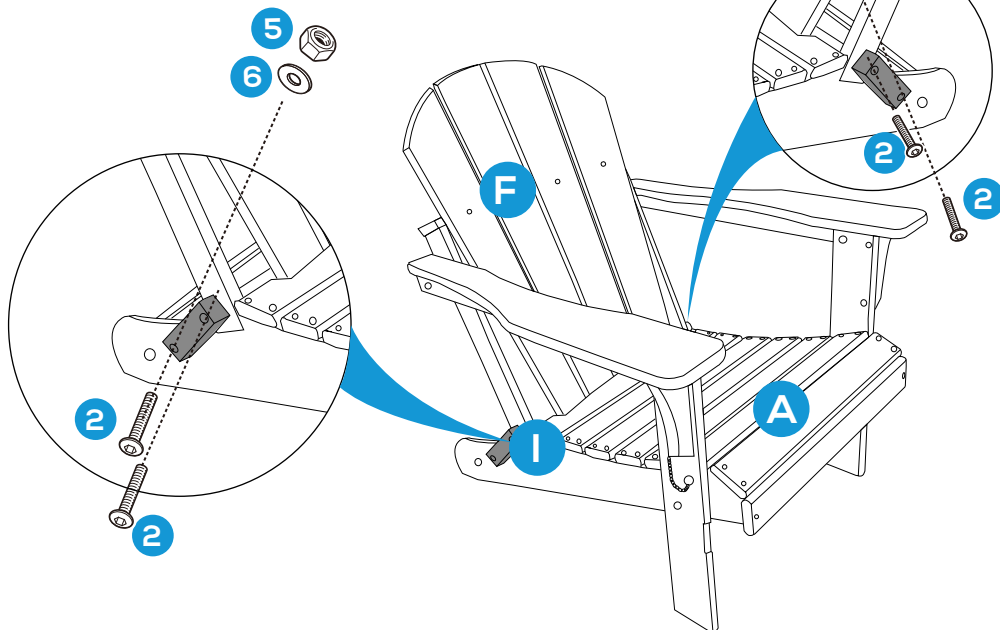


PRODUCT ASSEMBLY

5


Attach part G Back Rail to part A Chair Seat with 2 PCS of part 3 bolt

Attach part H Front Rail to Part B Left Chair leg and part C Right Chair leg with 4 PCS of part 4 bolt.

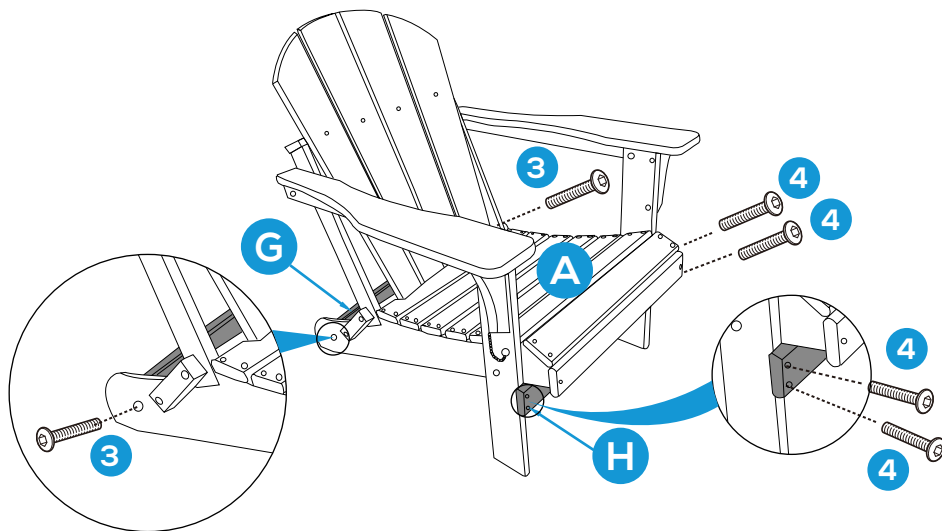


Congratulation! You finishes the assembly of this Adirondack Chair.

Pull the stick out of both legs to fold this chair as below.

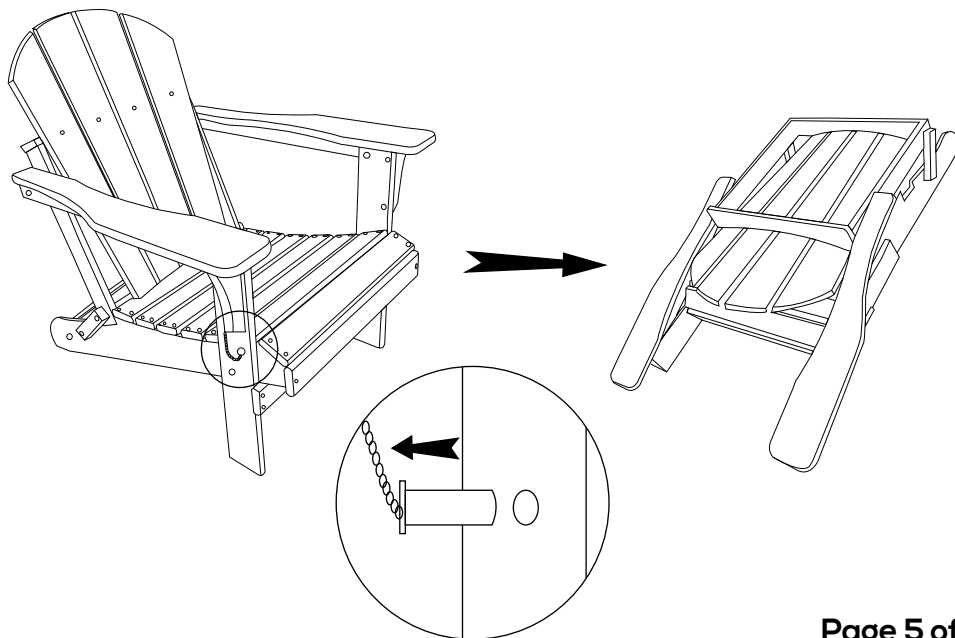

INSTRUCTION MANUAL

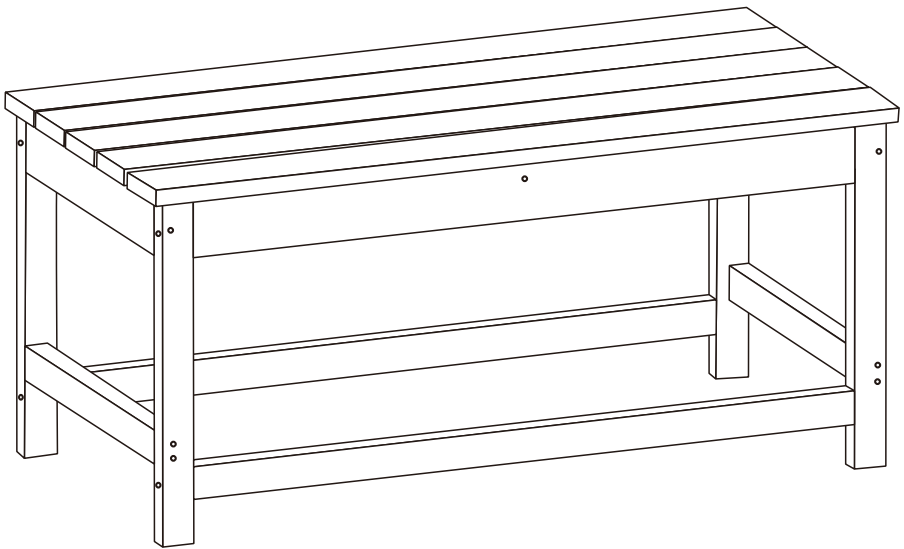

Outdoor Poly Adirondack Coffee Table
SKU: 2001-CT

! NOTICE

Do not overtighten screws. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Avoid using strong power tool for avoiding to crack the PE board when assembling.

TOOLS REQUIRED



PHILLIPS SCREWDRIVER
(PROVIDED)



TABLE
220 LBS
CAPACITY



1 PERSON
ASSEMBLY




UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

M4x45mm
SCREW



12 PCS

2

PHILLIPS
SCREWDRIVER




1 PC

PARTS

A


TABLE TOP



1 PC

B


TABLE LEG



2 PCS

C

WOODEN BRACE

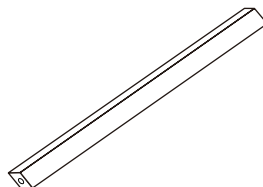


2 PCS

PRODUCT ASSEMBLY

1


Attach part B Table Leg to part A Table Top with 4 PCS of part 1 screw using a phillips screwdriver.

Do not tighten screws too much at this stage.

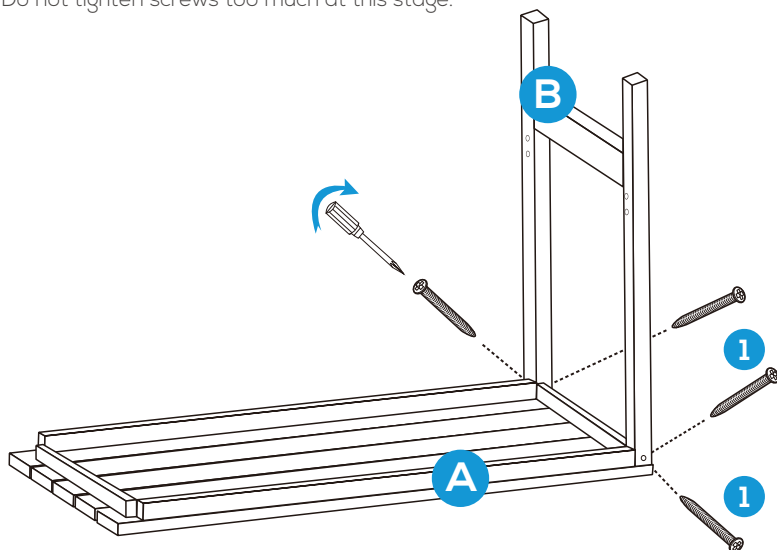

2



Attach part C Table Wooden Braces to part B Chair Leg with 2 PCS of part 1 screw.

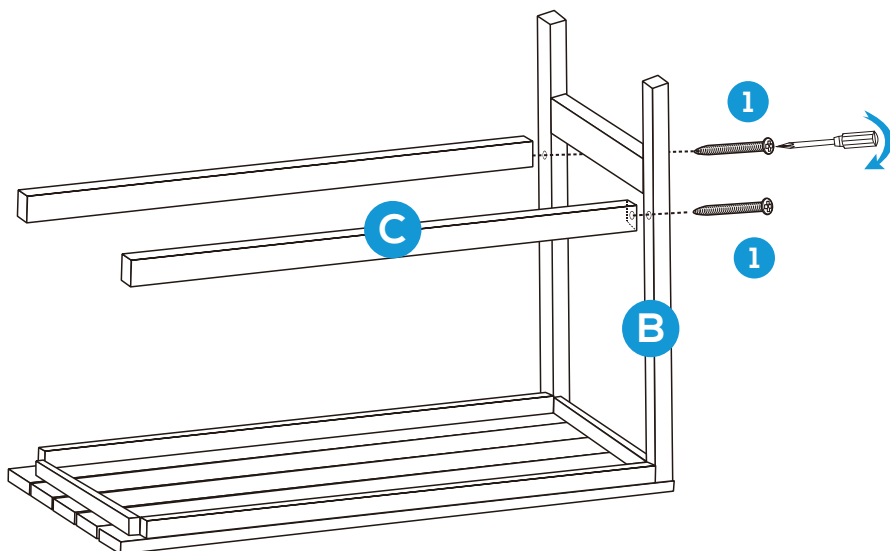


PRODUCT ASSEMBLY

3

Attach another part B Table Leg to part A Table Top and part C Wooden brace with 6 PCS of part I screw using a phillips scwdriver.

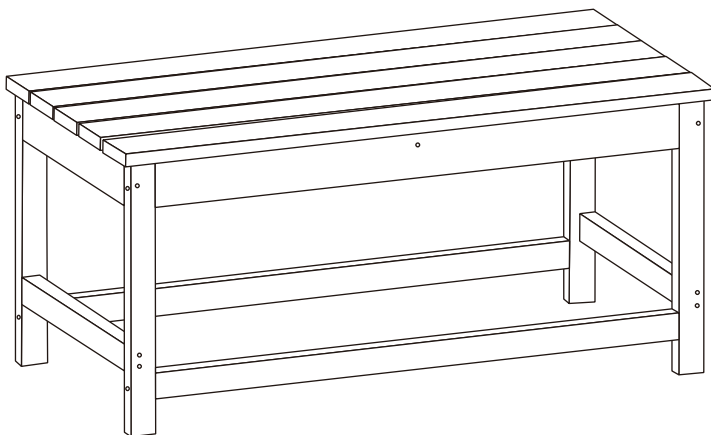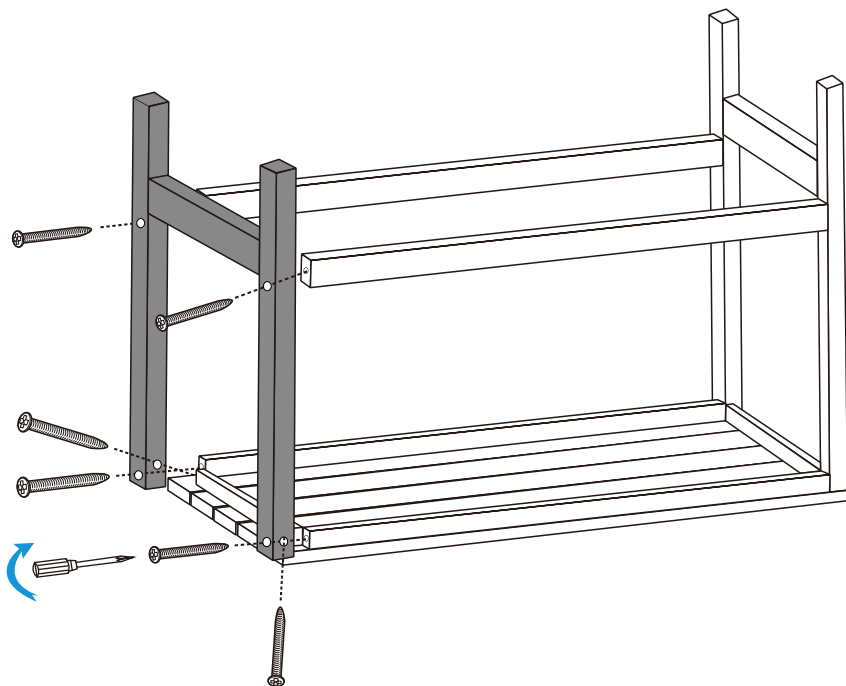

INSTRUCTION MANUAL

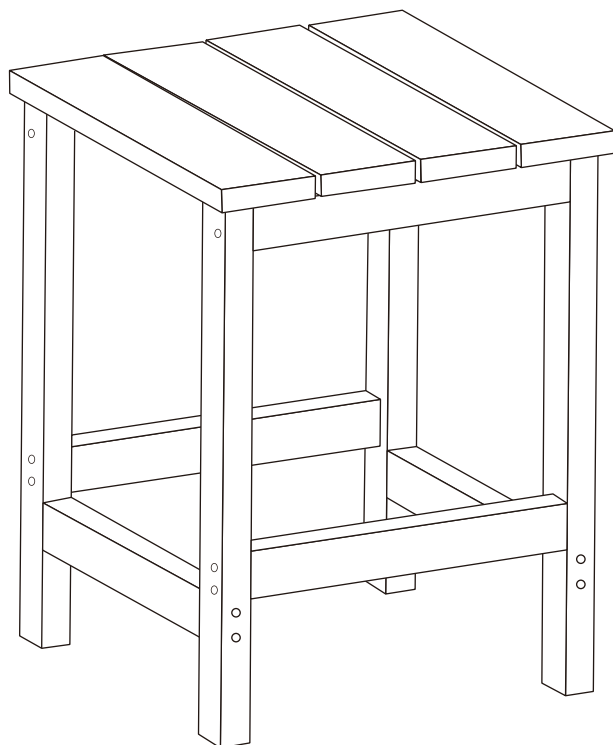

Outdoor Poly Adirondack Side Table
SKU: 2001-CS

! NOTICE

Do not overtighten screws. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Avoid using strong power tool for avoiding to crack the PE board when assembling.

TOOLS REQUIRED



PHILLIPS SCREWDRIVER
(PROVIDED)



TABLE
180 LBS
CAPACITY



1 PERSON
ASSEMBLY




UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

M4x35mm
SCREW



16 PCS

2

PHILLIPS
SCREWDRIVER




1 PC

PARTS

A


TABLE TOP



1 PC

B


TABLE LEG



2 PCS

C

WOODEN BRACE

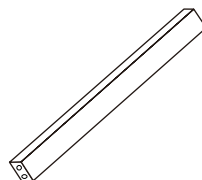


2 PCS

PRODUCT ASSEMBLY

1


Attach part B Table Leg to part A Table Top with 4 PCS of part 1 screw using a phillips screwdriver.

Do not tighten screws too much at this stage.

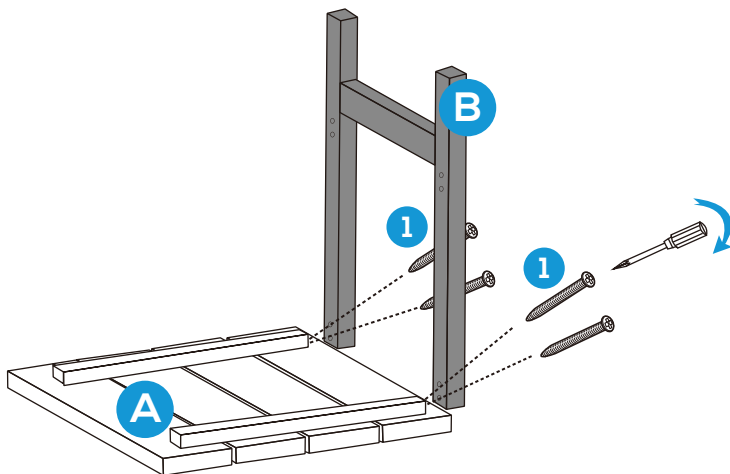

2

Attach part C Table Wooden Braces to part B Chair Leg with 4 PCS of part 1 screw.

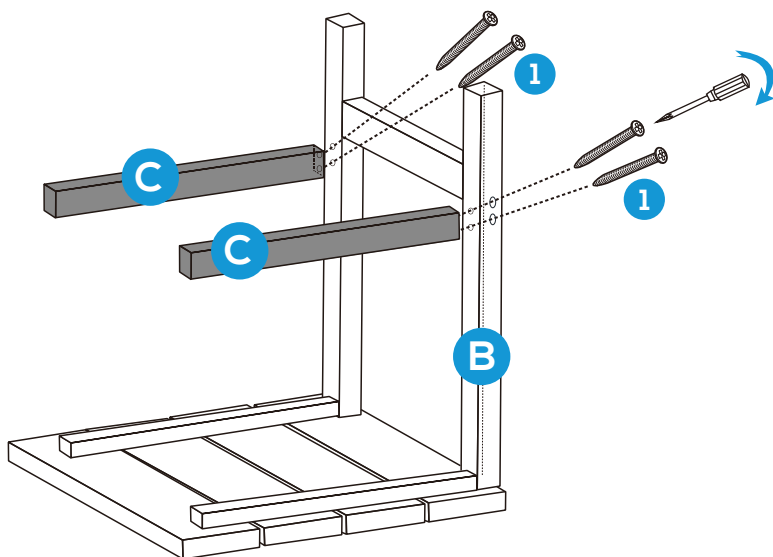

PRODUCT ASSEMBLY

3

Attach part B Table Leg to part A Table Top and part C Wooden brace with 4 PCS of part 1 screw using a phillips screwdriver.

