


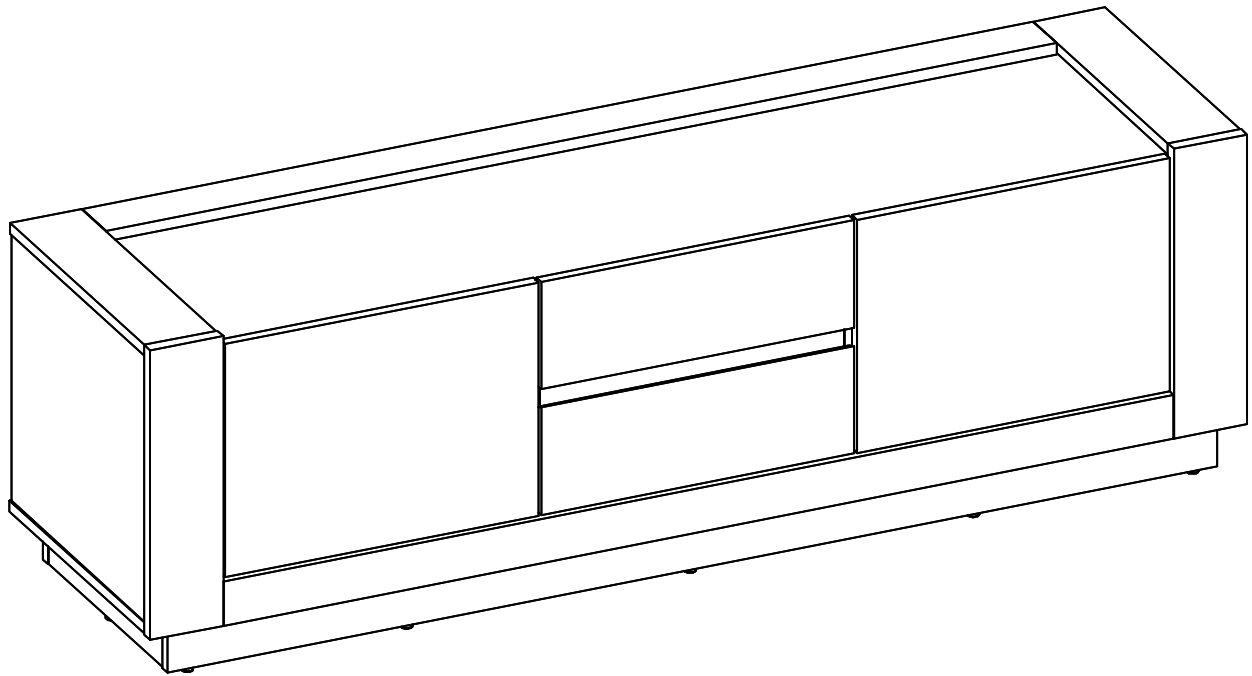

ASSEMBLY INSTRUCTIONS

TV Stand

EEI-6907 / V1.05.05.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.



Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A.		Cam Bolt Ø6 x 32 mm	x46
B.		Cam Lock	x48
C.		Sticker	x4
D.		Dowel Ø7.8 x 32 mm	x47
E.		Dowel Ø7.8 x 18 mm	x4
F.		Connecting Bolt	x2
G.		Burrlet Nut	x2
H.		Assembly screw	x8
I.		Hinge	x4
J.		Screw Ø7 x 14 mm	x8
K.		Screw Ø8 x 37 mm	x8
L.		Bolt M6 x 25mm	x8
M.		Washer	x8
N.		Screw Ø4 x 12 mm	x4
O.		Screw Ø6 x 19 mm	x14
P.		Wedge	x14
Q.		Screw Ø6 x 12 mm	x20
R.		Drawer Runner A (L/R)	x2
S.		Drawer Runner B (L/R)	x2

WHAT YOU NEED:



Phillips



Phillips Head Screwdriver




Flat Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 17

All parts are numbered with a sticker according to this list.

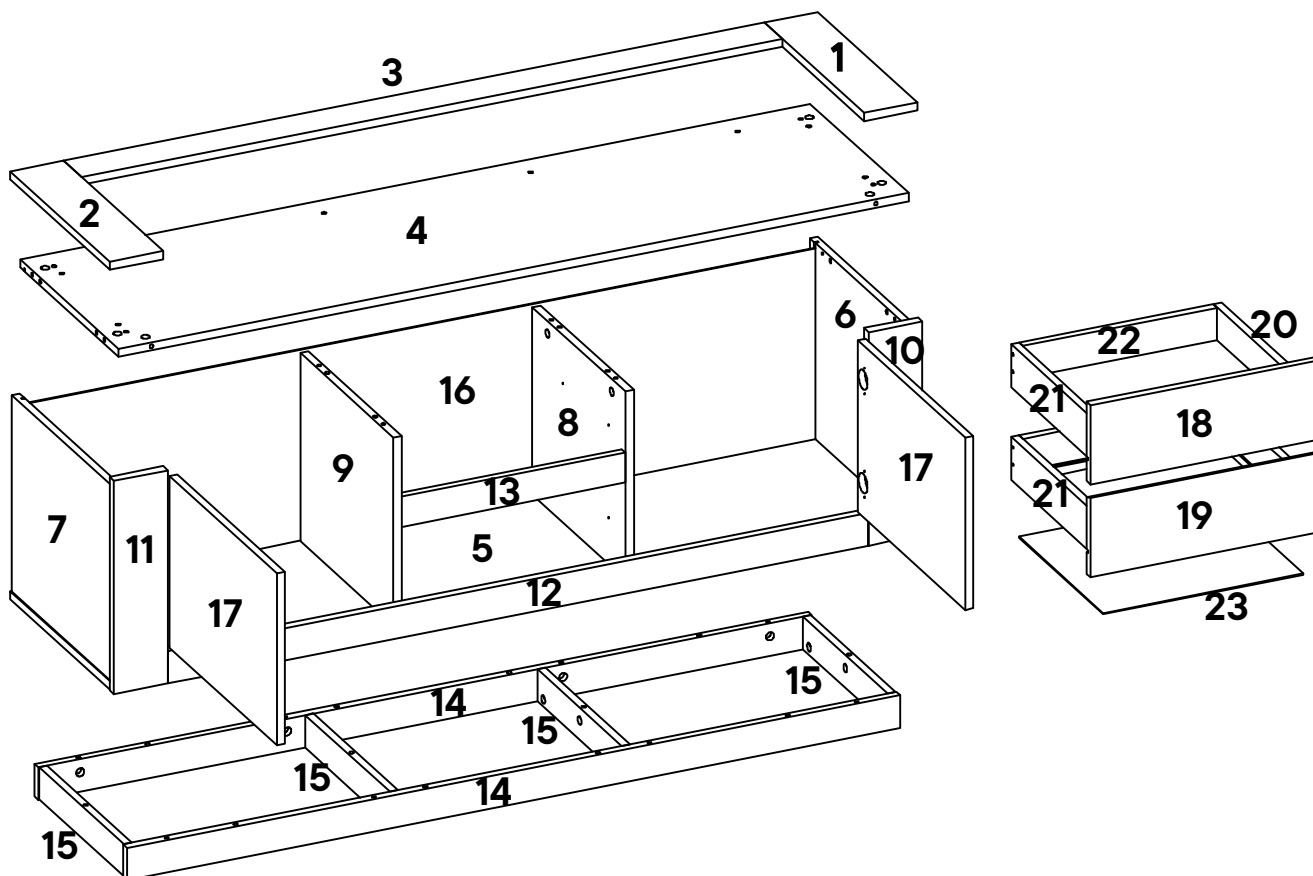

1	Right side top panel	x1
2	Left side top panel	x1
3	Middle Top panel	x1
4	Top panel	x1
5	Bottom panel	x1
6	Right side panel	x1
7	Left side panel	x1
8	Right middle panel	x1
9	Left middle panel	x1
10	Right vertical panel	x1
11	Left vertical panel	x1
12	Middle horizontal panel	x2


13	Front panel	x1
14	Front support panel	x1
15	Side support panel	x4
16	Back panel	x1
17	Door panel	x2
18	Front top drawer panel	x1
19	Front bottom drawer panel	x1
20	Right drawer side Panel	x2
21	Left drawer side Panel	x2
22	Back drawer panel	x2
23	Bottom drawer panel	x2

HARDWARE

- A** Cam Bolt Ø6 x 32 mm x8
D Dowel Ø7.8 x 32 mm x10

COMPONENTS

- 4** Top panel x1
6 Right side panel x1
7 Left side panel x1
13 Front panel x1

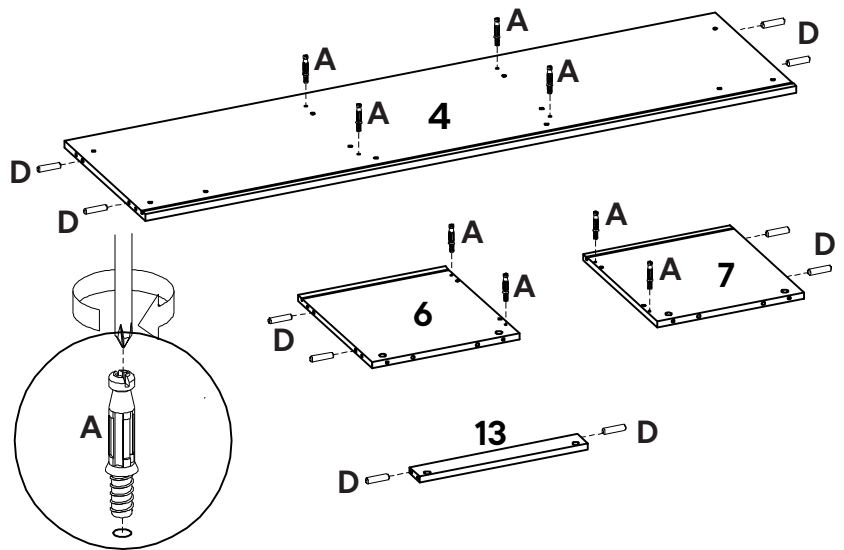

1.1 Insert 4x **Dowels (D)** into the holes of the **Top Panel (1)**.

1.2 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Top Panel (1)**.

1.3 Insert 2x **Dowels (D)** into the holes of the **Left side Panel (7)**.

1.4 Insert and screw 2x **Cam Bolts (A)** into the bottom hole of the **Left side Panel (7)**.

1.5 Insert 2x **Dowels (D)** into the holes of the **Right side Panel (6)**.

1.6 Insert and screw 2x **Cam Bolts (A)** into the bottom hole of the **Right side Panel (6)**.

1.7 Insert 2x **Dowels (D)** into the holes of the **Front Panel (13)**.


STEP 02

HARDWARE

- A** Cam Bolt Ø6 x 32 mm x2
D Dowel Ø7.8 x 32 mm x8
Q Screw Ø6 x 12 mm x8
R Drawer Runner A (L/R) x2

COMPONENTS

- 8** Right middle panel x1
9 Left middle panel x1

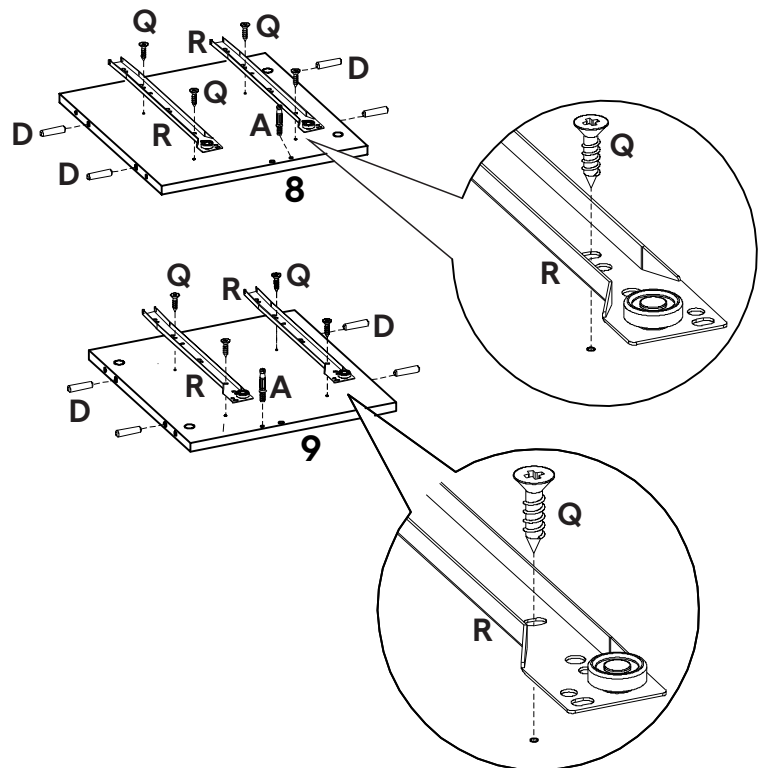

2.1 Insert 4x **Dowels (D)** into the holes of the **Right middle Panel (8)**.

2.2 Insert and screw **Cam Bolt (A)** into the hole of the **Right middle Panel (8)**.

2.3 Fasten 2x **Drawer Runners A (R)** onto **Right middle Panel (8)** with 4x **Screws (Q)**.


2.4 Insert 4x **Dowels (D)** into the holes of the **Left middle Panel (9)**.

2.5 Insert and screw **Cam Bolt (A)** into the hole of the **Left middle Panel (9)**.

2.6 Fasten 2x **Drawer Runners A (S)** onto **Left middle Panel (9)** with 4x **Screws (Q)**.

HARDWARE**(B)** Cam Lock x2**COMPONENTS****(8)** Right middle panel x1**(9)** Left middle panel x1**(13)** Front panel x1

3.1 Connect **Right middle panel (8)** & **Left middle panel (9)** onto the **Front Panel (13)**, by inserting 2x **Cam Locks (B)** to the corresponding holes.

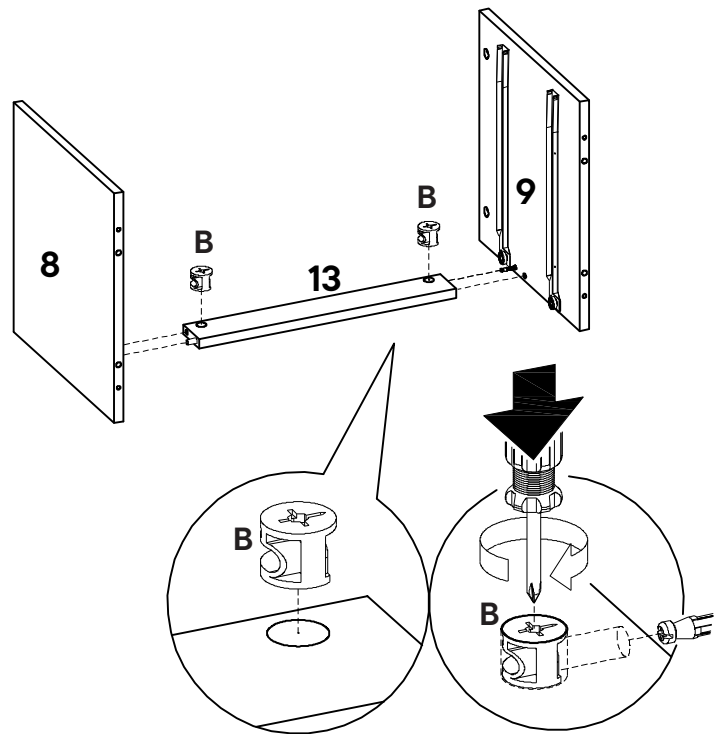


STEP 04

HARDWARE**(B)** Cam Lock x8**COMPONENTS****(4)** Top panel x1**(6)** Right middle panel x1**(7)** Left middle panel x1

4.1 Connect **Right middle panel (6)** & **Left middle panel (7)** onto the **Top Panel (4)**, by inserting 4x **Cam Locks (B)** to the corresponding holes.


4.2 Connect Assembled unit onto the **Top Panel (4)**, by inserting 4x **Cam Locks (B)** to the corresponding holes.

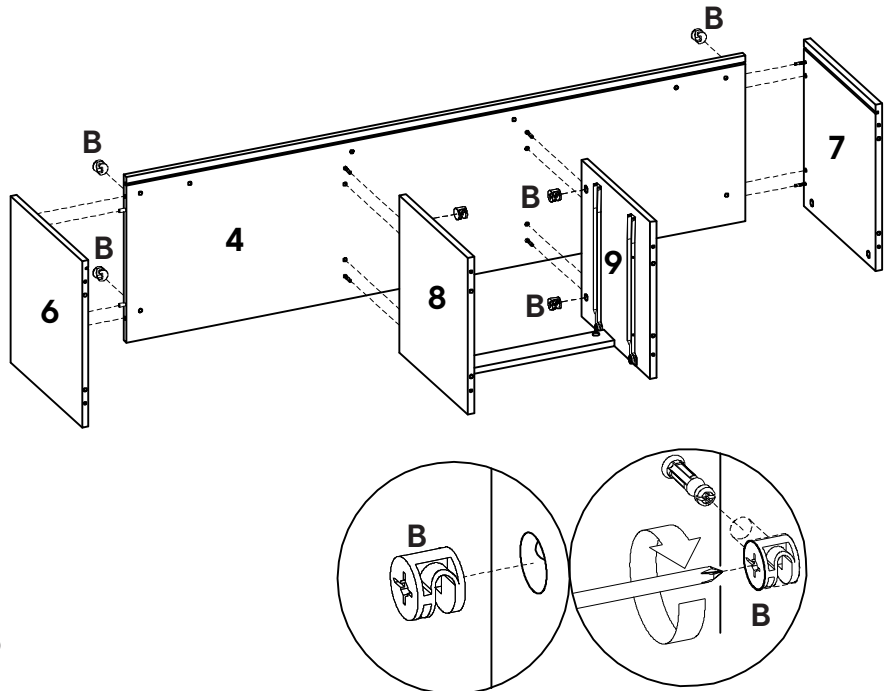

COMPONENTS

16 Back panel x1

5.1 Slide **Back panel (16)** into the Assembled unit as shown.

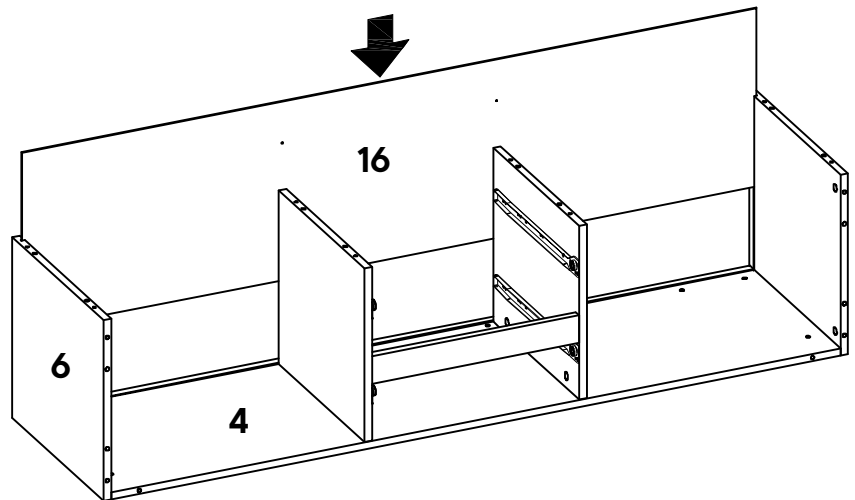

STEP 06

HARDWARE

A Cam Bolt Ø6 x 32 mm x20

D Dowel Ø7.8 x 32 mm x16

COMPONENTS

5 Bottom panel x1

14 Front support panel x2


15 Side support panel x4

6.1 Insert and screw 12x **Cam Bolts (A)** into the bottom hole of the **Bottom panel (5)**.

6.2 Insert 4x **Dowels (D)** into the holes of the **Front support panel (14)**. Repeat this step on the same components.

6.3 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Front support panel (14)**. Repeat this step on the same components.

6.4 Insert 2x **Dowels (D)** into the holes of the **Side support panel (15)**. Repeat this step on the same components.

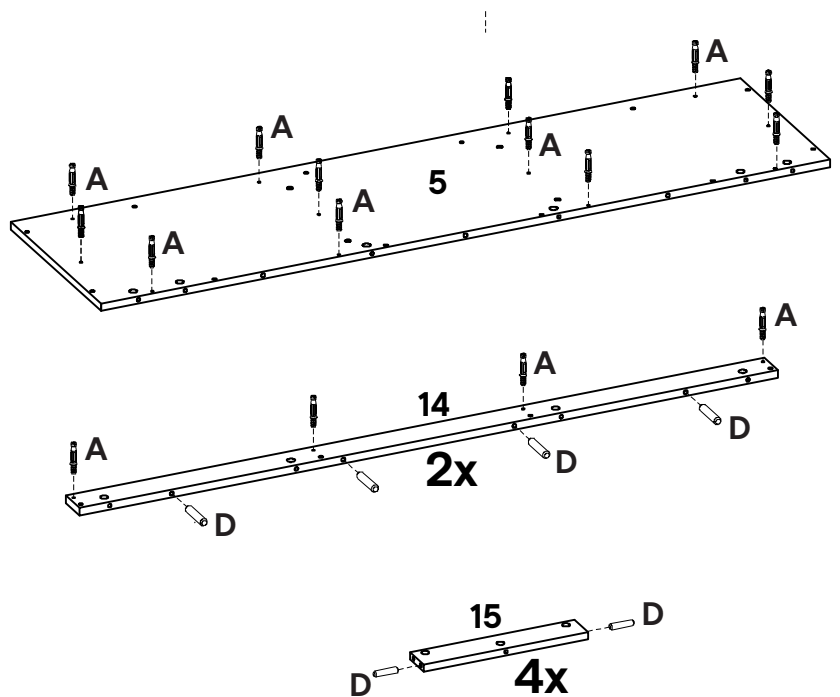


HARDWARE

H Assembly screw x8

COMPONENTS

5 Bottom Panel x1

7.1 Connect **Bottom Panel (5)** onto the Assembled unit, and secure it by tightening 8x **Assembly Screws (H)**.

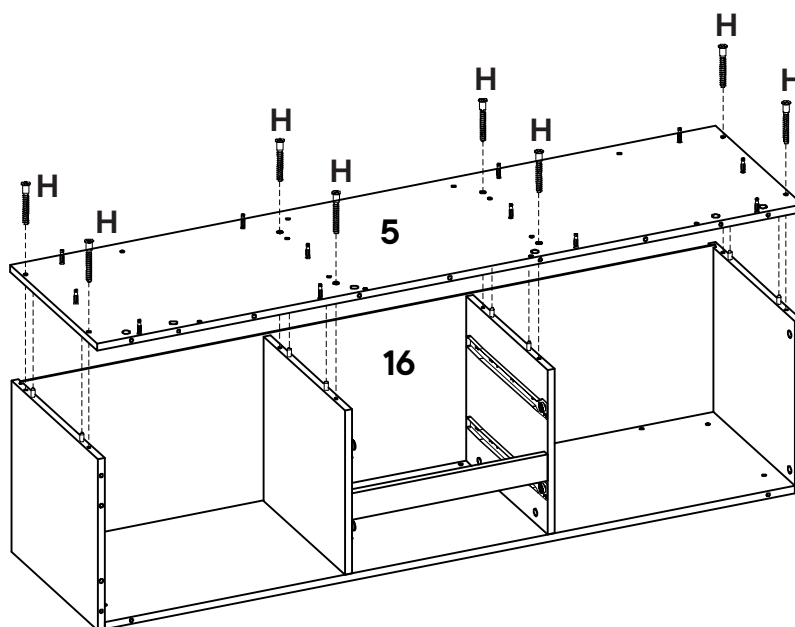

STEP 08

HARDWARE


A Cam Bolt Ø6 x 32 mm x8

COMPONENTS

14 Front support panel x2

15 Side support panel x4


8.1 Connect 4x **Side support panel (15)** onto the 2x **Front support panel (14)**, by inserting 8x **Cam Locks (B)** to the corresponding holes.

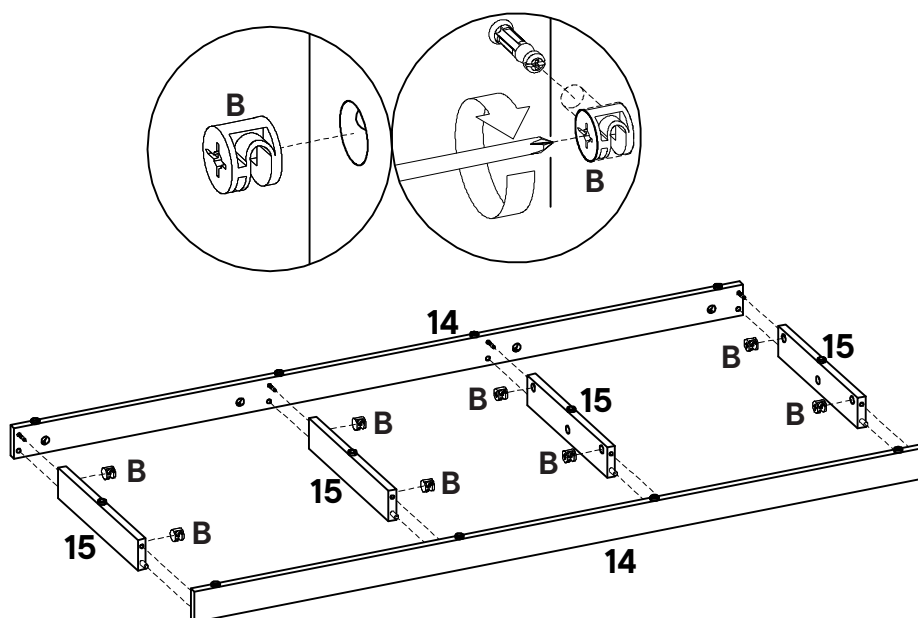

HARDWARE

B Cam Lock x12

9.1 Connect **Bottom assembled** onto Top Assembled by inserting 12x **Cam Locks (B)** to the corresponding holes.

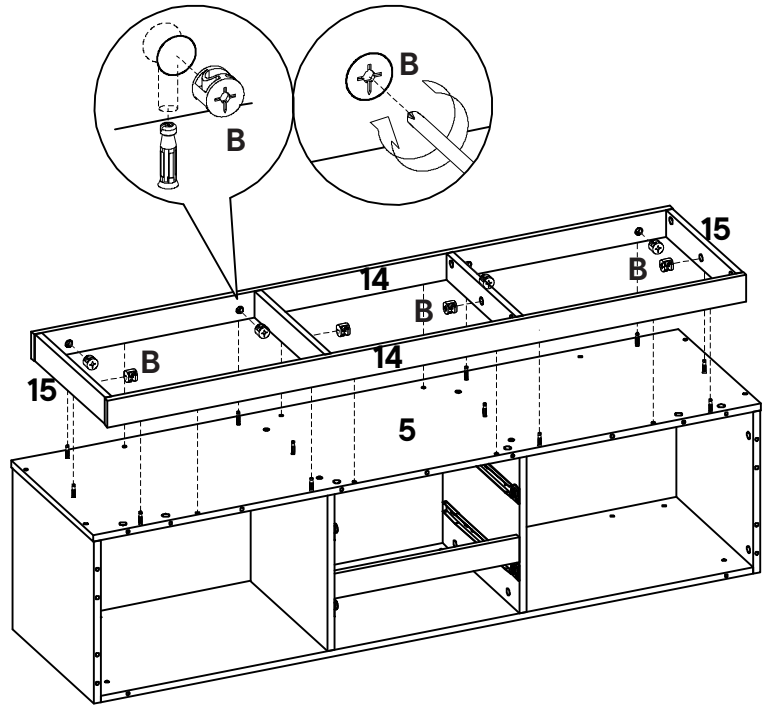

STEP 10

HARDWARE

A Cam Bolt Ø6 x 32 mm x12
D Dowel Ø7.8 x 32 mm x2
F Connecting Bolt x2
G Burrel Nut x2

COMPONENTS

10 Right vertical panel x1
11 Left vertical panel x1
12 Middle horizontal panel x1


10.1 Insert 2x **Dowels (D)** into the holes of the **Middle horizontal panel (12)**.

10.2 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Middle horizontal panel (12)**.


10.3 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Right vertical panel (10)**.

10.4 Insert **Connecting Nut (G)** Into the **Right vertical panel (10)**. Insert and rotate **Connecting Bolt (F)** into the holes of **Connecting Nut (G)**.

10.5 Insert and screw 4x **Cam Bolts (A)** into the bottom hole of the **Left vertical panel (11)**.

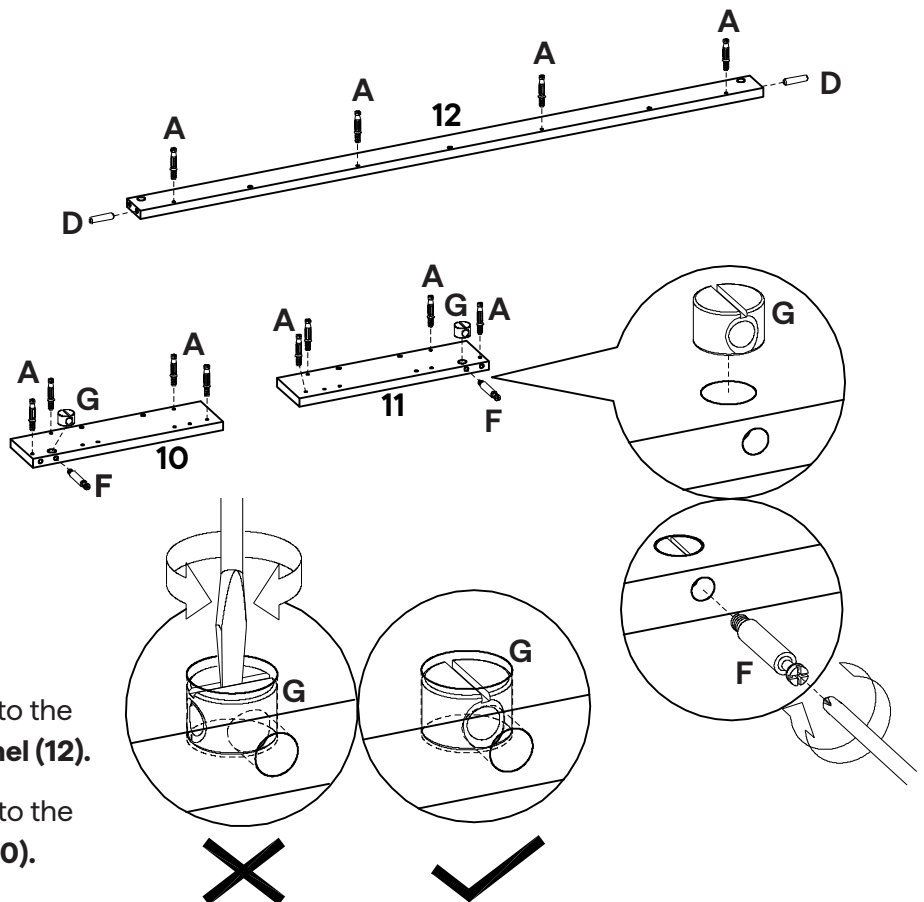

10.6 Insert **Connecting Nut (G)** Into the **Left vertical panel (11)**. Insert and rotate **Connecting Bolt (F)** into the holes of **Connecting Nut (G)**.

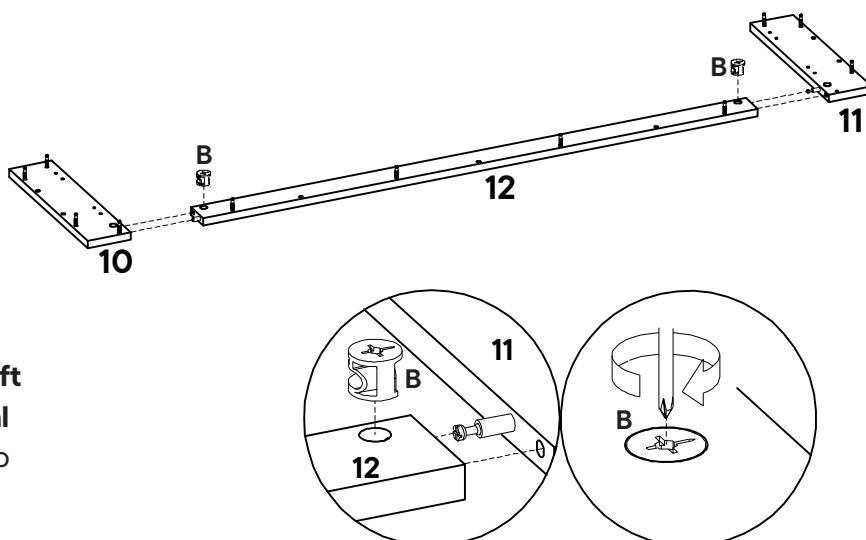HARDWARE**B** Cam Lock x2**COMPONENTS****10** Right vertical panel x1**11** Left vertical panel x1**12** Middle horizontal panel x1


11.1 Connect **Right vertical panel (10)** & **Left vertical panel (11)** to the **Middle horizontal panel (12)** by inserting 2x **Cam Locks (B)** to the corresponding holes.

STEP 12

HARDWARE**I** Hinge x4

12.1 Separate the 4x **Hinges (I)** by pressing back side of the Hinge and then lifting it up.


12.2 Attach the bottom part of the hinges to Assembled unit.

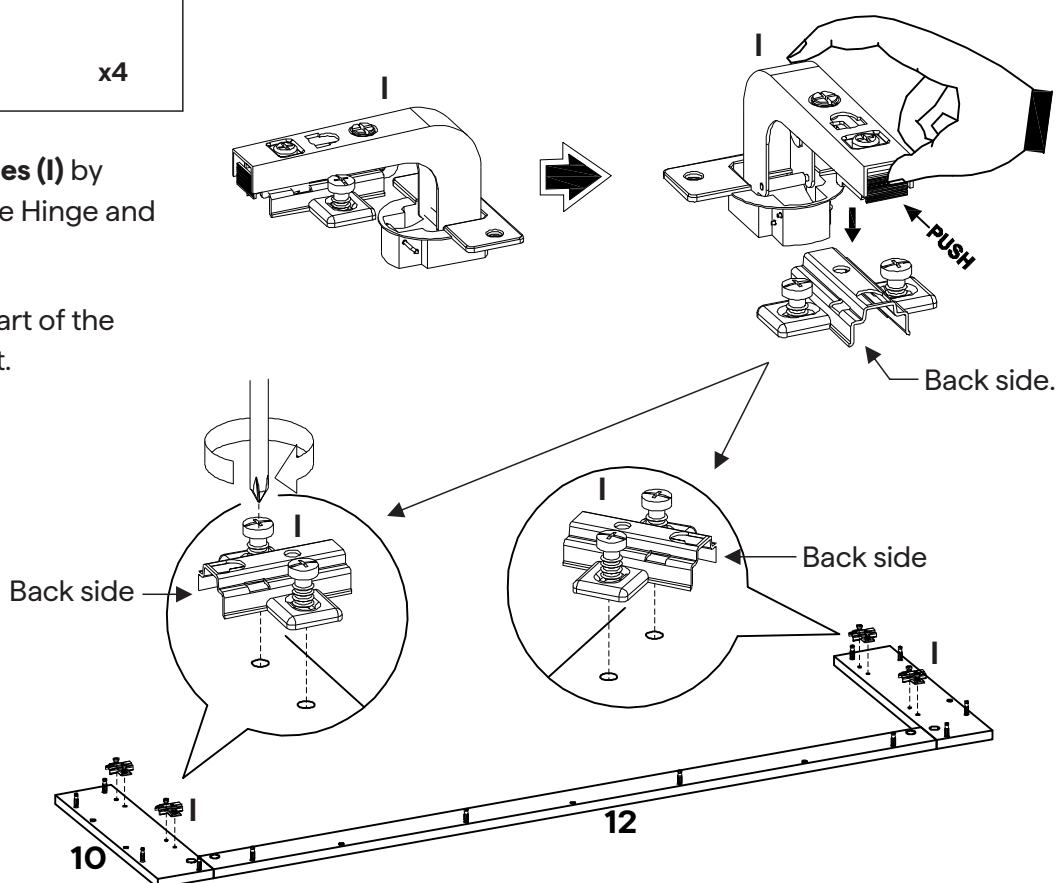

HARDWARE

D Dowel Ø7.8 x 32 mm x7

13.1 Insert 7x **Dowels (D)** into the holes of the **Assembled unit**.

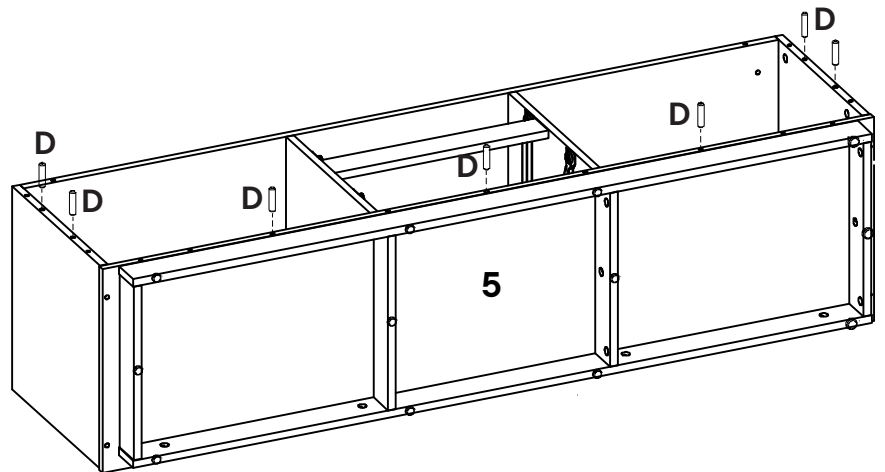


STEP 14

HARDWARE

B Cam Lock x12

14.1 Connect **Assembled frame** to the **Assembled unit** by inserting 12x **Cam Locks (B)** to the corresponding holes.

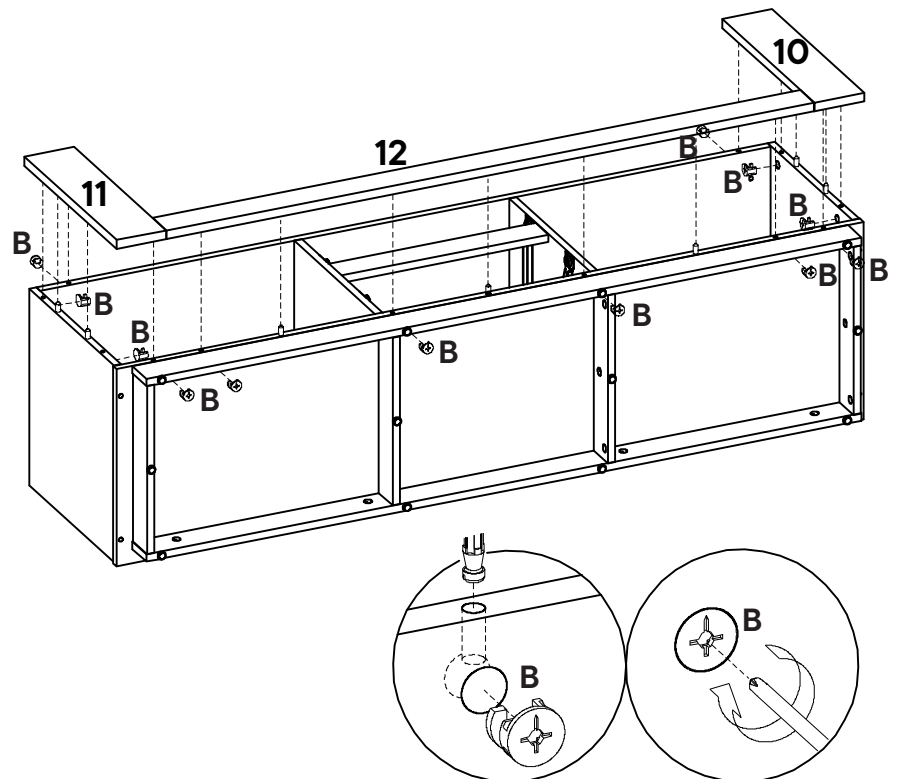

HARDWARE

(E) Dowel Ø7.8 x 18 mm	x4
(L) Bolt M6 x 25mm	x8
(M) Washer	x8



COMPONENTS

① Right side top panel	x1
② Left side top panel	x1
③ Middle Top panel	x1

15.1 Insert 4x **Dowels (E)** into the holes of the **Right side top panel (1)** & **Left side top panel (2)**.

15.2 Connect **Right side top panel (1)**, **Left side top panel (2)** & **Middle top panel (3)** to the Assembled unit, by inserting with 8x **Bolts (L)** and 8x **Washer (M)**.

For Correct installation positioning, see (Figure 1) & (Figure 2).

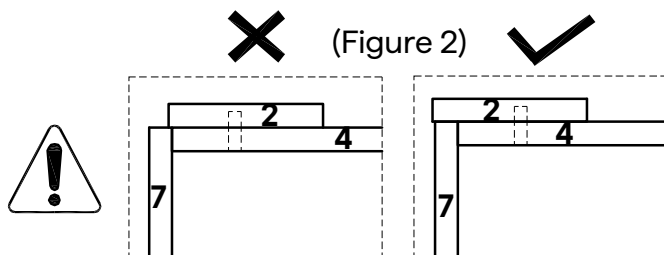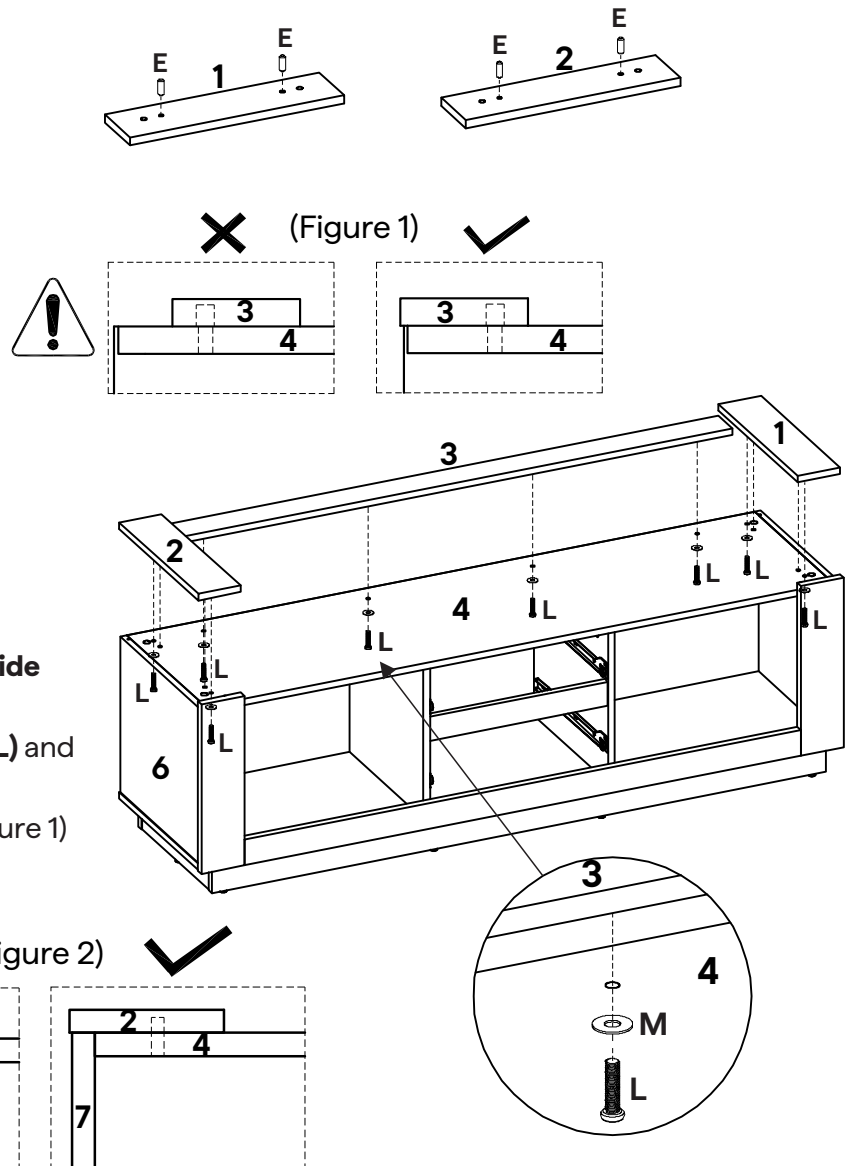


STEP 16

HARDWARE

(N) Screw Ø4 x 12 mm	x4
(P) Wedge	x10
(O) Screw Ø9 x 16 mm	x10

16.1 Gently adjust the top panel sideways in either direction until the diagonal measurements of the frame are equal. Holding the assembly in place, fix the 10x **Wedge (P)** with 10x **Screws (O)** as shown.

16.2 Connect Back Panel onto the Assembled Unit. with secure it by tightening 4x **Screws (N)**.

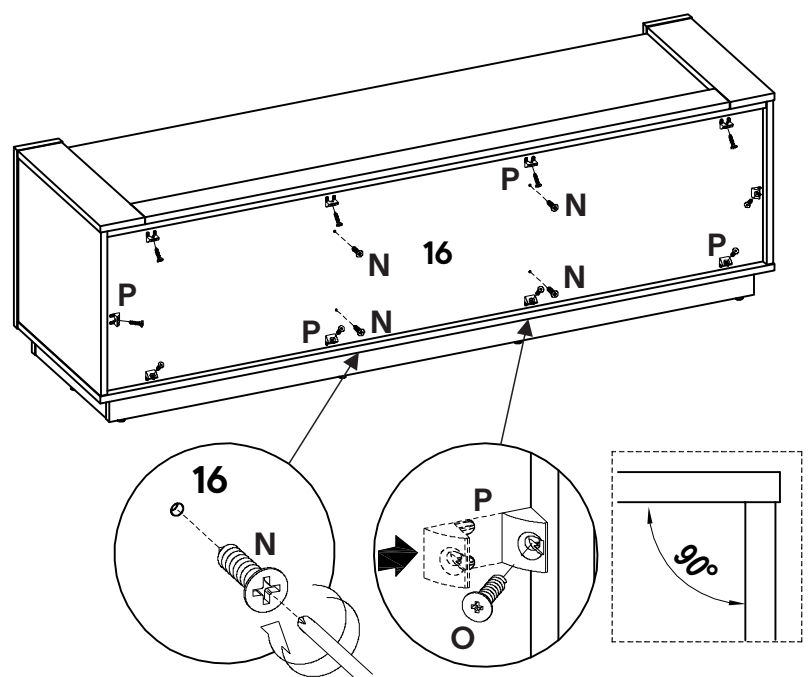


HARDWARE

- I** Hinge x4
J Screw Ø7 x 13 mm x8

COMPONENTS

- 17** Door x2

17.1 Fasten 4x **Hinges (I)** with
 8x **Screws (J)** onto the 2x **Door (17)**.


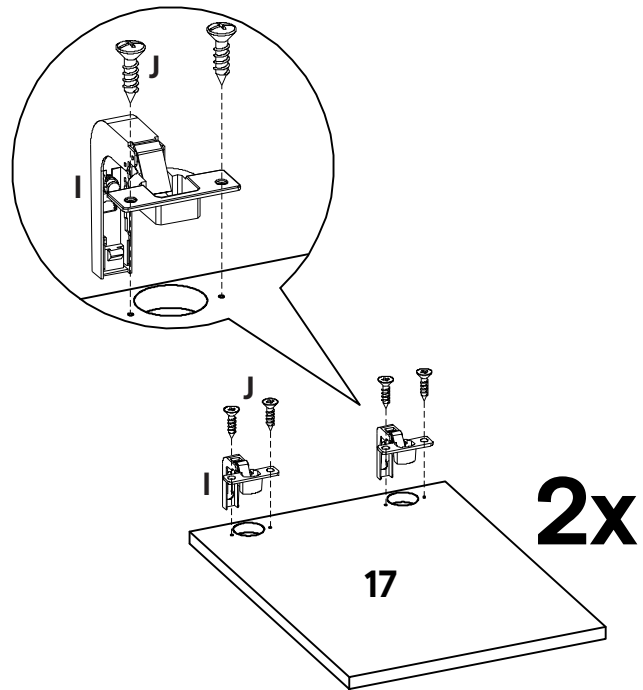


STEP 18




COMPONENTS

- 17** Door x2

18.1 Install the **Doors (17)** onto the Cabinet by connecting the doors hinge to the Cabinet hinge. Make sure the alignment is correct. Then press firmly until hear a “click”.

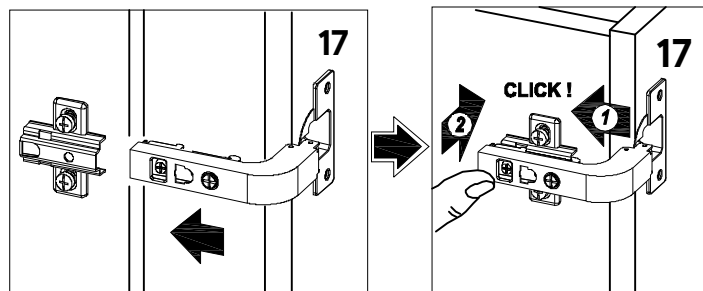
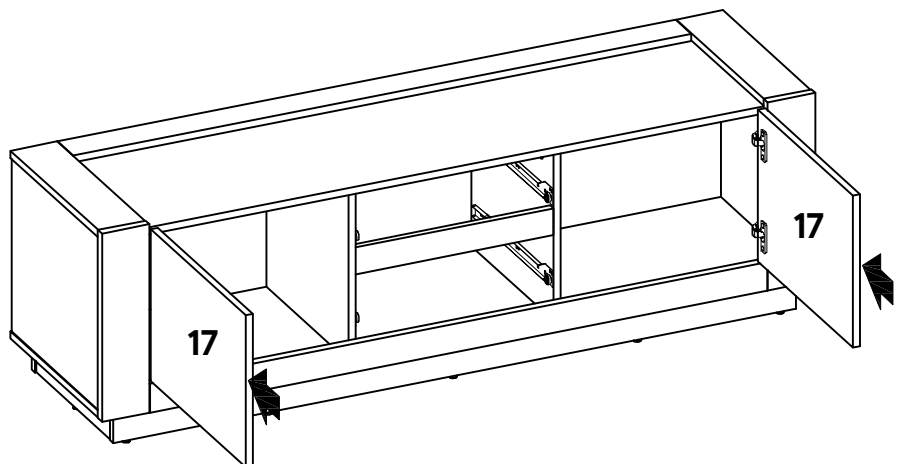


Sideboard Door alignment

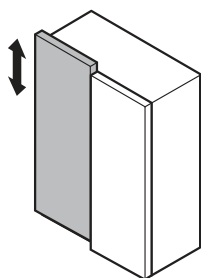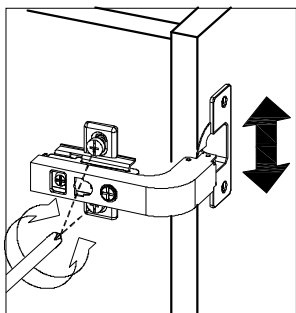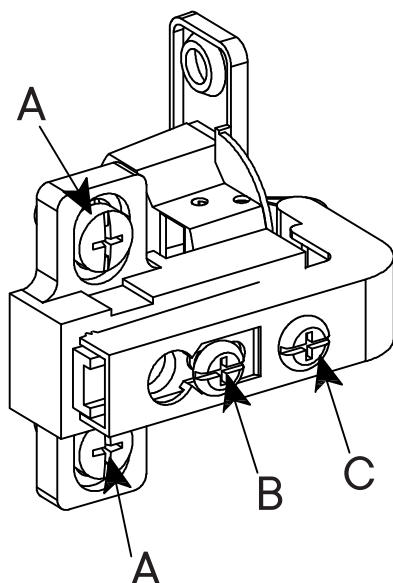



To adjust the vertical height.

Loosen the two screws A on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

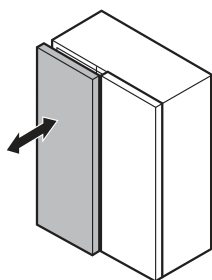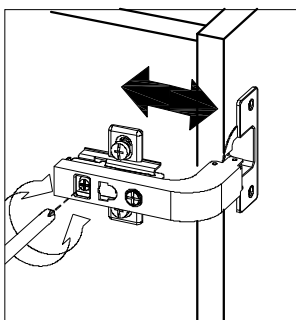

To adjust depth.

Loosen screw B and adjust door, if the door can not be adjusted, please loosen screw C, then try again. Tighten screw B and C.

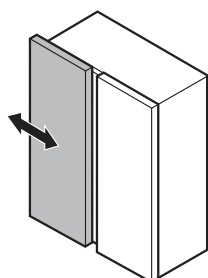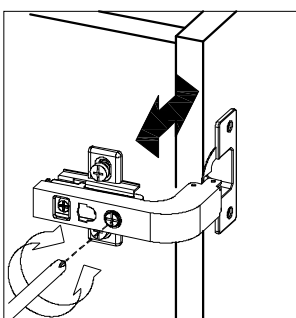

To adjust side ways.





Turn screw C on BOTH hinges on each door.

HARDWARE

- (A)** Cam Bolt Ø6 x 32 mm x4
(D) Dowel Ø7.8 x 32 mm x4

COMPONENTS

- (18)** Front top drawer panel x1
(19) Front bottom drawer panel x1
(20) Right side drawer panel x2
(21) Left side drawer panel x2

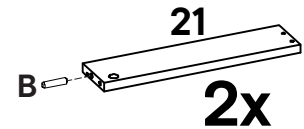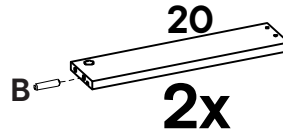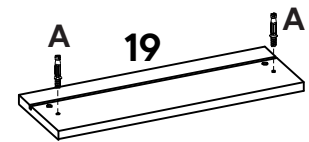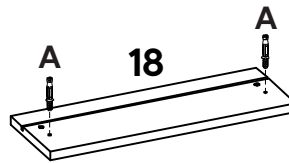

19.1 Insert and screw 2x **Cam Bolts (A)** into the bottom hole of the **Front top drawer panel (18)**.

19.2 Insert and screw 2x **Cam Bolts (A)** into the bottom hole of the **Front bottom drawer panel (19)**.

19.3 Insert **Dowel (D)** into the holes of the **Right side drawer panel (20)**. Repeat this step on the same components.

19.4 Insert **Dowel (D)** into the holes of the **Left side drawer panel (21)**. Repeat this step on the same components.

STEP 20


HARDWARE

- (B)** Cam Lock x2
(C) Sticker x2
(K) Screw Ø8 x 37 mm x4

COMPONENTS

- (18)** Front top drawer panel x1
(20) Right side drawer panel x1
(21) Left side drawer panel x1
(22) Back drawer panel x1
(23) Bottom drawer panel x1

20.1 Position **Right side drawer Panel (20)** and **Left side drawer Panel (21)** onto **Front top drawer panel (18)**, by inserting 2x **Cam Locks (B)** to the corresponding holes. Place 2x **Stickers (C)** on Cam Lock. Slide **Bottom drawer panel (23)** into grooves of Drawer Side Panels as shown. Position **Back drawer panel (22)** between Drawer Sides and fasten using 4x **Screws (K)**.

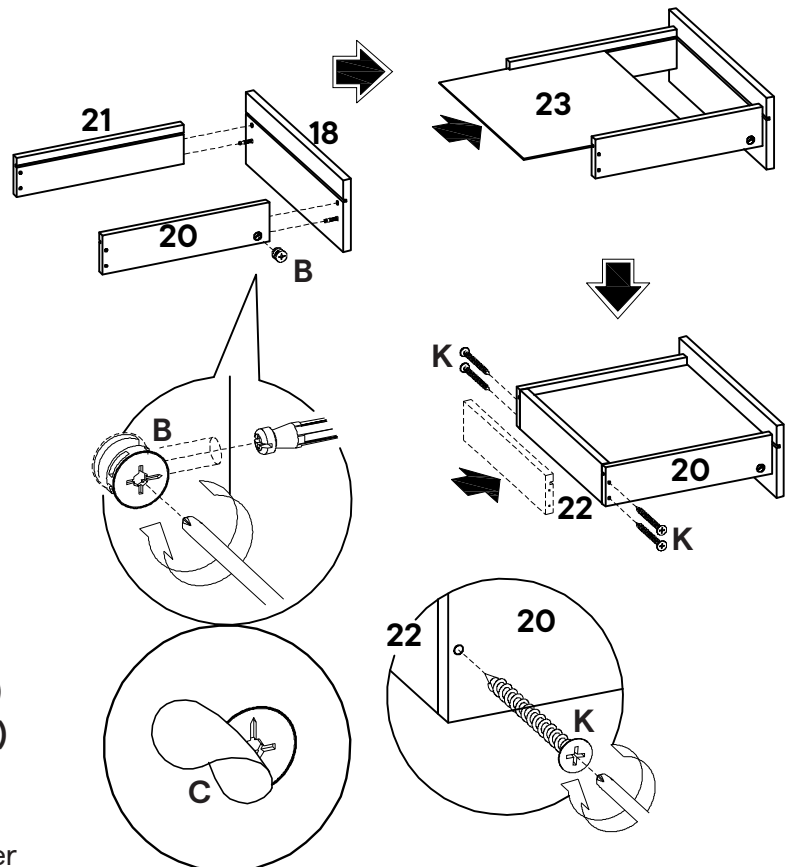


HARDWARE

B Cam Lock	x2
C Sticker	x2
K Screw Ø8 x 37 mm	x4

COMPONENTS

19 Front bottom drawer panel	x1
20 Right side drawer panel	x1
21 Left side drawer panel	x1
22 Back drawer panel	x1
23 Bottom drawer panel	x1

21.1 Position **Right side drawer Panel (20)** and **Left side drawer Panel (21)** onto **Front bottom drawer panel (19)**, by inserting 2x **Cam Locks (B)** to the corresponding holes. Place 2x **Stickers (C)** on Cam Lock. Slide **Bottom drawer panel (23)** into grooves of Drawer Side Panels as shown. Position **Back drawer panel (22)** between Drawer Sides and fasten using 4x **Screws (K)**.

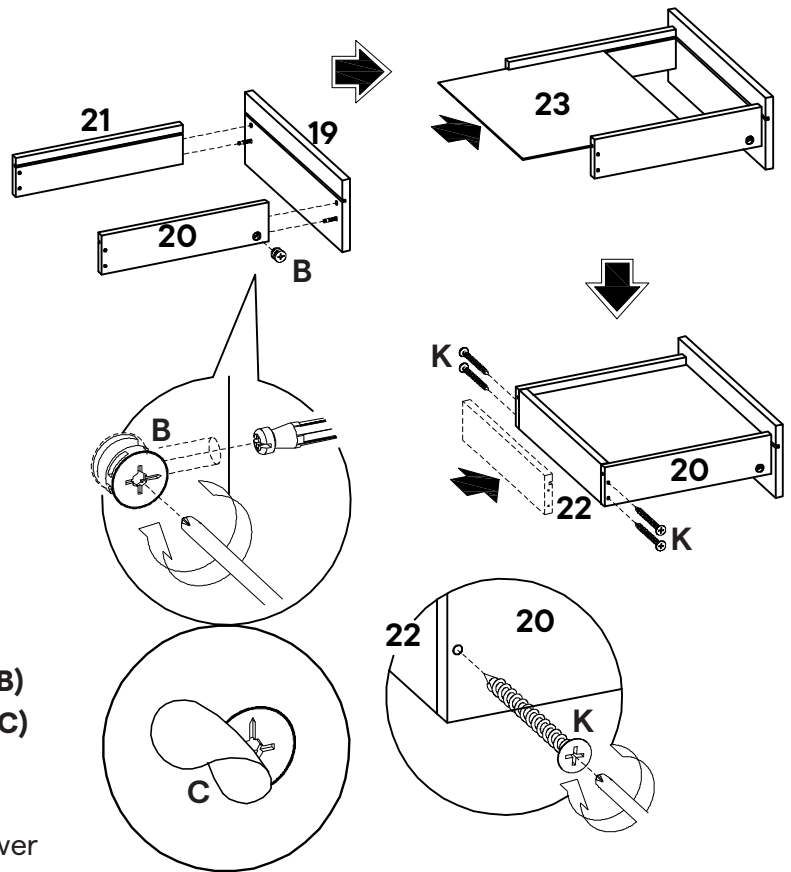


STEP 22

HARDWARE



P Wedge	x4
O Screw Ø6 x 19 mm	x4
S Drawer Runner B (L/R)	x2
Q Screw Ø6 x 12 mm	x8

22.1 Adjust the drawer assembly so that the diagonal measurements of the drawer are equal. Insert 2x **Wedge (P)** between the drawer panels as shown and fasten them with 2x **Screws (O)**. Fasten 1 set **Drawer Runners B (S)** onto drawer with 4x **Screws (Q)**. Repeat with the remaining drawer panels.

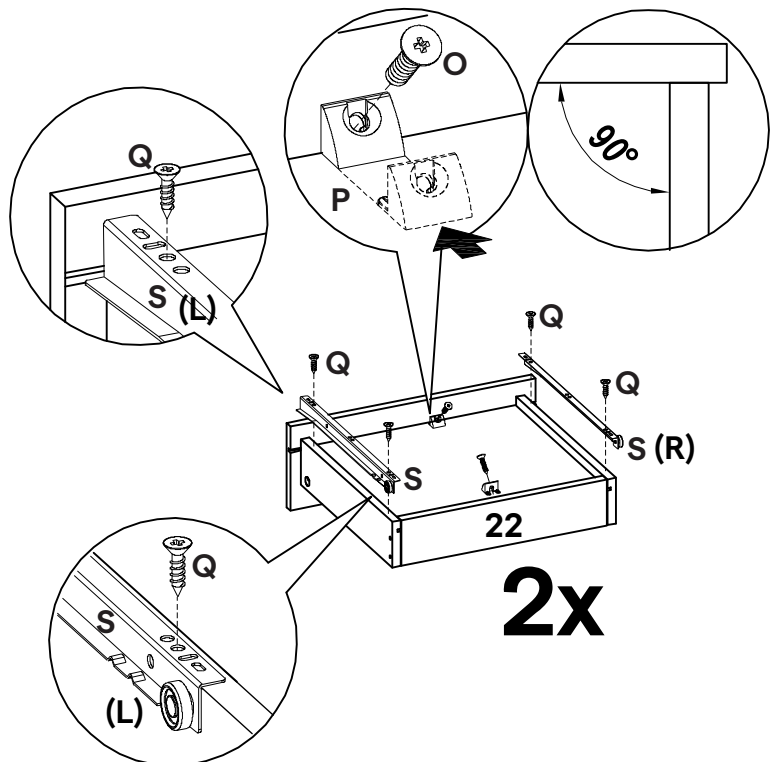

HARDWARE

 Screw Ø6 x 12 mm x4

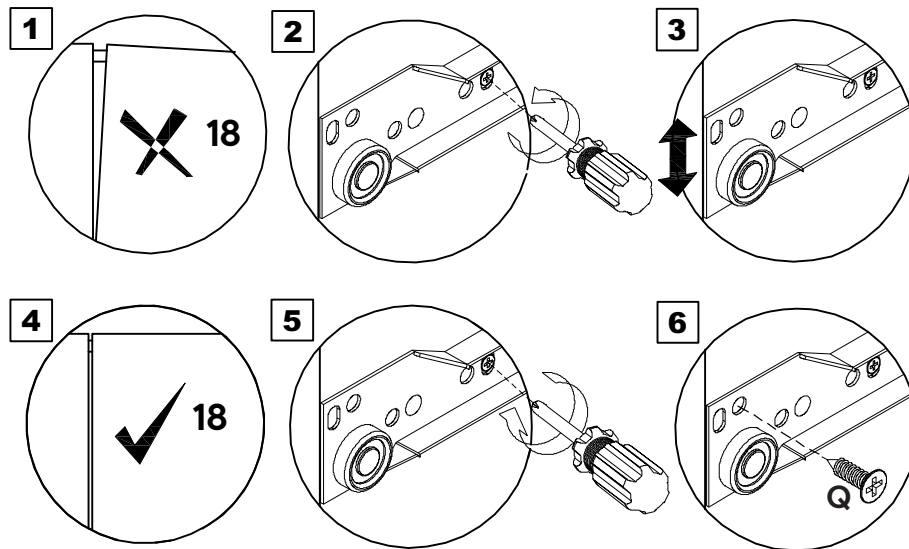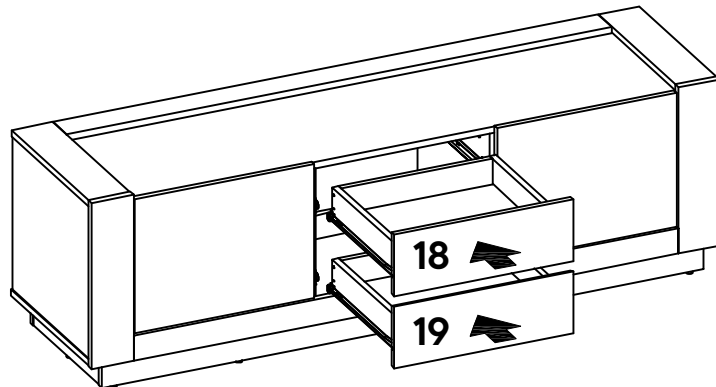

23.1 Insert drawers into the Cabinet as shown.

23.2 In the event of misaligned Drawer or Drawer hit the bottom panel. To adjust gaps around the Drawer, first remove the Drawer. Loosen screws on the runners and adjust Drawer Runners to the up or down direction.


23.3 When the drawer front (18) are correctly aligned, re-tighten screws on the runners. Lock the runners in place by fastening additional **Screw (Q)** to each runner as shown.

Great job!

TV Stand assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

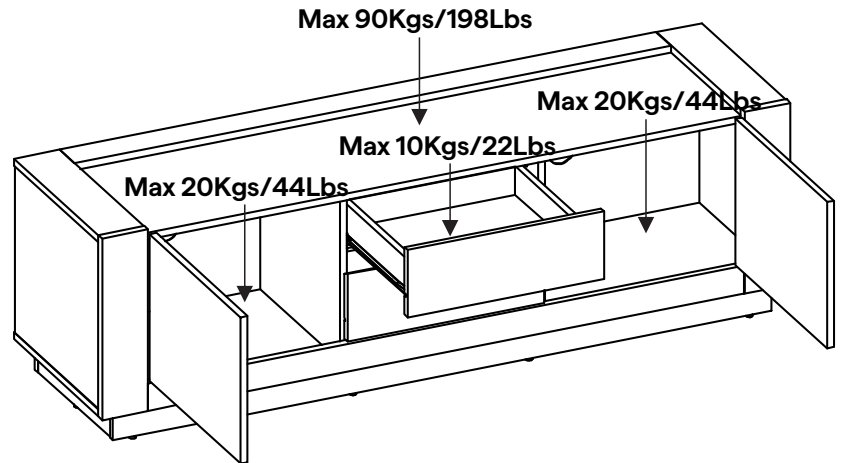

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com