


ASSEMBLY INSTRUCTIONS

EEI-6234

V0.01.26.23

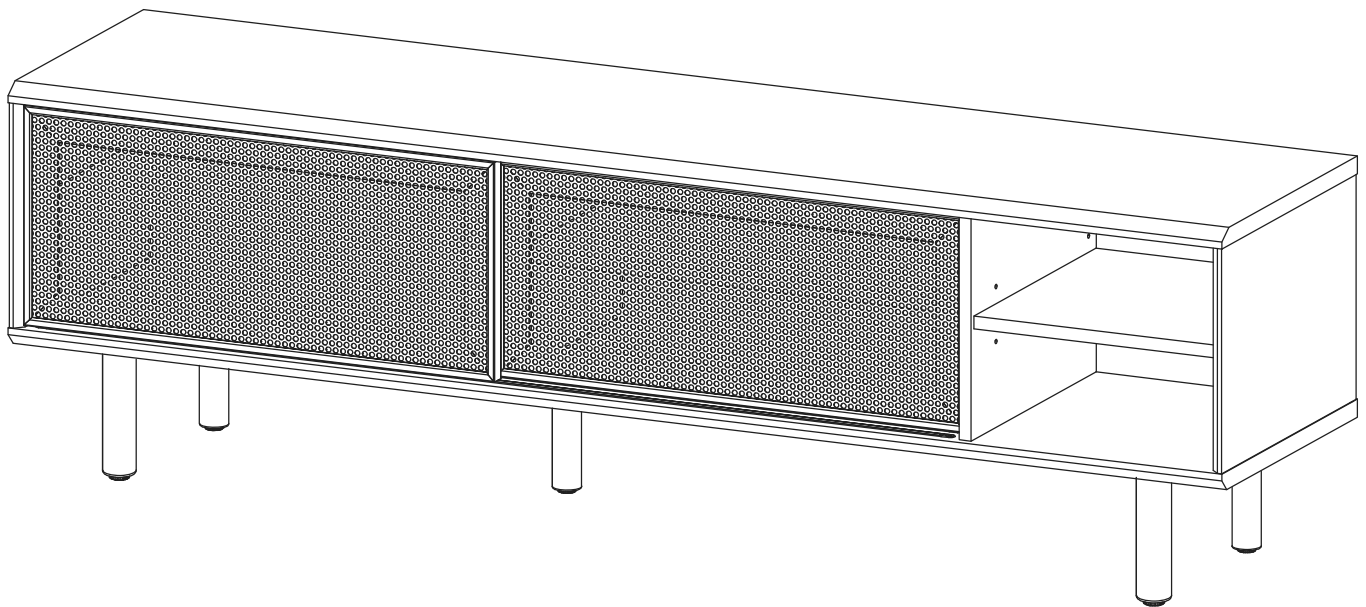

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:


1	Top Board	x1	11	Adjustable Shelf 2	x1
2	Bottom Board	x1	LC15A2	Leg	x5
3	Side Board Left	x1			
4	Side Board Right	x1			
5	Center Board Left	x1			
6	Adjustable Shelf 1	x2			
7	Frame Door	x2			
8	Back Board 1	x1			
9	Back Board 2	x1			
10	Center Board Right	x1			

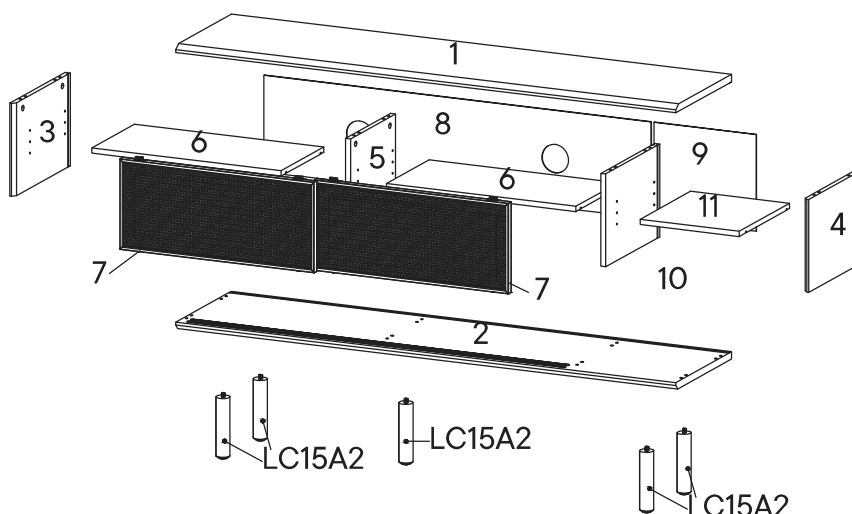

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x8	J		Shelf Pin	x12
B		Cam Lock Ø15 mm	x8	K		Silicon Bumper	x4
C		Wood Dowel Ø8 x 30 mm	x16	L		Screw M 4.5 x 12.5 mm	x20
D		Screw M 7 x 50 mm	x8	M		Sliding Top	x4
E		Screw M 3.5 x 13 mm	x16	N		Sliding Bottom	x4
F		Screw Cap Ø15 mm	x8	PM2		Mounting Plate	x5
G		Allen Key	x2				
H		Wedge	x12				
I		Screw M 3.5 x 15.5 mm	x12				

What you need:



Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
- C** Wood Dowel Ø8 x 30 mm x16

COMPONENTS

- 1** Top Board x1
- 3** Side Board Left x1
- 4** Side Board Right x1
- 5** Center Board Left x1
- 10** Center Board Right x1

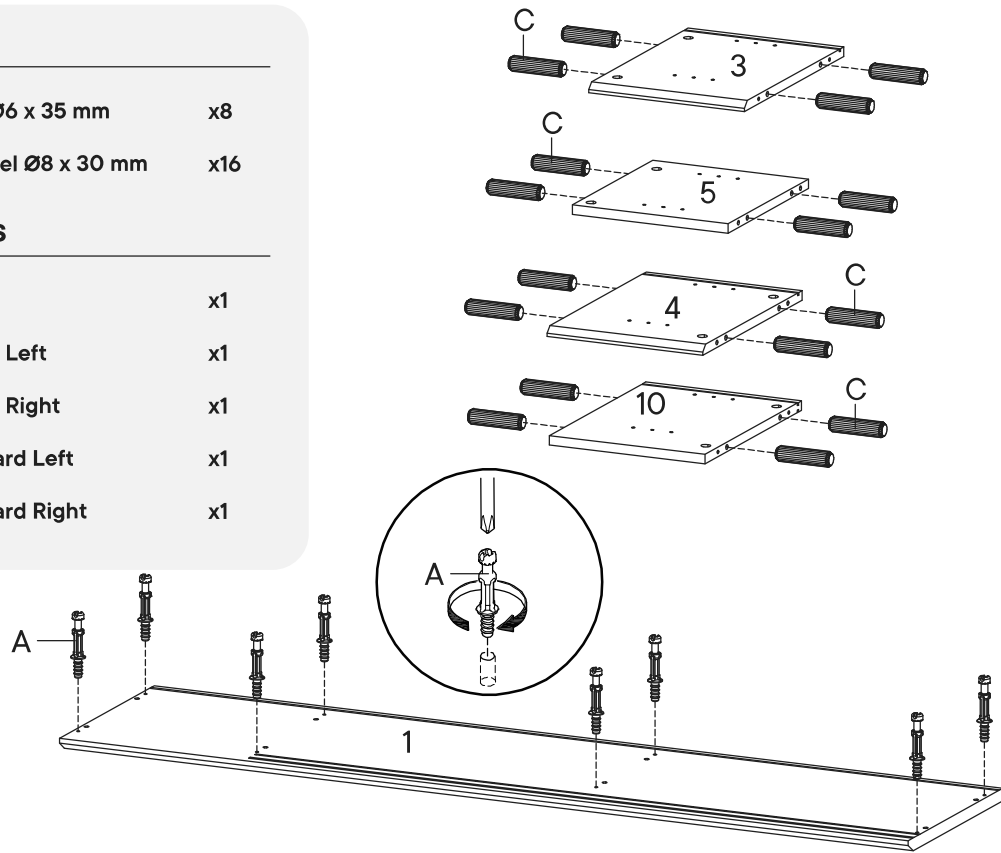


Step 2

HARDWARE

- B** Cam Lock Ø15 mm x8
- F** Screw Cap Ø15 mm x8

COMPONENTS

- 1** Top Board x1
- 3** Side Board Left x1
- 4** Side Board Right x1
- 5** Center Board Left x1
- 10** Center Board Right x1

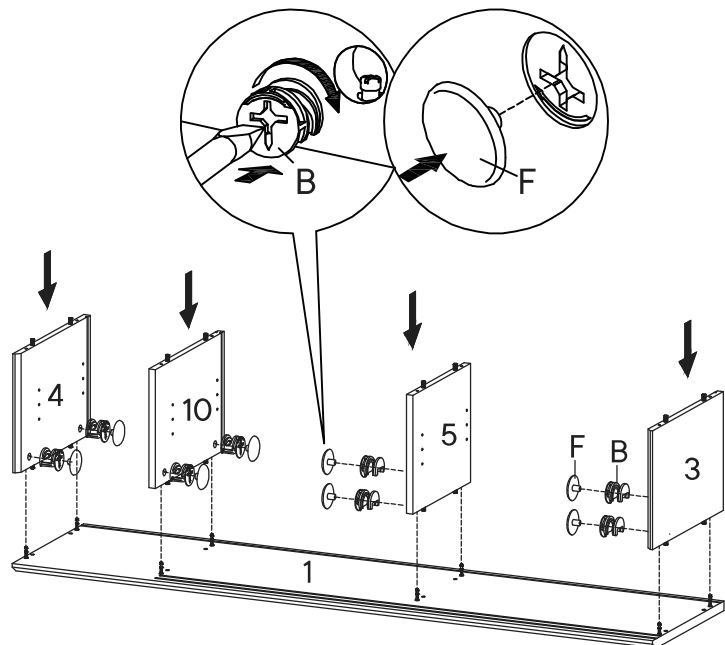


Step 3

HARDWARE

- | | | |
|----------|-------------------|----|
| D | Screw M 7 x 50 mm | x8 |
| G | Allen Key | x1 |

COMPONENTS



- | | | |
|----------|--------------|----|
| 2 | Bottom Board | x1 |
| 8 | Back Board 1 | x1 |
| 9 | Back Board 2 | x1 |

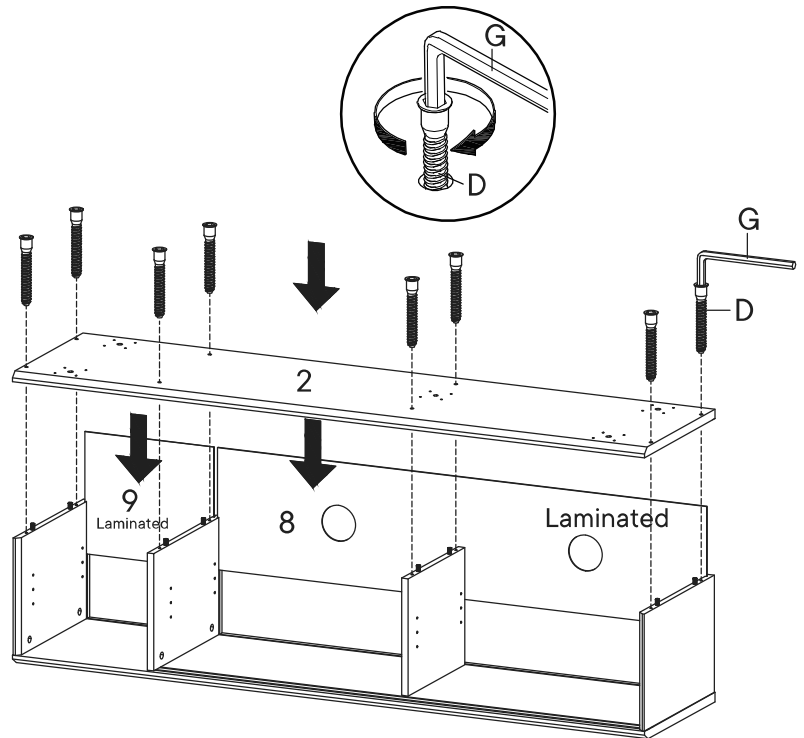

Step 4

HARDWARE

- | | | |
|------------|-----------------------|-----|
| L | Screw M 4.5 x 12.5 mm | x20 |
| PM2 | Mounting Plate | x5 |

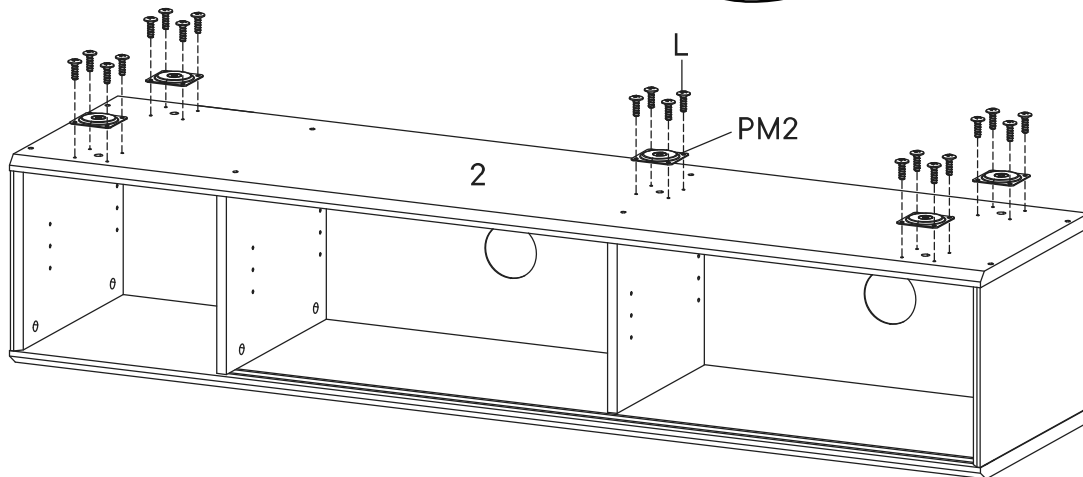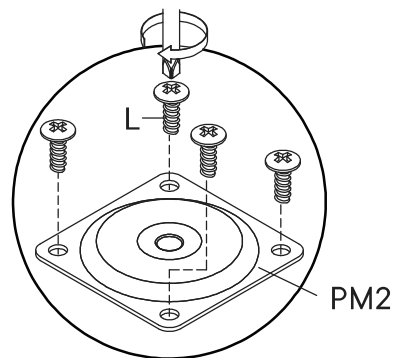


Step 5

COMPONENTS

LC15A2 Leg

x5

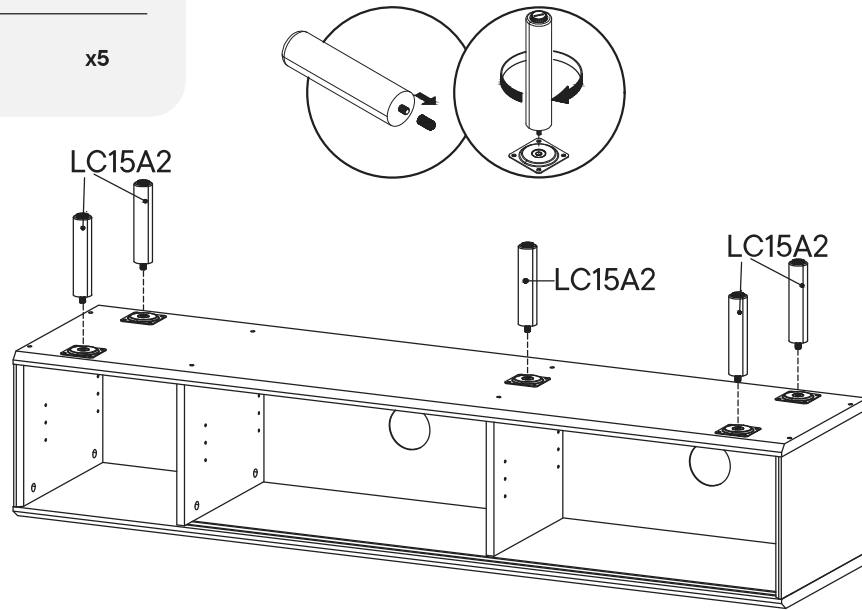

Step 6




HARDWARE

J Shelf Pin x12

COMPONENTS

6 Adjustable Shelf 1 x2

11 Adjustable Shelf 2 x1

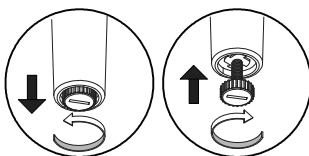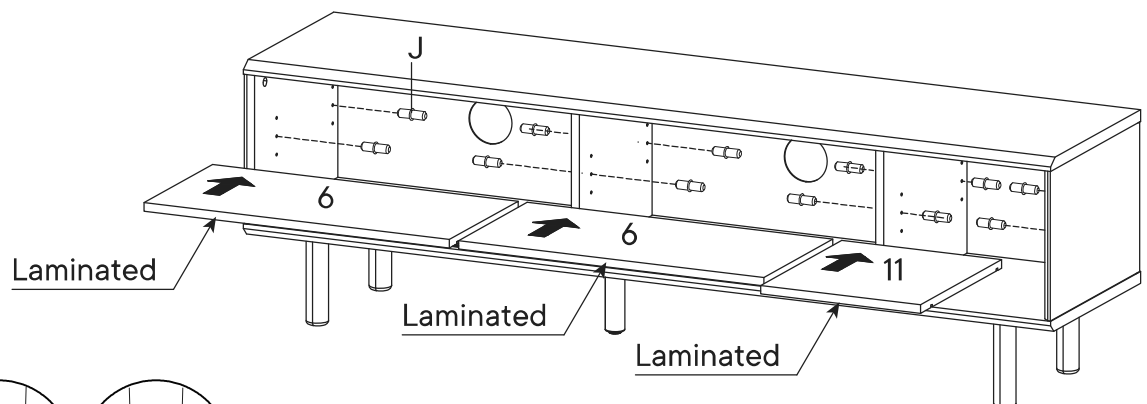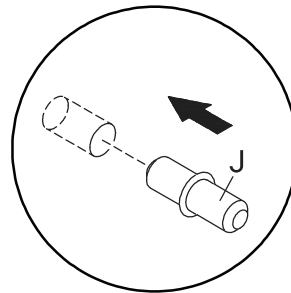


Step 7

HARDWARE

E	Screw M 3.5 x 13 mm	x16
M	Sliding Top	x4
N	Sliding Bottom	x4

COMPONENTS

7	Frame Door	x2
----------	------------	----

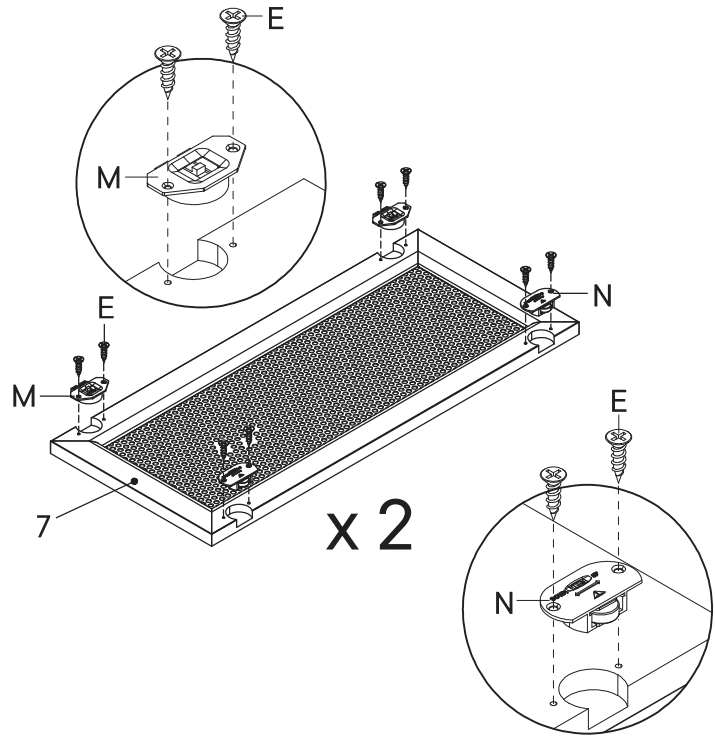


Step 8

HARDWARE

K	Silicon Bumper	x2
----------	----------------	----

COMPONENTS

7	Frame Door	x1
----------	------------	----

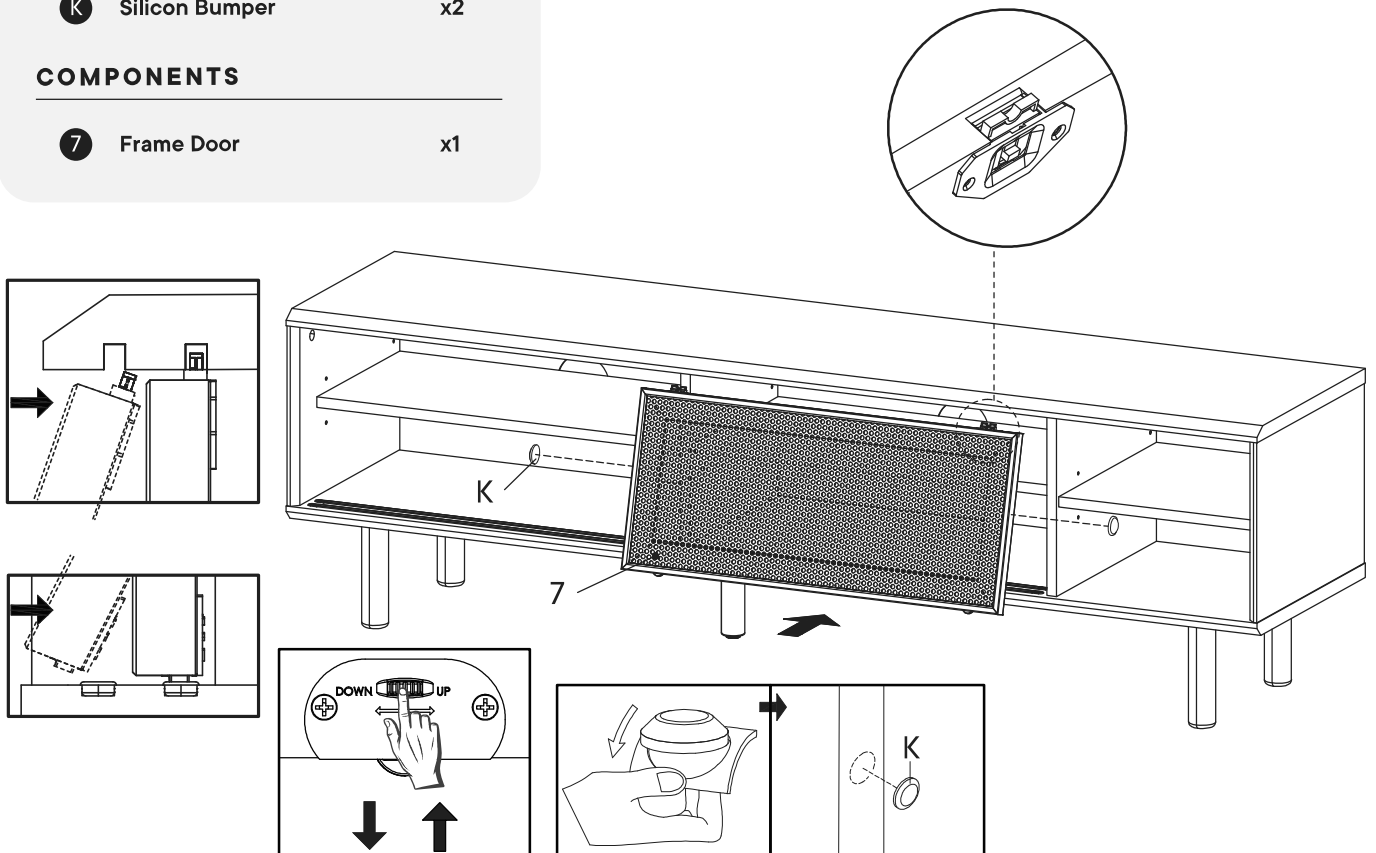


Step 9

HARDWARE

K Silicon Bumper x2

COMPONENTS

7 Frame Door x1

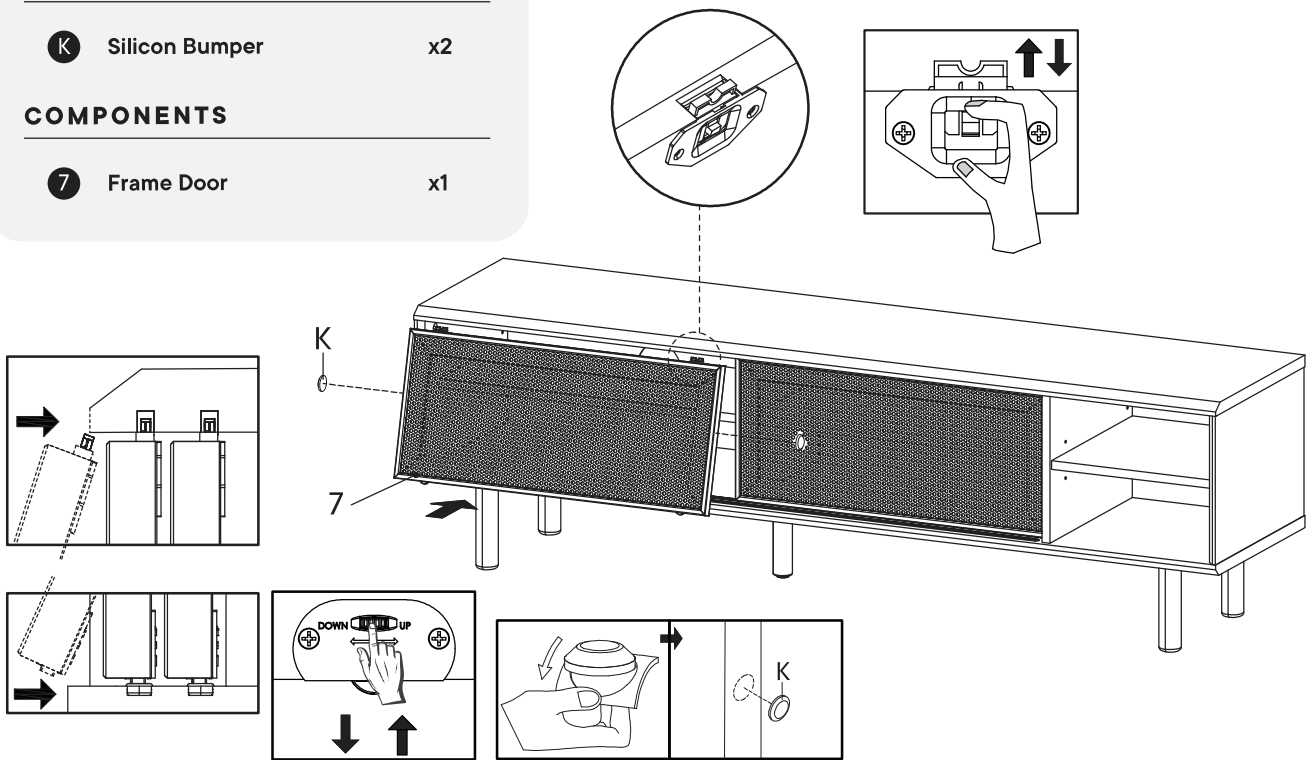


Step 10

HARDWARE

H Wedge x12

I Screw M 3.5 x 15.5 mm x12

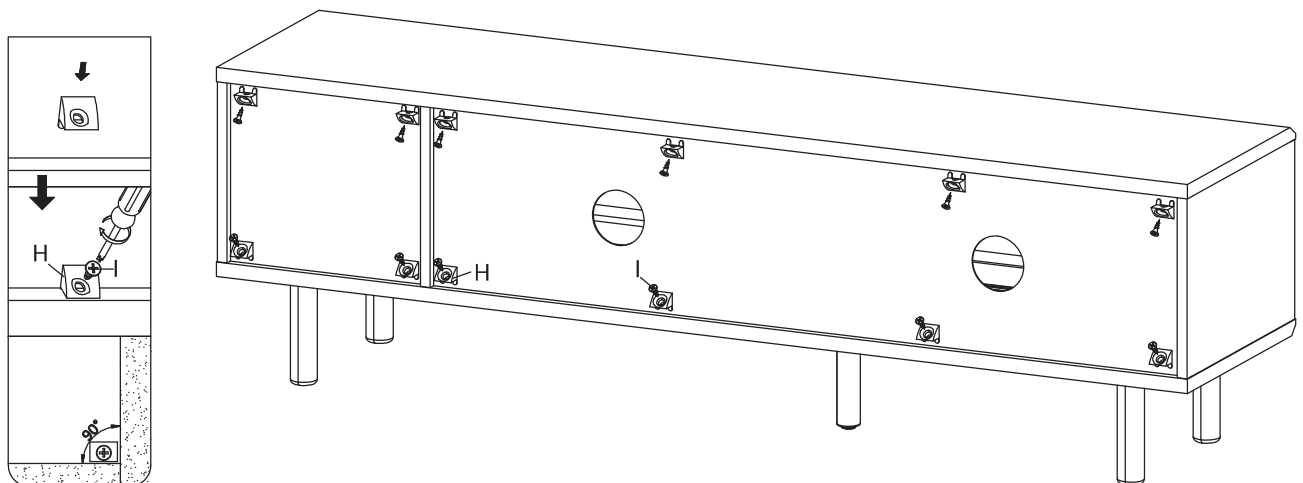

Great job!

Tv Stand assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

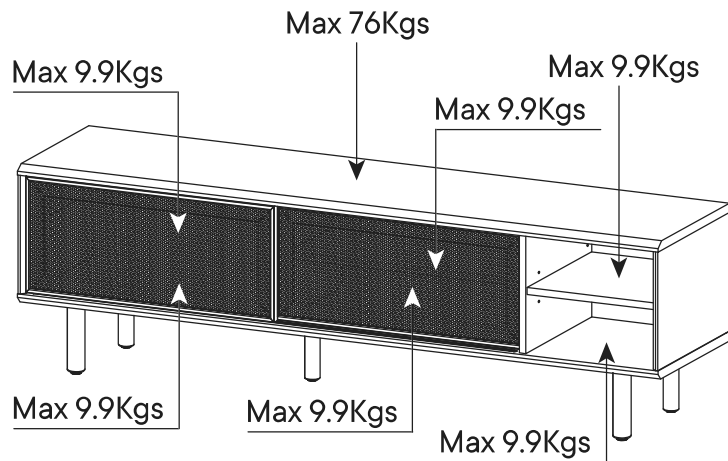

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.