


ASSEMBLY INSTRUCTIONS

EEI-7165

V0.03.09.24

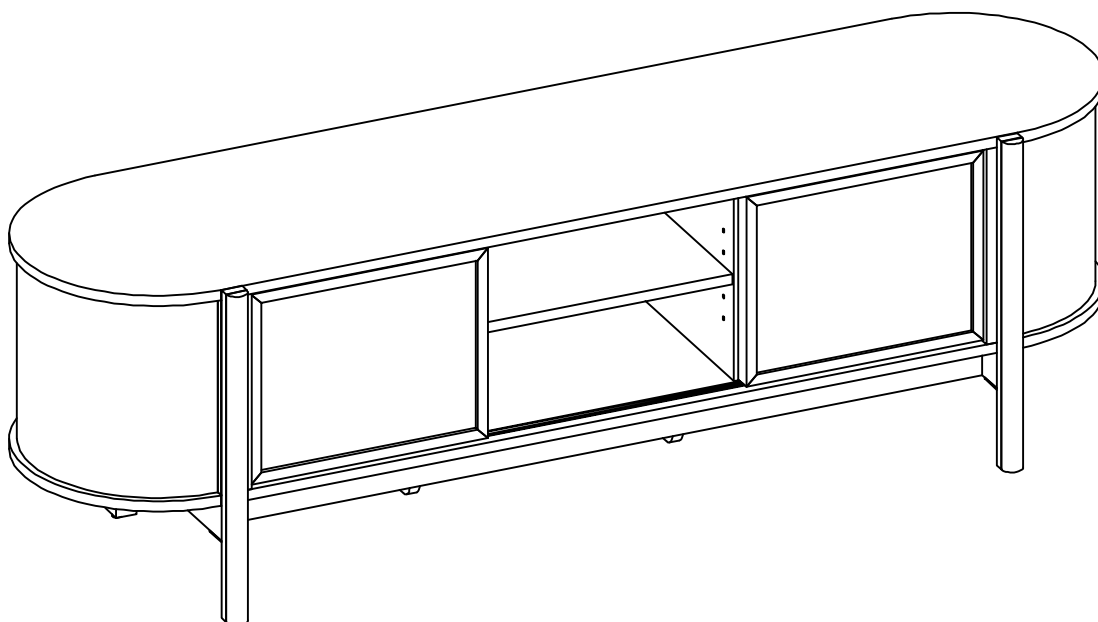

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.



Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top panel	x1
2	Bottom panel	x1
3	Side panel	x2
4	Right divider panel	x1
5	Left divider panel	x1
6	Shelving panel	x1
7	Right vertical panel	x1
8	Left vertical panel	x1
9	Back vertical panel	x2
10	Side support panel	x2
11	Bottom apron panel	x1
12	Back support bottom panel	x1
13	Right support bottom panel	x1
14	Left support bottom panel	x1
15	Vertical front panel	x2
16	Front leg	x2
17	Right bottom leg	x1
18	Left bottom leg	x1
19	Middle bottom leg	x2
20	Back panel	x1
21	Sliding panel	x2

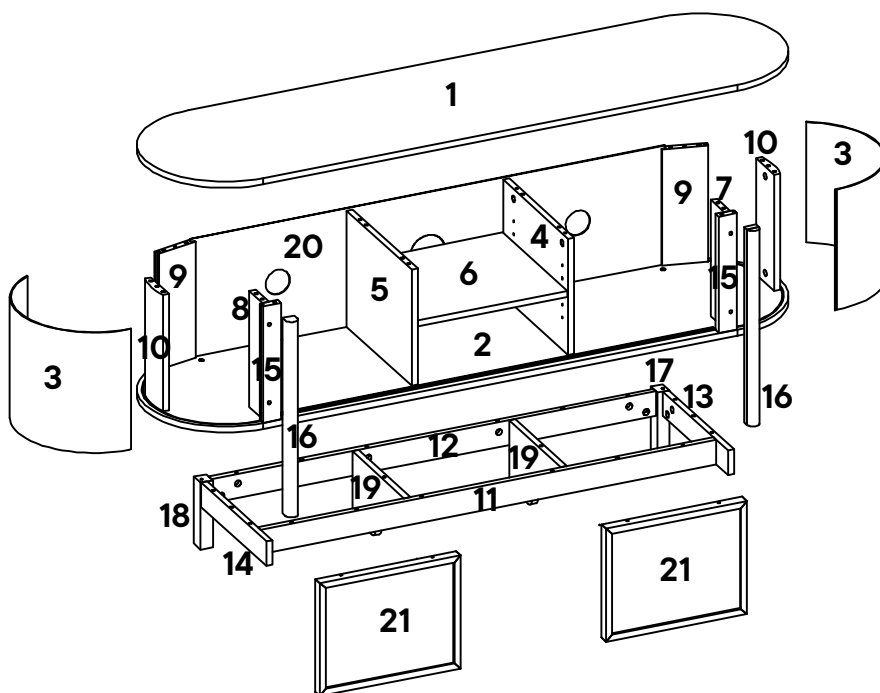


Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A.		Cam bolt Ø6 x 32 mm	x34
B.		Cam lock Ø15 x 12 mm	x36
C.		Cover cap	x12
D.		Dowel Ø7.8 x 32 mm	x50
E.		Connecting bolt	x2
F.		Connecting nut	x4
G.		Assembly screw	x10
H.		Plat support	x2
I.		Screw Ø6 x 12 mm	x8
J.		Screw Ø4 x 12 mm	x4
K.		Allen key	x1
L.		Adjustable leveller	x2
M.		Barrel nut	x2
N.		Bolt M6 x 25 mm	x4
O.		Bolt M6 x 60 mm	x2
P.		Bolt M6 x 50 mm	x2
Q.		Shelf pin	x4
R.		Pin	x8
S.		Bumper	x6
T.		Screw Ø6 x 19 mm	x10
U.		Wedge	x10
V.		Sticker	x4

What you need:



Phillips Head Screwdriver

You may also need:

+ Level

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

COMPONENTS

1	Top panel	x1
4	Right divider panel	x1
5	Left divider panel	x1
9	Back vertical panel	x2
10	Side support panel	x2

HARDWARE

A	Cambolt Ø6 x 32 mm	x10
D	Dowel Ø7.8 x 32 mm	x24

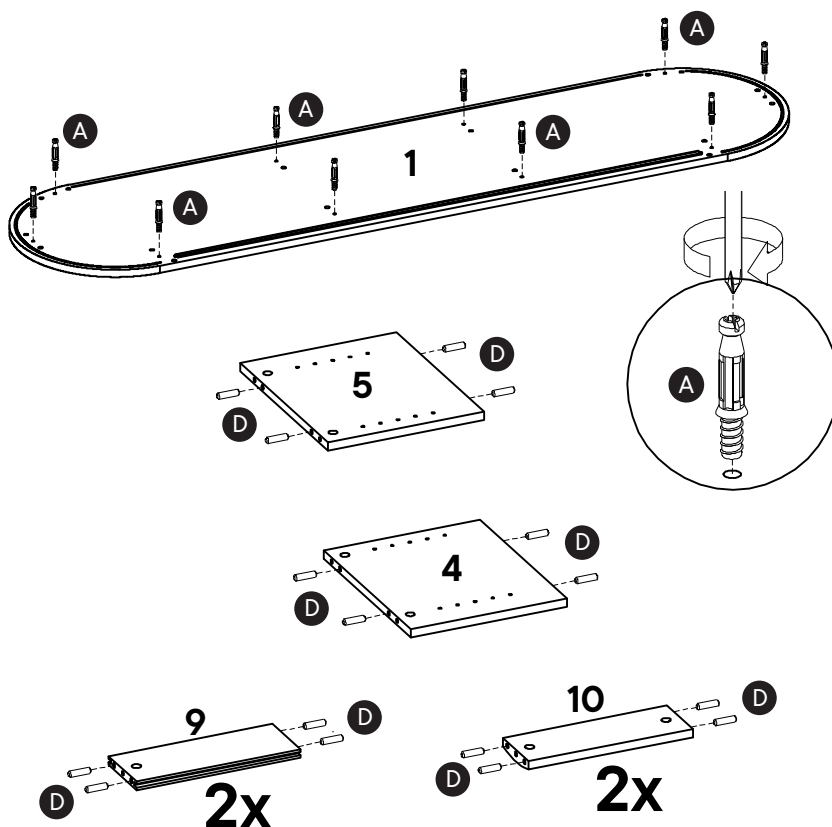


Step 2

COMPONENTS

1	Top panel	x1
4	Right divider panel	x1
5	Left divider panel	x1
9	Back vertical panel	x2
10	Side support panel	x2

HARDWARE

B	Camlock Ø15 x 12 mm	x8
C	Cover cap	x6

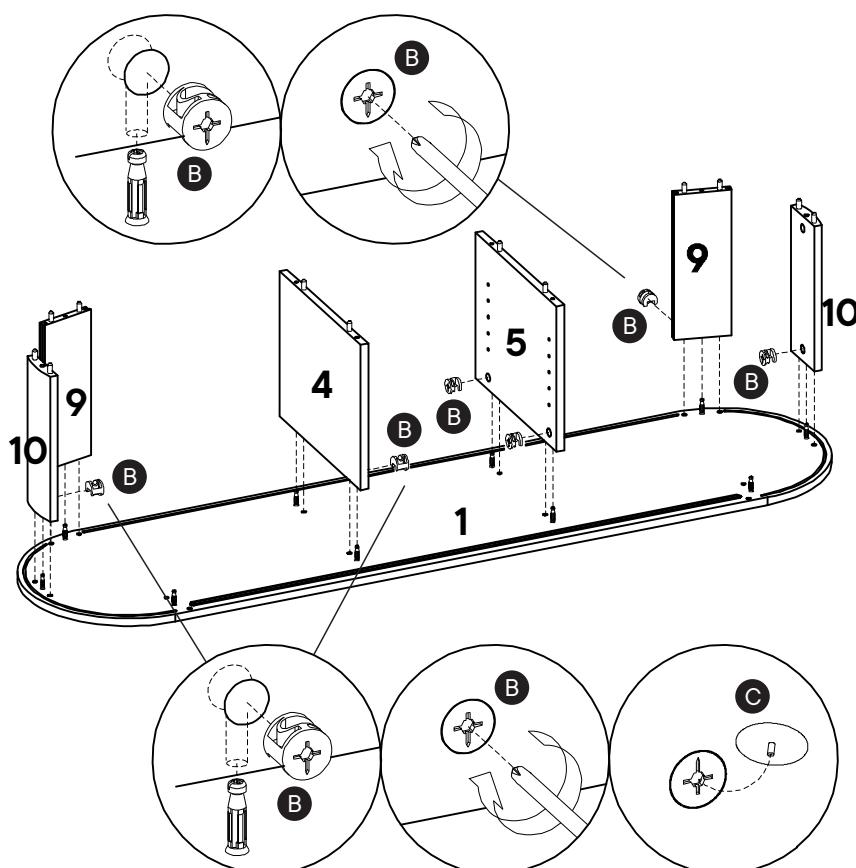


Step 3

COMPONENTS

7	Right vertical panel	x1
8	Left vertical panel	x1
15	Vertical front panel	x2

HARDWARE

A	Cambolt Ø6 x 32 mm	x4
D	Dowel Ø7.8 x 32 mm	x10

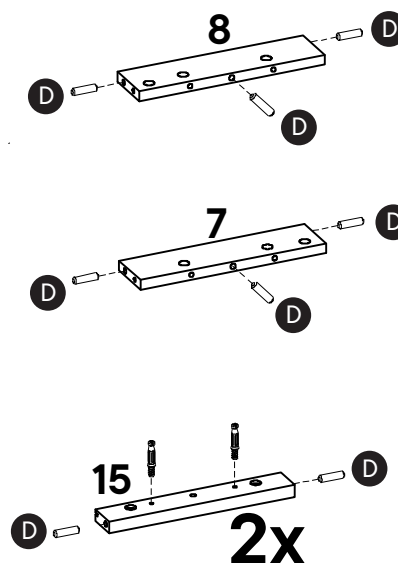



Step 4

COMPONENTS

7	Right vertical panel	x1
8	Left vertical panel	x1
15	Vertical front panel	x2
16	Front leg	x1

HARDWARE

B	Camlock Ø15 x 12 mm	x4
C	Cover cap	x4
N	Bolt M6 x 25 mm	x4
K	Allen key	x1

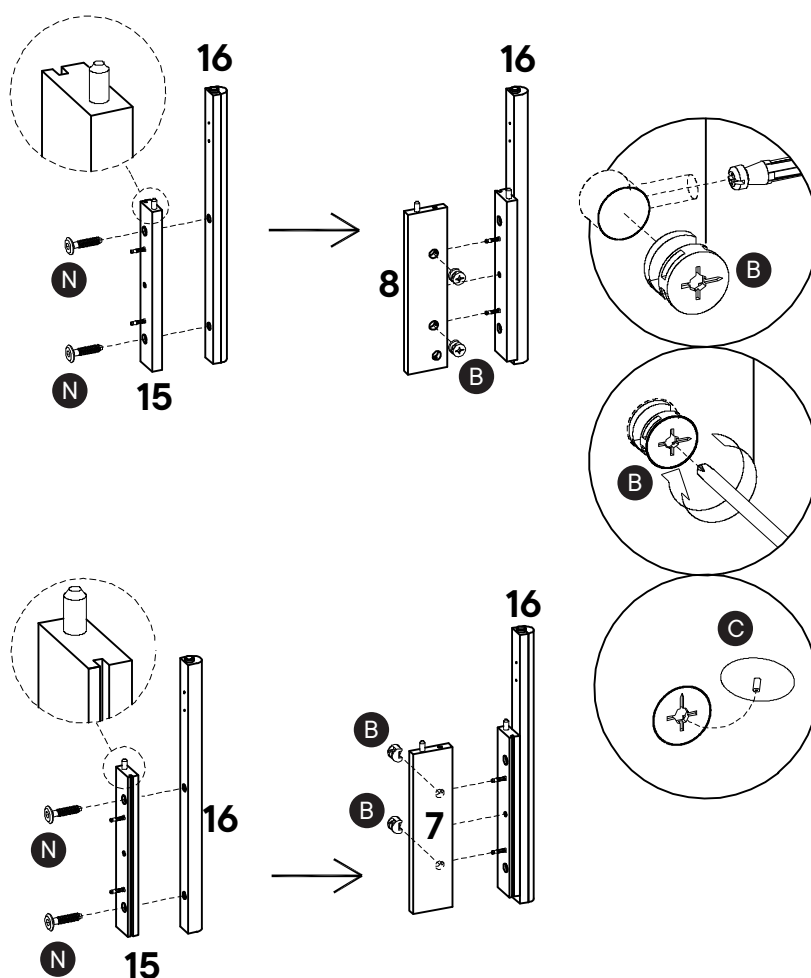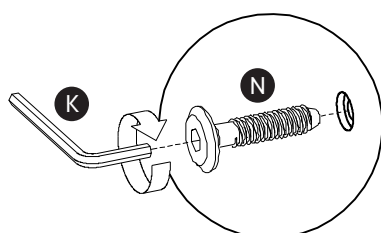

Step 5



COMPONENTS

16 Front leg x2

HARDWARE

B Camlock Ø15 x 12 mm x2


C Cover cap x2

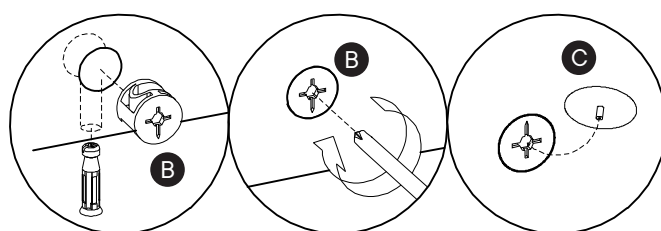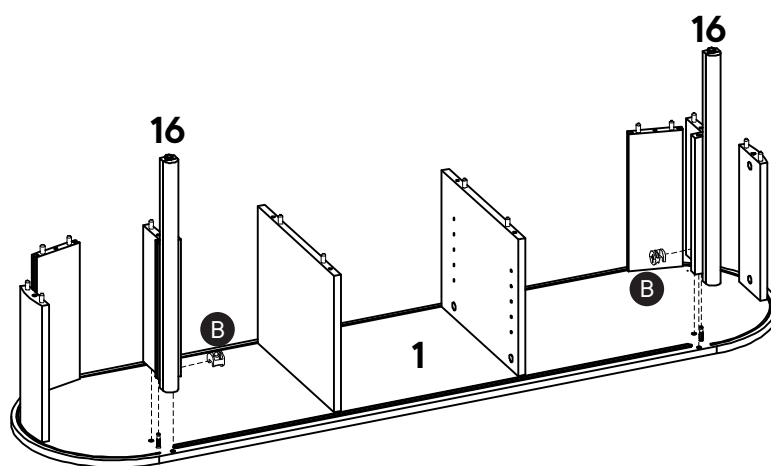

Step 6

COMPONENTS


3 Side panel x2

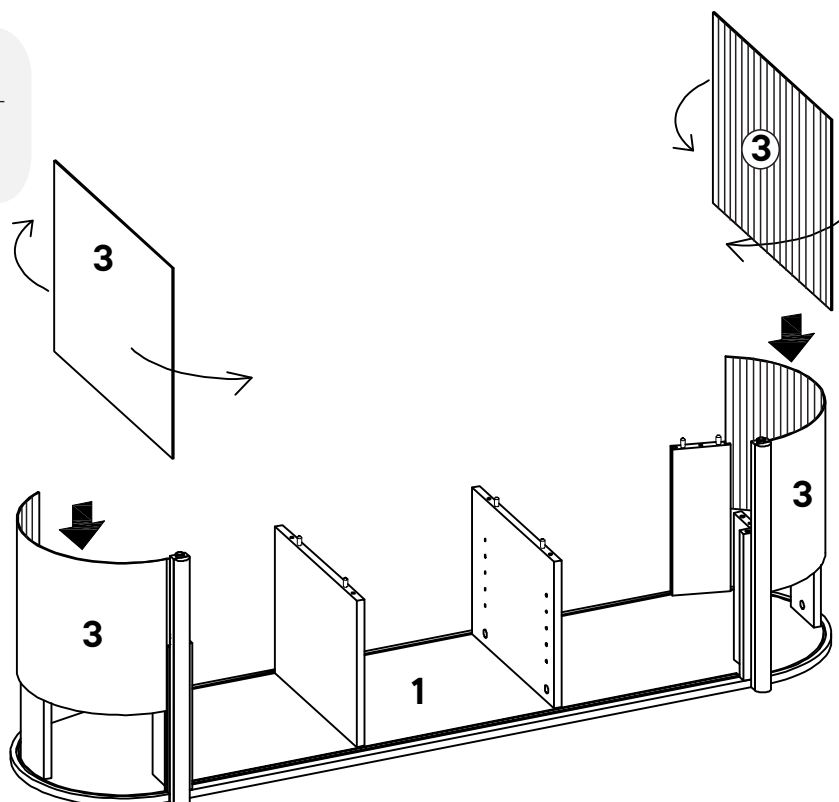

Step 7

COMPONENTS

20	Back panel	x1
----	------------	----

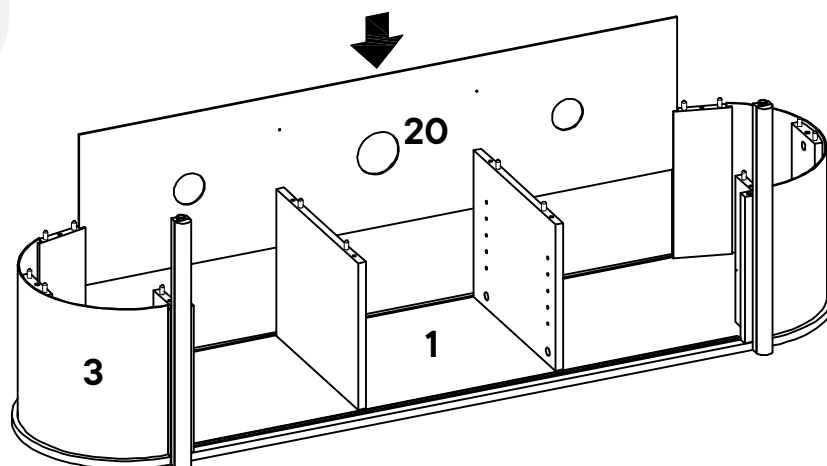


Step 8

COMPONENTS

2	Bottom panel	x1
21	Door panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x16
R	Pin	x8

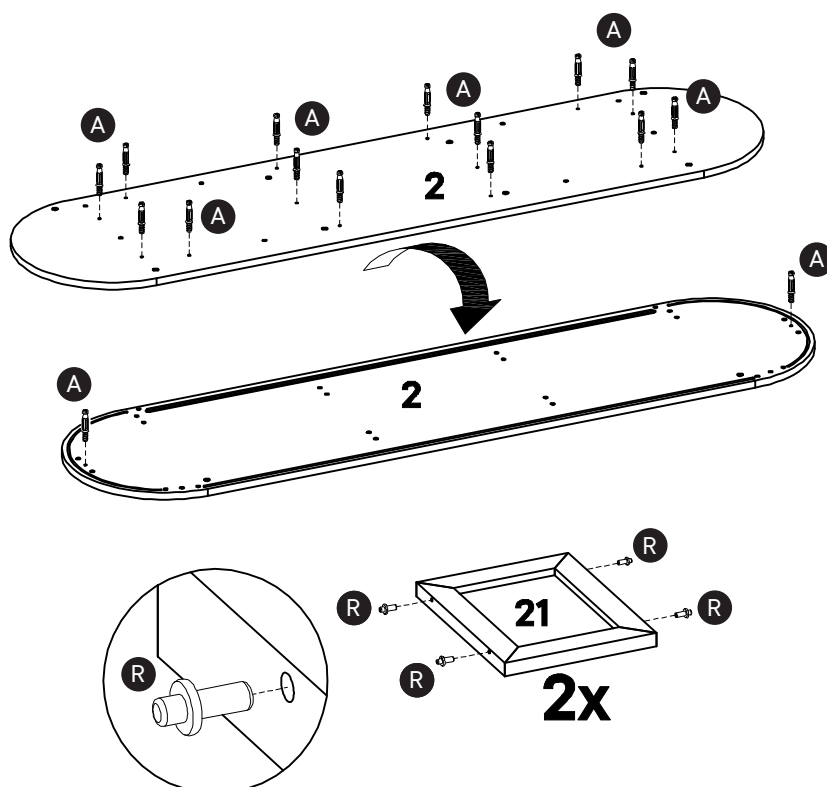


Step 9

COMPONENTS

2	Bottom panel	x1
21	Door panel	x2

HARDWARE


B	Camlock Ø15 x 12 mm	x2
----------	---------------------	----

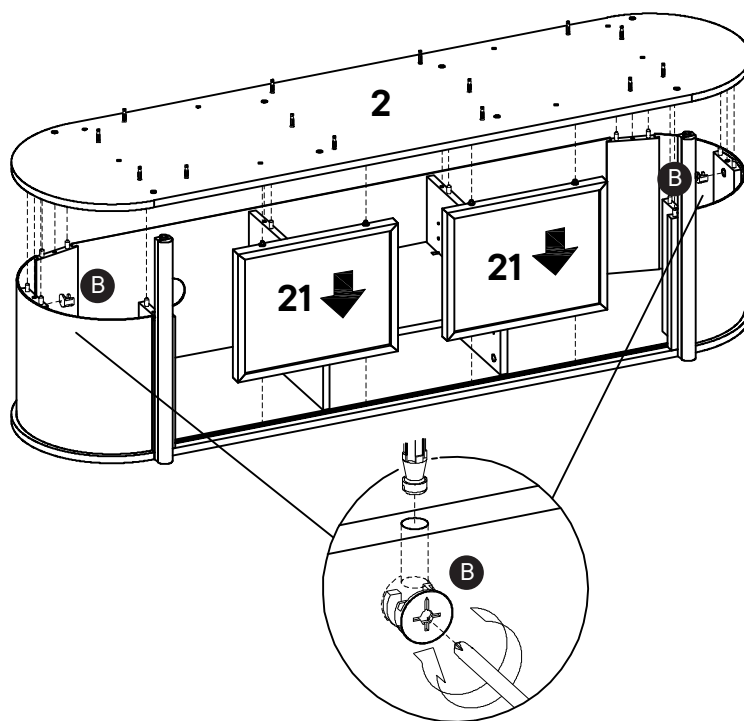

Step 10

HARDWARE

G	Assembly screw	x8
----------	----------------	----

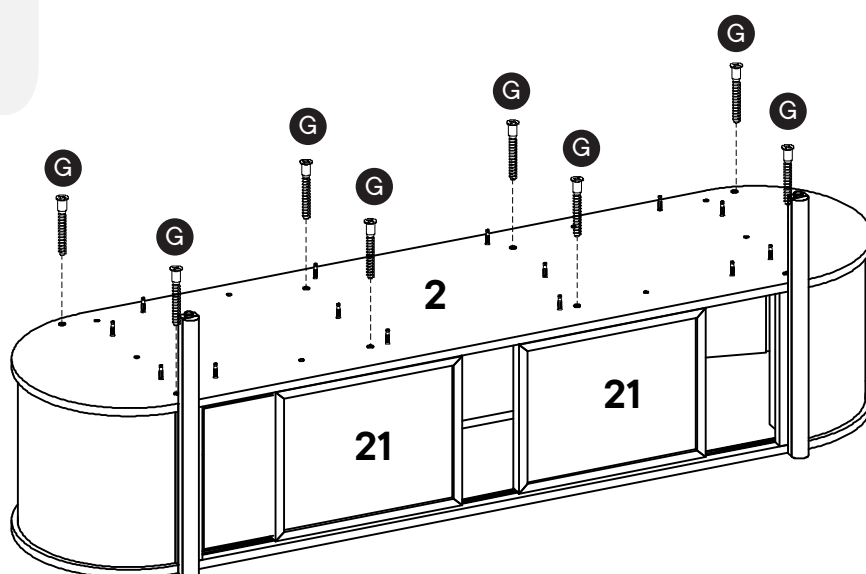


Step 11

COMPONENTS

11	Bottom apron panel	x1
12	Back support bottom panel	x1
13	Right support bottom panel	x1
14	Left support bottom panel	x1
17	Right bottom support	x1
18	Left bottom support	x1
19	Middle bottom support	x2

HARDWARE

A	Cambolt $\varnothing 6 \times 32$ mm	x4
D	Dowel $\varnothing 7.8 \times 32$ mm	x16
E	Connecting bolt	x2
L	Adjustable leveller	x2
M	Barrel nut	x2

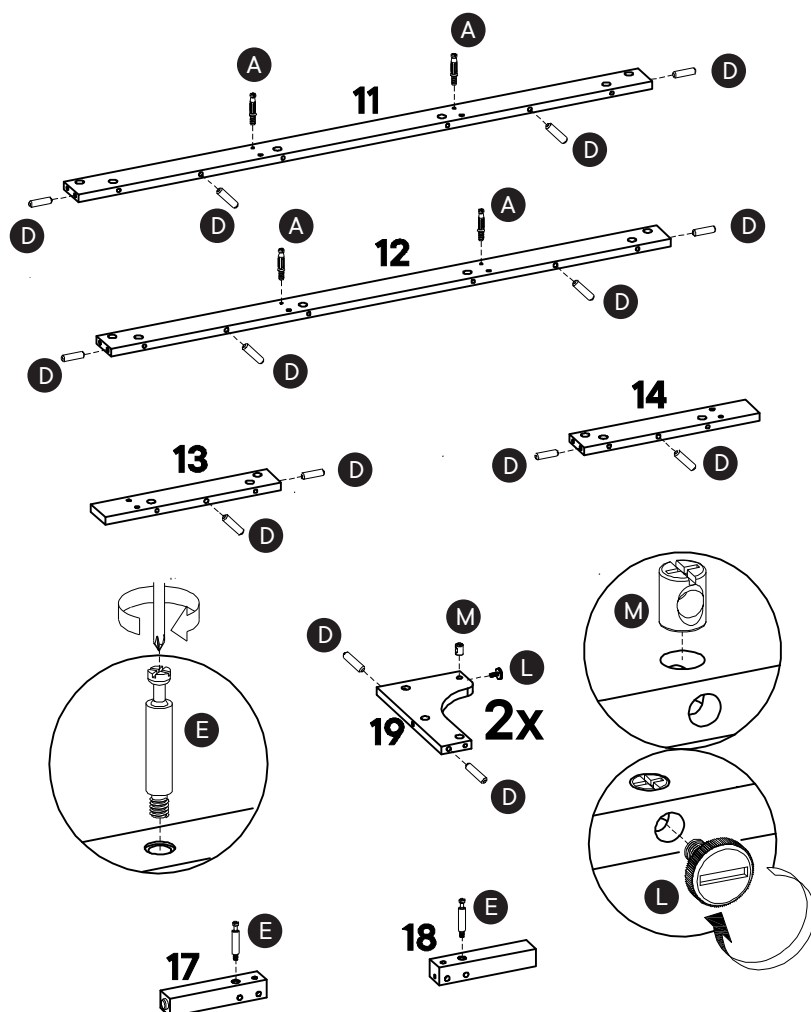


Step 12

COMPONENTS

13	Right support bottom panel	x1
14	Left support bottom panel	x1
17	Right bottom support	x1
18	Left bottom support	x1

HARDWARE

F	Connecting nut	x2
O	Bolt M6 x 60 mm	x2
K	Allen key	x1

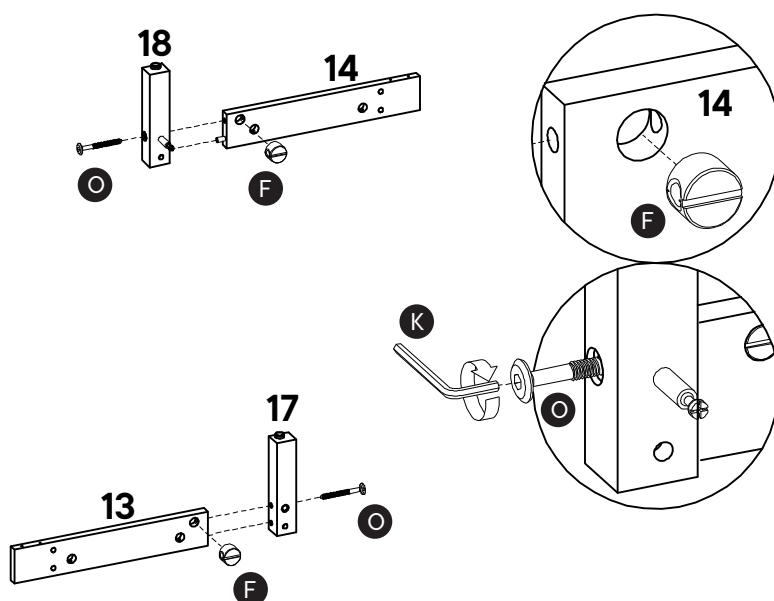


Step 13

COMPONENTS

11	Bottom apron panel	x1
12	Back support bottom panel	x1
19	Middle bottom support	x2

HARDWARE


B	Camlock Ø15 x 12 mm	x4
---	---------------------	----

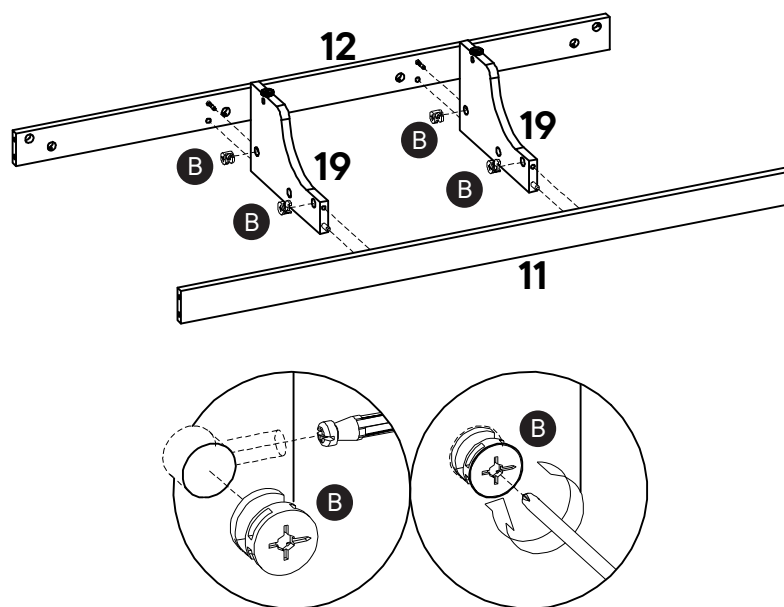

Step 14

HARDWARE


B	Camlock Ø15 x 12 mm	x2
F	Connecting nut	x2
K	Allen key	x1
P	Bolt M6 x 50 mm	x2
V	Sticker	x2

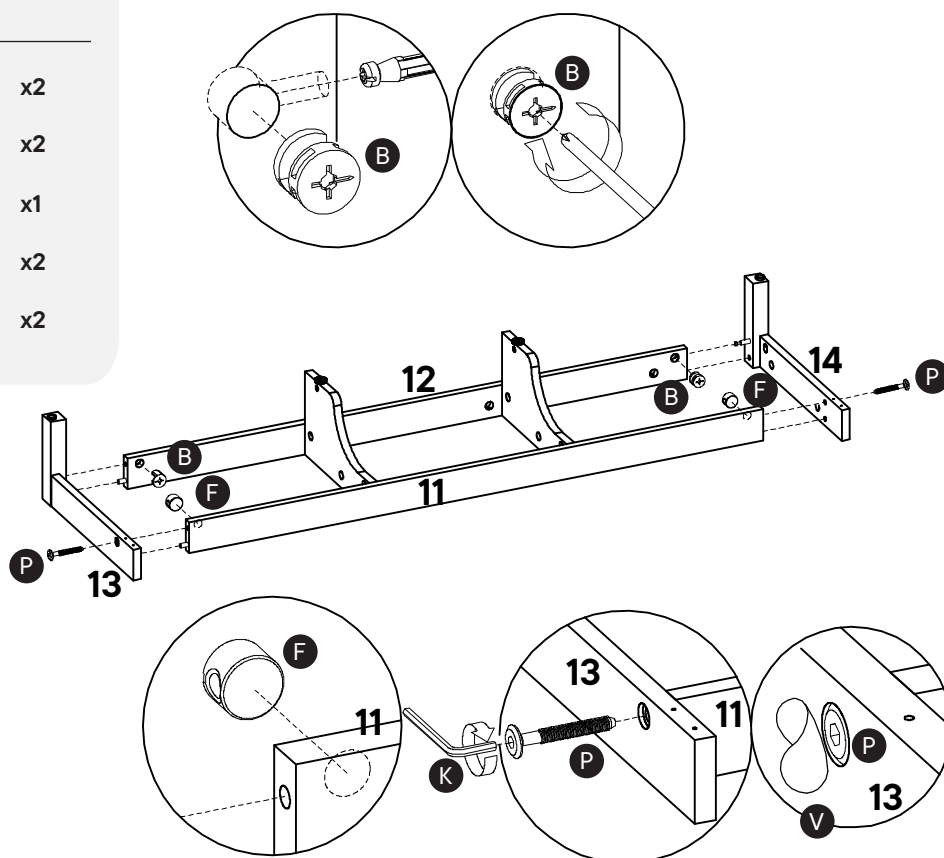

Step 15

HARDWARE

B Camlock Ø15 x 12 mm x14

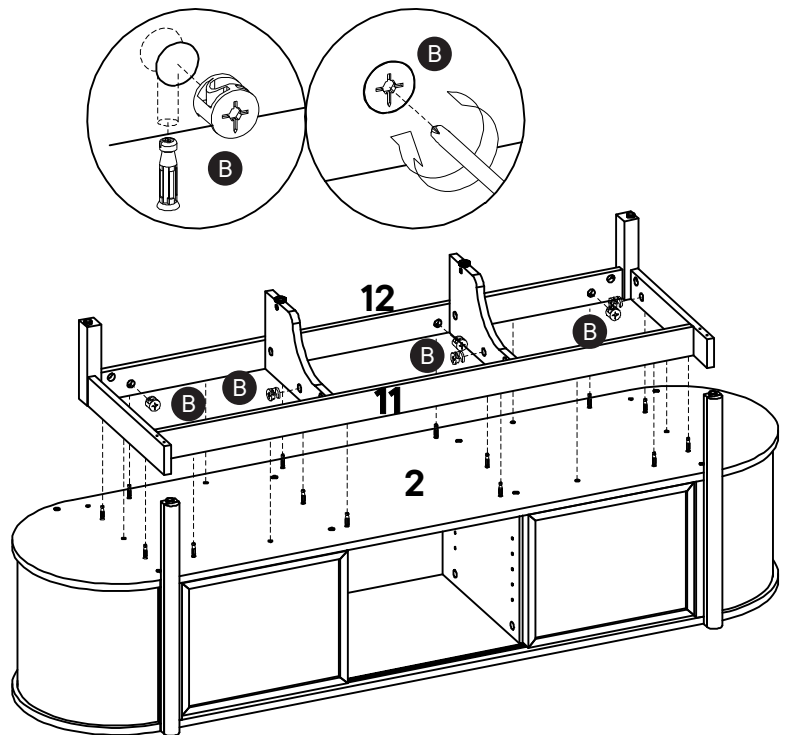


Step 16

HARDWARE

H Plat support x2



I Screw Ø6 x 12 mm x8

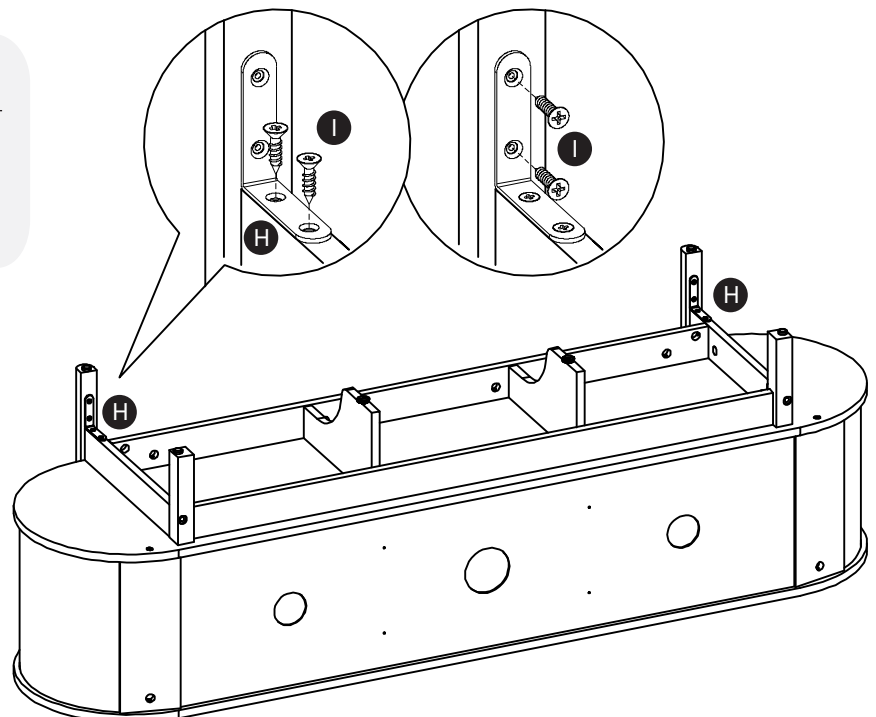

Step 17

HARDWARE




J	Screw Ø4 x 12 mm	x4
T	Screw Ø6 x 19 mm	x10
U	Wedge	x10

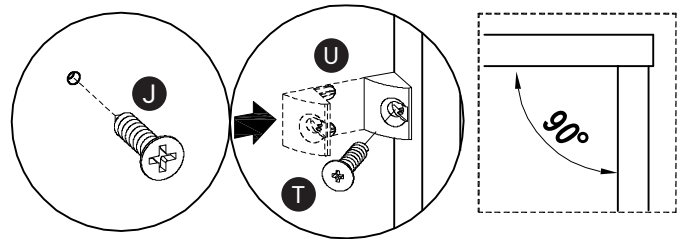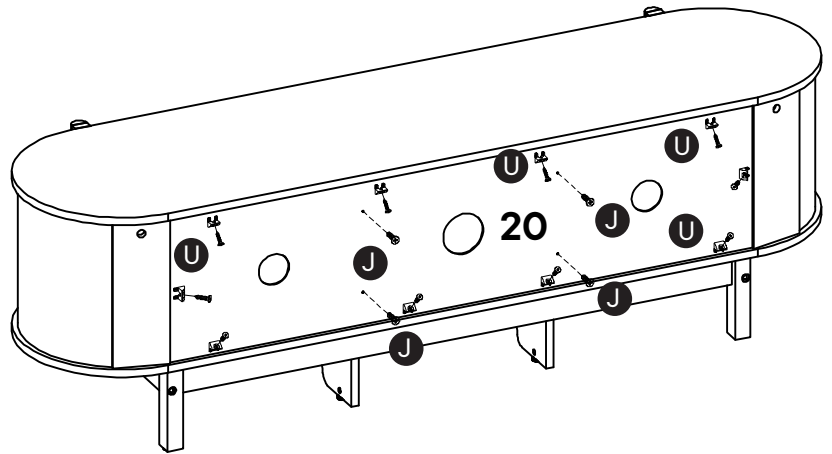

Step 18

HARDWARE


G	Assembly screw	x2
V	Sticker	x2

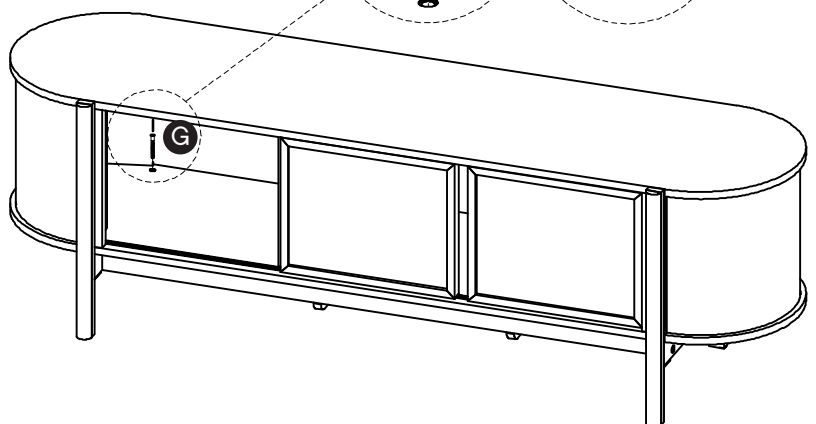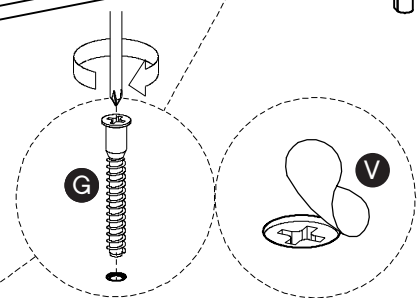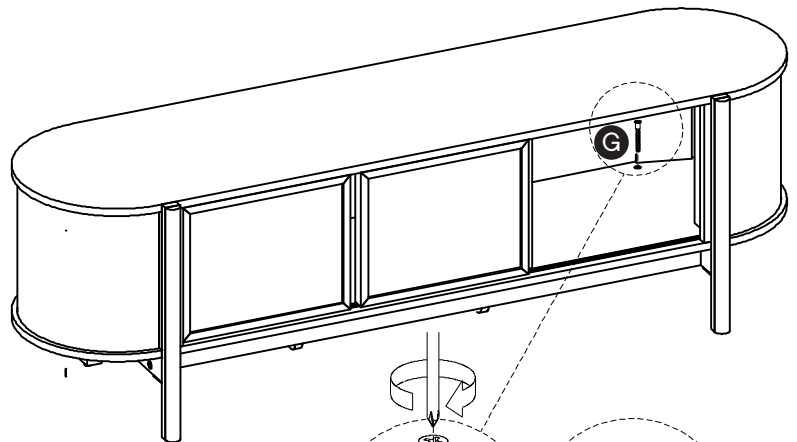

Step 19

HARDWARE


S Bumper x6

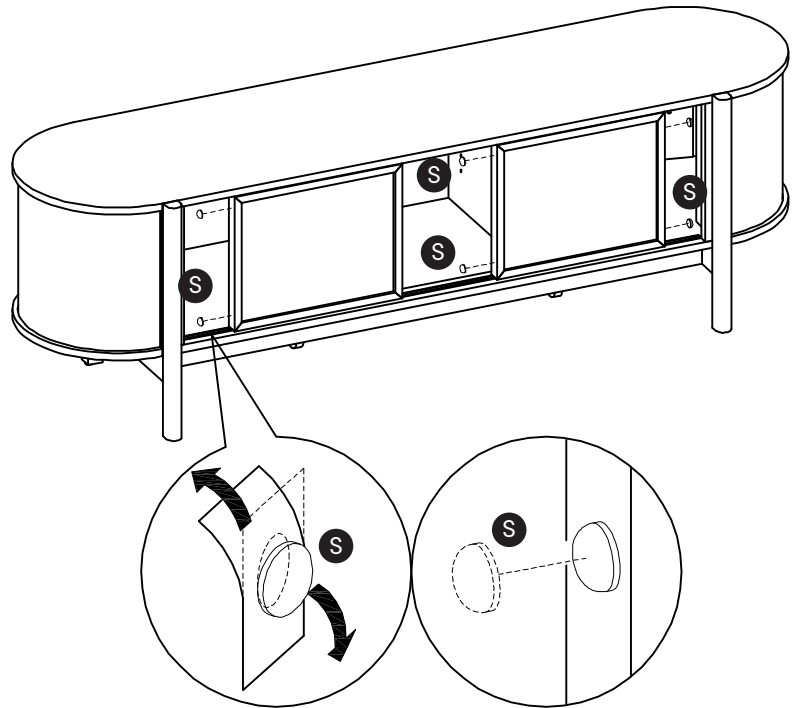

Step 20

HARDWARE

Q Shelf pin x4

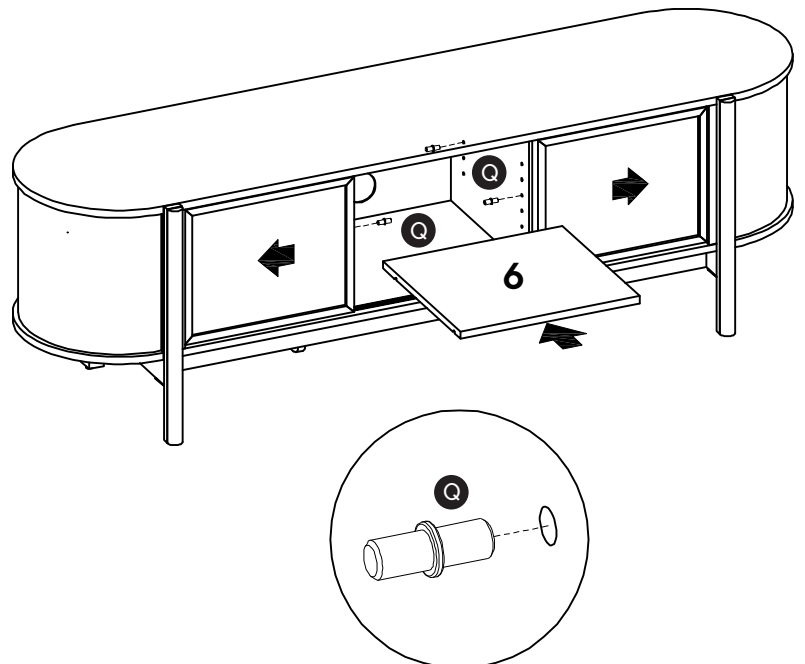

Great job!

Your TV Stand is complete.




CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

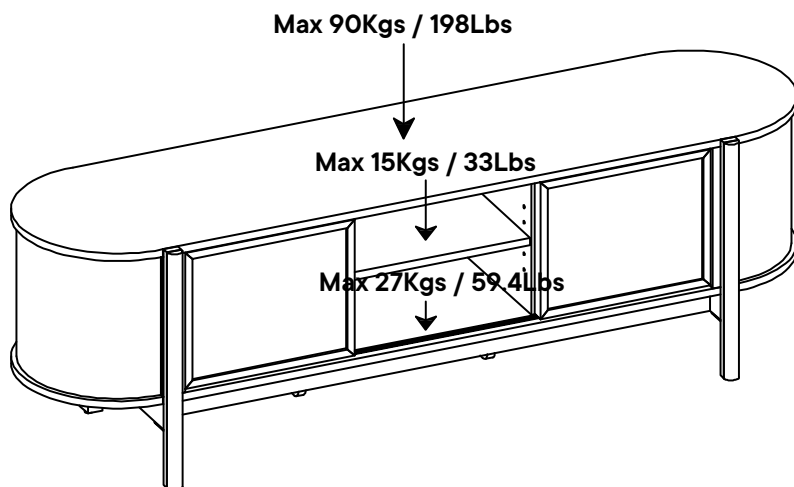

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway** for a chance to be featured.