


ASSEMBLY INSTRUCTIONS

EEI-6965

V0.03.18.24

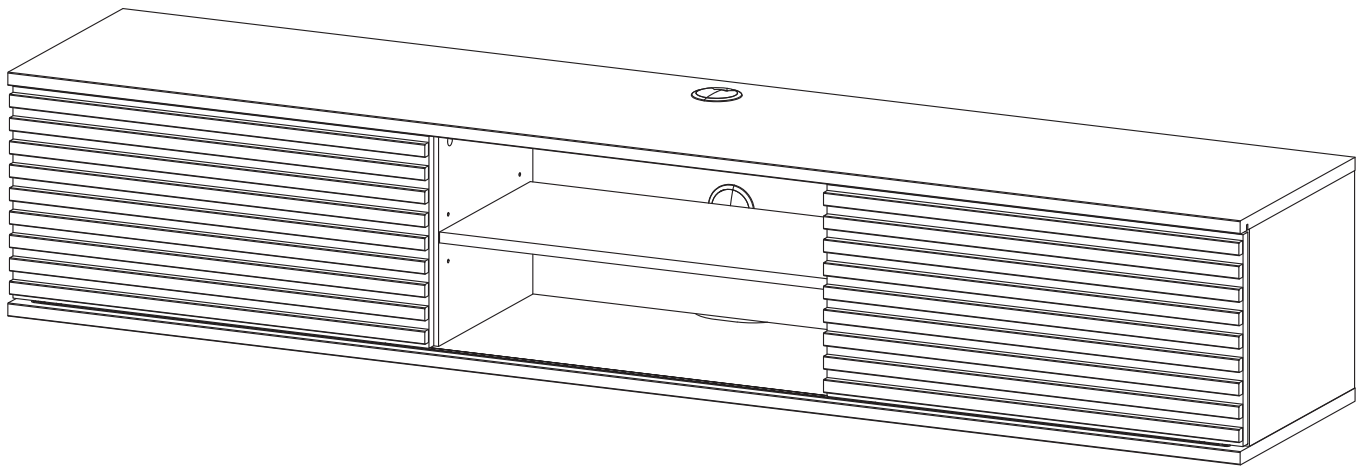

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1
2	Bottom Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board Left	x1
6	Center Board Right	x1
7	Adjustable Shelf	x1
8	Door	x2
9	Back Board	x1

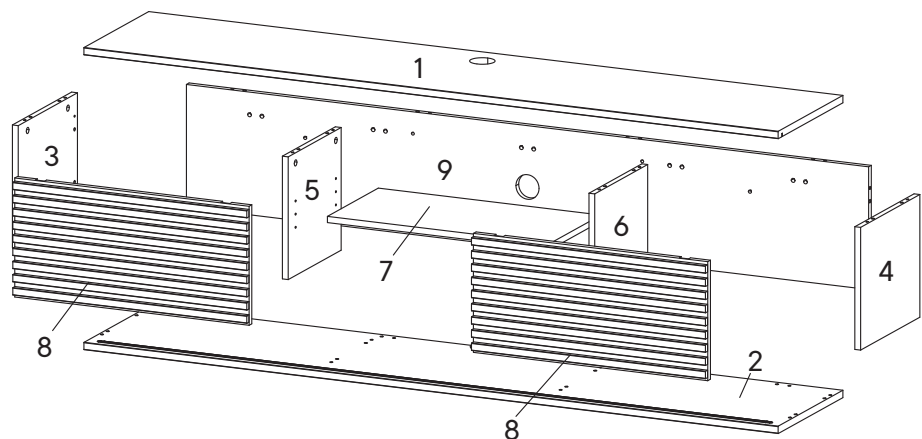

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x16
B		Cam Lock Ø15 mm	x16
C		Wood Dowel Ø8 x 30 mm	x28
D		Screw M 7 x 50 mm	x16
E		Allen Key	x2
F		Wall Mounted Bolt	x2
G		Grommet Cover	x2
H		Silicon Bumper	x1
I		Shelf Pin	x4

J		Screw M 3.5 x 13 mm	x16
K		Sliding Top	x4
L		Sliding Bottom	x4
M		Stopper	x2
N		Screw M 6 x 15 mm	x10
O		JCN Nut	x10
P		Wall Plug	x9
Q		Screw 5.5 x 45 mm	x9
PA05		Short Bracket	x5

PA15		Long Bracket	x1
------	--	--------------	----

What you need:

	Phillips Head Screwdriver
--	---------------------------

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com





Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4
- C** Wood Dowel Ø8 x 30 mm x20

COMPONENTS


- 3** Side Board Left x1
- 4** Side Board Right x1
- 9** Back Board x1

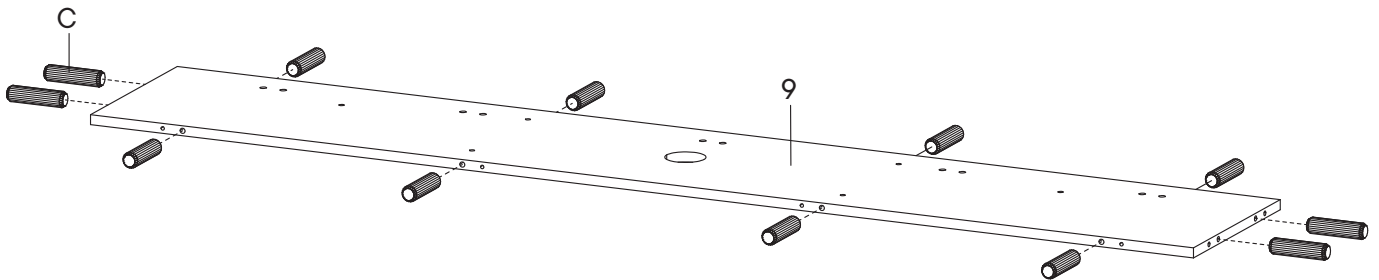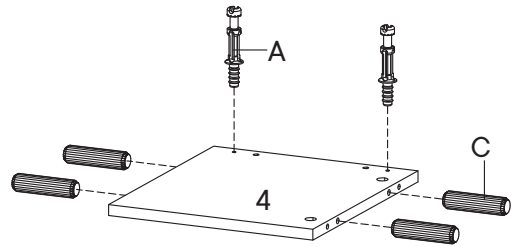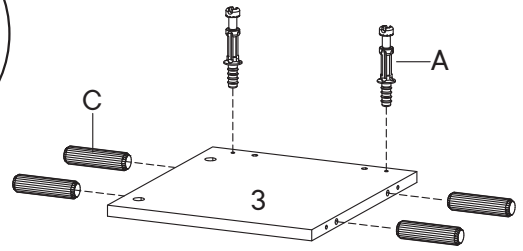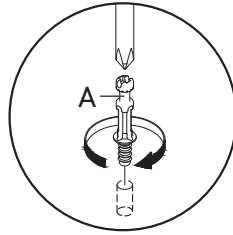

Step 2

COMPONENTS

- 3** Side Board Left x1
- 4** Side Board Right x1
- 9** Back Board x1

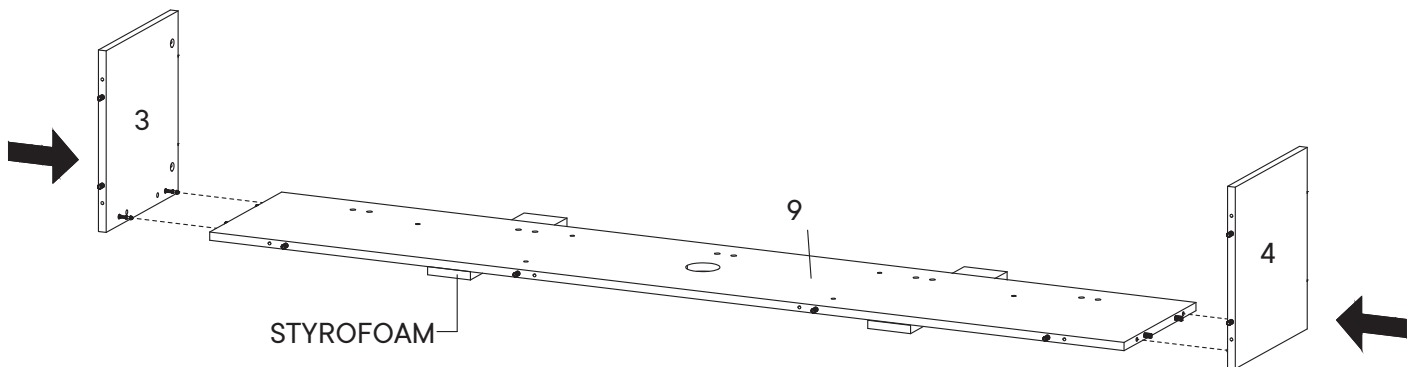


Step 3

HARDWARE

- D** Screw M 7 x 50 mm x8
- E** Allen Key x1

COMPONENTS

- 2** Bottom Board x1

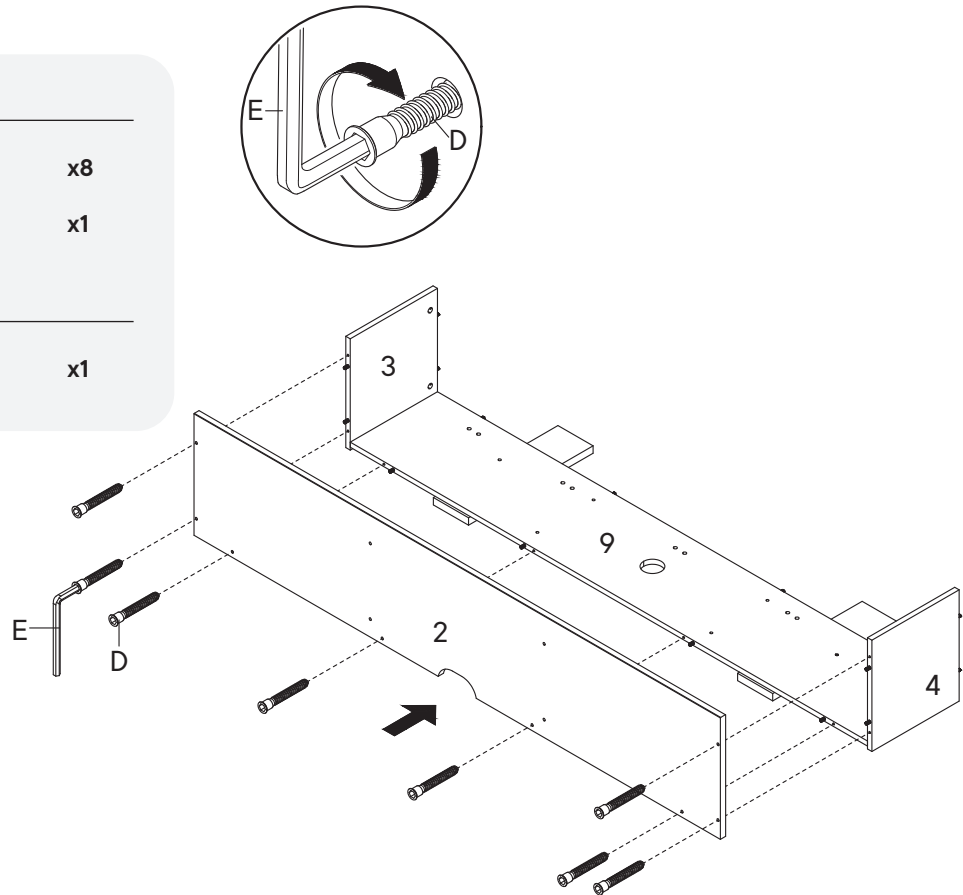



Step 4

HARDWARE

- C** Wood Dowel Ø8 x 30 mm x8

COMPONENTS

- 5** Center Board Left x1
- 6** Center Board Right x1

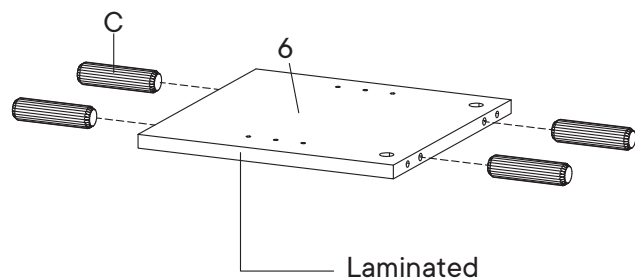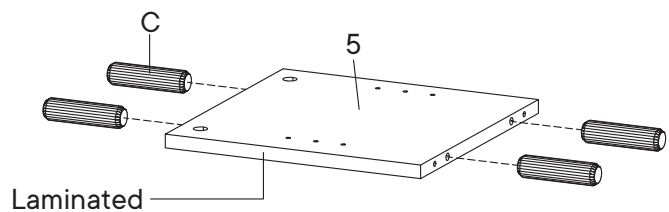



Step 5

HARDWARE

- D** Screw M 7 x 50 mm x4
- E** Allen Key x1

COMPONENTS



- 5** Center Board Left x1
- 6** Center Board Right x1

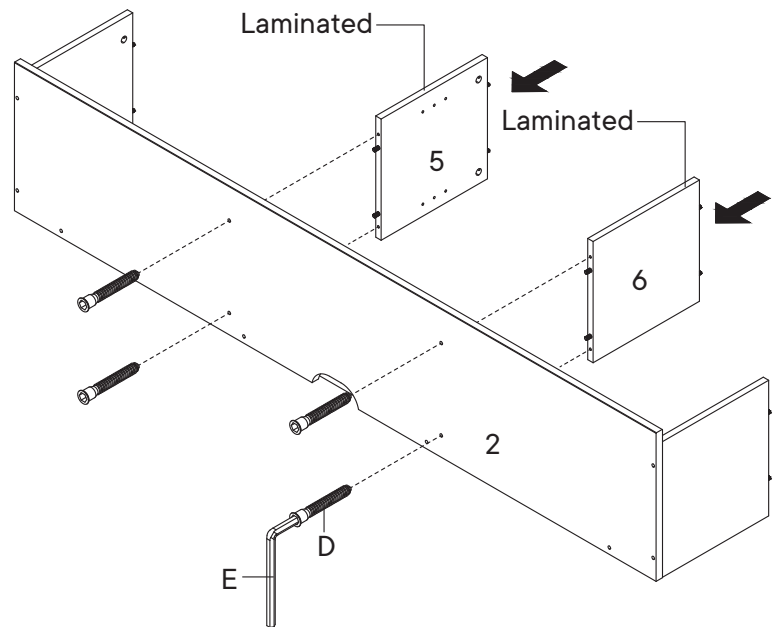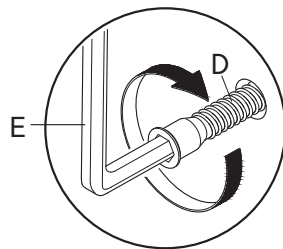

Step 6

HARDWARE


- D** Screw M 7 x 50 mm x4
- E** Allen Key x1

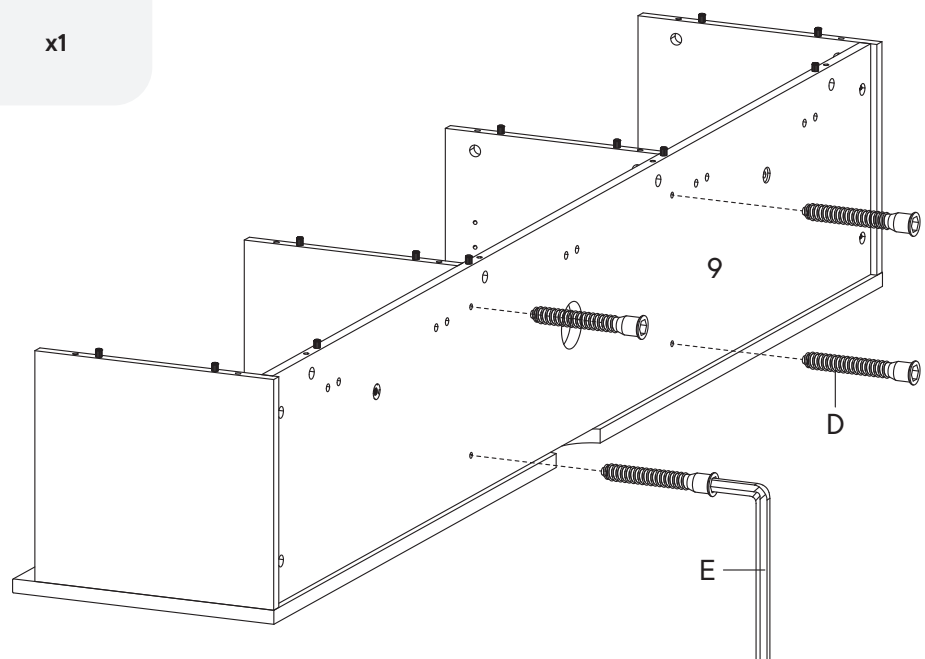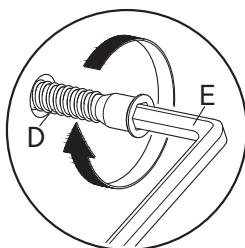

Step 7

HARDWARE

E	Allen Key	x2
N	Screw M 6 x 15 mm	x10
O	JCN Nut	x10
PA05	Short Bracket	x5

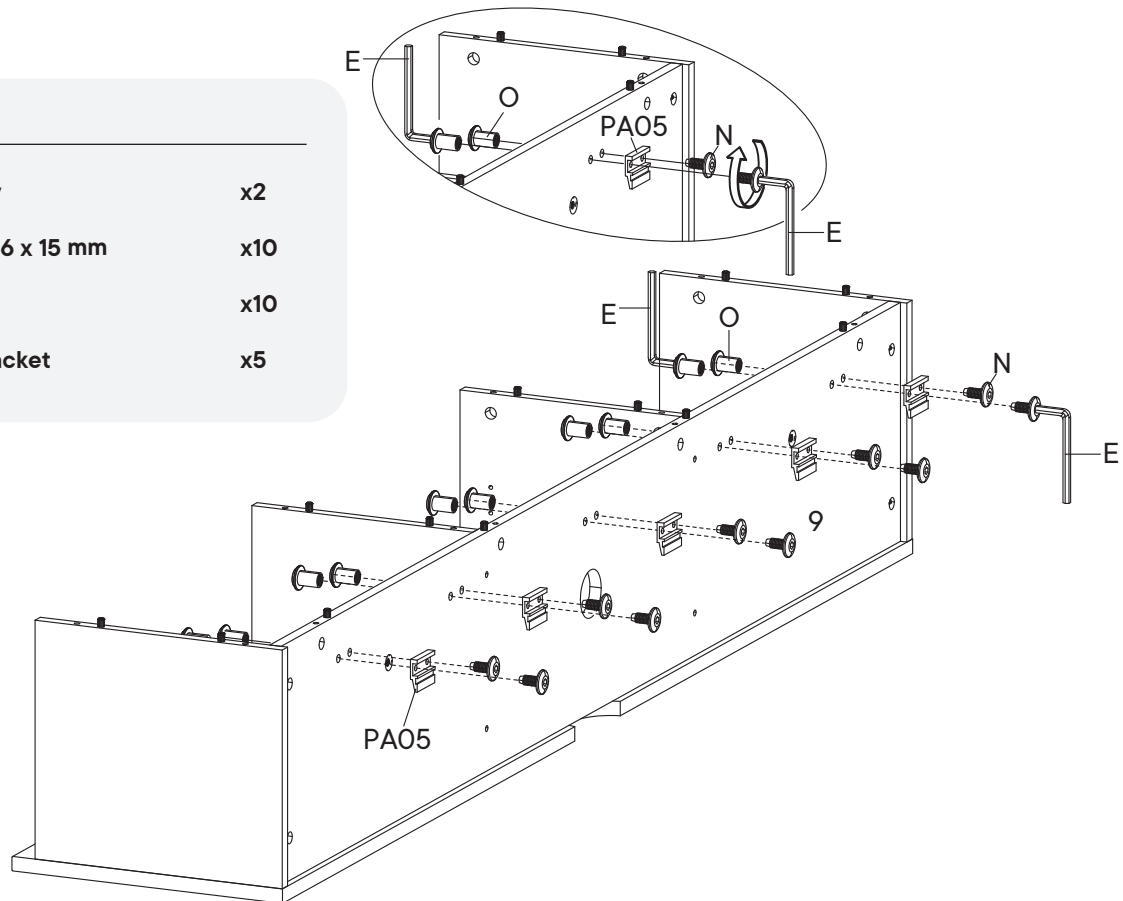


Step 8

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x12
----------	---------------------	-----

COMPONENTS

1	Top Board	x1
----------	-----------	----

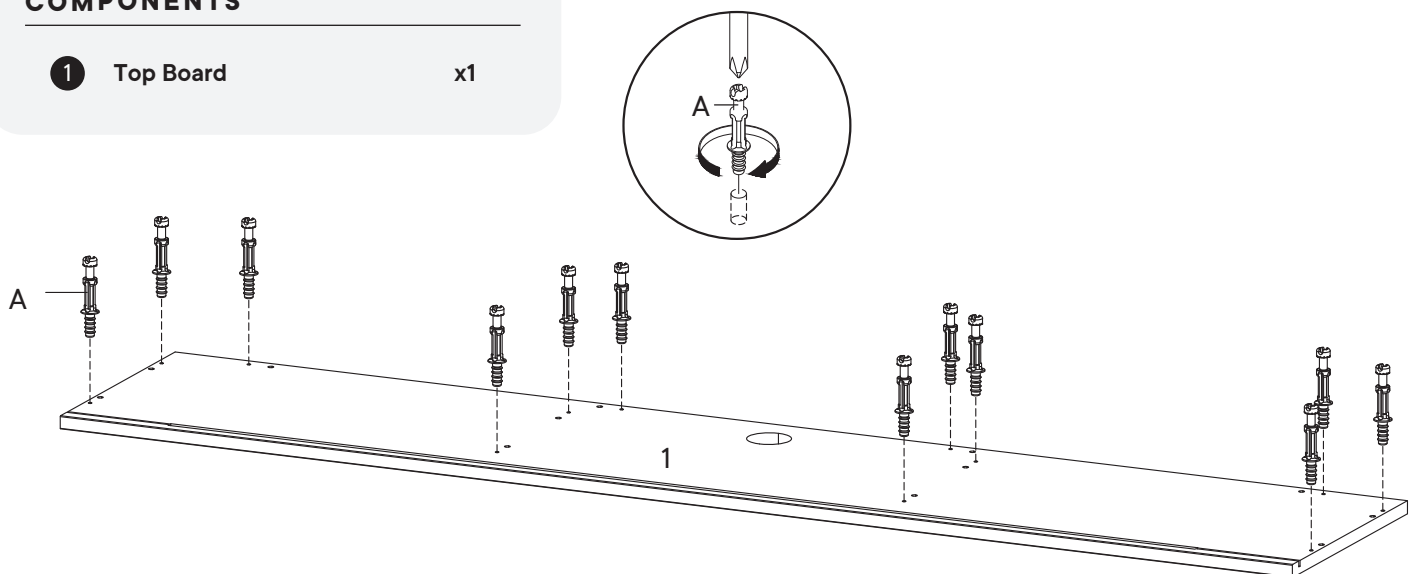


Step 9

HARDWARE

B Cam Lock Ø15 mm x8

COMPONENTS


1 Top Board x1

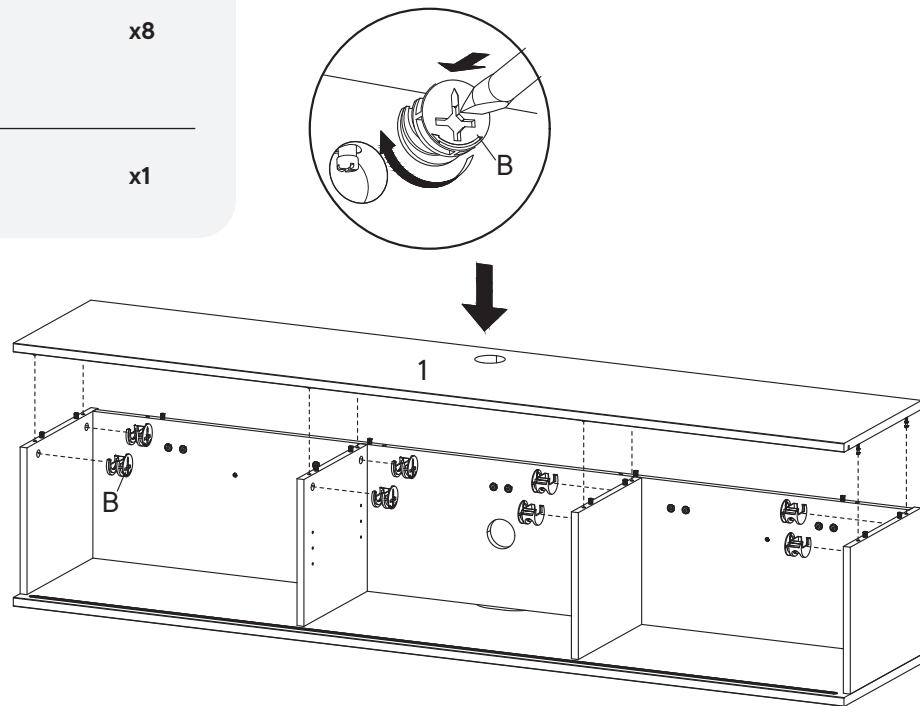

Step 10

HARDWARE


B Cam Lock Ø15 mm x8

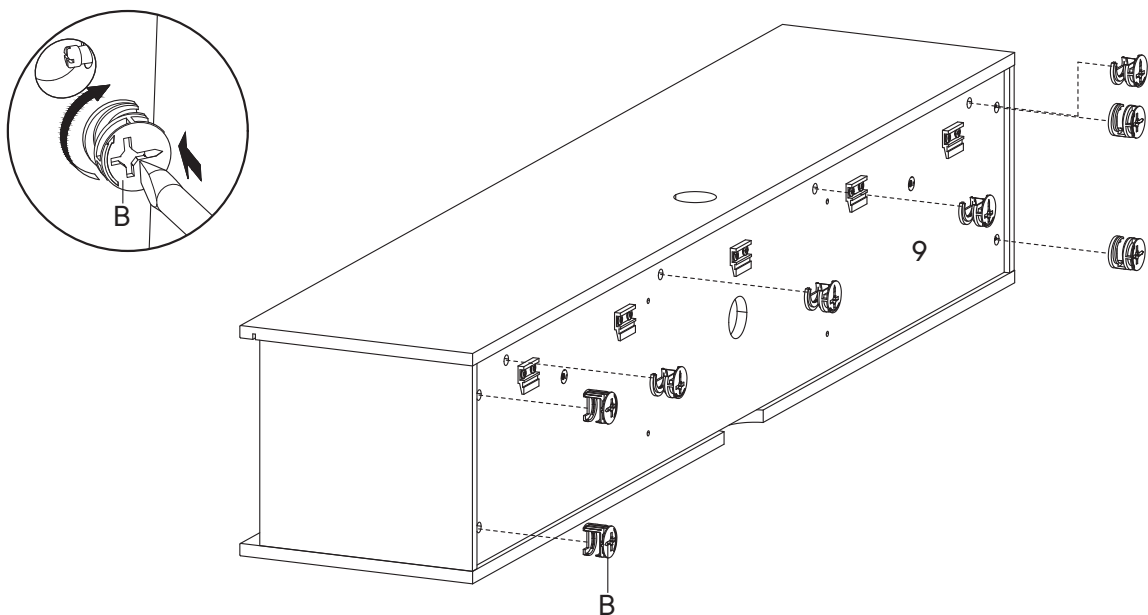

Step 11

Determine your desired (Y) height, then subtract by 113 mm.

This is the drill holes height from the floor (Z).

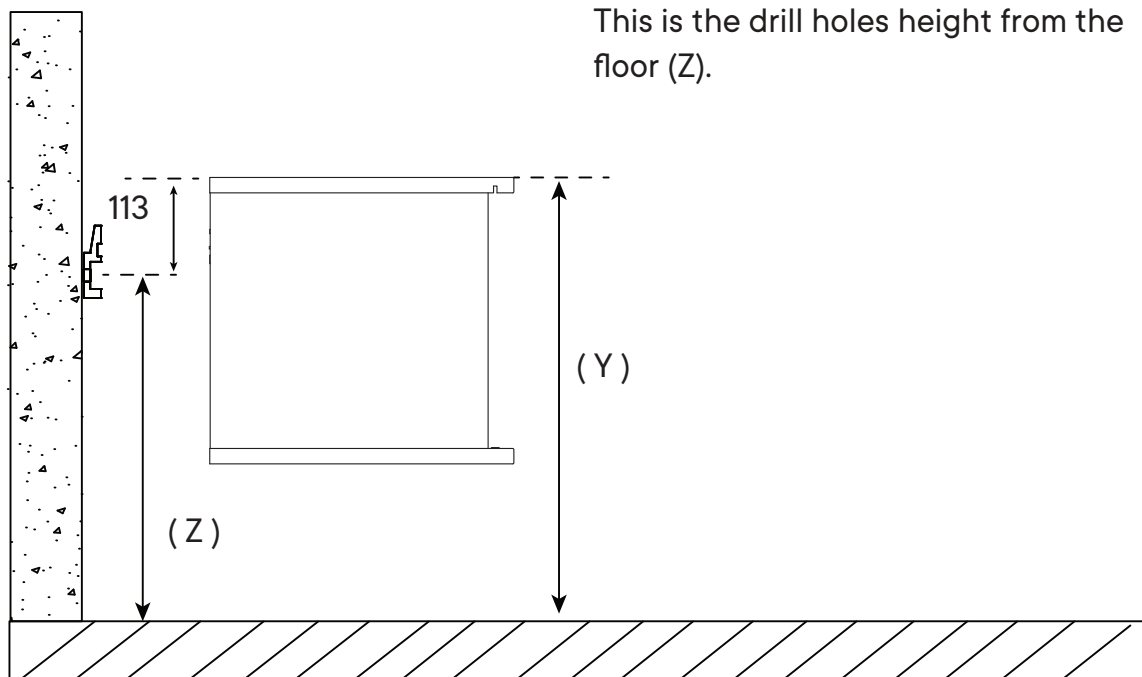


Step 12

HARDWARE


Q	Screw 5.5 x 45 mm	x7
P	Wall Plug	x7
PA15	Long Bracket	x1

Different wall materials require unique wall fasteners. The wall plugs (P) and screws (Q) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

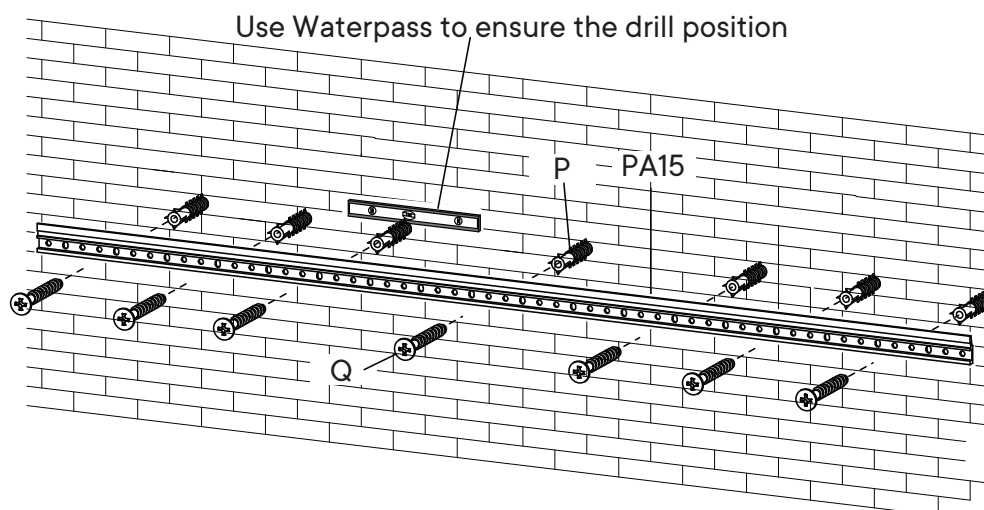


Step 13

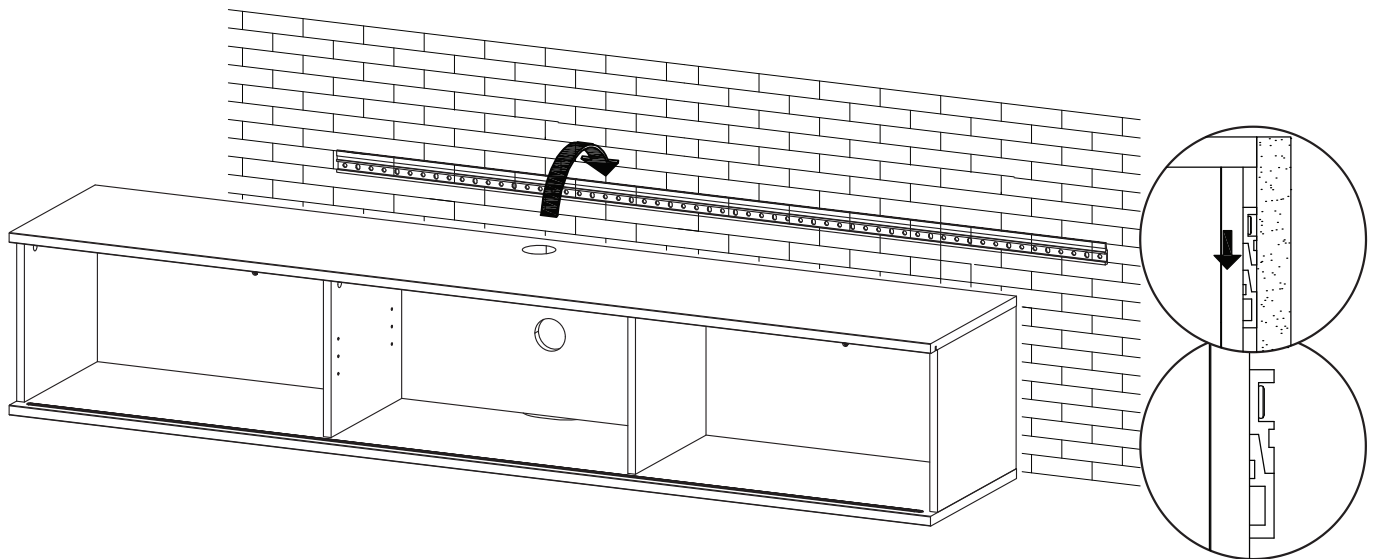

Step 14

HARDWARE


- | | | |
|----------|-------------------|----|
| F | Wall Mounted Bolt | x2 |
| G | Grommet Cover | x2 |

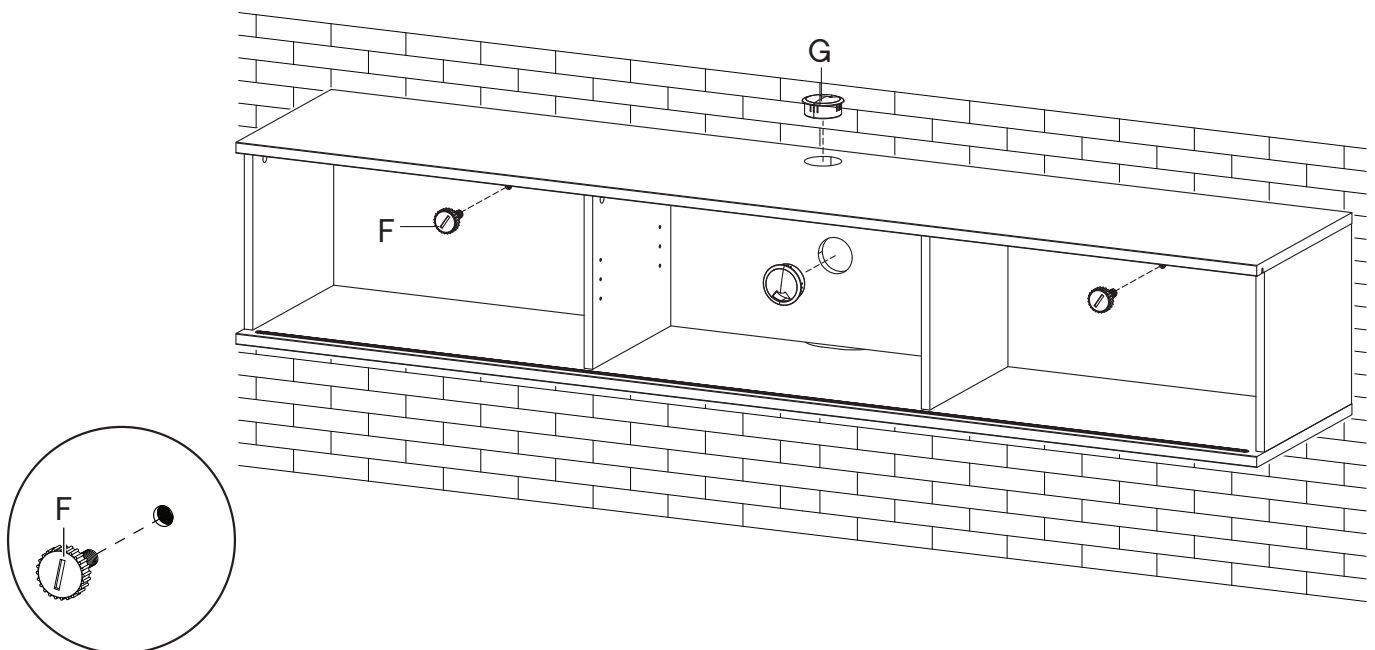

Step 15

HARDWARE

- I** Shelf Pin x4

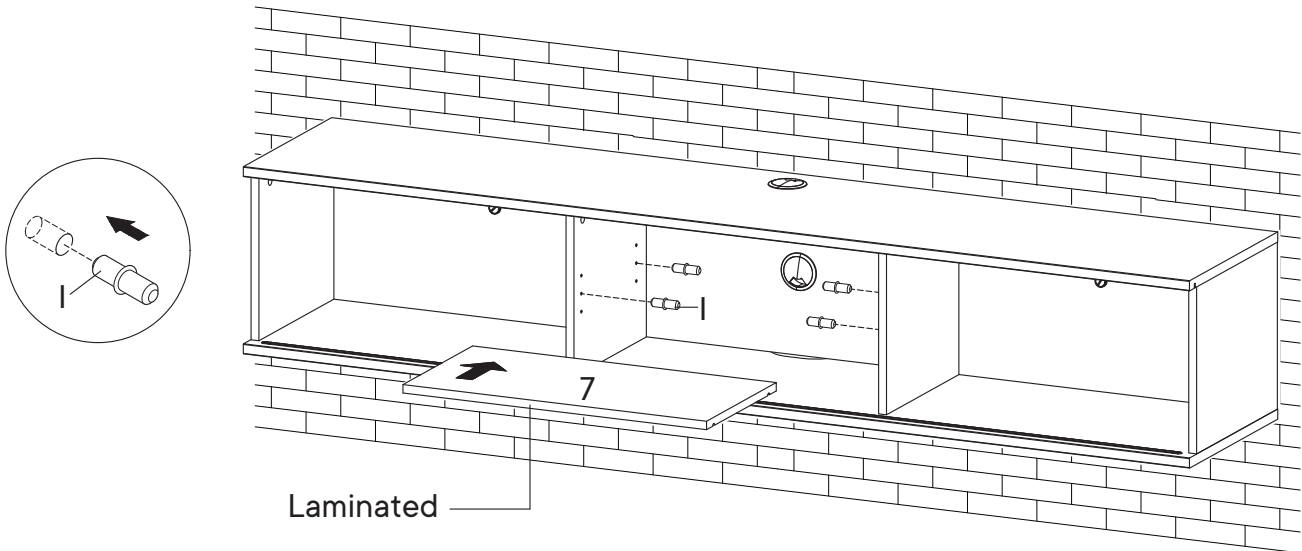


Step 16

HARDWARE

- J** Screw M 3.5 x 13 mm x16
K Sliding Top x4
L Sliding Bottom x4
M Stopper x2

COMPONENTS

- 8** Door x2

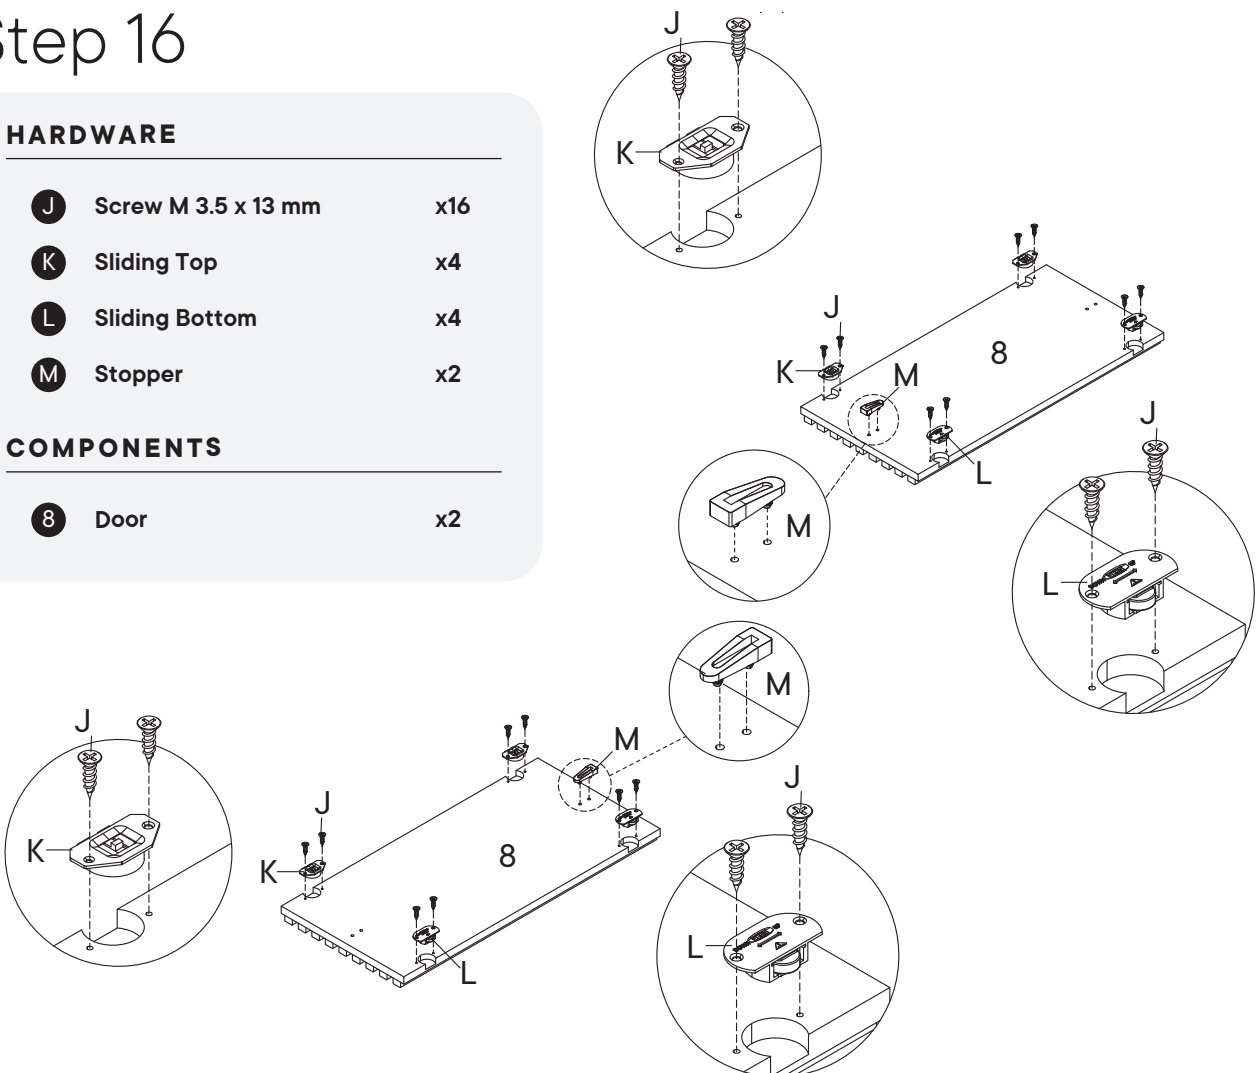


Step 17

HARDWARE

H Silicon Bumper x1

COMPONENTS

8 Door x2

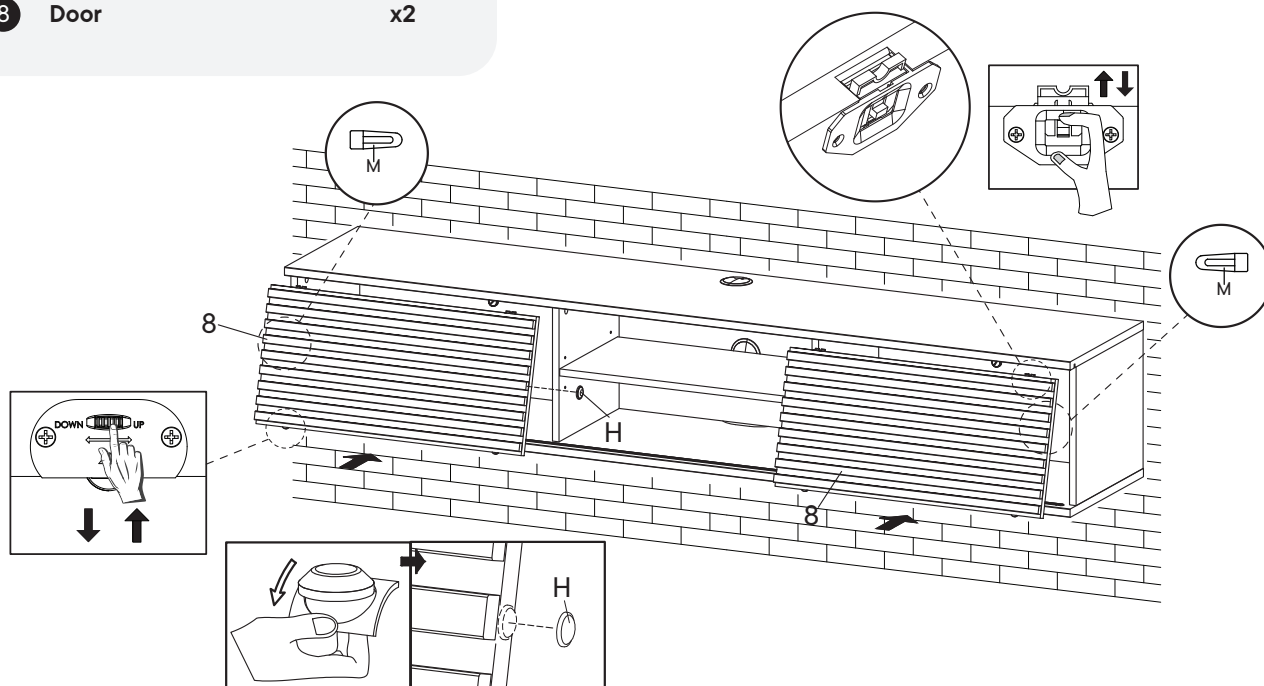

Great job!

TV Stand assembly is complete


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

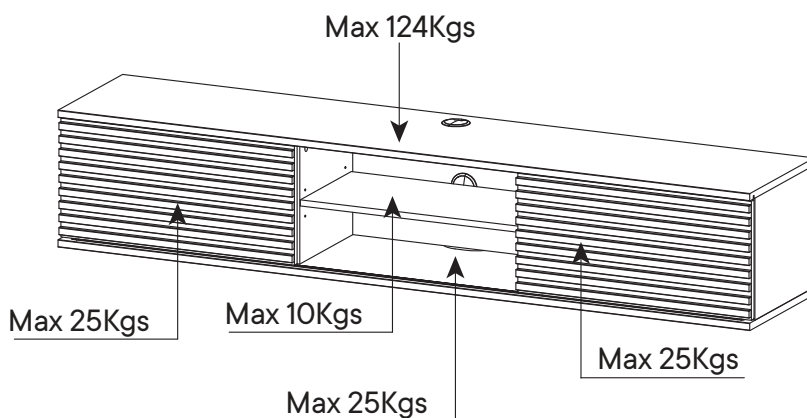

CONNECT WITH US!   

Tag us @modway_furniture and #modway for a chance to be featured.