


ASSEMBLY INSTRUCTIONS

EEI-6848

V0.01.01.24

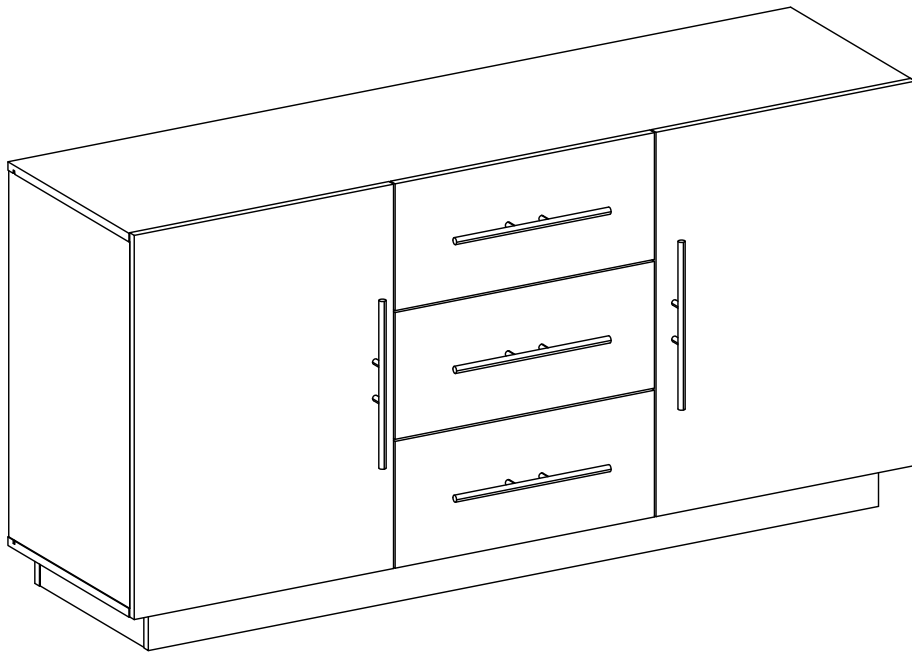

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:


1	Top Board	x1	9	Adjustable Shelf	x2
2	Bottom Board	x1	10	Front/Rear Support	x2
3	Left Board	x1	11	Side Rear Support	x4
4	Right Board	x1	12	Side Door	x2
5	Divider Left Board	x1	13	Front Drawer	x3
6	Divider Right Board	x1	14	Left Drawer	x3
7	Drawer Support	x1	15	Right Drawer	x3
8	Backboard	x2	16	Rear Drawer	x3
			17	Bottom Drawer	x3

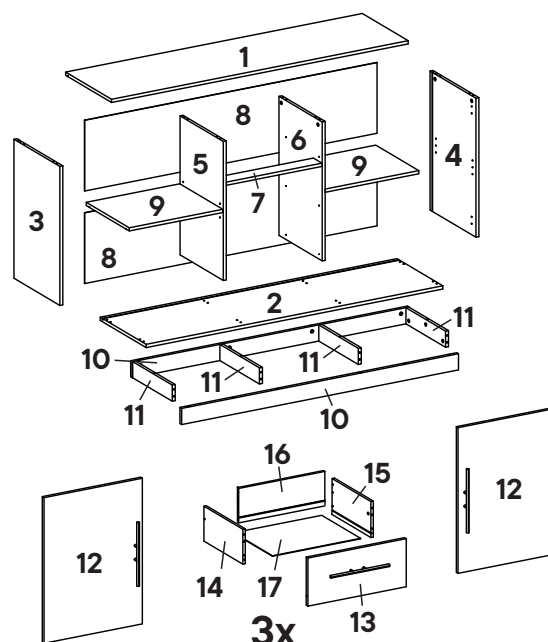

Provided hardware:

A		Cam Lock Ø15 mm	x30	J		Curve Door Hinge	x4
B		Cam Bolt Ø7.5 x 32 mm	x36	K		Drawer Rail	x3
C		Cam Sticker Ø17 mm	x36	L		Screw M4 x 22 mm	x10
D		Plastic Dowel M6 x 32 mm	x54	M		Handle	x5
E		Screw M10 x 33.5 mm	x14	N		Shelf Pin M7 x 16.5 mm	x8
F		Screw M6 x 13 mm	x12	O		Screw M4 x 19 mm	x16
G		Screw M4 x 8 mm	x12	P		Backply Stopper	x16
H		Screw M4 x 13 mm	x4	Q		Cam Lock Ø12 mm	x6
I		H-Profile	x1	R		Cam Cover Ø15 mm	x6
				S		Wall Bracket Set	x1

What you need:



Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

HARDWARE

D	Plastic Dowel M6 x 32 mm	x8
G	Screw M4 x 8 mm	x12
K	Drawer rail	x3

COMPONENTS

5	Divider Left Board	x1
6	Divider Right Board	x1

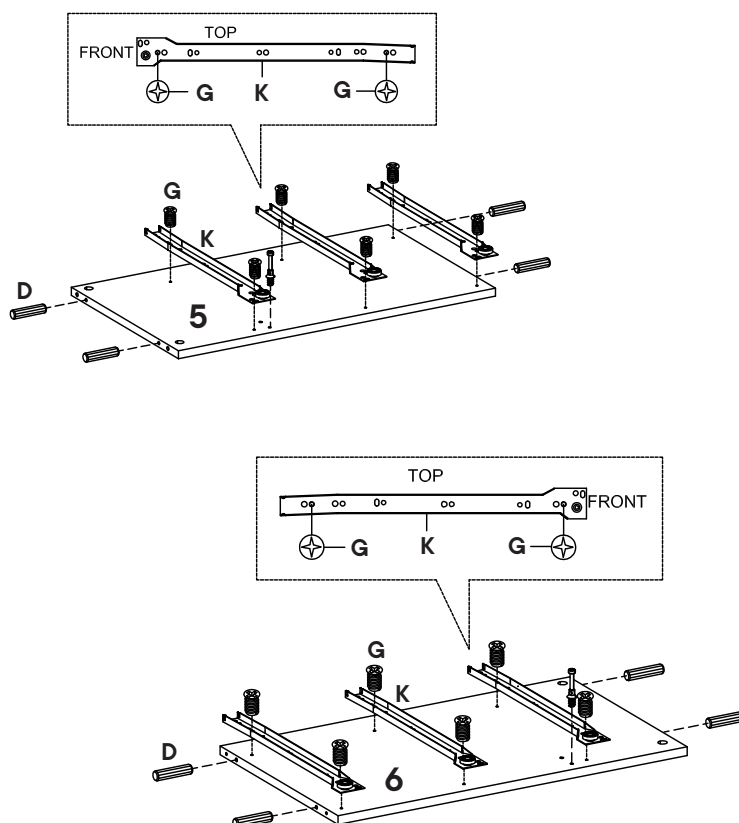


Step 2

HARDWARE

D	Plastic Dowel M6 x 32 mm	x10
----------	--------------------------	-----

COMPONENTS

3	Left Board	x1
4	Right Board	x1
7	Drawer support	x1

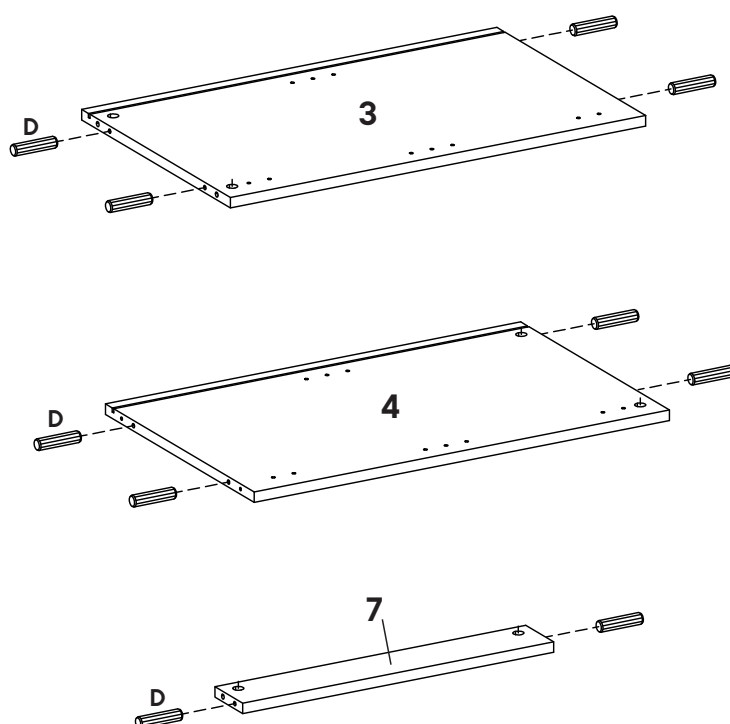



Step 3

HARDWARE

- | | | |
|----------|--------------------------|-----|
| B | Cam Bolt Ø7.5 x 32 mm | x8 |
| D | Plastic Dowel M6 x 32 mm | x12 |

COMPONENTS

- | | | |
|-----------|--------------------|----|
| 11 | Front/Rear Support | x2 |
| 12 | Side Rear Support | x4 |

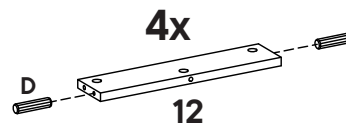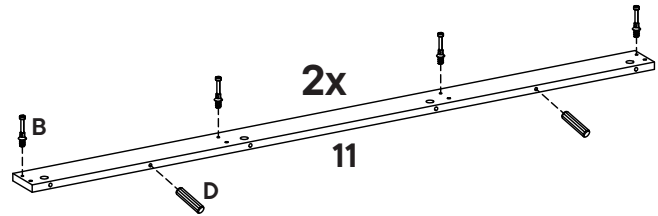


Step 4

HARDWARE

- | | | |
|----------|--------------------|----|
| A | Cam Lock Ø15 mm | x8 |
| C | Cam Sticker Ø17 mm | x8 |

COMPONENTS

- | | | |
|-----------|--------------------|----|
| 10 | Front/Rear Support | x2 |
| 11 | Side Rear Support | x4 |

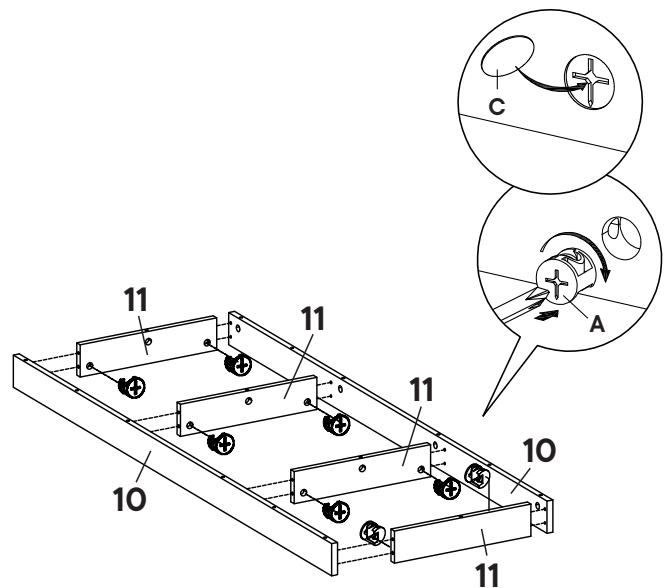


Step 5

HARDWARE

A	Cam Lock Ø15 mm	x2
C	Cam Sticker Ø17 mm	x2

COMPONENTS

5	Divider Left Board	x1
6	Divider Right Board	x1
7	Support drawer	x1

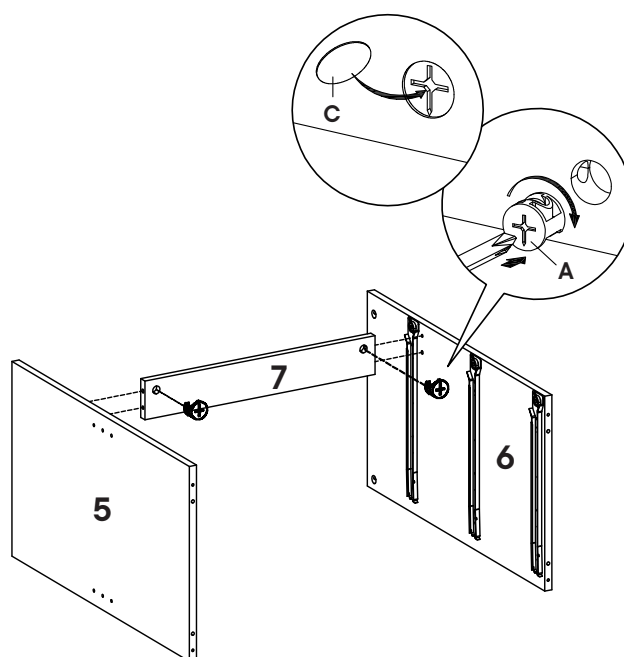


Step 6

HARDWARE

B	Cam Bolt Ø7.5 x 32 mm	x12
----------	-----------------------	-----

COMPONENTS

2	Bottom Board	x1
----------	--------------	----

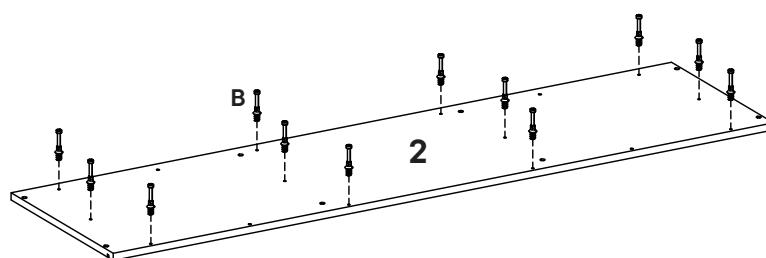


Step 7

HARDWARE

- E** Screw M10 x 33.5 mm x8

COMPONENTS

- 2** Bottom Board x1
3 Left Board x1
4 Right Board x1
5 Divider Left Board x1
6 Divider Right Board x1

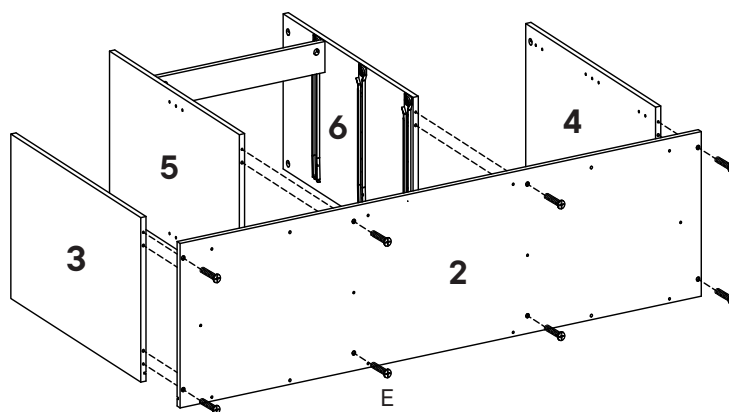


Step 8

HARDWARE

- A** Cam Lock Ø15 mm x12
C Cam Sticker Ø17 mm x12

COMPONENTS

- 2** Bottom Board x1
11 Front Rear Support x2
12 Side Rear Support x4

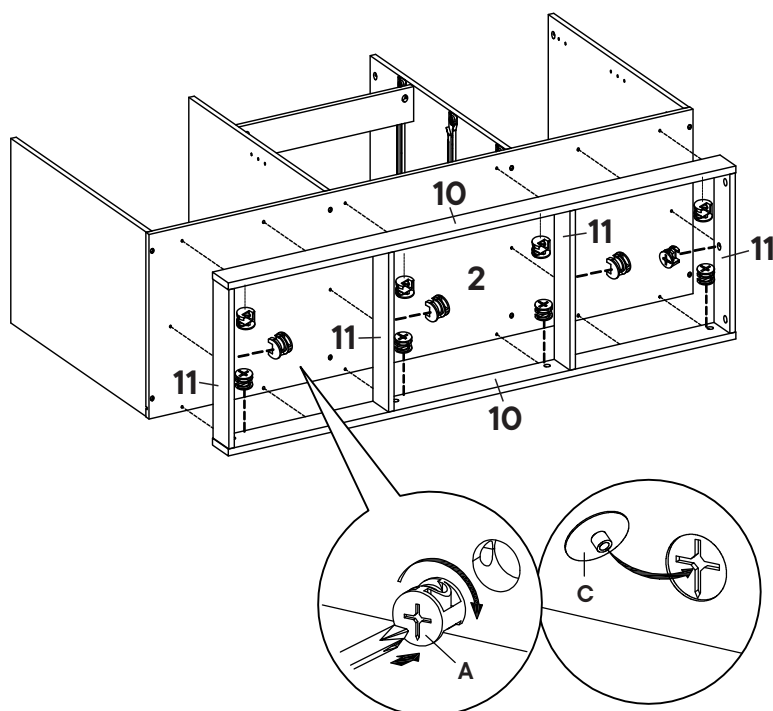


Step 9

HARDWARE

- ① H-Profile x1

COMPONENTS

- ② Bottom Board x1
③ Left Board x1
④ Right Board x1
⑧ Backboard x2

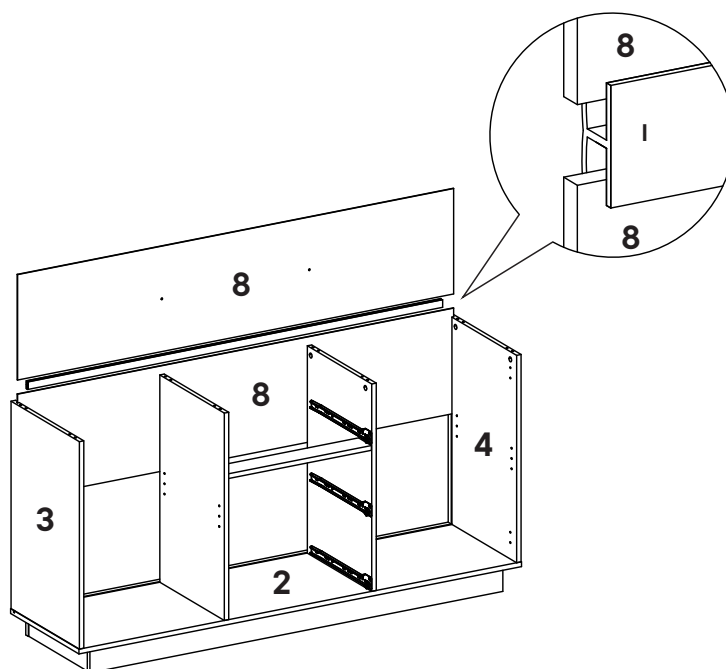


Step 10

HARDWARE

- Ⓑ Cam Bolt Ø7.5 x 32 mm x8

COMPONENTS

- ① Top Board x1

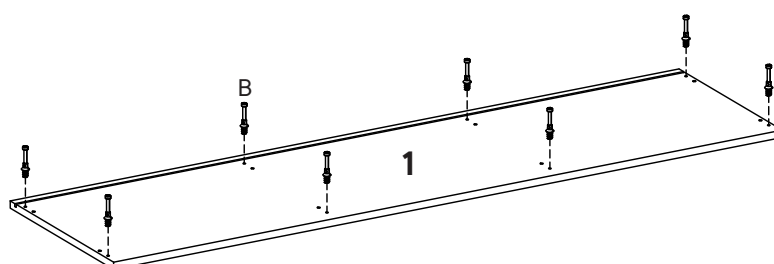


Step 11

HARDWARE

A	Cam Lock Ø15 mm	x8
C	Cam Sticker Ø17 mm	x8

COMPONENTS

1	Top Board	x1
3	Left Board	x1
4	Right Board	x1
5	Divider Left Board	x1
6	Divider Right Board	x1
8	Backboard	x2

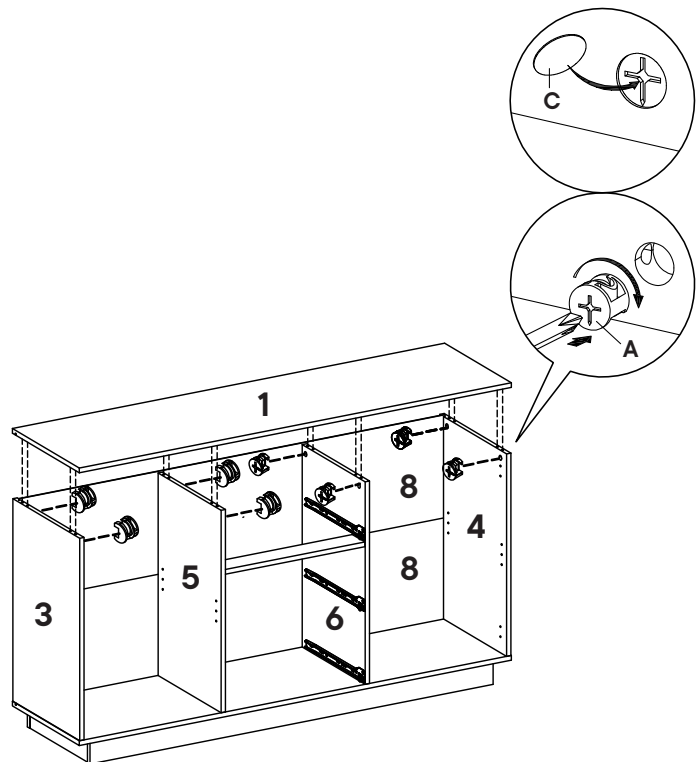


Step 12

HARDWARE

H	Screw M4 x 13 mm	x4
O	Screw M4 x 19 mm	x16
P	Backply Stopper	x16

COMPONENTS

1	Top Board	x1
2	Bottom Board	x1
3	Left Board	x1
4	Right Board	x1
8	Backboard	x2

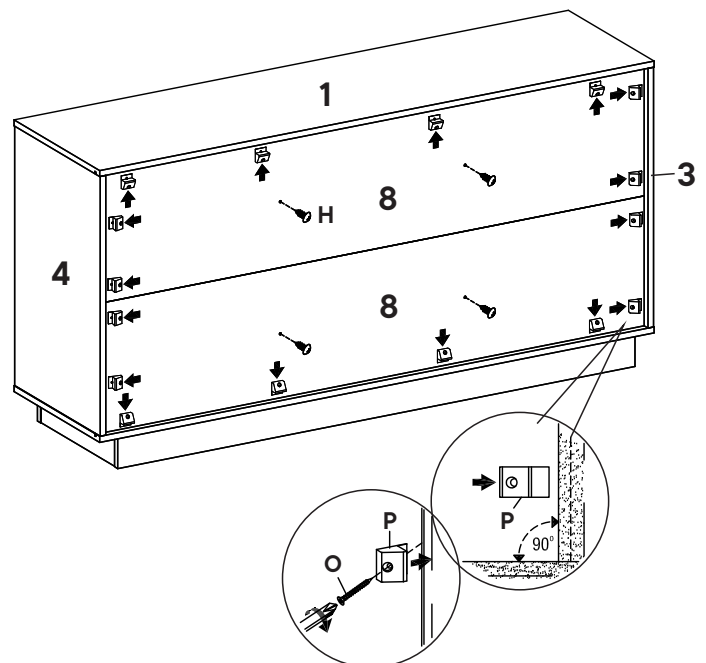


Step 13

HARDWARE

- N** Shelf Pin M7 x 16.5 mm x8

COMPONENTS

- 3** Left Board x1
4 Right Board x1
5 Divider Left Board x1
6 Divider Right Board x1
9 Adjustable Shelf x2

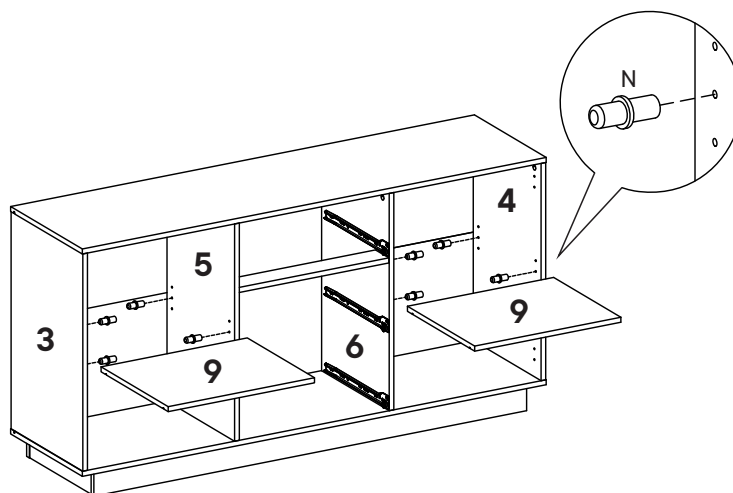


Step 14

HARDWARE

- B** Cam Bolt Ø7.5 x 32 mm x6
D Plastic Dowel M6 x 32 mm x24
L Screw M4 x 22 mm x6
M Handle x3

COMPONENTS

- 13** Front Drawer x3
14 Left Drawer x3
15 Right Drawer x3
16 Rear Drawer x3

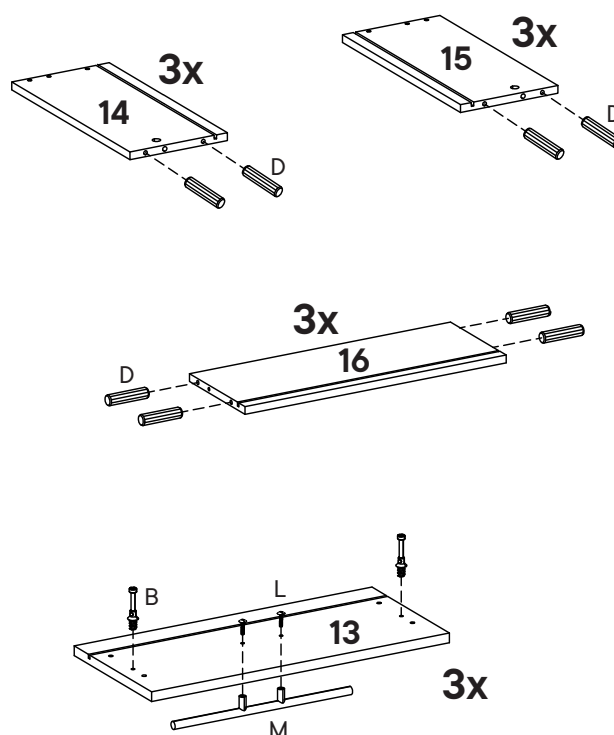


Step 15

HARDWARE

J	Curve Door Hinge	x4
L	Screw M4 x 22 mm	x4
M	Handle	x2

COMPONENTS

12	Side Door	x2
-----------	-----------	----

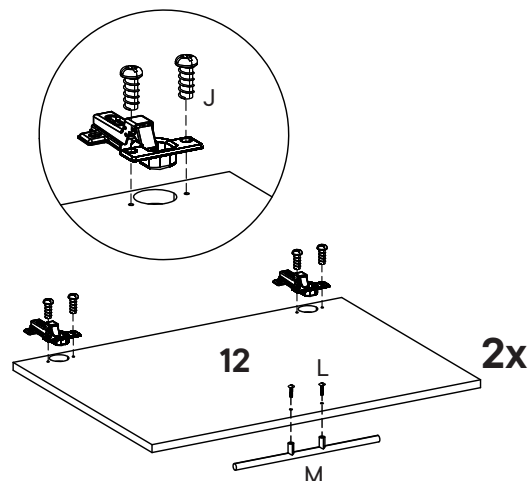



Step 16

HARDWARE

E	Screw M10 x 33.5 mm	x6
----------	---------------------	----

COMPONENTS

14	Left Drawer	x3
15	Right Drawer	x3
16	Rear Drawer	x3
17	Bottom Drawer	x3

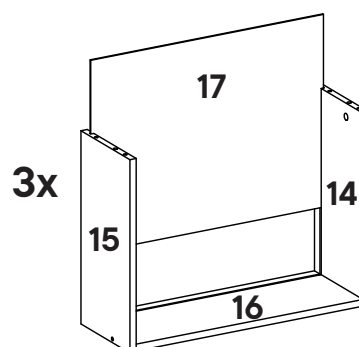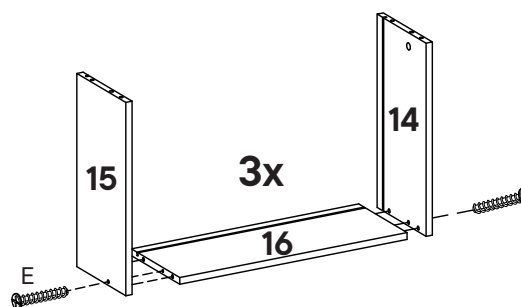


Step 17

HARDWARE

Q	Cam Lock Ø12 mm	x6
R	Cam Sticker Ø15 mm	x6

COMPONENTS

13	Front Drawer	x3
14	Left Drawer	x3
15	Right Drawer	x3
16	Rear Drawer	x3
17	Bottom Drawer	x3

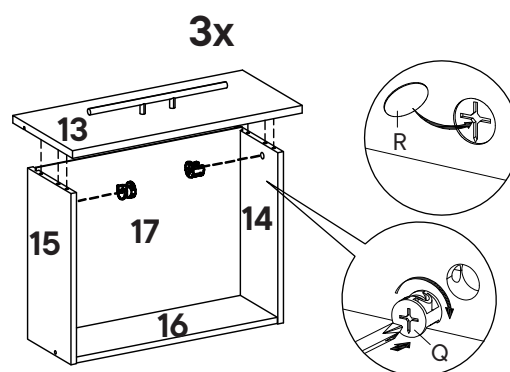


Step 18

HARDWARE

F	Screw M6 x 13 mm	x12
K	Drawer Rail	x3

COMPONENTS


14	Left Drawer	x3
15	Right Drawer	x3

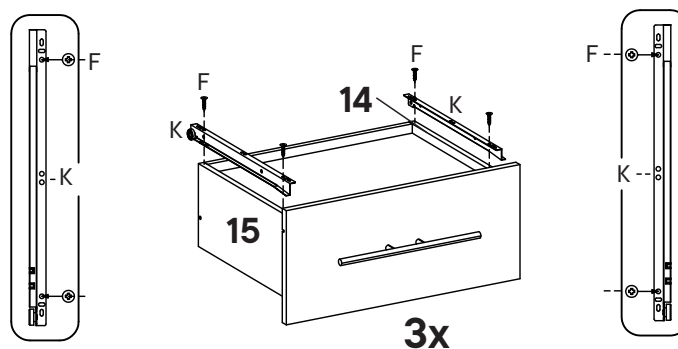

Step 19

COMPONENTS

5	Divider Left Board	x1
6	Divider Right Board	x1
13	Front Drawer	x3

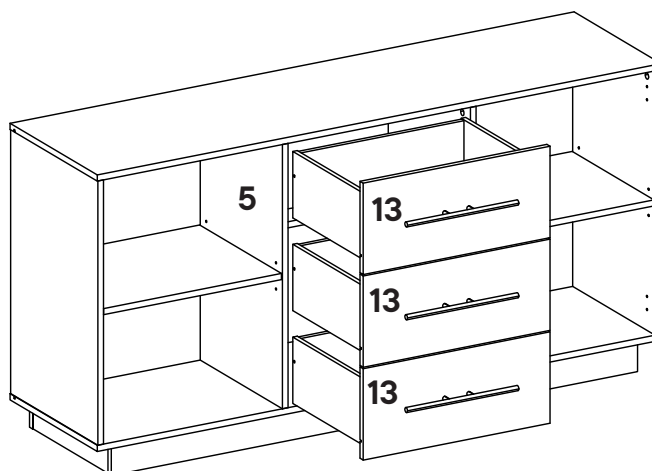


Step 20

HARDWARE



J	Curve Door Hinge	x4
---	------------------	----

COMPONENTS

3	Left Board	x1
4	Right Board	x1
12	Side Door	x2

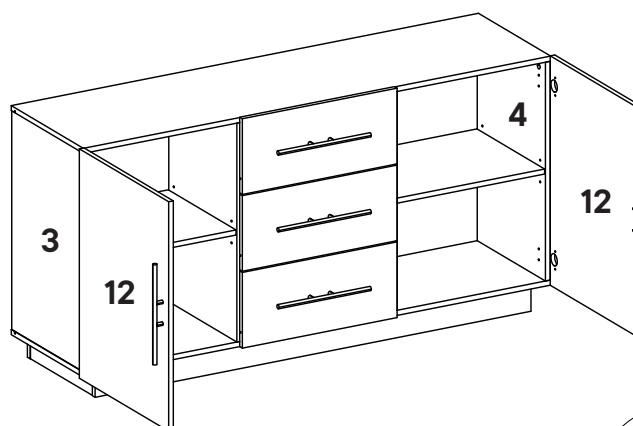

Hinges Adjustment Facilities

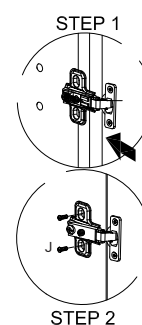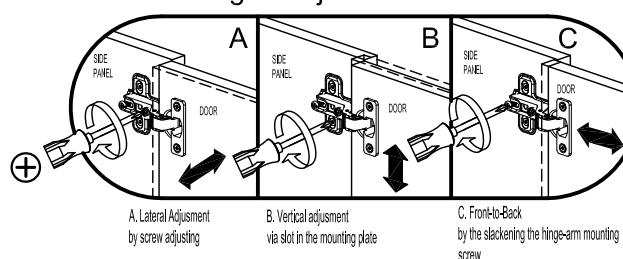

Great job!

High TV Stand assembly is complete.



CARING FOR YOUR ITEM

Indoor use only.


Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!








Tag us @modway_furniture and #modway for a chance to be featured.

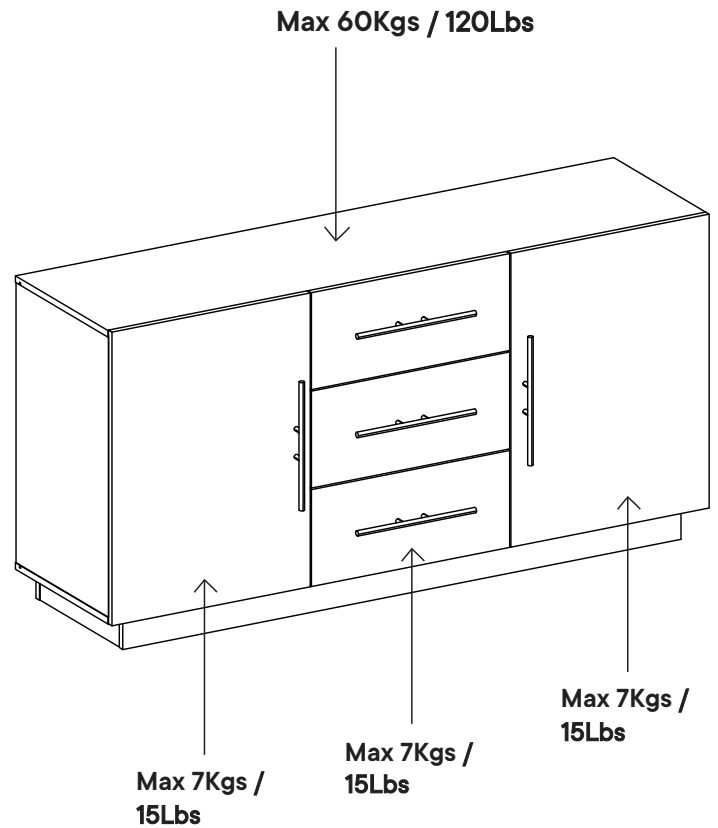

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

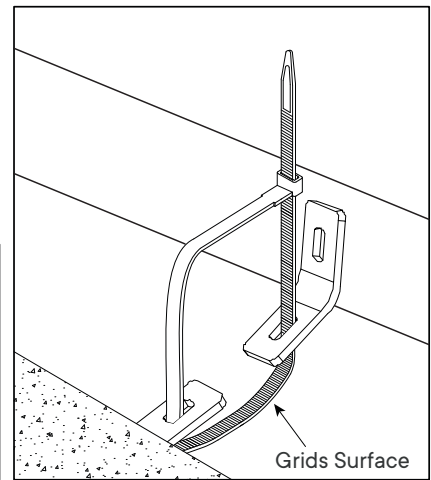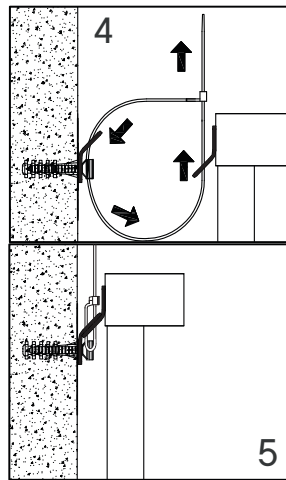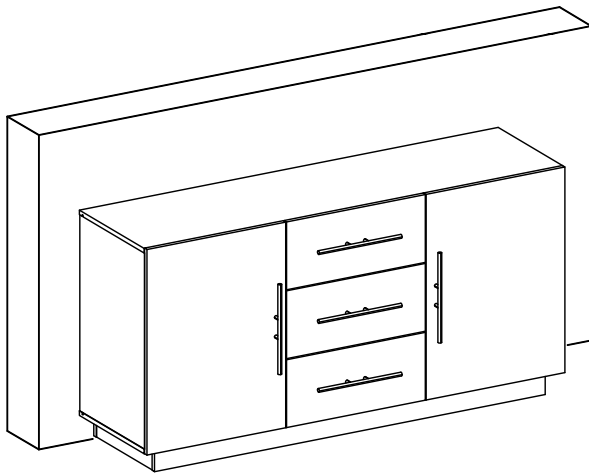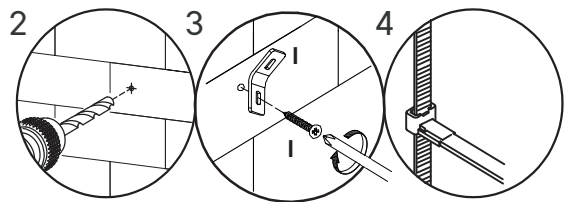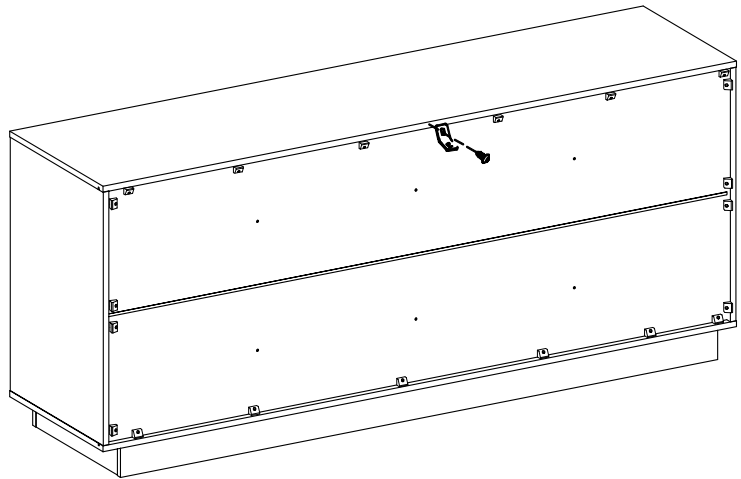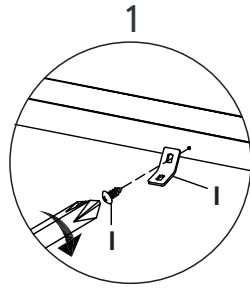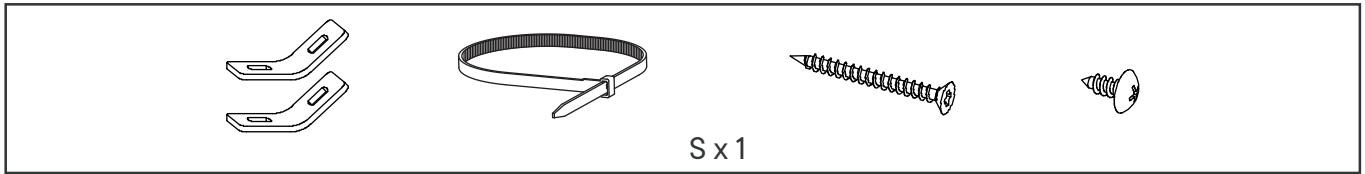

Installation Instructions :

1. Attach bracket (I) securely to the back top of the furniture using short screw (I) provided.
2. Please make a hole on the wall for attach the bracket (I) to the back of unit.
3. Attach bracket (I) on the wall using long screw (II) as shown.
Locate the other bracket (I) on the wall. Place furniture into position so both brackets (I) as shown.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.