

Thank you for purchasing the **MODWAY MEDIA CABINET!**

Before you start, here are some helpful advice:

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.


Owing to the size and weight of the dining chair, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.

Please do not use any tools other than those provided or recommended in these instructions.




Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.

Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.


Please keep all pieces out of reach of small children.

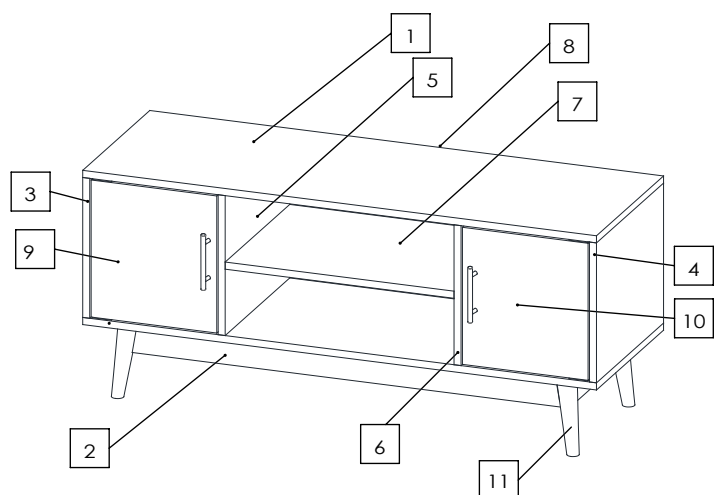

Hardware:


A		Cam Bolt	x 16
B		Cam Lock	x 16
C		Wood Dowel	x 16
D		Allen Wrench	x 1
E		Magnetic Catch	x 2
F		Plastic Hinge	x 4
G		CSK M3 x 12	x 8
H		CSK M3.5 x 16	x 8
I		JCBC M6 x 70	x 8
J		Spring Washer M6	x 8
K		Flat Washer M6	x 8
L		Sticker Cover (Cam Lock)	x 16
M		Handle	x 2
N		PH M4 x 20mm	x 4
O		Shelf Holder	x 4

Component:

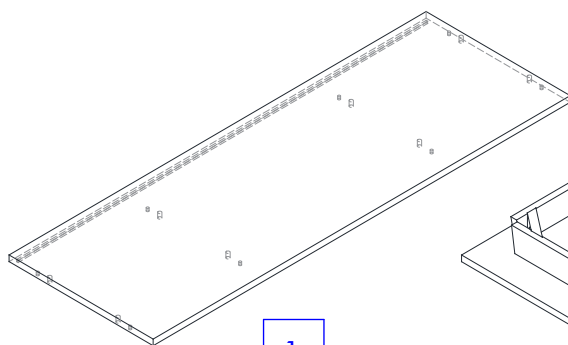


1

TOP PANEL

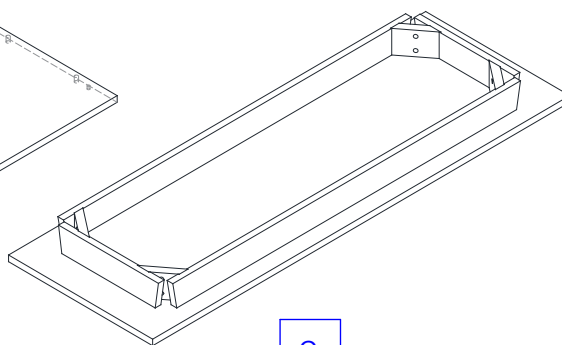


2

BOTTOM PANEL

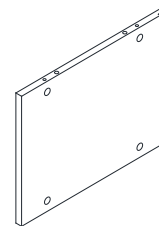


3

LEFT SIDE PANEL

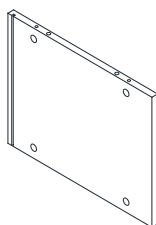


4

RIGHT SIDE PANEL

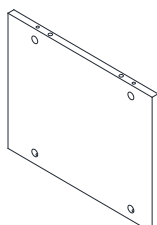


5

PARTITION LEFT

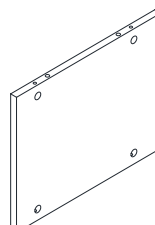


6

PARTITION RIGHT

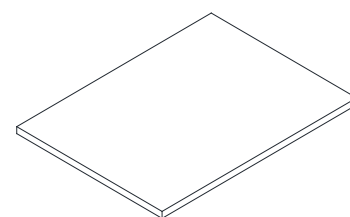


7

ADJUSTABLE SHELF

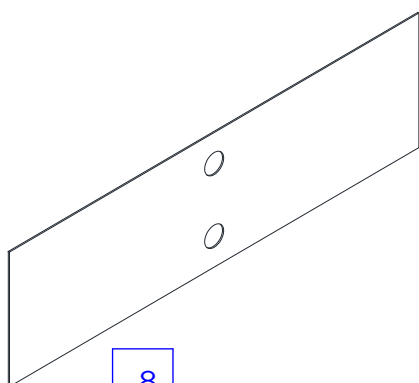


8

BACK PANEL

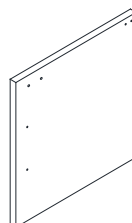

9

DOOR LEFT

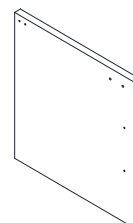

10

DOOR RIGHT




x 4PCS

11


LEG


STEP 1:

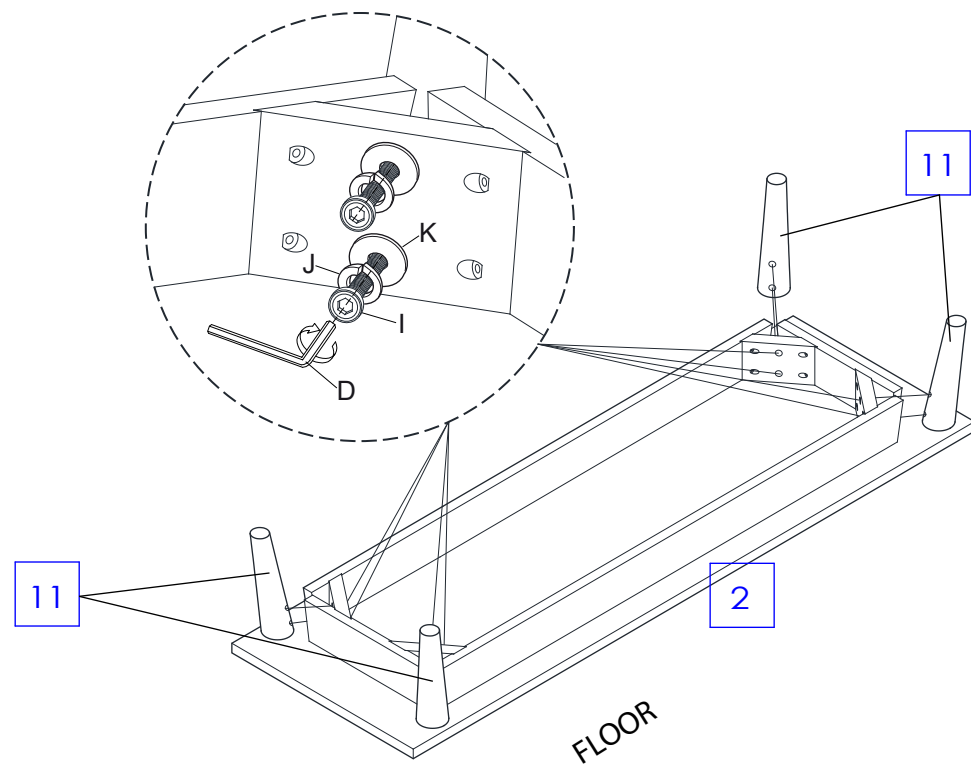


D	I	J	K
 x 1	 x 8	 x 8	 x 8


STEP 2:

A	E	G
 x 8	 x 2	 x 4

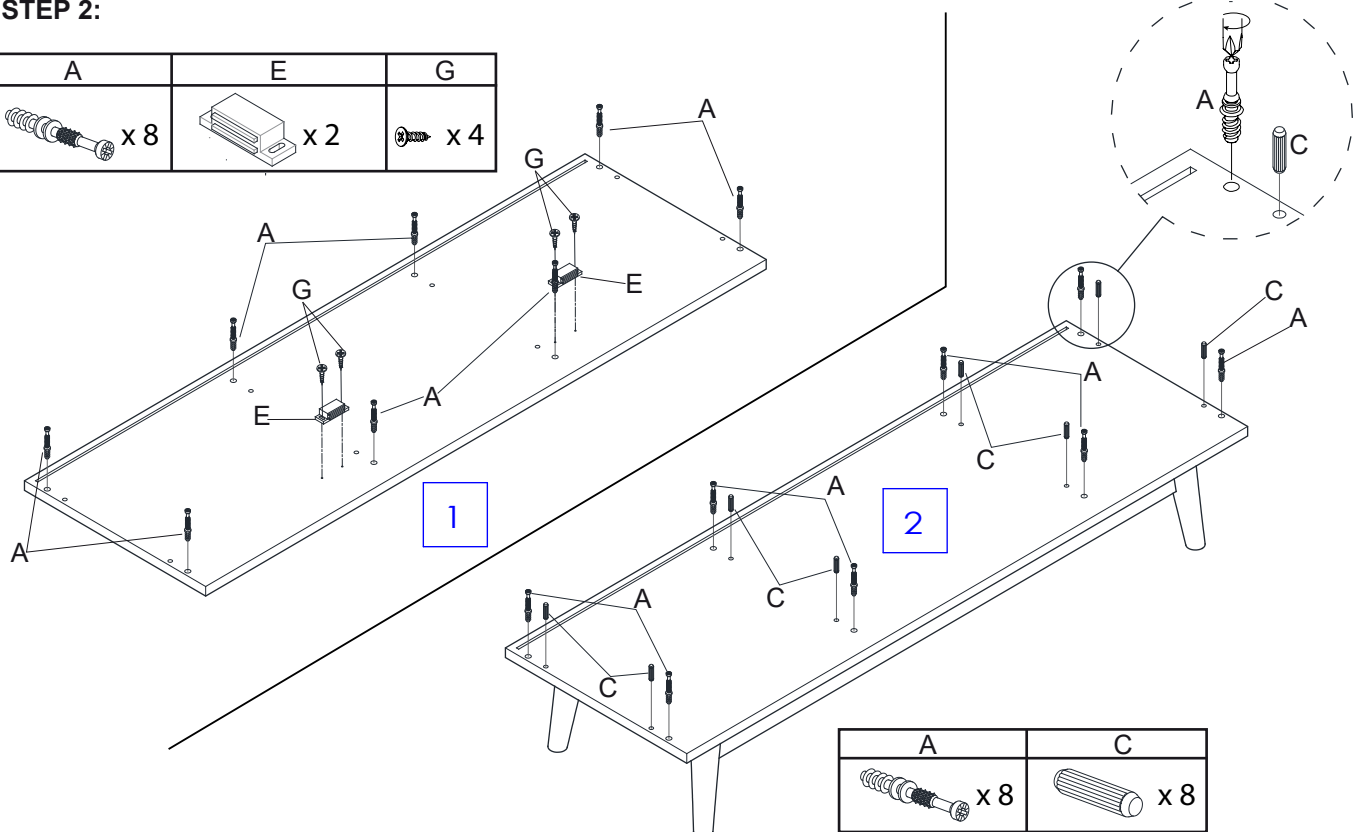


A	C
 x 8	 x 8

STEP 3:

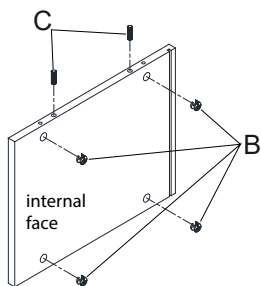


3

STEP 4:

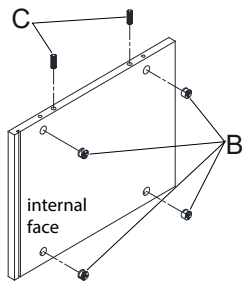


4

STEP 5:

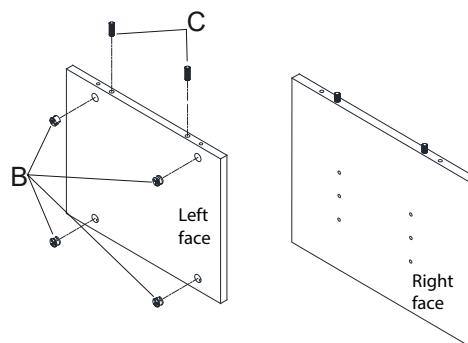


5

STEP 6:

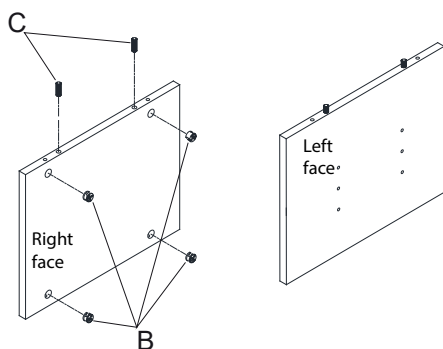

6

STEP 7:

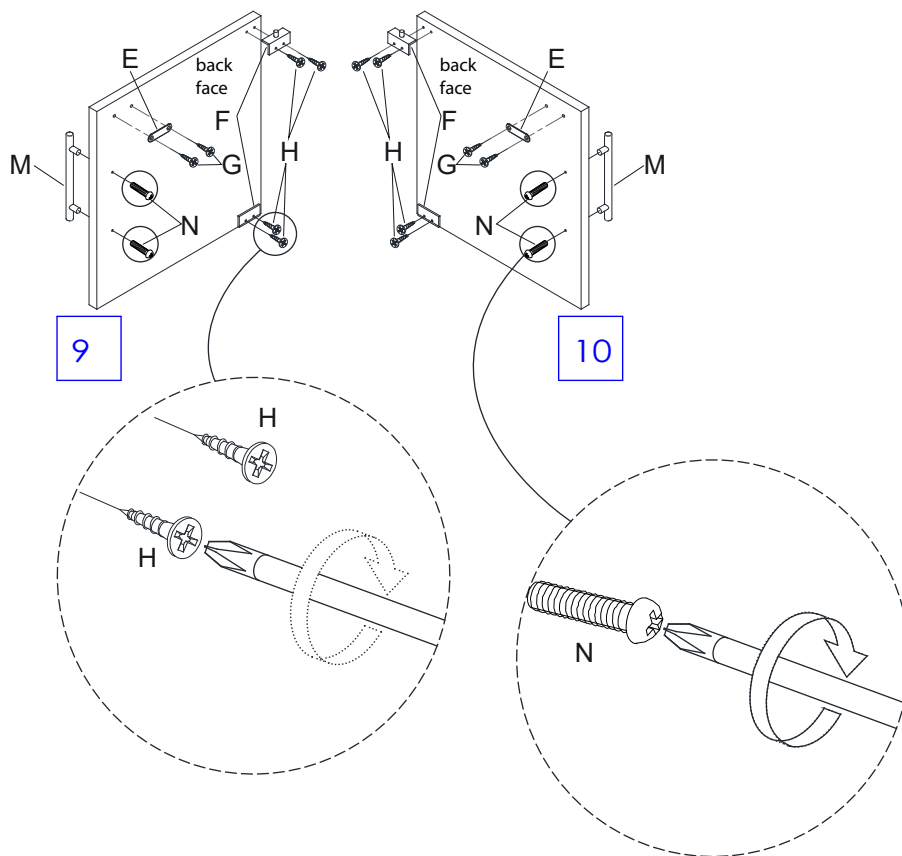


9


10

B
 x 16
C
 x 8
E
 x 2
F
 x 4
G
 x 4
H
 x 8
M
 x 2
N
 x 4




STEP 8:

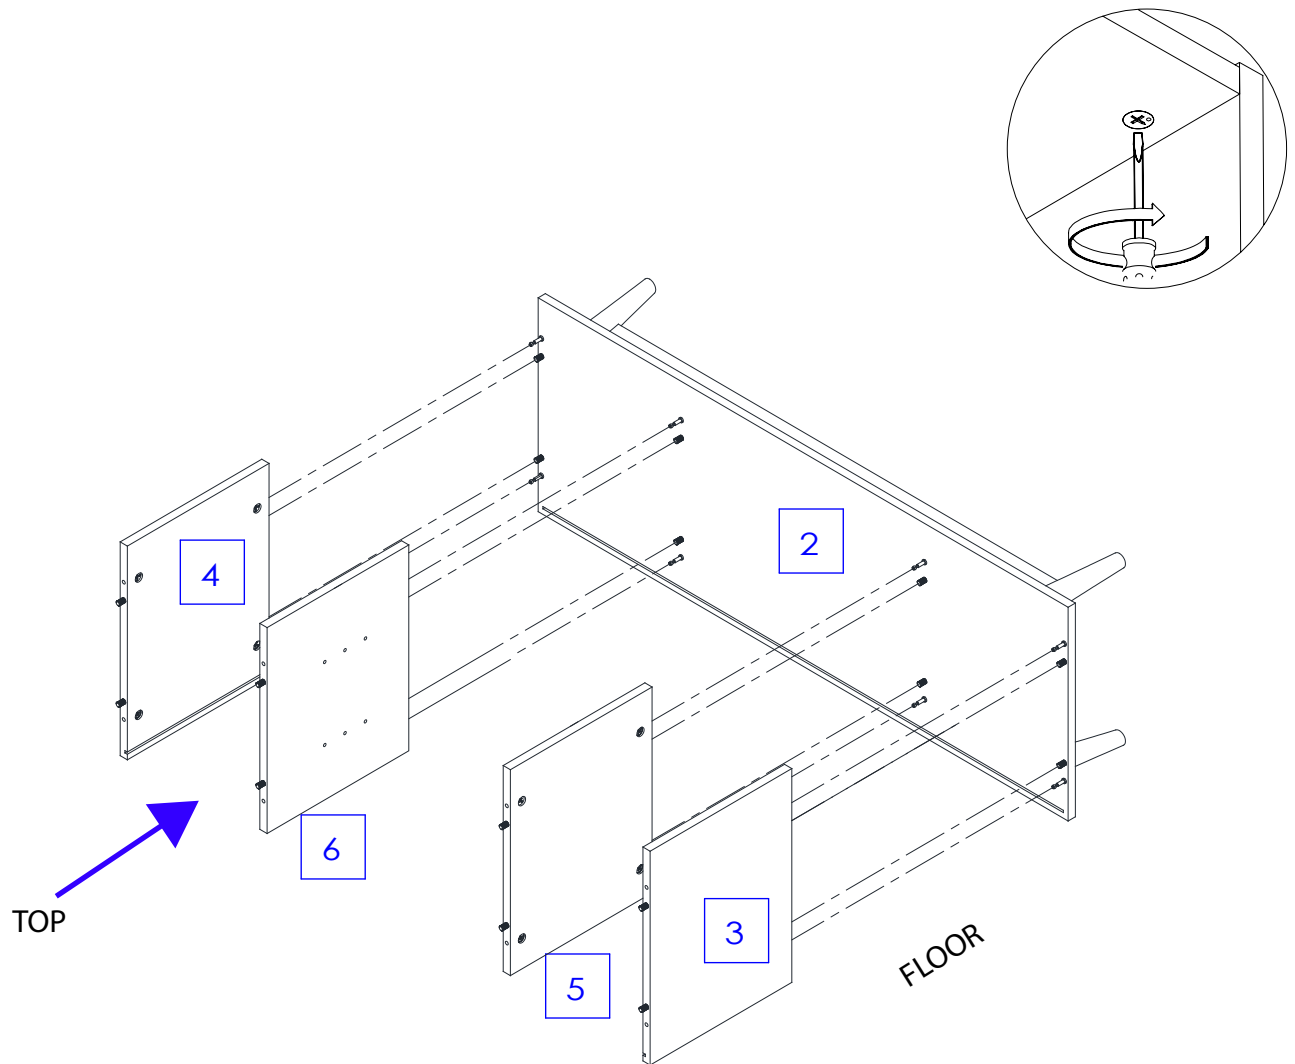


STEP 9:

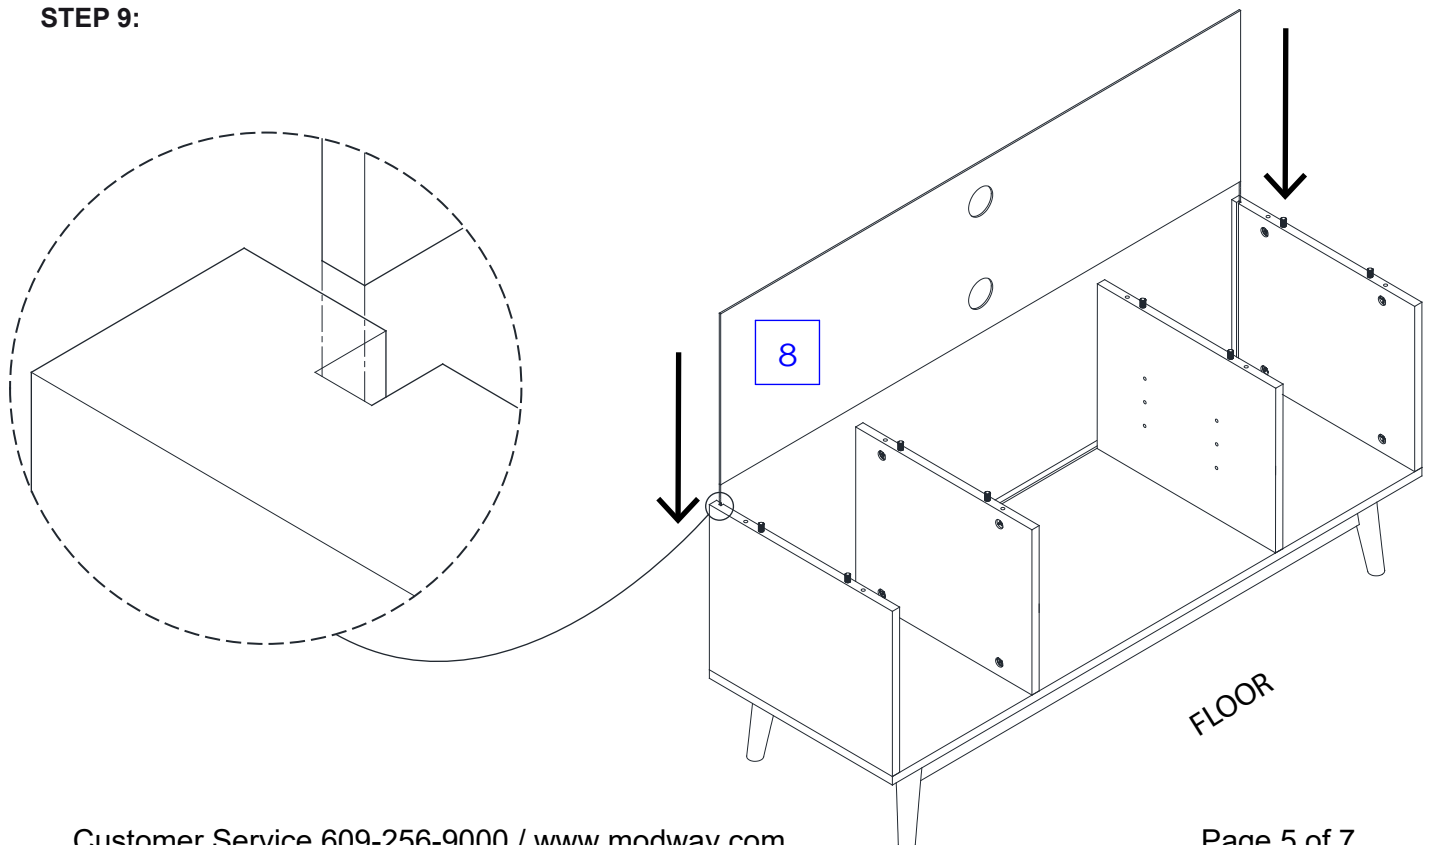

STEP 10:

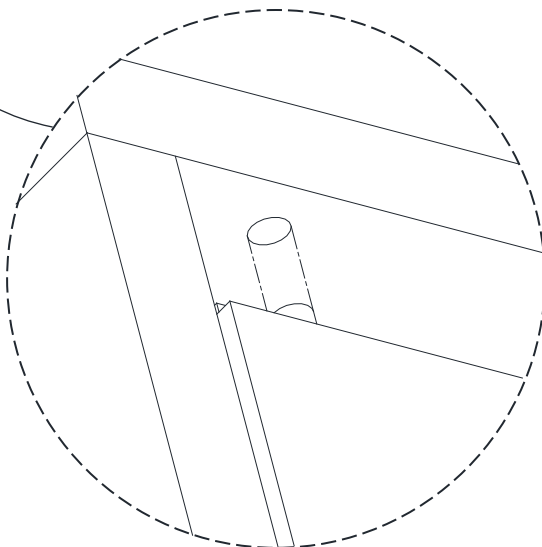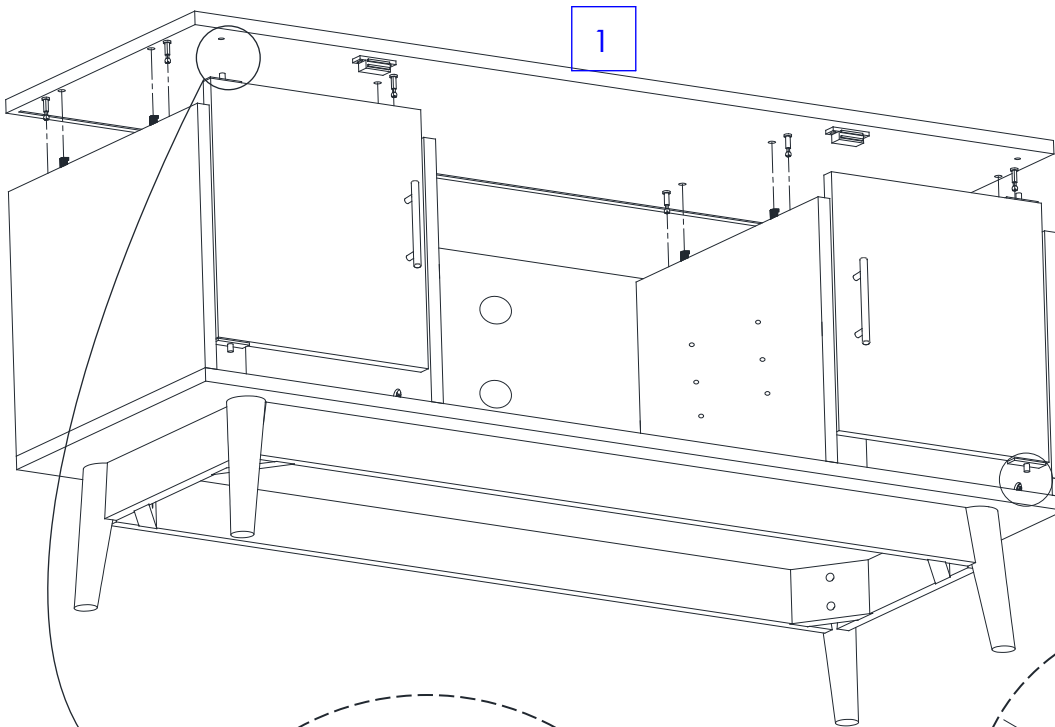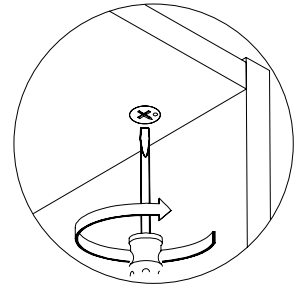

Put door hinge plastic at right hole first

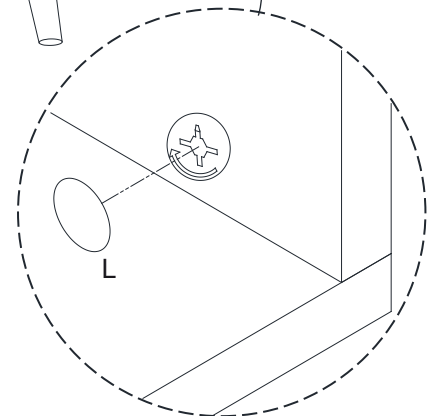

Every Com hole lock cover by cap

L	
	x 16

STEP 11:

