


ASSEMBLY INSTRUCTIONS

EEI-6528

V1.04.24.24

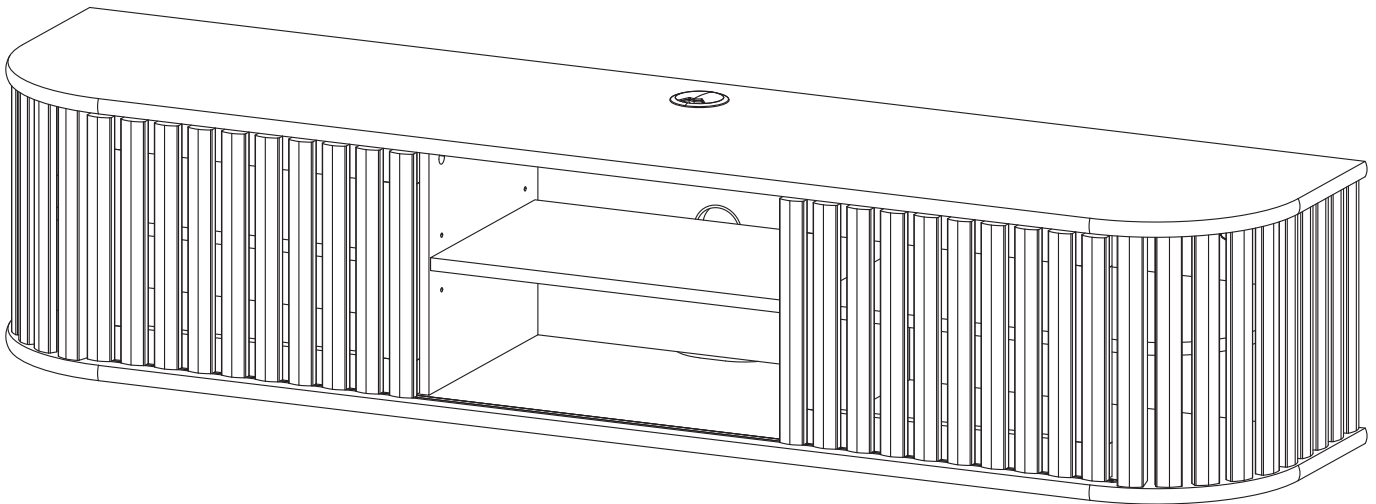

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Approx. 70 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1	10	Sliding Door	x2
2	Bottom Board	x1	11	Back Board	x1
3	Side Board Left	x1			
4	Side Board Right	x1			
5	Center Board	x2			
6	Adjustable Shelf 1	x1			
7	Adjustable Shelf 2	x2			
8	Bar Side 1	x2			
9	Bar Side 2	x9			

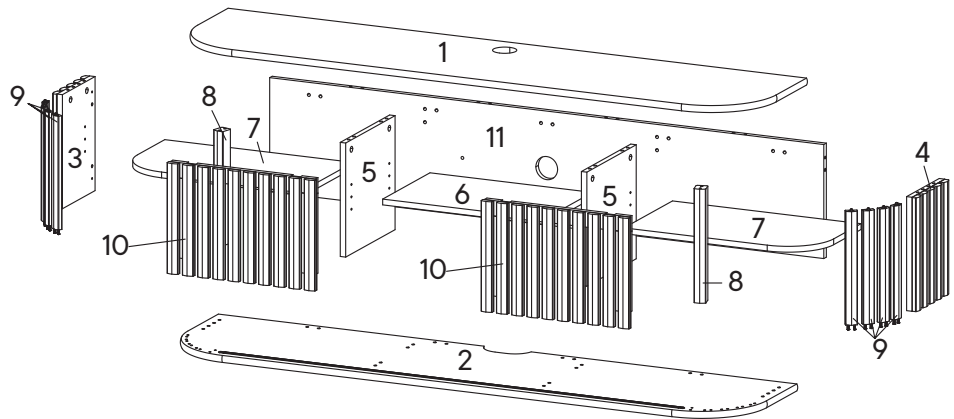

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x20	J		Screw M 6 x 15 mm	x10	S		PVC Sheet	x2
B		Cam Lock Ø15 mm	x20	K		JCN Nut	x10	T		Wall Plug	x9
C		Screw M 7 x 50 mm	x14	L		Grommet Cover	x1	PA05		Short Bracket	x5
D		Allen Key	x2	M		Sliding Top	x4	PA150		Long Bracket	x1
E		Wood Dowel Ø8 x 30 mm	x28	N		Sliding Bottom	x4				
F		Wood Dowel Ø6 x 30 mm	x4	O		Silicon Bumper	x1				
G		Grommet Cover	x1	P		Screw M 3.5 x 13 mm	x16				
H		Screw Cap Ø15 mm	x8	Q		Wall Mounted Bolt	x2				
I		Shelf Pin	x12	R		Screw 5.5 x 45 mm	x9				

What you need:

Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x16
E	Wood Dowel Ø8 x 30 mm	x12
G	Grommer Cover	x1

COMPONENTS

1	Top Board	x1
2	Bottom Board	x1
11	Back Board	x1

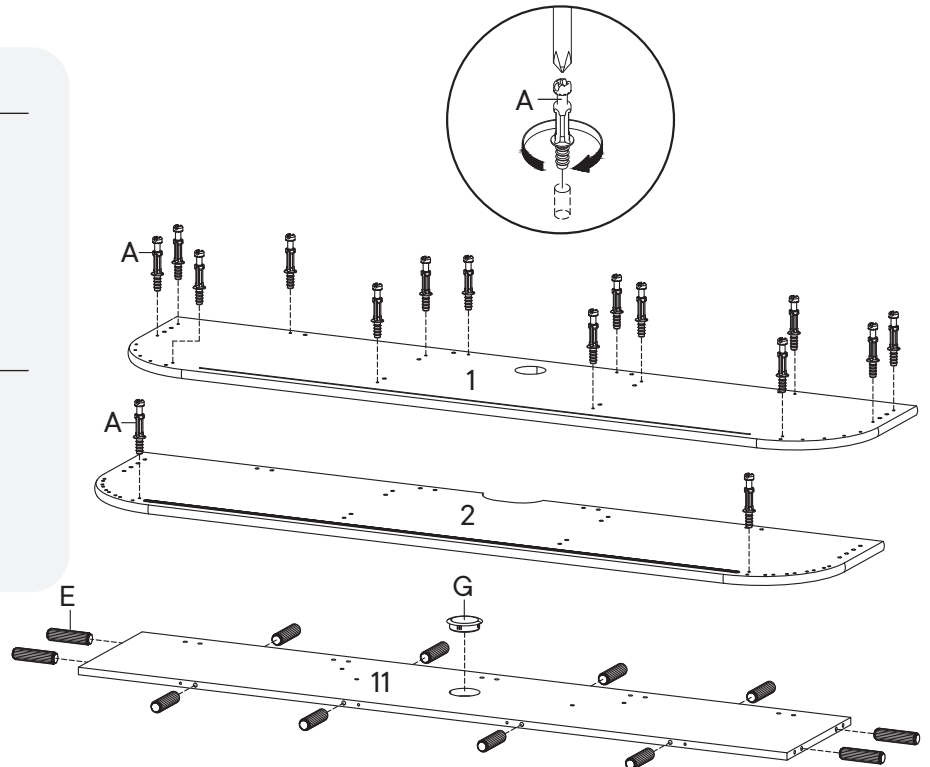


Step 2

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x4
E	Wood Dowel Ø8 x 30 mm	x16
F	Wood Dowel Ø6 x 30 mm	x4
I	Shelf Pin	x2

COMPONENTS


3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board	x2
8	Bar Side 1	x2

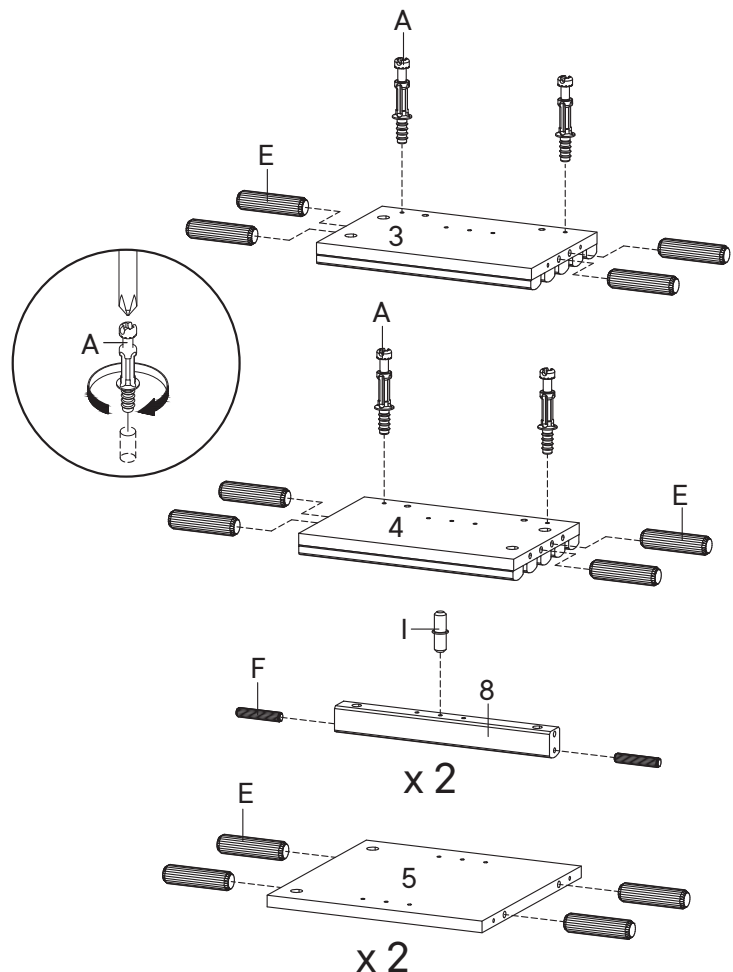

Step 3

COMPONENTS

- | | | |
|----|------------------|----|
| 3 | Side Board Left | x1 |
| 4 | Side Board Right | x1 |
| 11 | Back Board | x1 |

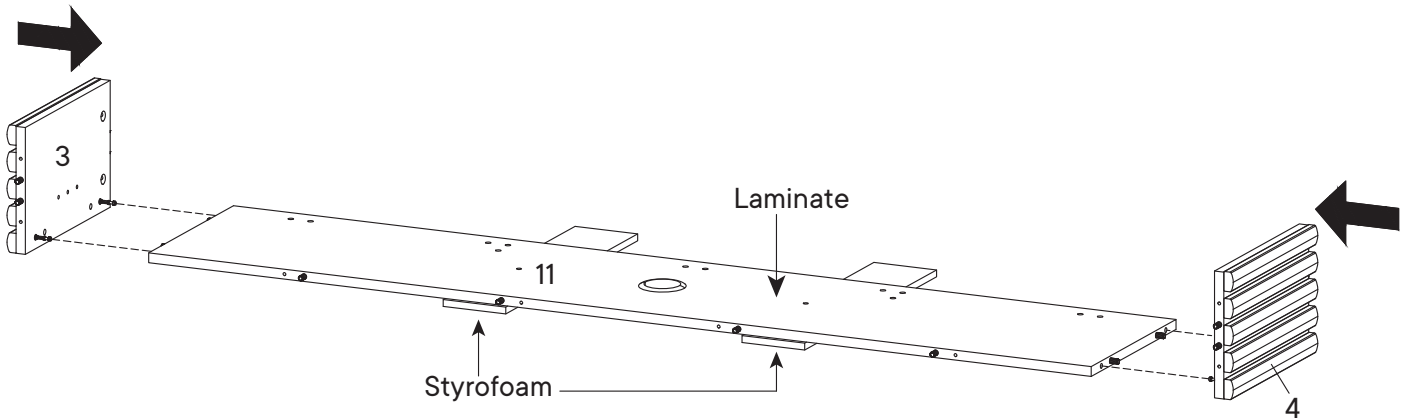


Step 4

HARDWARE

- | | | |
|---|-------------------|----|
| C | Screw M 7 x 50 mm | x8 |
| D | Allen Key | x1 |

COMPONENTS

- | | | |
|---|--------------|----|
| 2 | Bottom Board | x1 |
|---|--------------|----|

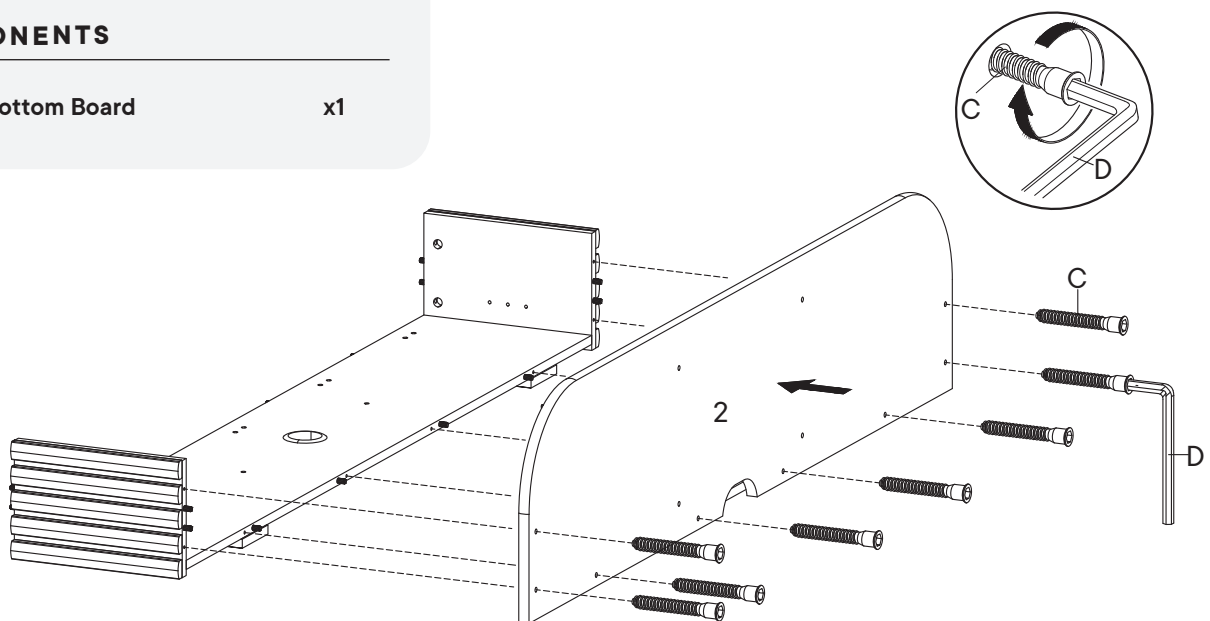



Step 5

HARDWARE

- C** Screw M 7 x 50 mm x4
- D** Allen Key x1

COMPONENTS



- 5** Center Board x2

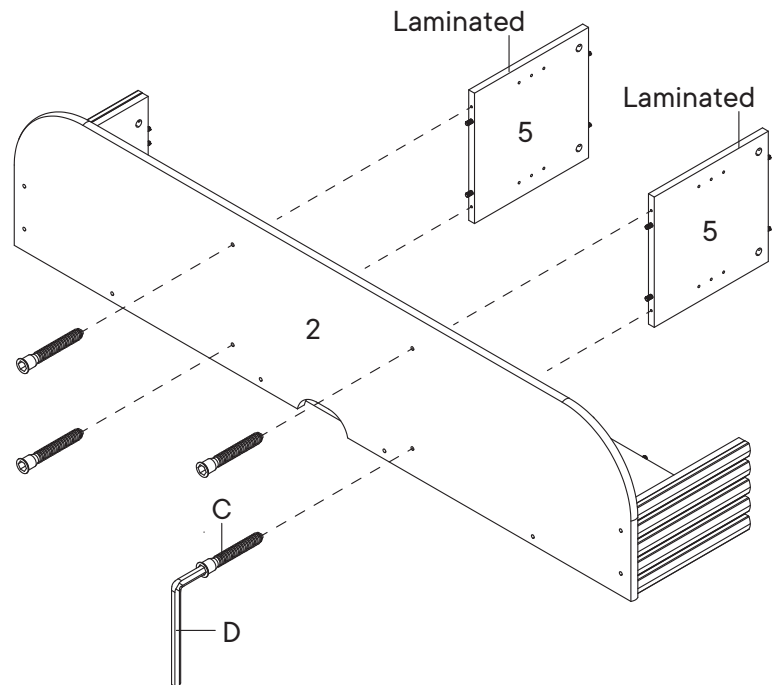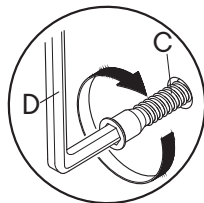

Step 6

HARDWARE



- B** Cam Lock Ø15 mm x4
- C** Screw M 7 x 50 mm x2
- D** Allen Key x1

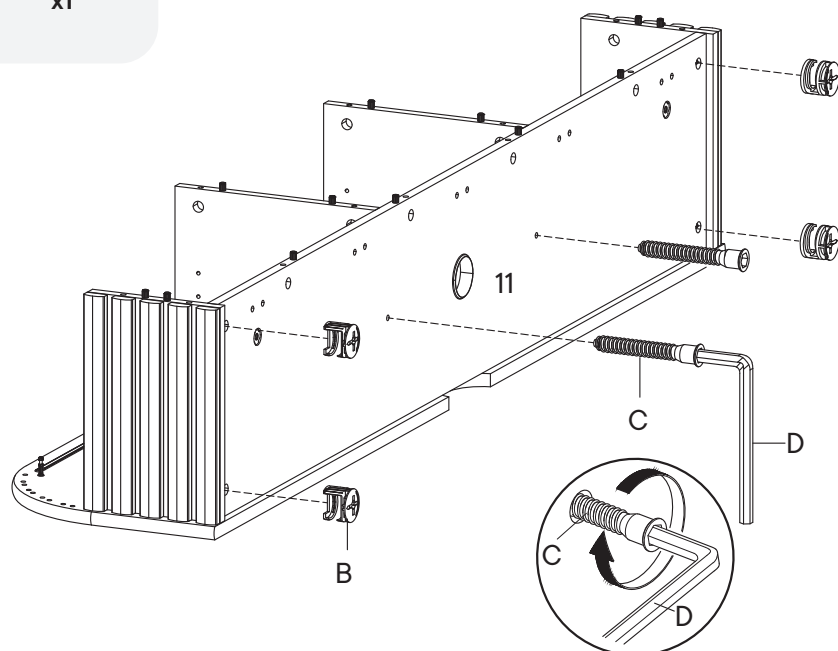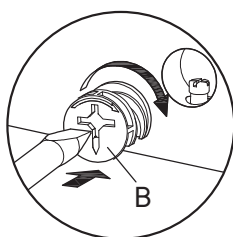

Step 7

HARDWARE

D	Allen Key	x2
J	Screw M 6 x 15 mm	x10
K	JCN Nut	x10
PA05	Short Bracket	x5

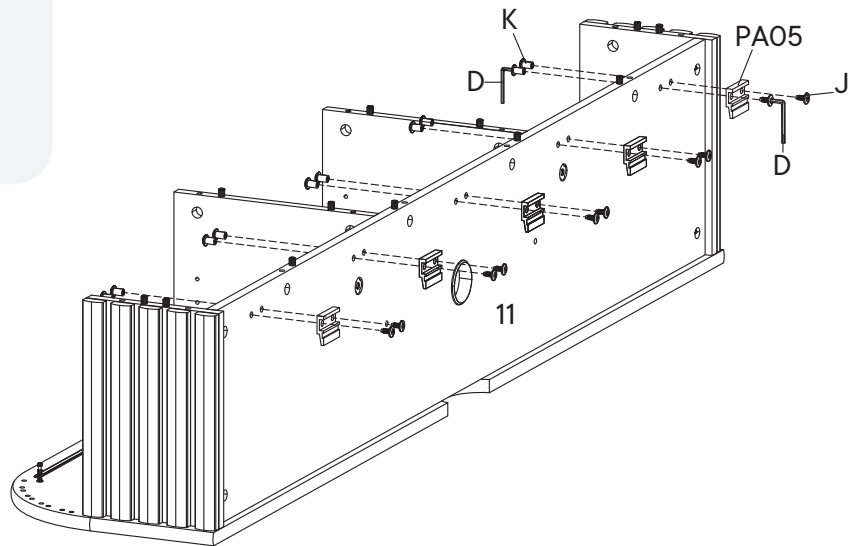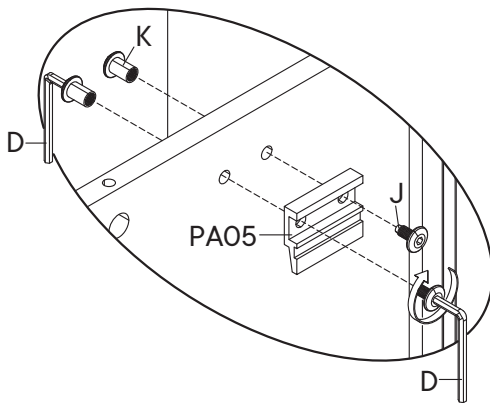


Step 8

HARDWARE

B	Cam Lock Ø15 mm	x2
----------	-----------------	----

COMPONENTS

8	Bar Side 1	x2
----------	------------	----

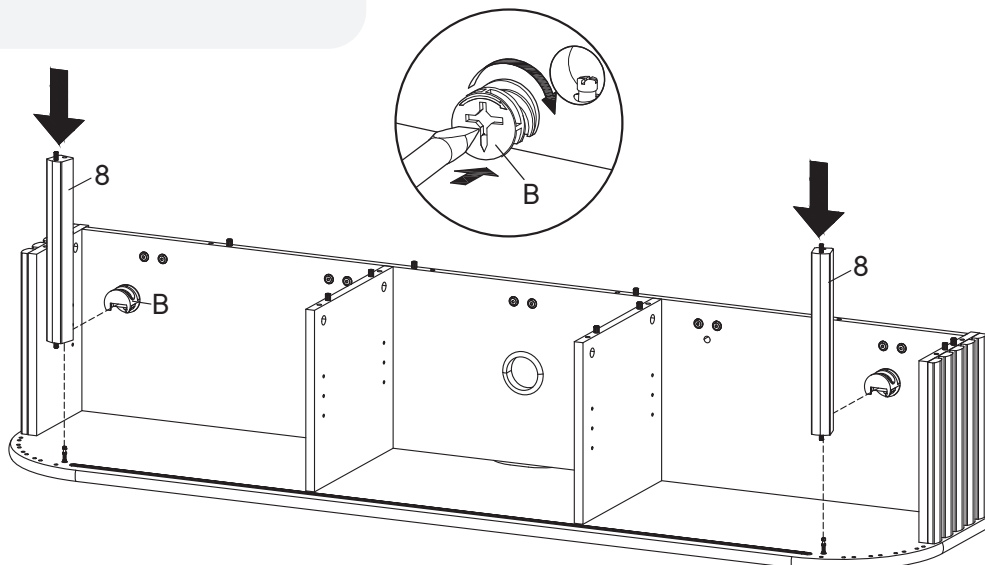



Step 9

HARDWARE

- ① Shelf Pin x6

COMPONENTS

- ⑦ Adjustable Shelf 2 x2

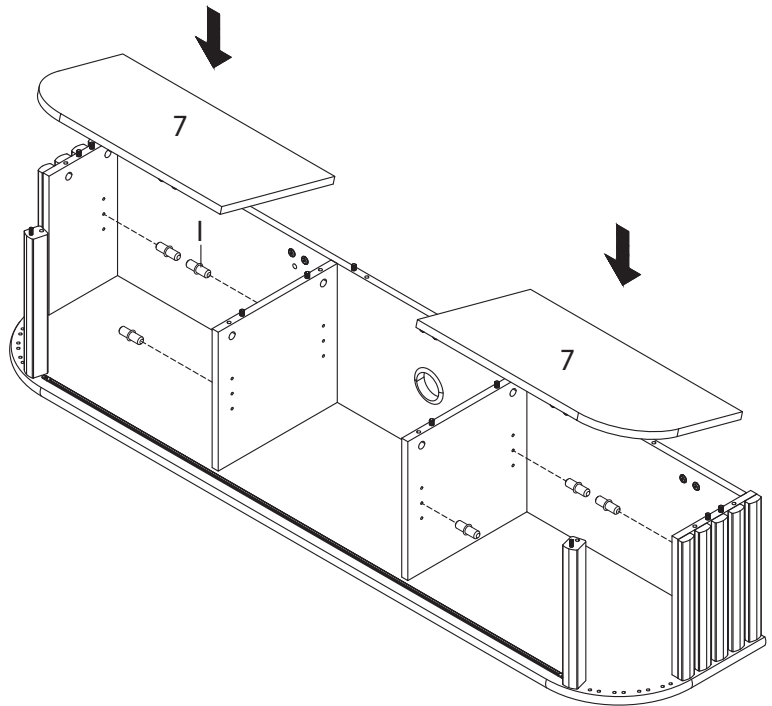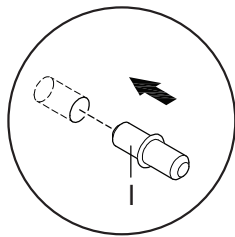

Step 10




HARDWARE

- ② Cam Lock Ø15 mm x14

- ④ Screw Cap Ø15 mm x8

COMPONENTS

- ① Top Board x1

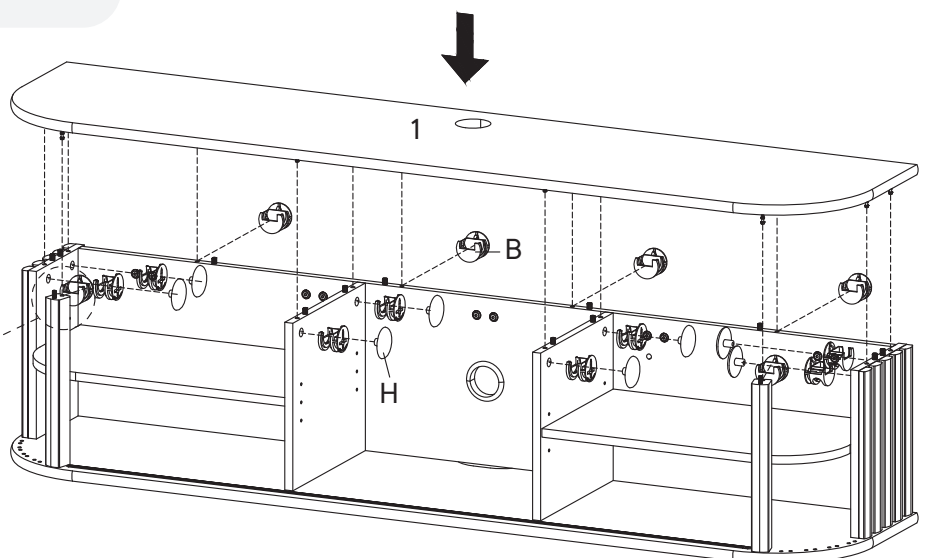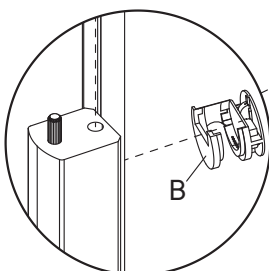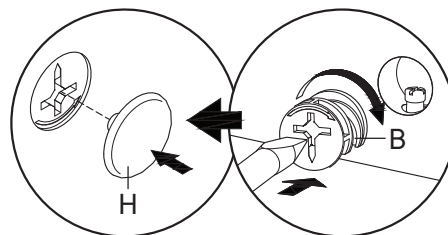



Step 11

HARDWARE

S PVC Sheet x2

COMPONENTS


9 Bar Side 2 x9

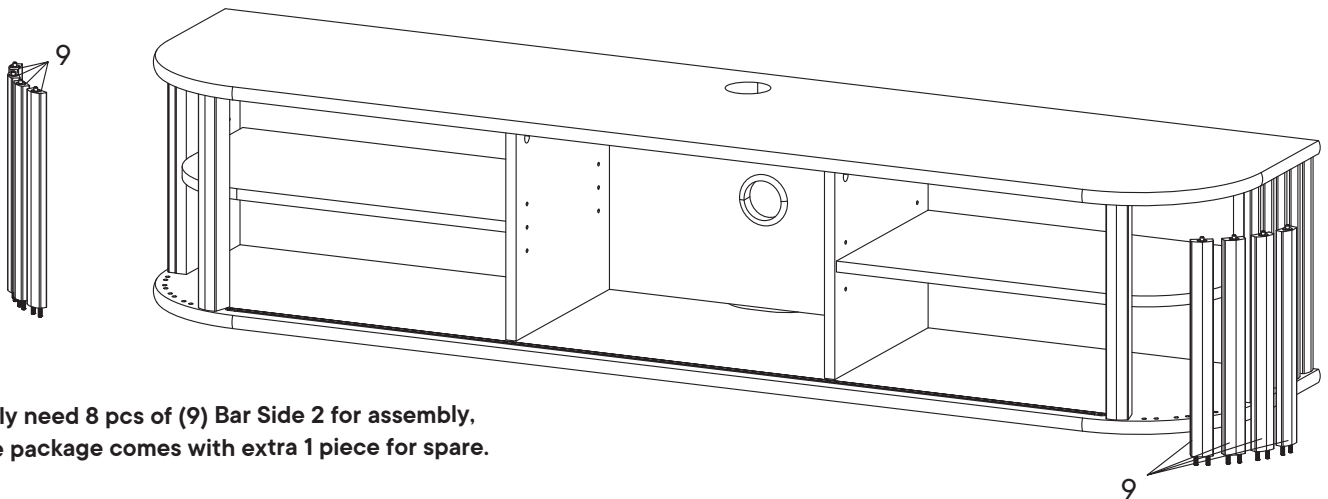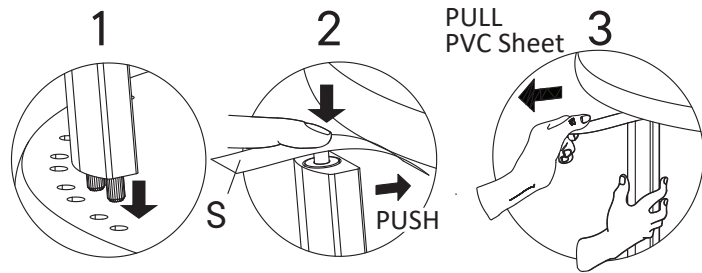

Only need 8 pcs of (9) Bar Side 2 for assembly,
the package comes with extra 1 piece for spare.

Step 12

Determine your desired (Y) height,
then subtract by 109.5 mm.
This is the drill holes height from the
floor (Z).

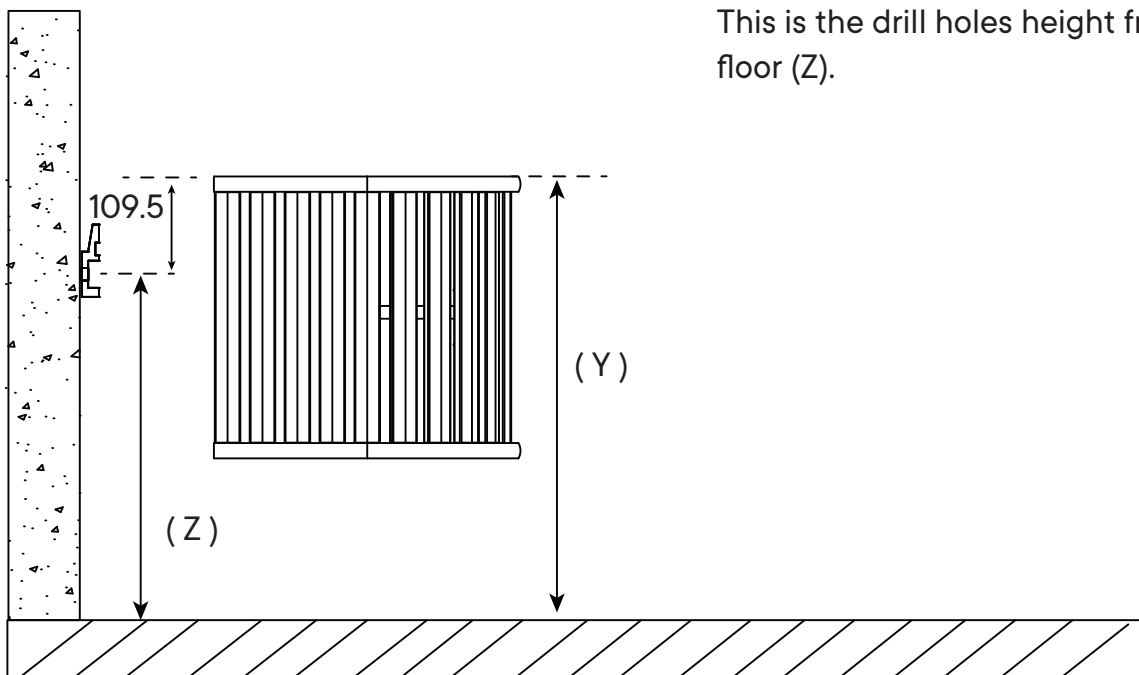


Step 13

HARDWARE



R	Screw 5.5 x 45 mm	x7
T	Wall Plug	x7
PA150	Long Bracket	x1

Different wall materials require unique wall fasteners. The wall plugs (T) and screws (R) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

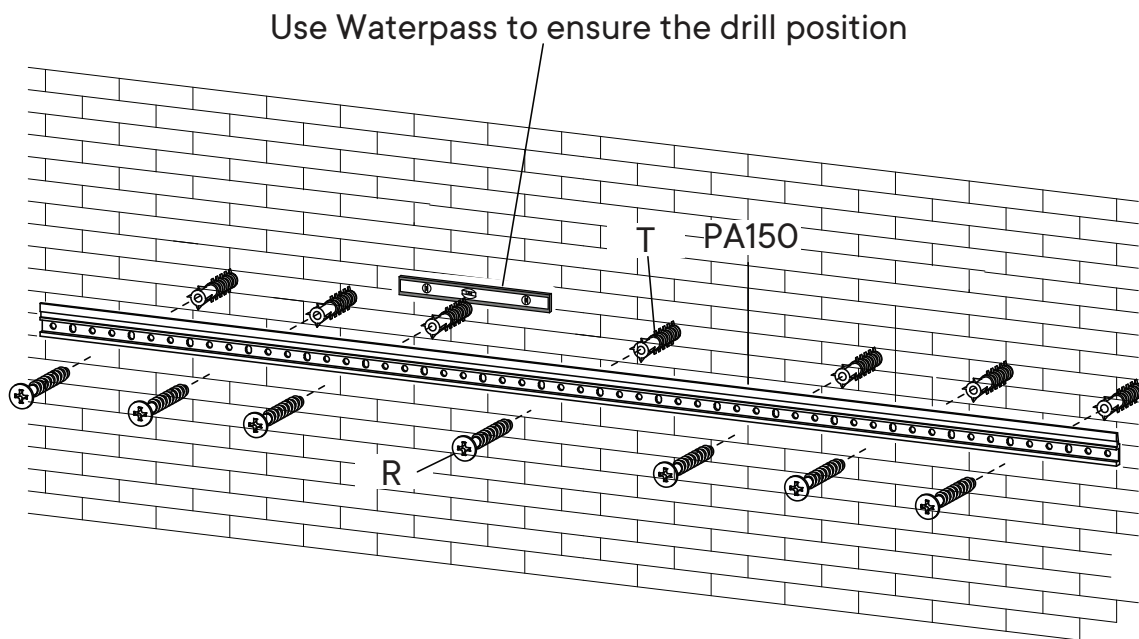



Step 14

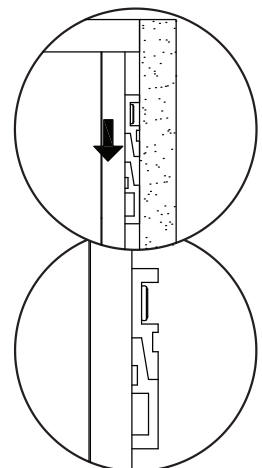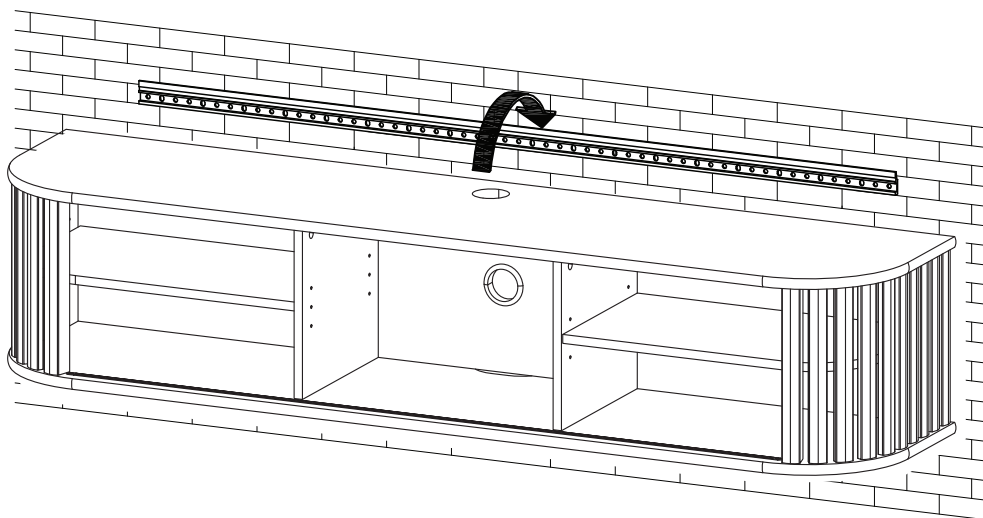

Step 15

HARDWARE

- Q** Wall Mounted Bolt x2

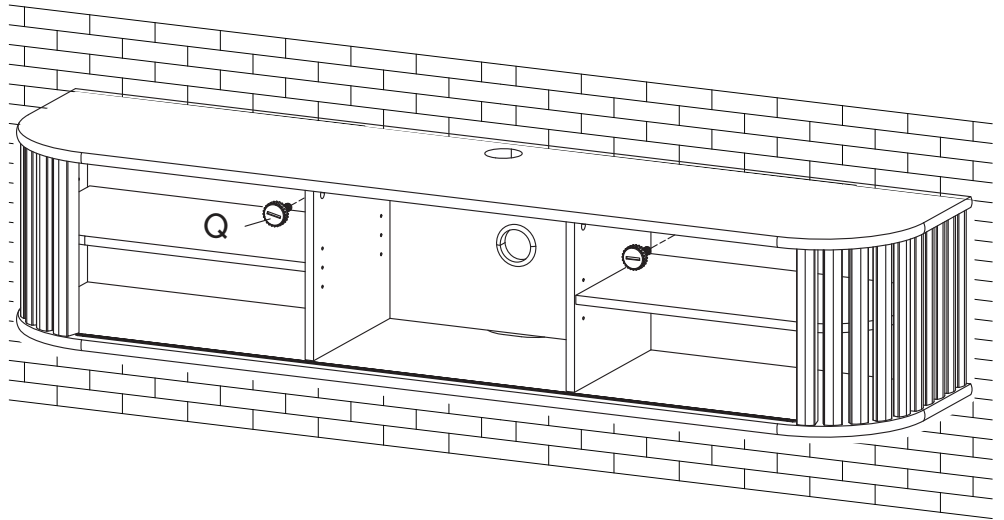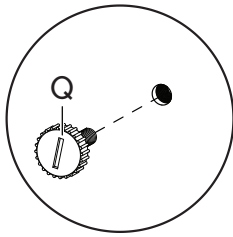



Step 16

HARDWARE

- I** Shelf Pin x4
L Grommet Cover x1

COMPONENTS

- 6** Adjustable Shelf 1 x1

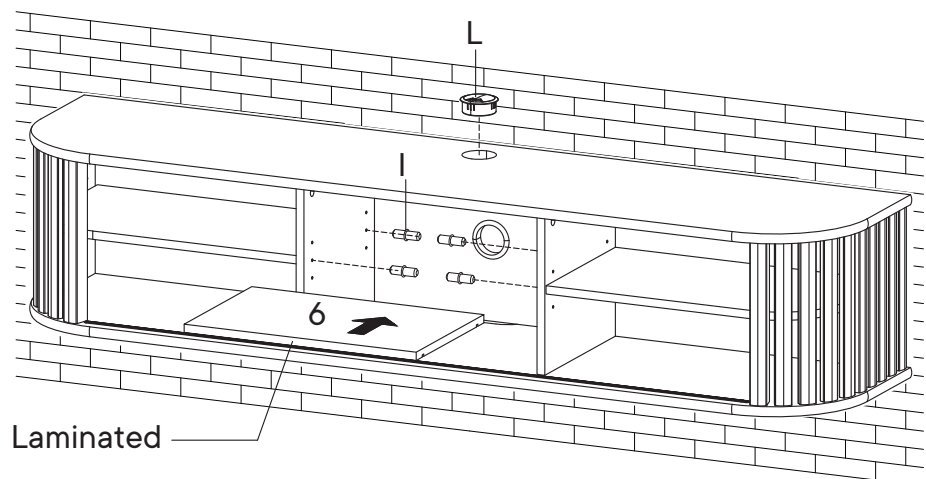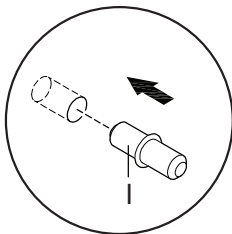


Step 17

HARDWARE

M	Sliding Top	x4
N	Sliding Bottom	x4
P	Screw M 3.5 x 13 mm	x16

COMPONENTS

10	Sliding Door	x2
-----------	--------------	----

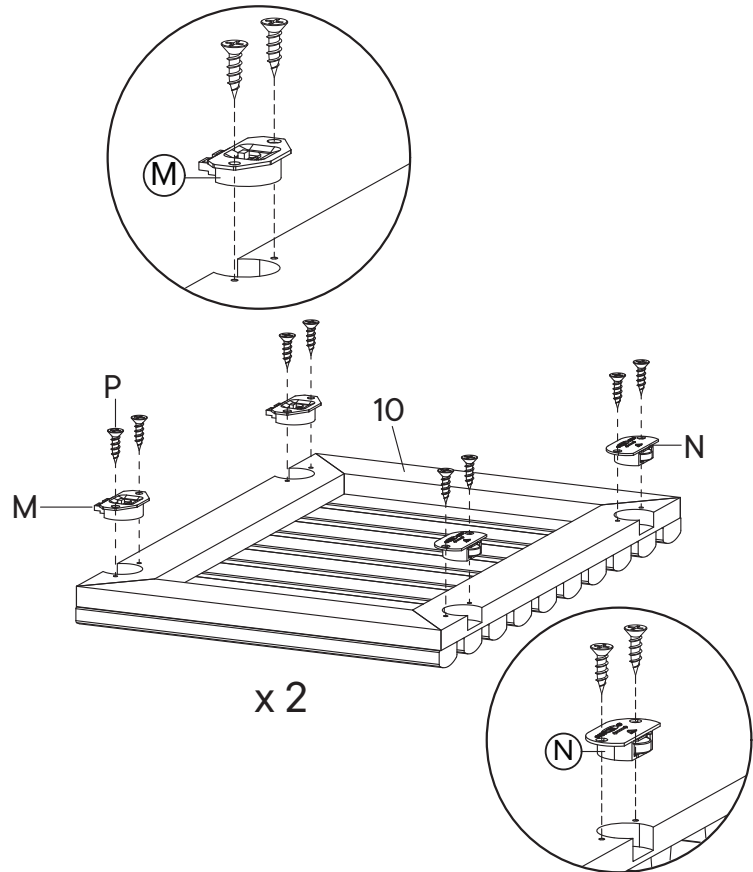


Step 18

HARDWARE

O	Silicon Bumper	x1
----------	----------------	----

COMPONENTS

10	Sliding Door	x2
-----------	--------------	----

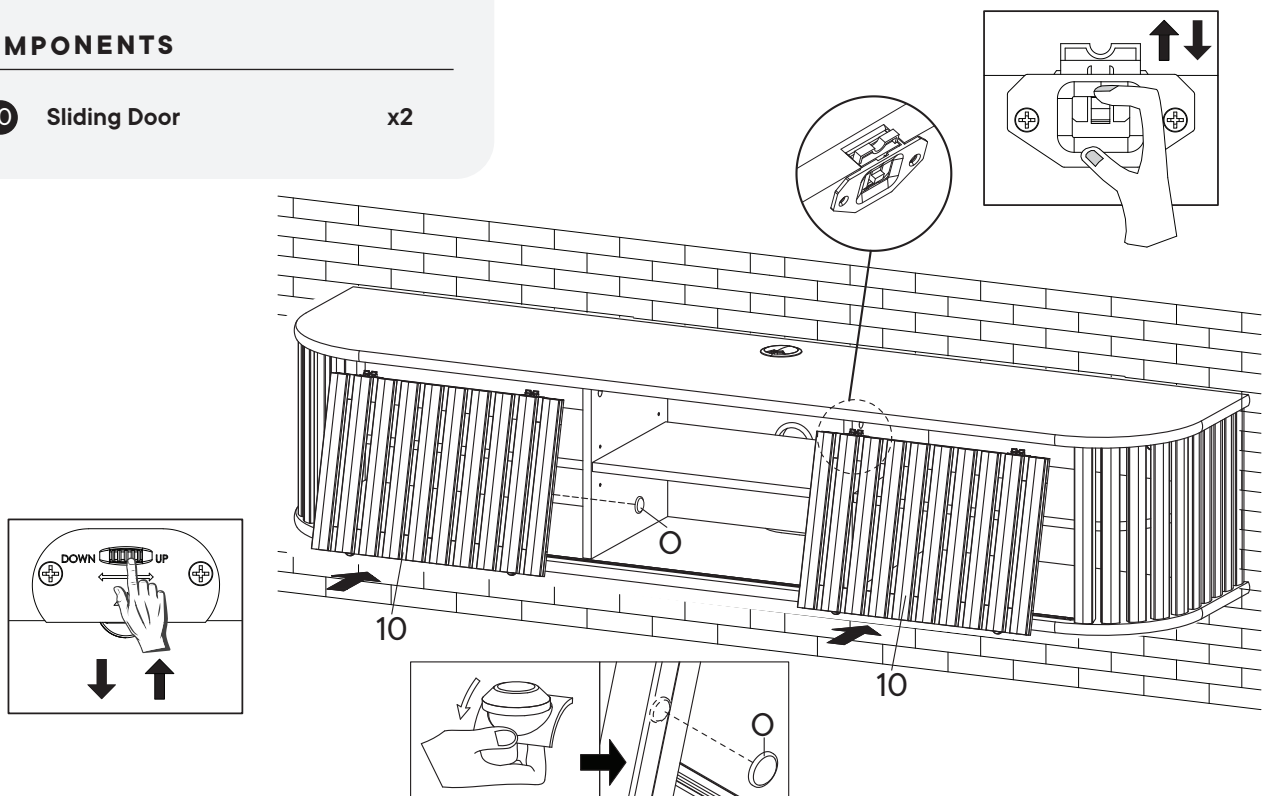

Great job!

TV Stand assembly is complete


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

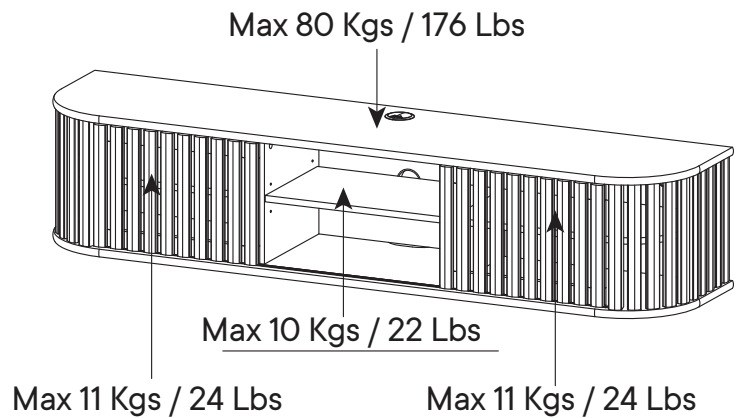

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.