


ASSEMBLY INSTRUCTIONS

EEI-7011

V0.13.03.24

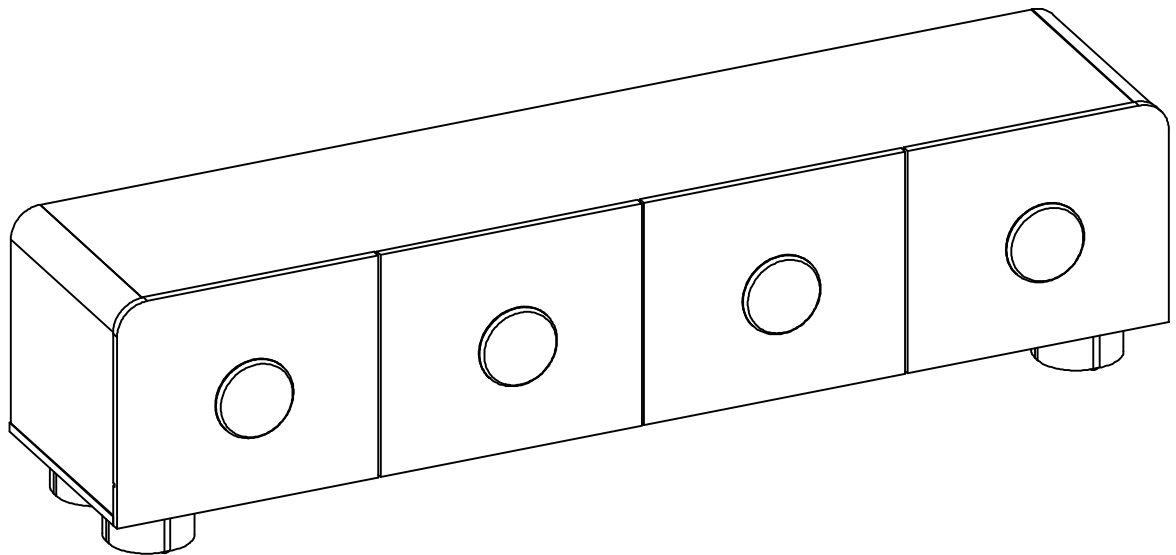

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.



Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top panel	x1
2	Bottom panel	x1
3	Right side panel	x1
4	Left side panel	x1
5	Divider panel	x2
6	Middle divider support	x1
7	Back support panel	x1
8	Leg	x4
9	Bottom support	x3
10	Back panel	x1
11	Front right drawer panel	x1
12	Front left drawer panel	x1
13	Front right middle drawer panel	x1
14	Front left middle drawer panel	x1
15	Right side drawer panel	x4
16	Left side drawer panel	x4
17	Side back drawer panel	x2
18	Middle back drawer panel	x2
19	Side bottom drawer panel	x2
20	Middle bottom drawer panel	x2
21	Handle	x4

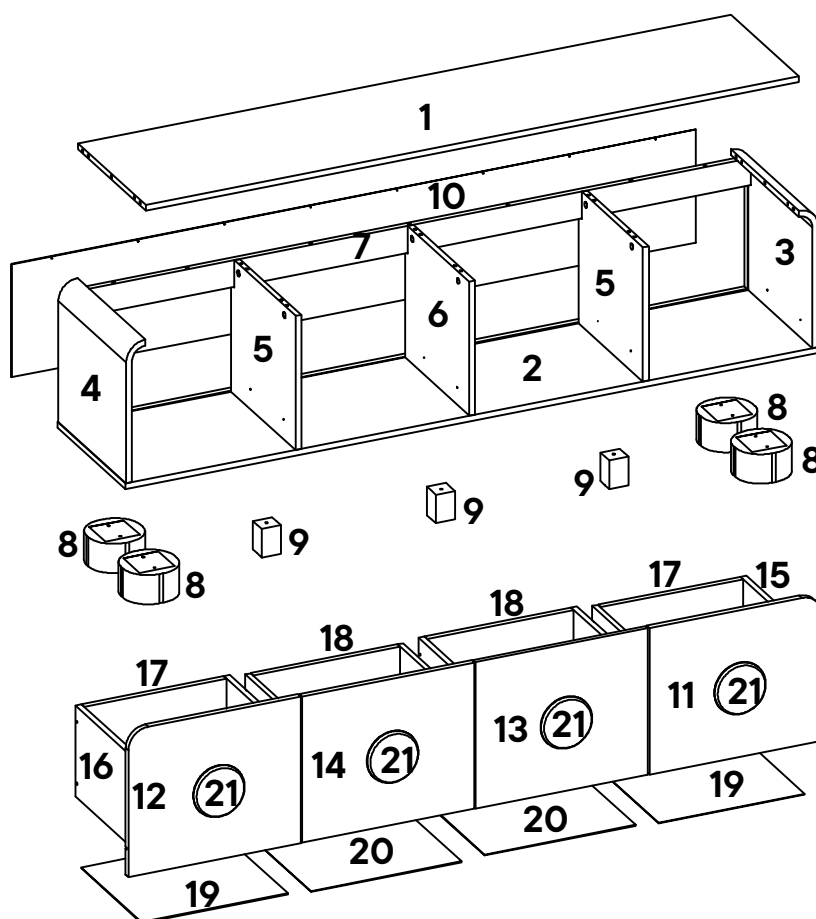


Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A.		Cam bolt Ø6 x 32 mm	x32
B.		Cam lock Ø15 mm	x32
C.		Cover Cap	x16
D.		Dowel Ø7.8 x 32 mm	x41
E.		Assembly Screw	x10
F.		Screw Ø8 x 37 mm	x16
G.		Screw Ø8 x 25 mm	x8
H.		Wood screw Ø6 x 12 mm	x40
I.		Screw Ø4 x 12 mm	x11
J.		Screw Ø6 x 19 mm	x17
K.		Wedge	x17
L.		Bolt M6 x 30 mm	x7
M.		Floor Glide	x16
N.		Drawer Runner A (L/R)	x4
O.		Drawer Runner B (L/R)	x4
P.		Adjustable leveller	x3
Q.		Barrel Nut	x3
R.		Allen key	x1
S.		Sticker	x4


What you need:



Phillips



Phillips Head Screwdriver



Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

COMPONENTS

1	Top Panel	x1
7	Back support Panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x10
D	Dowel Ø7.8 x 32 mm	x9

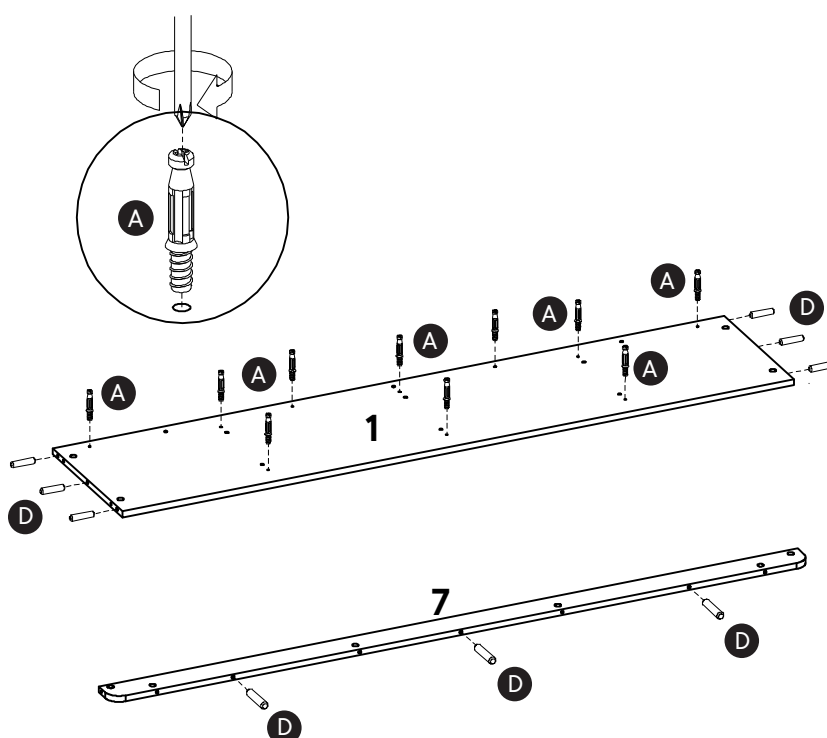


Step 2

COMPONENTS

1	Top Panel	x1
7	Back Support panel	x1

HARDWARE

B	Camlock Ø15 mm	x4
---	----------------	----

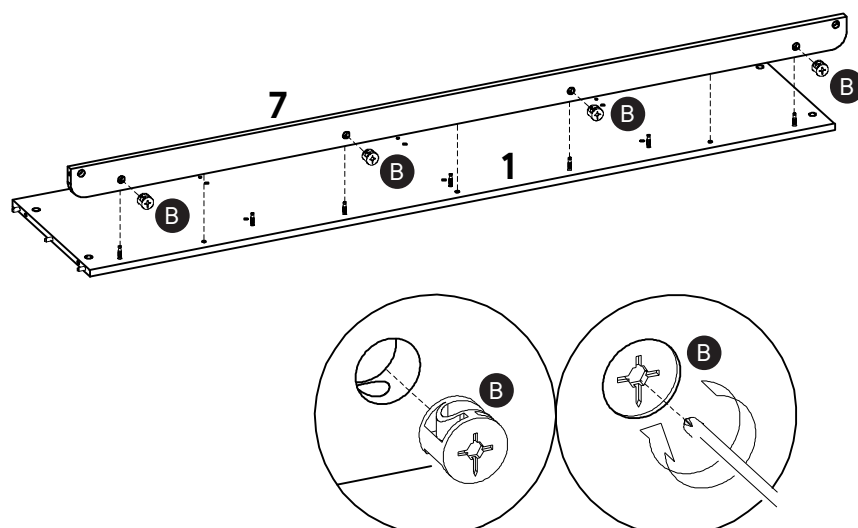




Step 3

COMPONENTS

3	Right side panel	x1
4	Left side Panel	x1
5	Divider Panel	x2
6	Middle divider Panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x6
D	Dowel Ø7.8 x 32 mm	x16
H	Wood screw Ø6 x 12 mm	x16
N	Drawer runner A (L/R)	x4

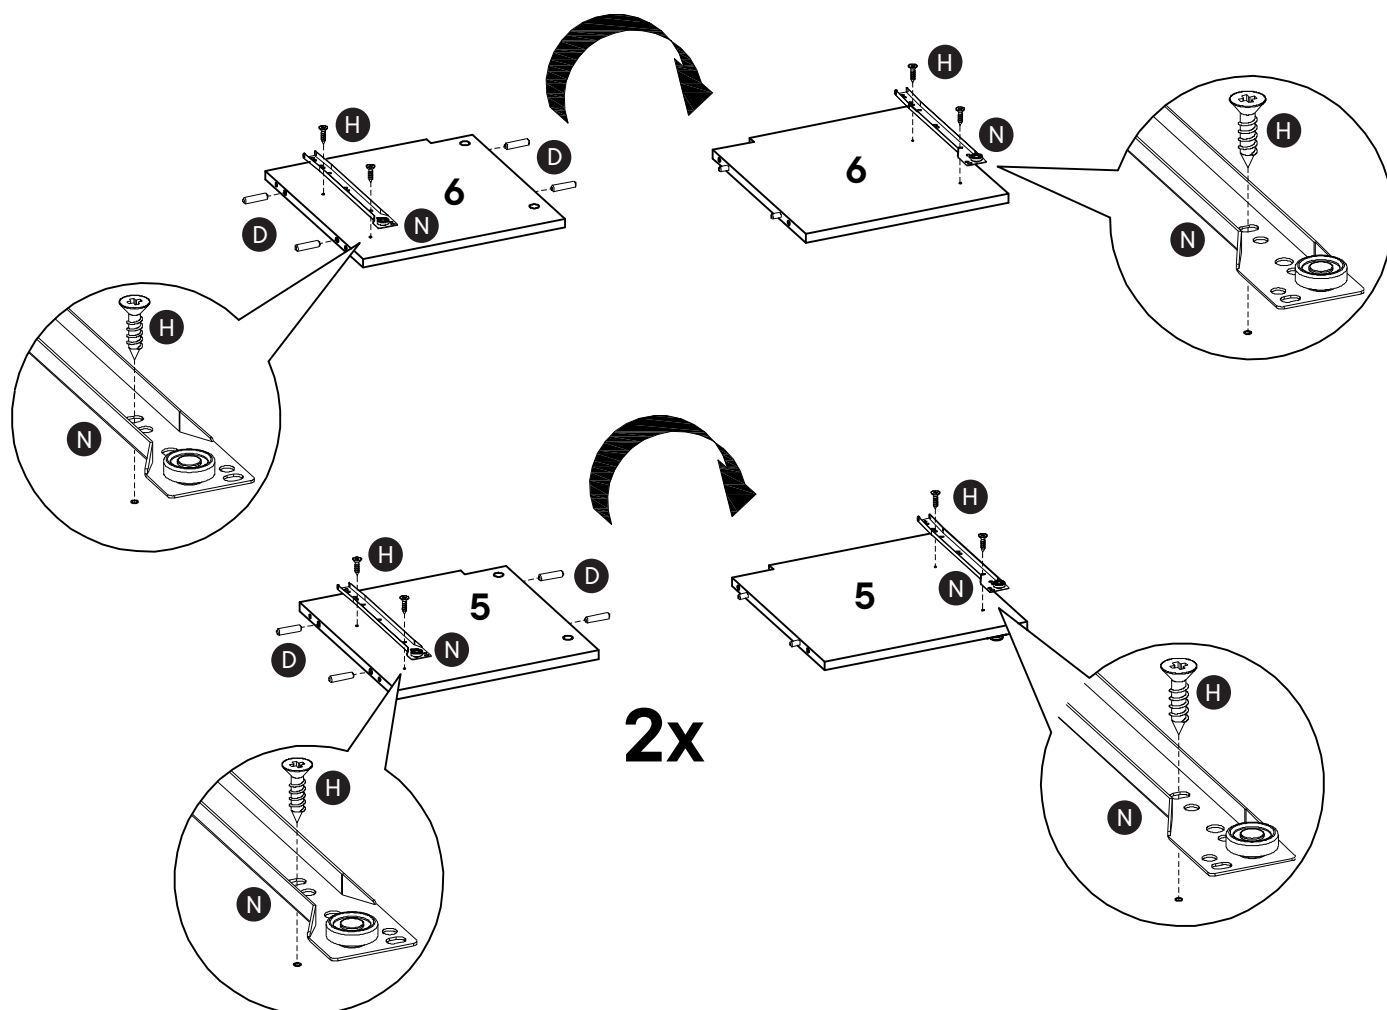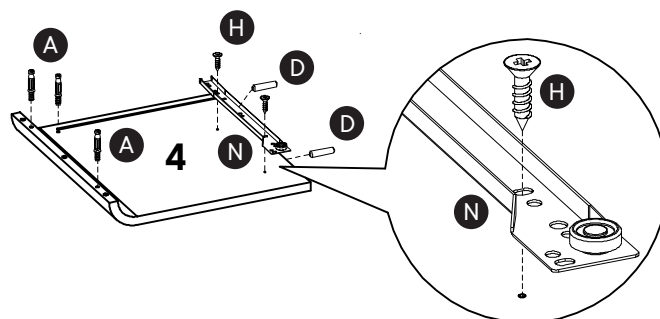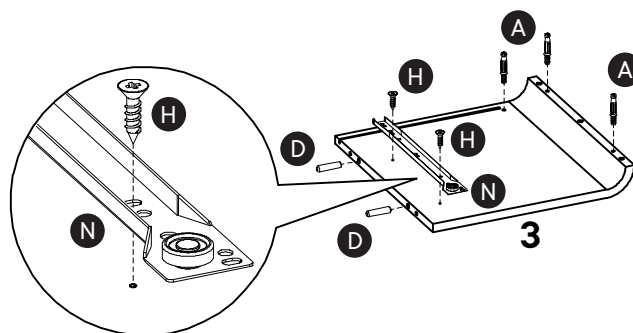



Step 4

COMPONENTS

1	Top Panel	x1
3	Right side panel	x1
4	Left side panel	x1
5	Divider Panel	x2
6	Middle divider support	x1

HARDWARE

B	Camlock Ø15 mm	x12
---	----------------	-----

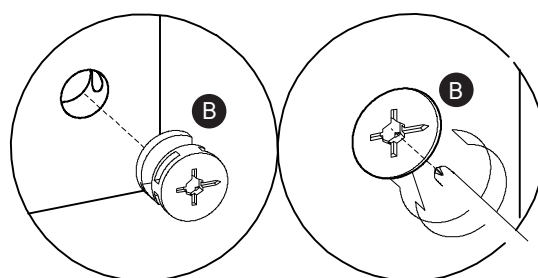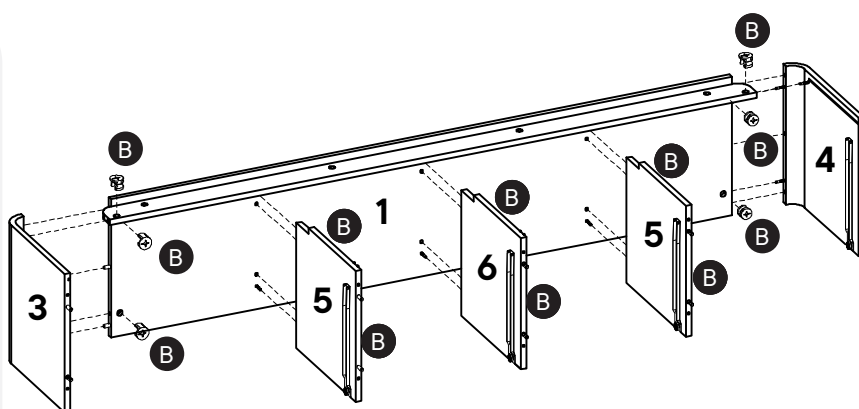



Step 5

COMPONENTS

9	Bottom support	x3
10	Back panel	x1

HARDWARE

P	Adjustable leveller	x3
Q	Barrel Nut	x3

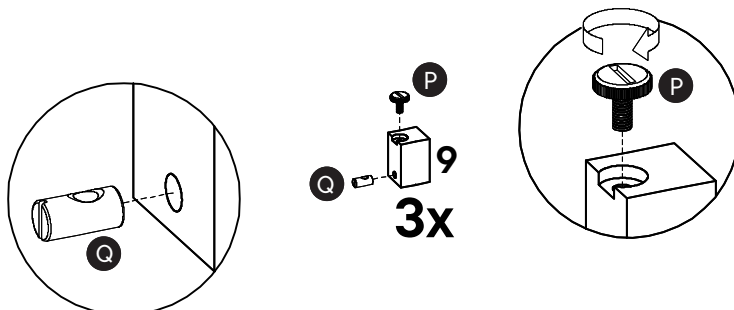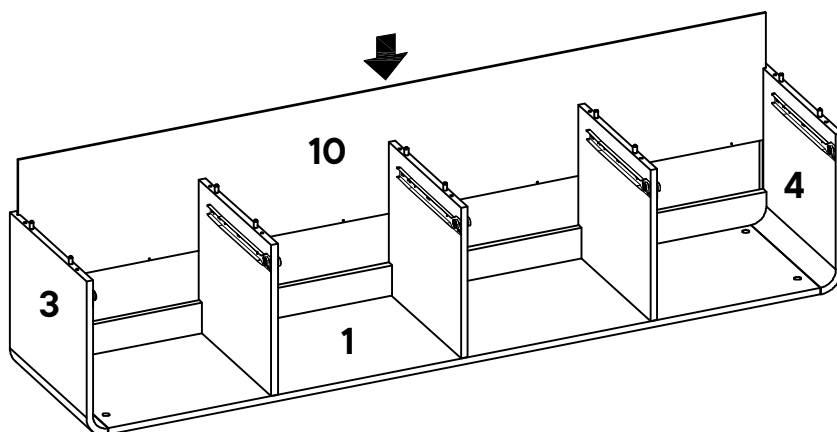


Step 6

COMPONENTS

2	Bottom panel	x1
9	Bottom support	x3

HARDWARE

L	Bolt M6 x 30 mm	x3
R	Allen key	x1

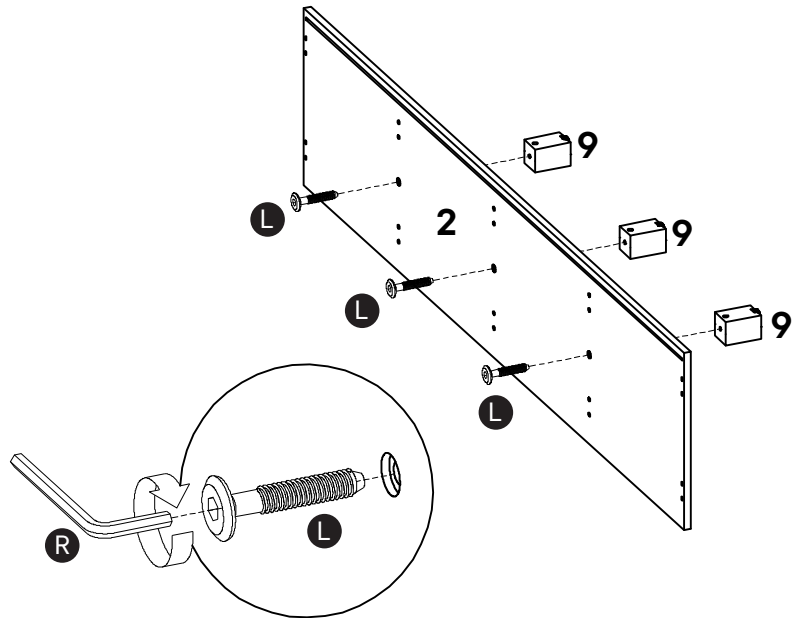


Step 7

COMPONENTS

8	Leg	x4
2	Bottom panel	x1

HARDWARE


E	Assembly screw	x10
G	Screw Ø8 x 25 mm	x8
M	Floor glide	x16

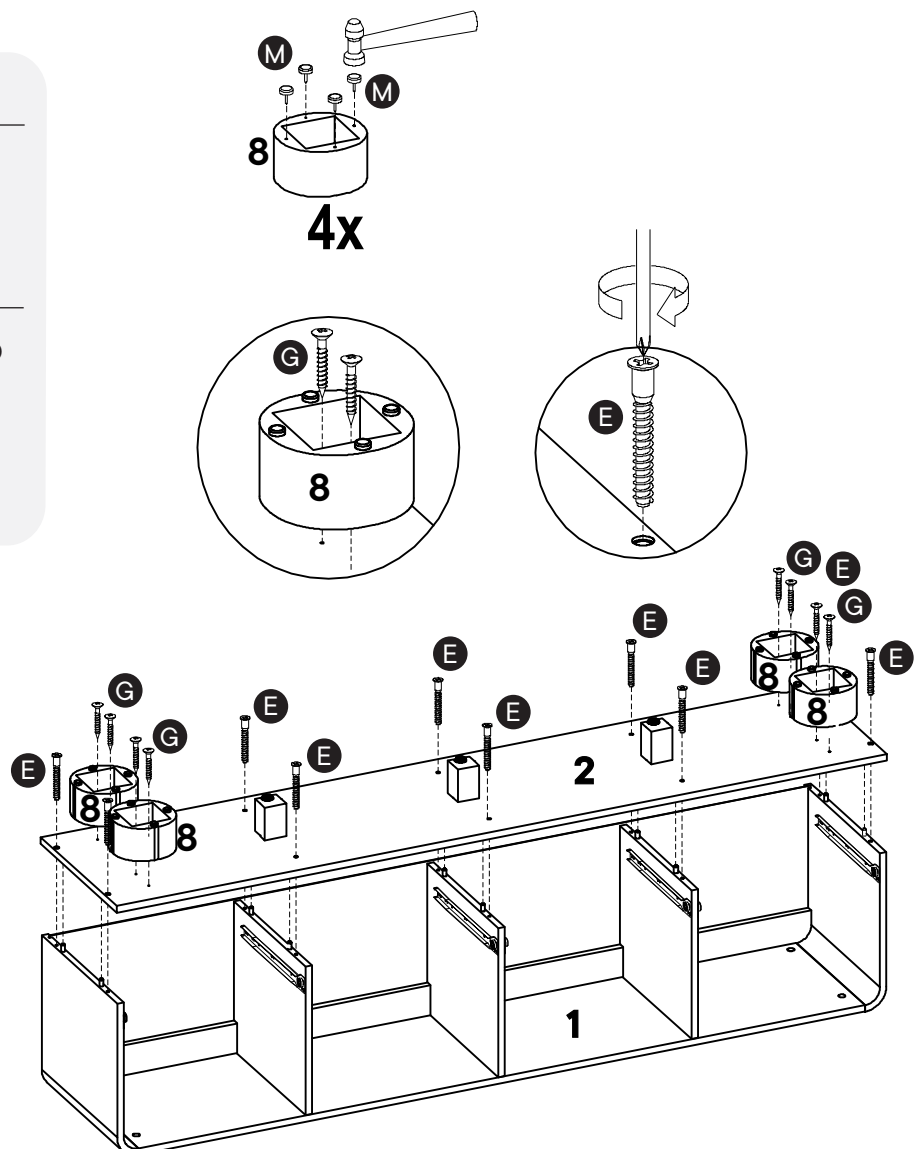

Step 8

HARDWARE

I	Screw Ø4 x 13 mm	x11
J	Screw Ø6 x 19 mm	x9
K	Wedge	x9

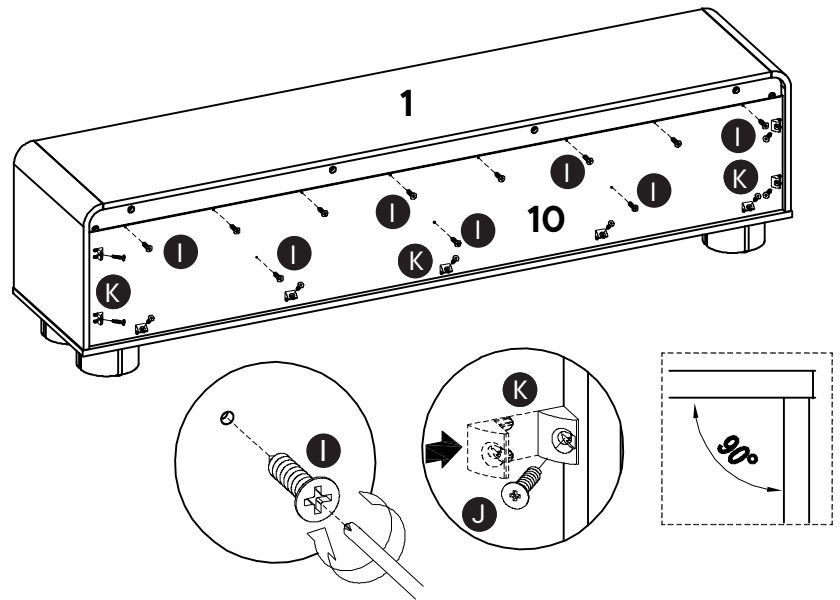







Step 9

COMPONENTS

11	Front right drawer panel	x1
12	Front left drawer panel	x1
13	Front right middle drawer	x1
14	Front left middle drawer	x1
15	Right side drawer panel	x4
16	Left side drawer panel	x4

HARDWARE

A	Cambolt Ø6 x 32 mm	x16
D	Dowel Ø7.8 x 32 mm	x16

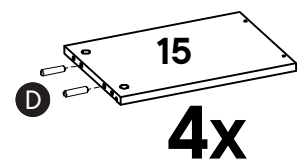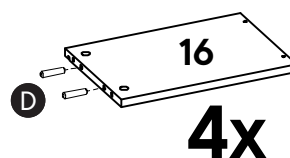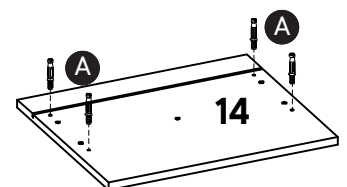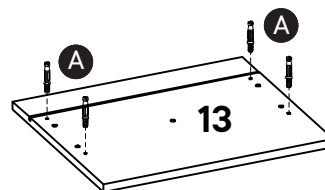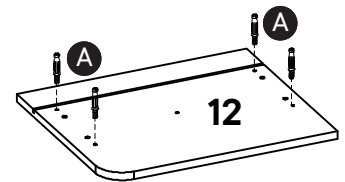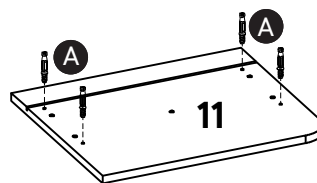


Step 10

COMPONENTS

11	Front right drawer panel	x1
15	Right side drawer panel	x1
16	Left side drawer panel	x1
17	Back drawer panel	x1
19	Bottom drawer panel	x1

HARDWARE

B	Camlock Ø15 mm	x4
C	Cover Cap	x4
F	Screw Ø8 x 37 mm	x4

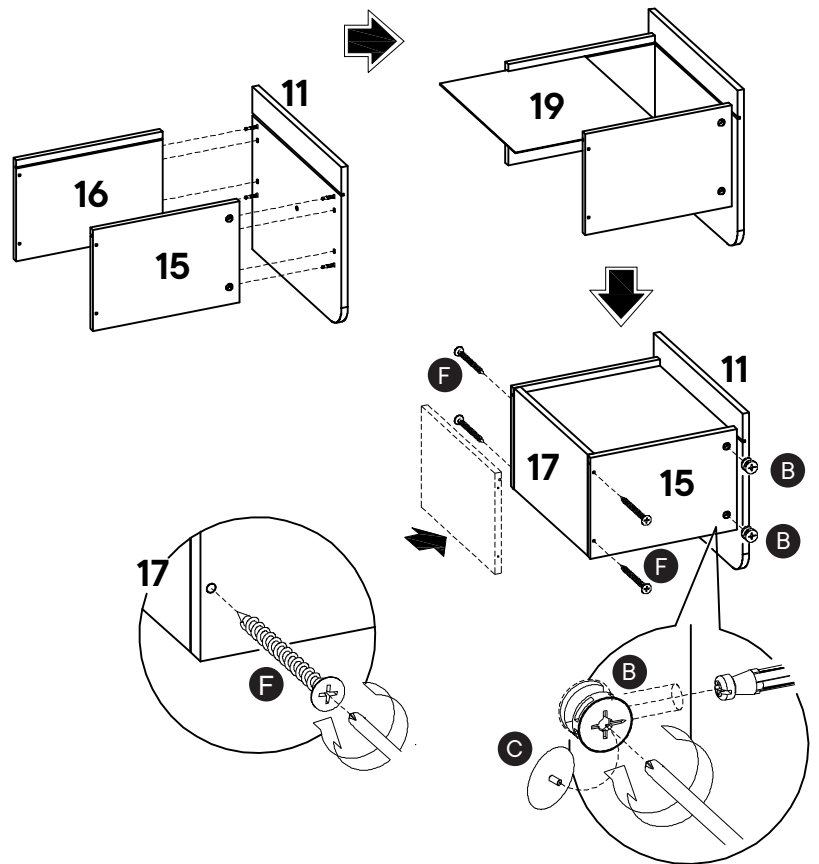


Step 11

COMPONENTS

12	Front left drawer panel	x1
15	Right side drawer panel	x1
16	Left side drawer panel	x1
17	Back drawer panel	x1
19	Bottom drawer panel	x1

HARDWARE

B	Camlock Ø15 mm	x4
C	Cover Cap	x4
F	Screw Ø8 x 37 mm	x4

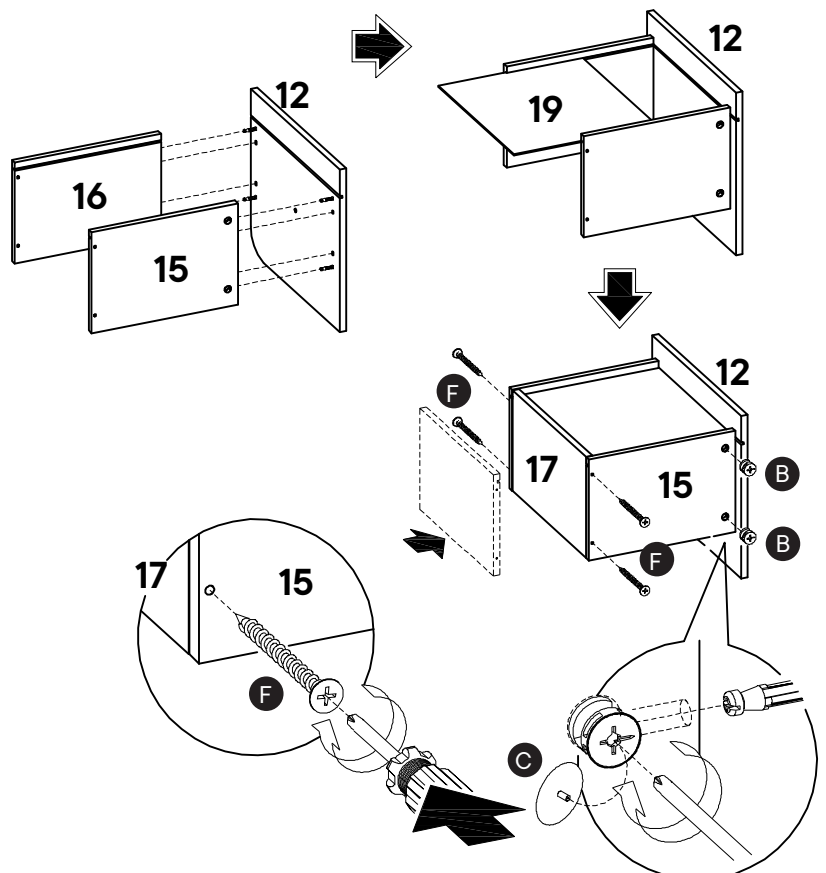


Step 12

COMPONENTS

13	Front right mid drawer panel	x1
15	Right side drawer panel	x1
16	Left side drawer panel	x1
18	Middle Back drawer panel	x1
20	Middle Bottom drawer panel	x1

HARDWARE

B	Camlock Ø15 mm	x4
C	Cover Cap	x4
F	Screw Ø8 x 37 mm	x4

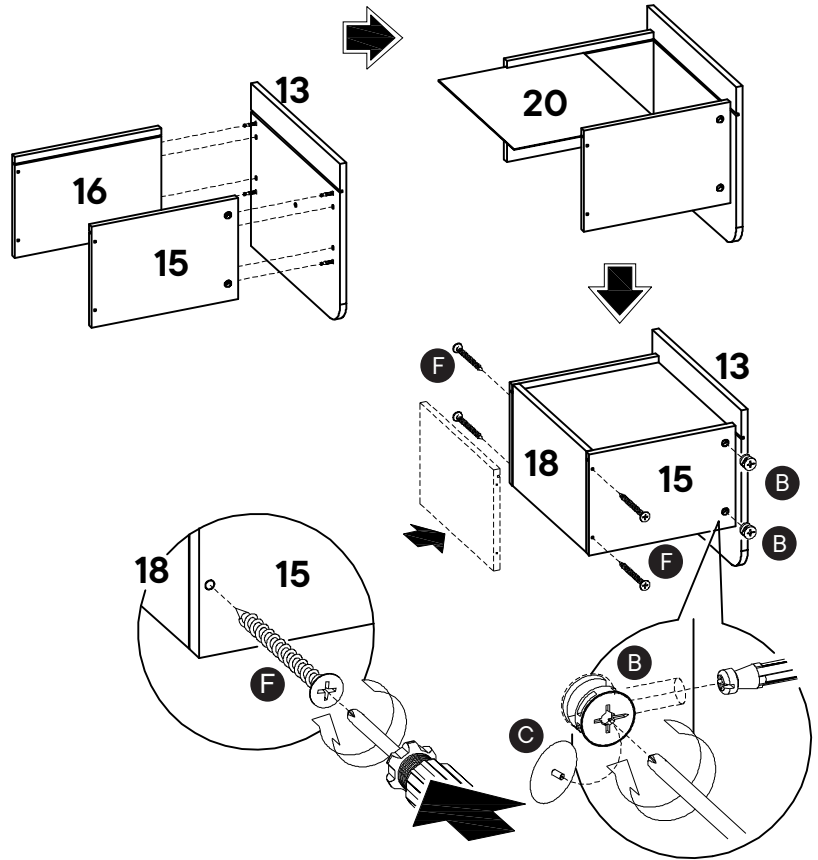


Step 13

COMPONENTS

14	Front left mid drawer panel	x1
15	Right side drawer panel	x1
16	Left side drawer panel	x1
18	Middle Back drawer panel	x1
20	Middle Bottom drawer panel	x1

HARDWARE


B	Camlock Ø15 mm	x4
C	Cover Cap	x4
F	Screw Ø8 x 37 mm	x4

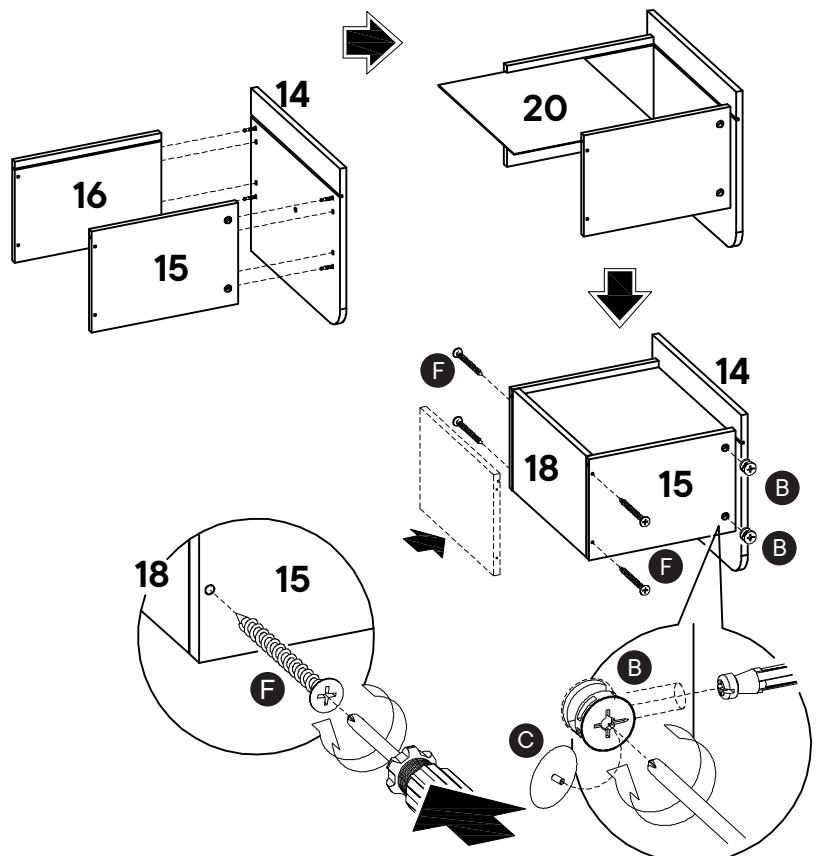

Step 14

HARDWARE

H	Wood Screw Ø6 x 12 mm	x16
K	Wedge	x8
J	Screw Ø6 x 19 mm	x8
O	Running drawer B (L/R)	x4

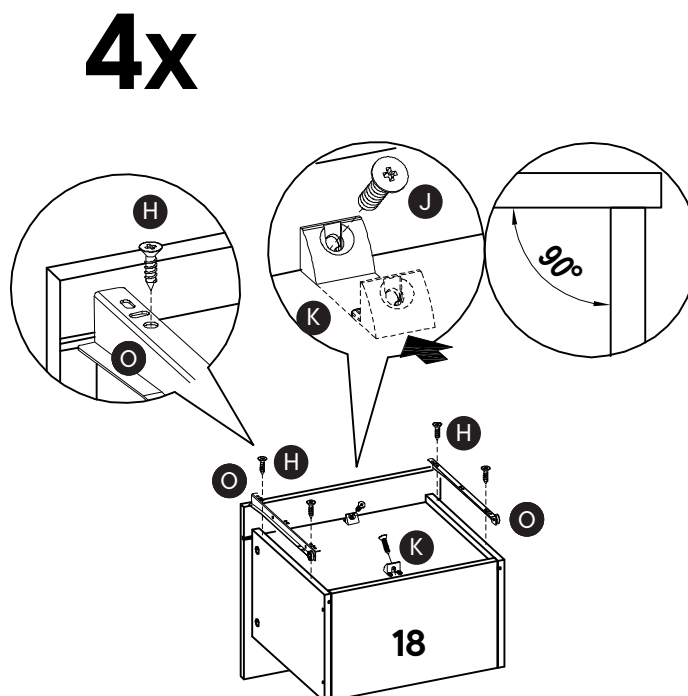

Step 15

4x



COMPONENTS

21	Handle	x4
-----------	--------	----

HARDWARE

L	Bolt M6 x 30 mm	x4
R	Allen key	x1
S	Sticker	x4



The handle's grain direction

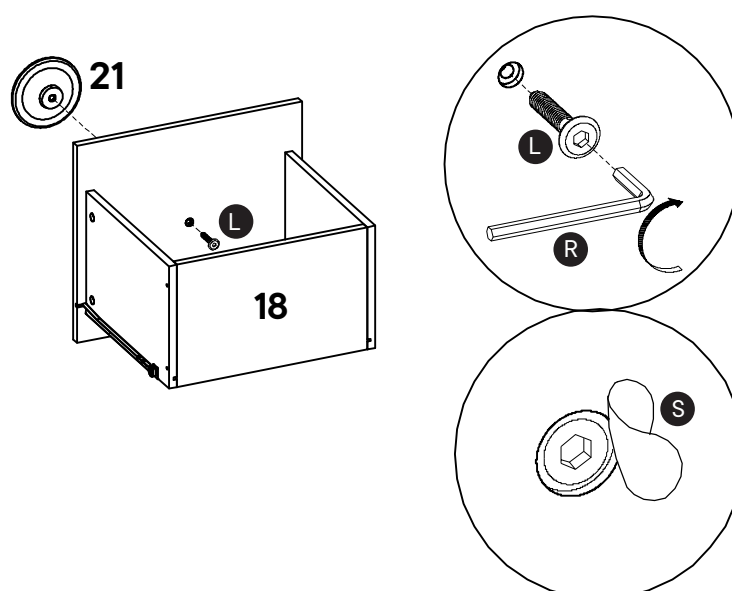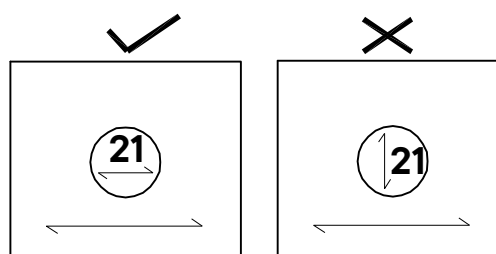

Step 16

HARDWARE

H Wood Screw Ø6 x 12 mm x8

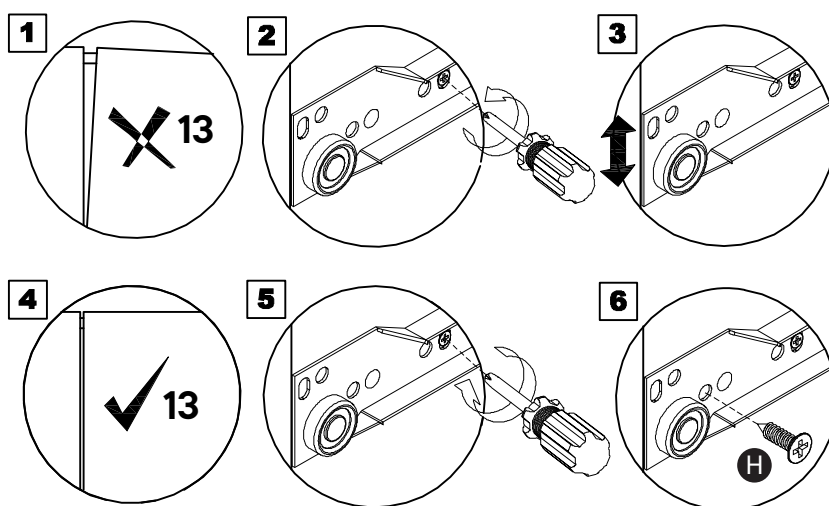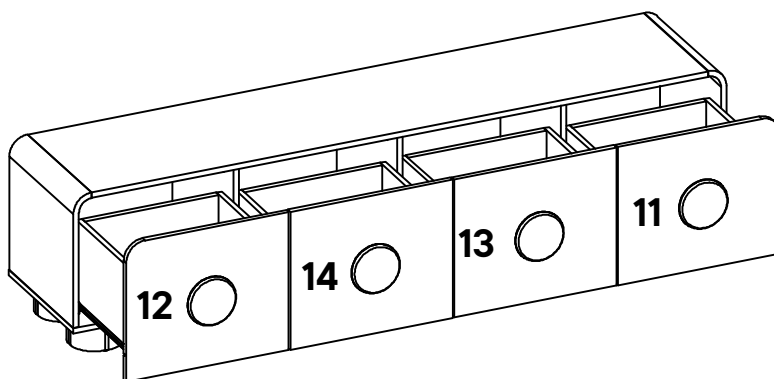

Great job!


Your TV Stand is complete.

♥ CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

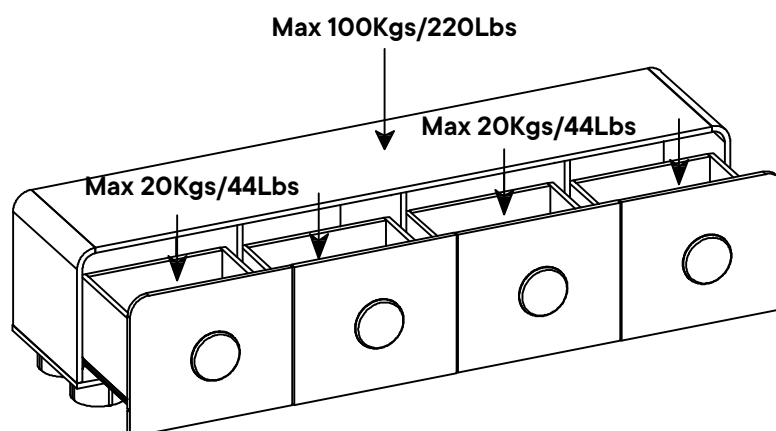

CONNECT WITH US!

Tag us @modway_furniture and #modway for a chance to be featured.