


ASSEMBLY INSTRUCTIONS

EEI-6966

V0.03.08.24

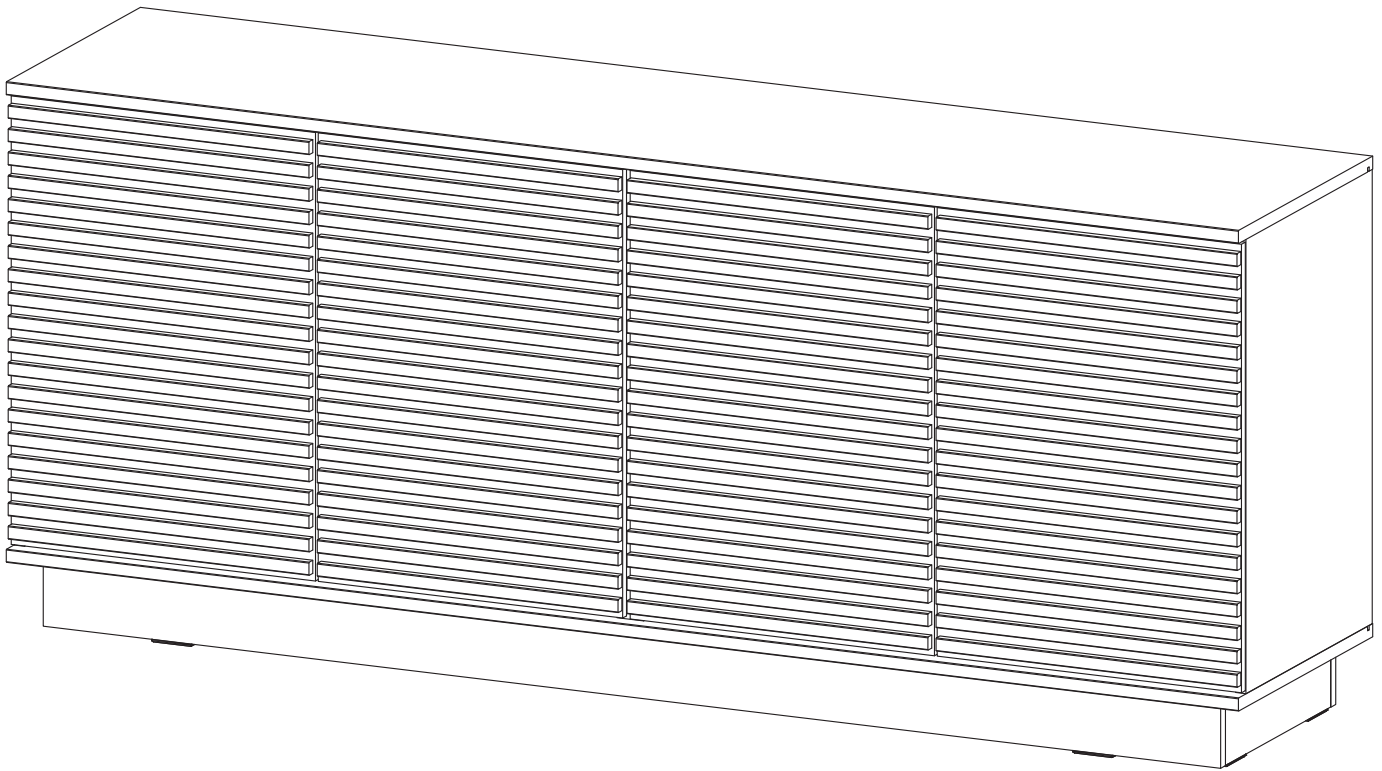

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:


1	Top Board	x1
2	Bottom Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board	x1
6	Adjustable Shelf	x2
7	Bottom Skirt 1	x2
8	Bottom Skirt 2	x3
9	Door	x4
10	Back Board	x4

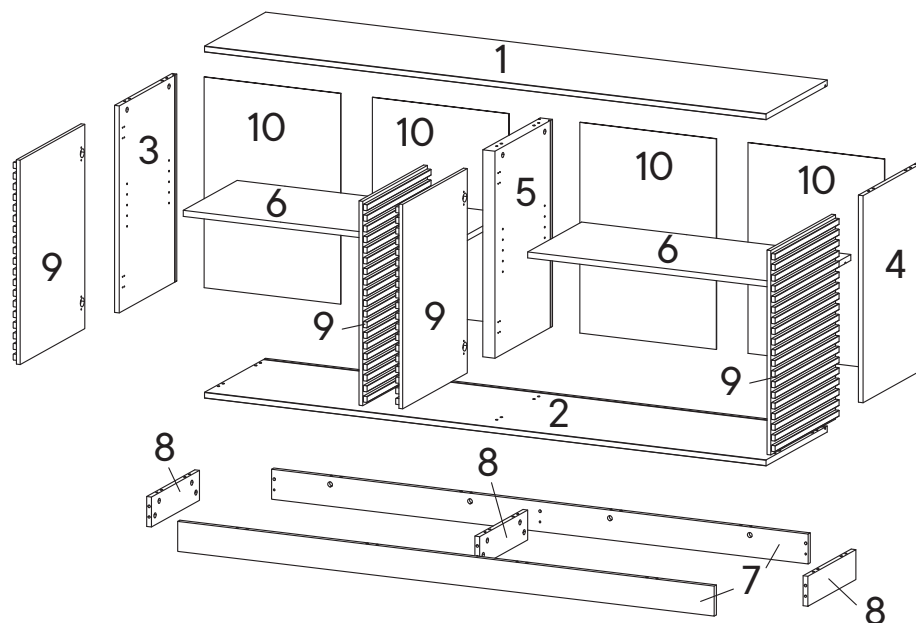

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x26
B		Cam Lock Ø15 mm	x26
C		Wood Dowel Ø8 x 30 mm	x32
D		Screw M 7 x 50 mm	x6
E		Allen Key	x2
F		Shelf Pin	x8
G		Screw M 3.5 x 13 mm	x8
H		Screw M 4.5 x 12.5 mm	x48
I		Screw M 3.5 x 15.5 mm	x20
J		Wedge	x20
K		Floor Glide	x10
L		Push Tool	x4
M		Joining Strip	x2
HS26A		Hinge	x8

What you need:



Components Carton Placement

Carton 1 of 2

Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board	x1
9	Door	x4
10	Back Board	x4
	Hardware Pack	x1

Carton 2 of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
6	Adjustable Shelf	x2
7	Bottom Skirt 1	x2
8	Bottom Skirt 2	x3

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE


A	Cam Bolt Ø6 x 35 mm	x6
C	Wood Dowel Ø8 x 30 mm	x12
G	Screw M 3.5 x 13 mm	x8
L	Push Tool	x4

COMPONENTS

1	Top Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board	x1

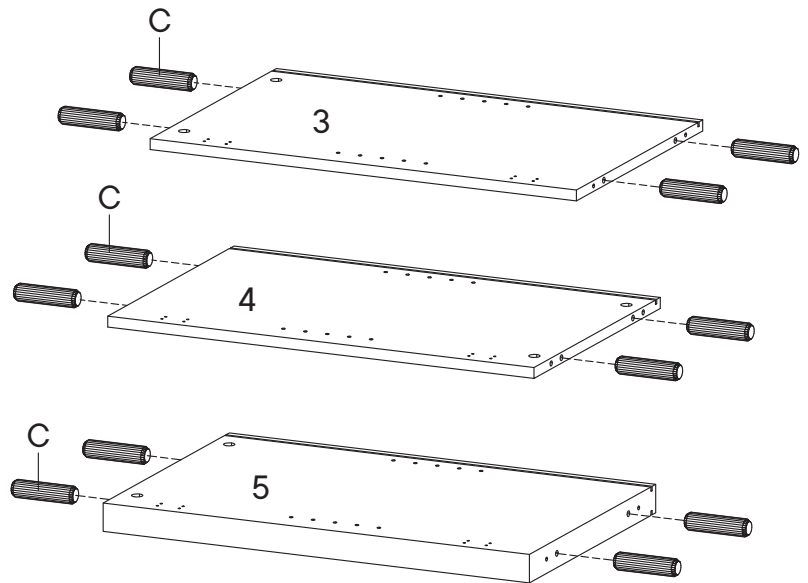

CORRECT SITTING POSITION

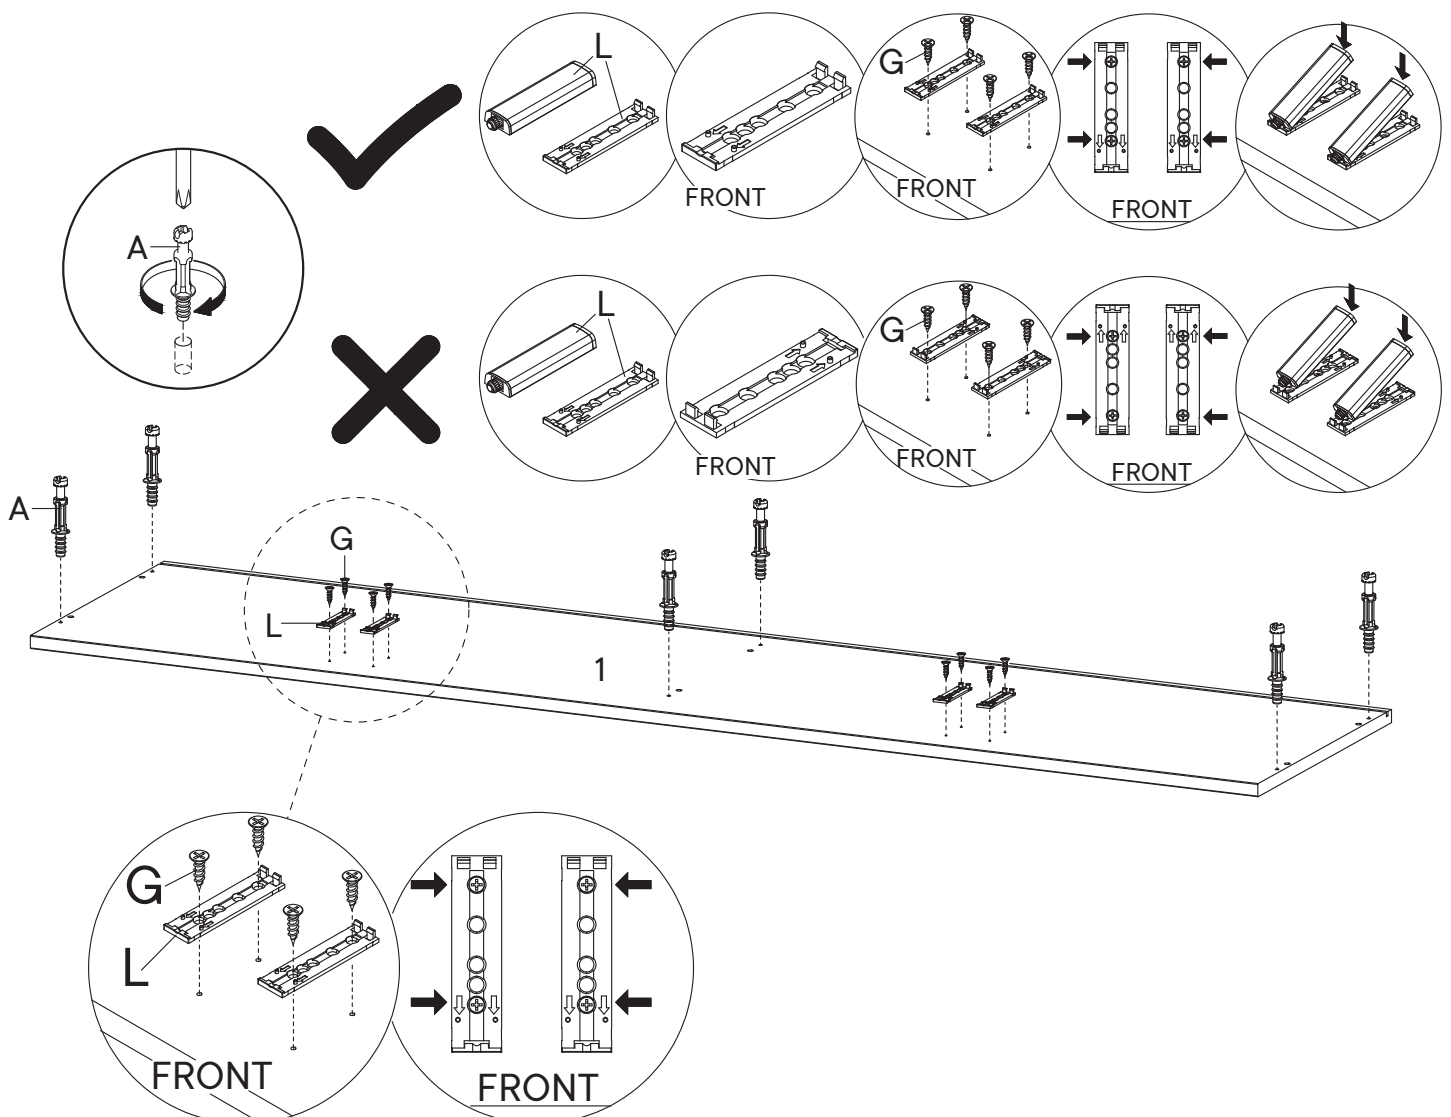


Step 2

HARDWARE

- B** Cam Lock Ø15 mm x6

COMPONENTS

- 1** Top Board x1
3 Side Board Left x1
4 Side Board Right x1
5 Center Board x1

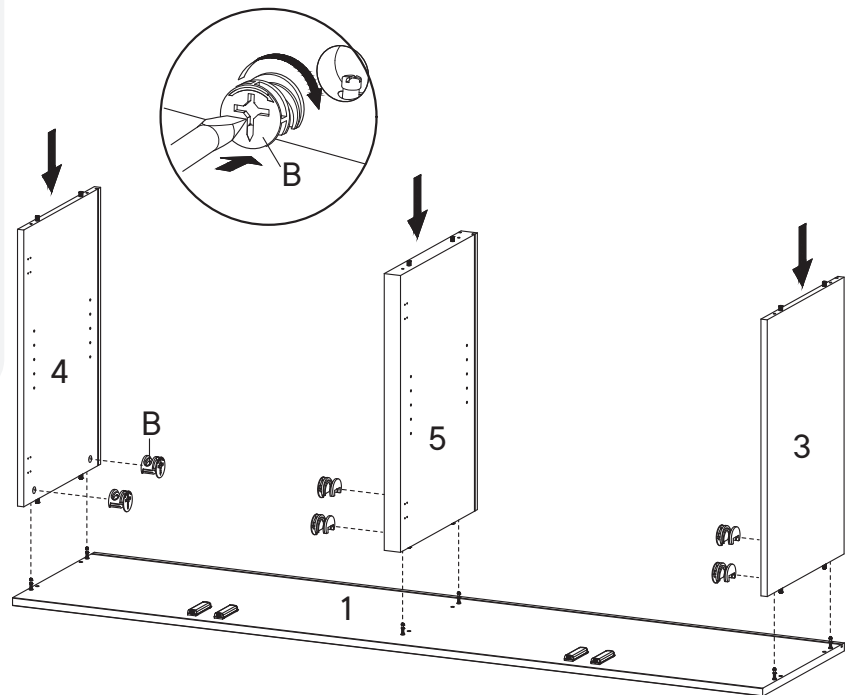



Step 3

HARDWARE

- M** Joining Strip x2

COMPONENTS

- 10** Back Board x4

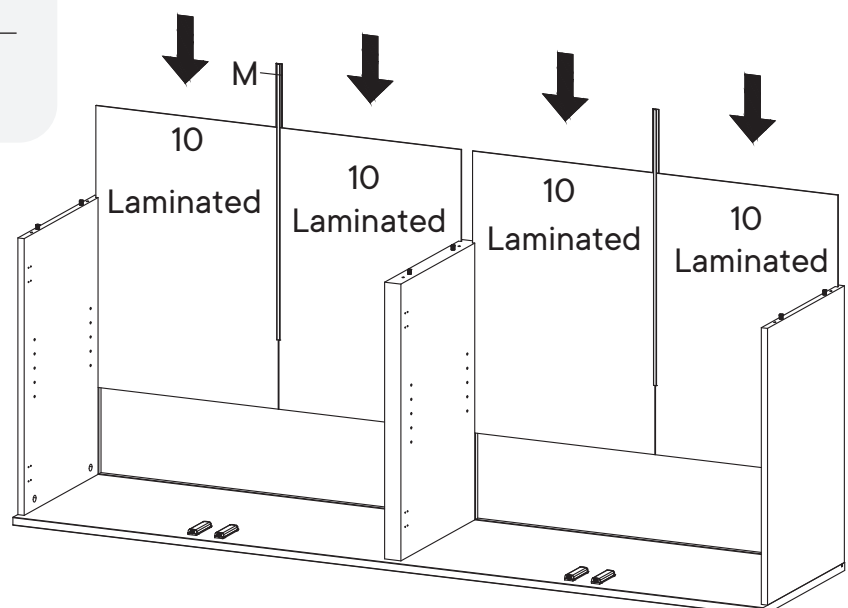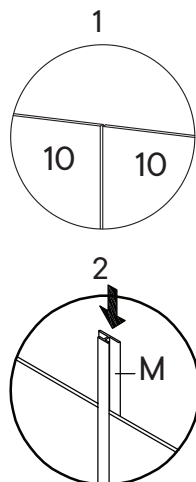


Step 4

HARDWARE

- D** Screw M 7 x 50 mm x6
- E** Allen Key x1

COMPONENTS



- 2** Bottom Board x1

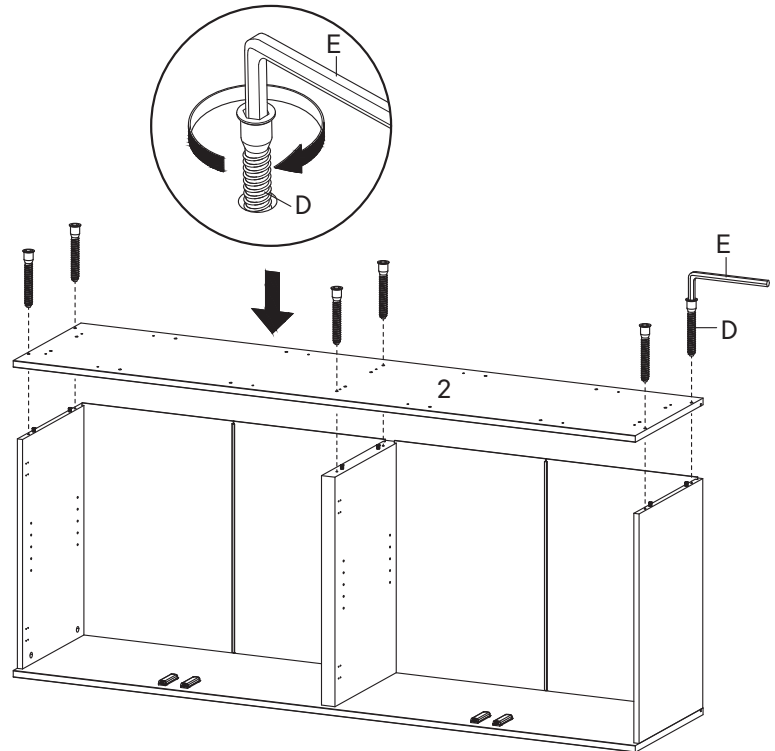

Step 5

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x14

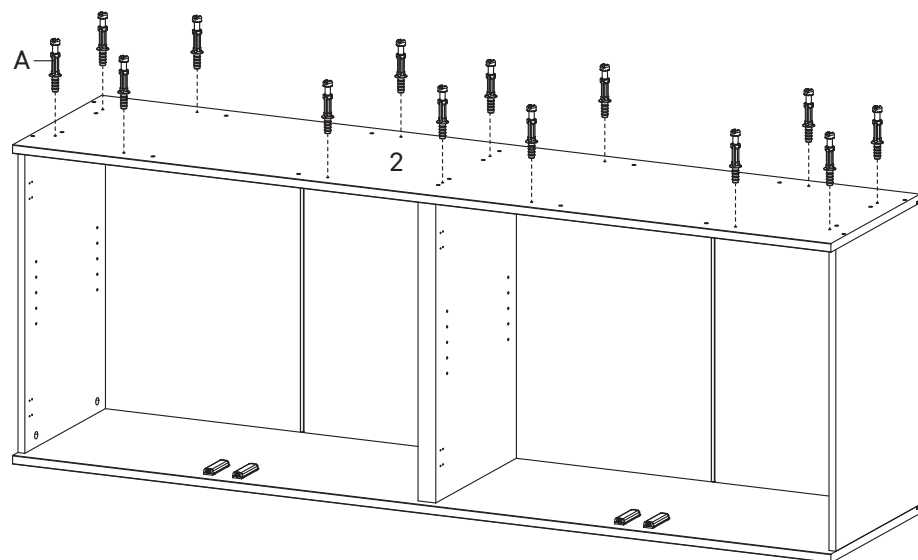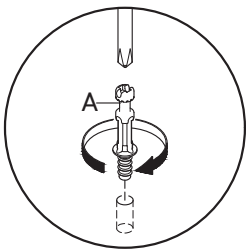


Step 6

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x6
- C** Wood Dowel Ø8 x 30 mm x6

COMPONENTS

- 7** Bottom Skirt 1 x2
- 8** Bottom Skirt 2 x3

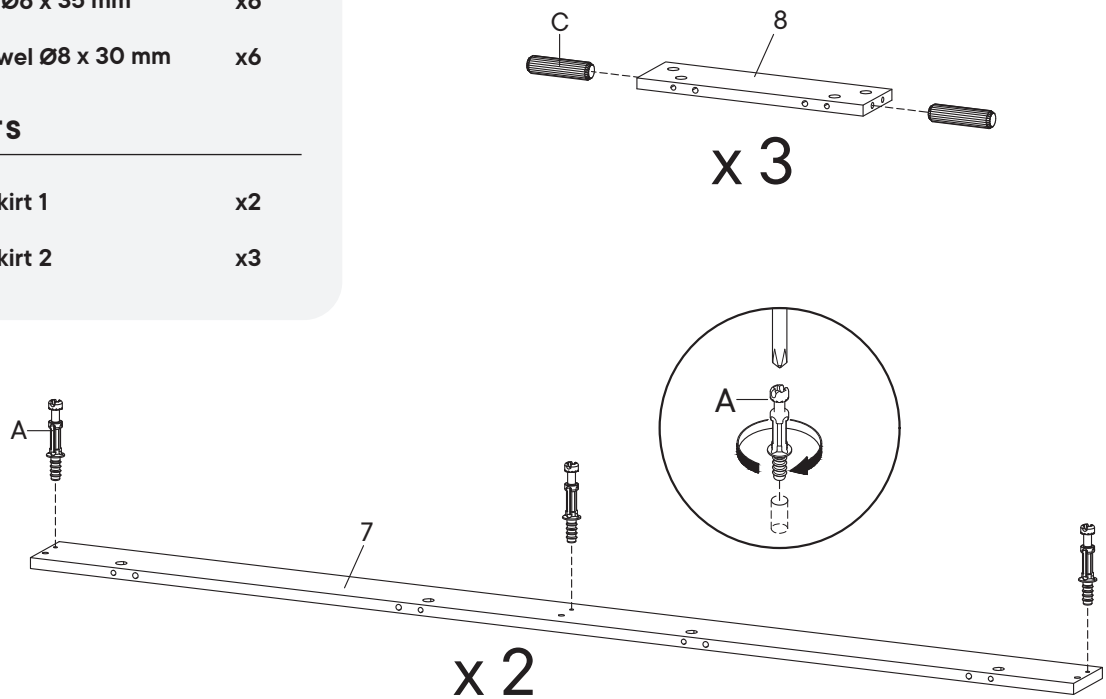


Step 7

HARDWARE

- B** Cam Lock Ø15 mm x6

COMPONENTS


- 7** Bottom Skirt 1 x2
- 8** Bottom Skirt 2 x3

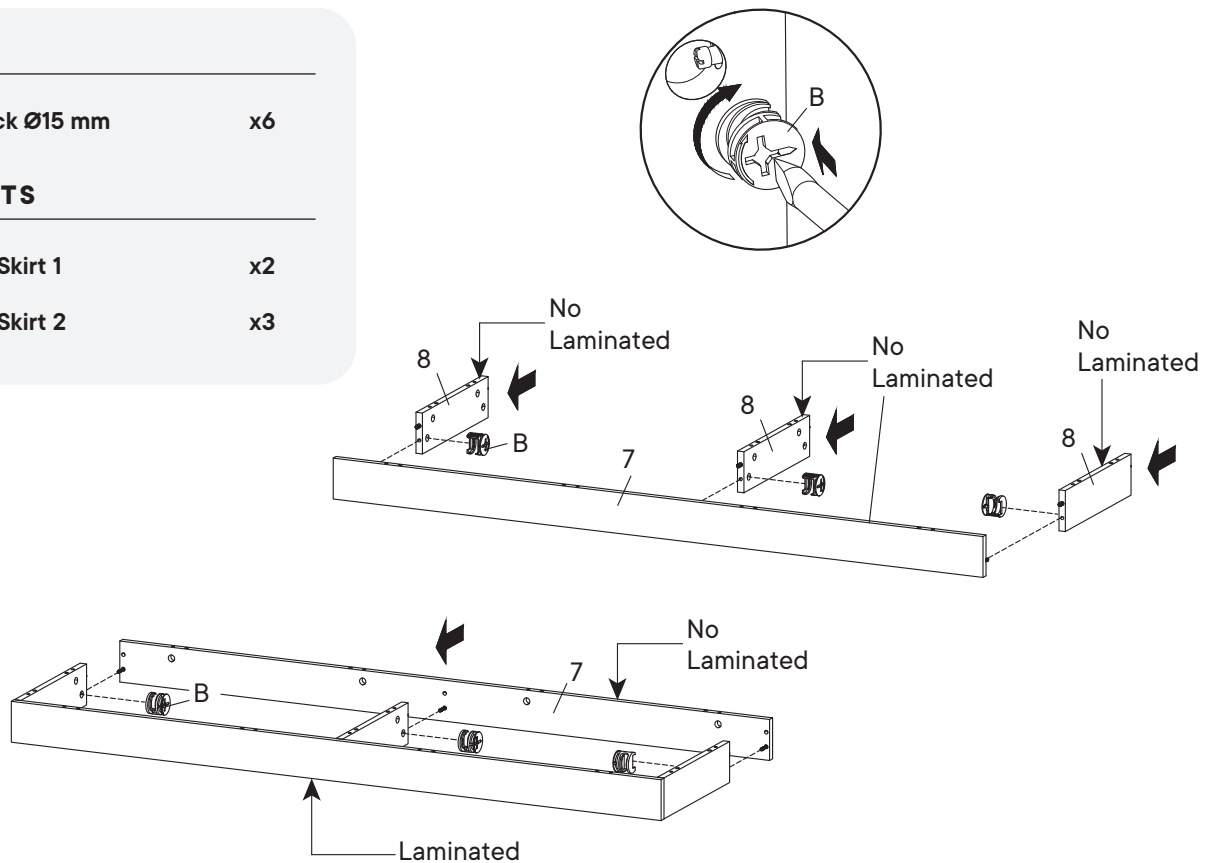

Step 8

HARDWARE



C Wood Dowel Ø8 x 30 mm x14

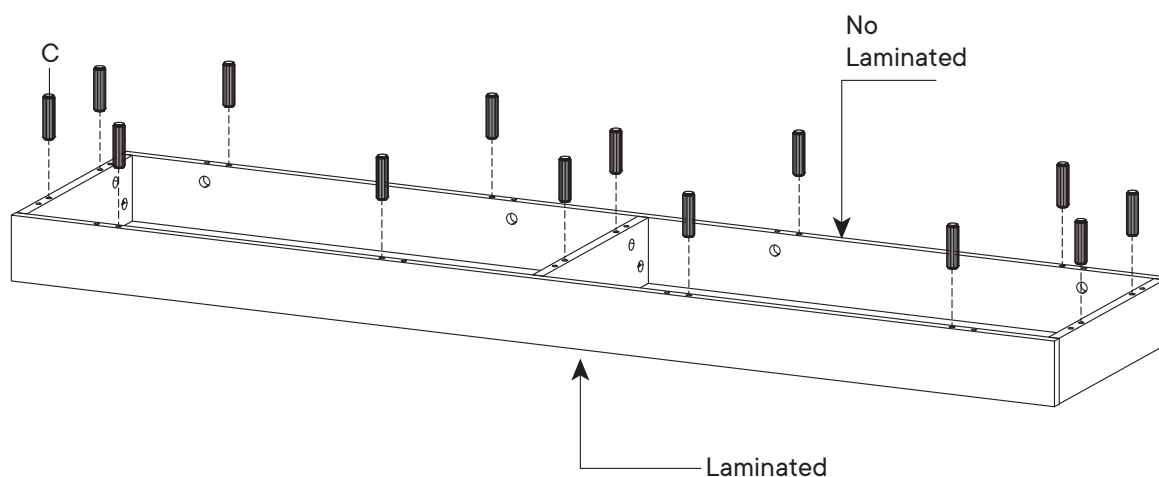

Step 9

HARDWARE


B Cam Lock Ø15 mm x14

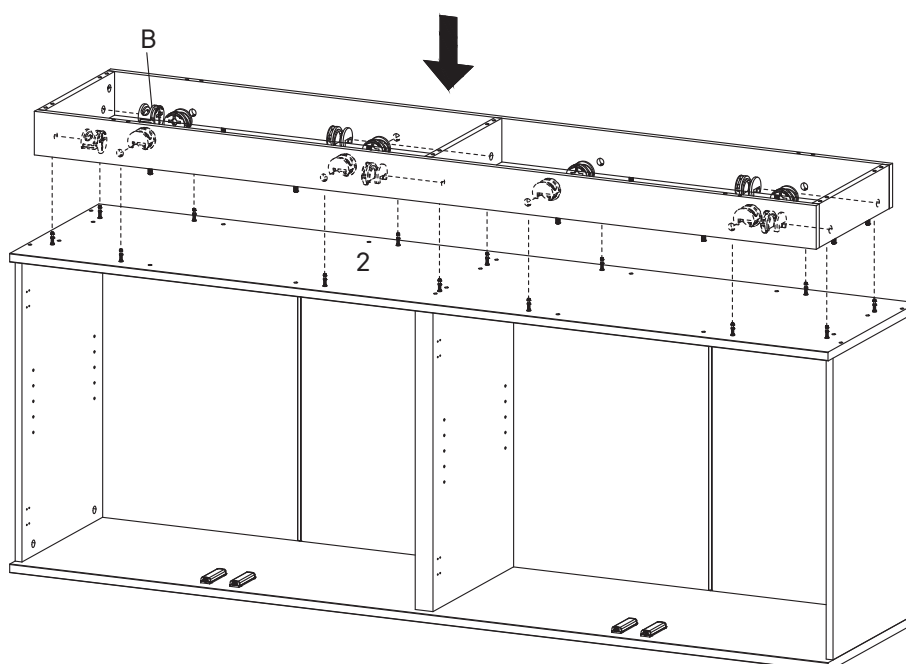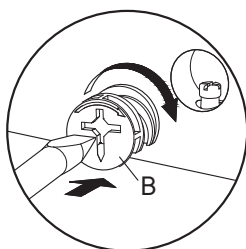

Step 10

HARDWARE

K Floor Glide x10

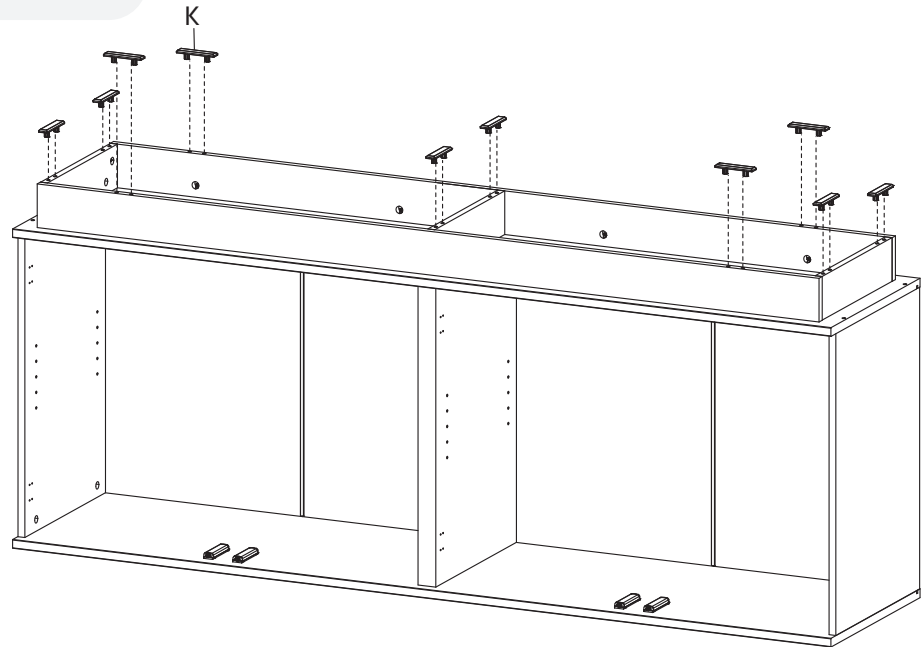



Step 11

HARDWARE

F Shelf Pin x8

COMPONENTS

6 Adjustable Shelf x2

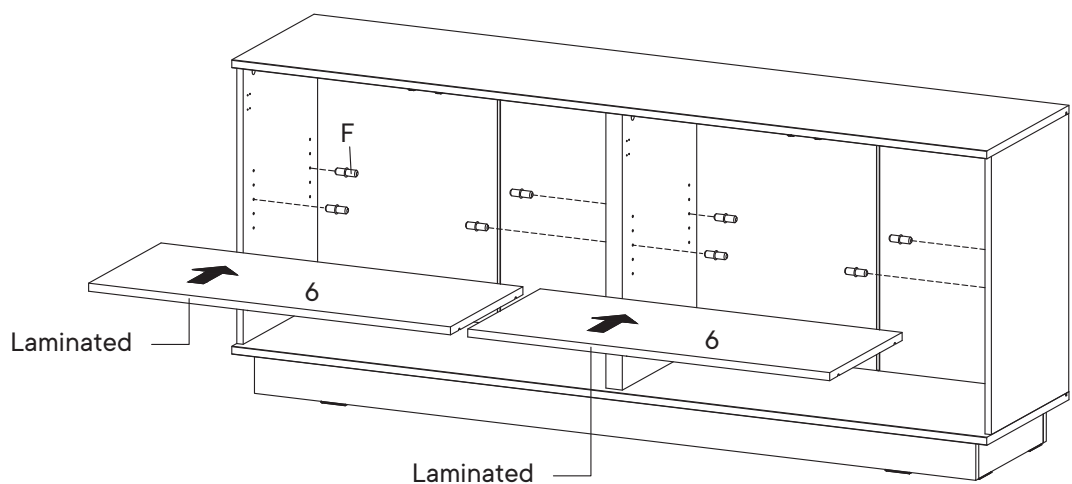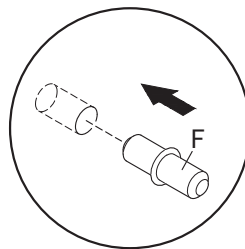

Step 12


HARDWARE

H Screw M 4.5 x 12.5 mm x16

HS26A Hinge x8

COMPONENTS

9 Door x4

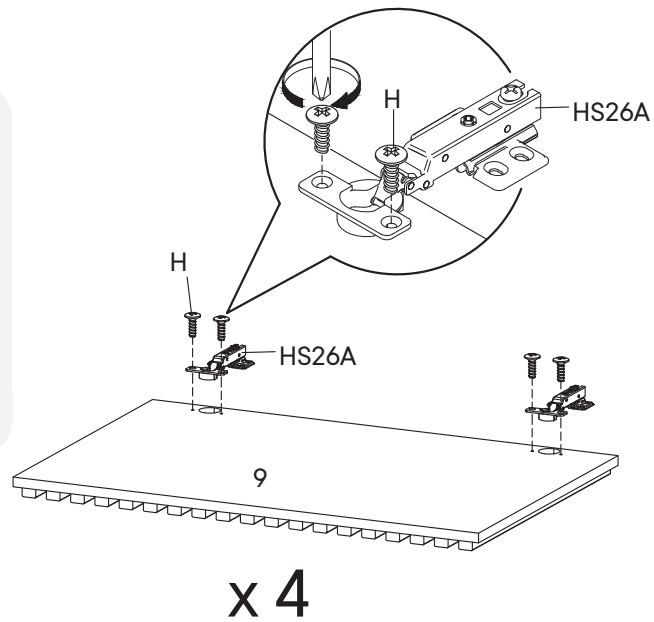


Step 13

HARDWARE

H Screw M 4.5 x 12.5 mm x16

COMPONENTS

9 Door x2

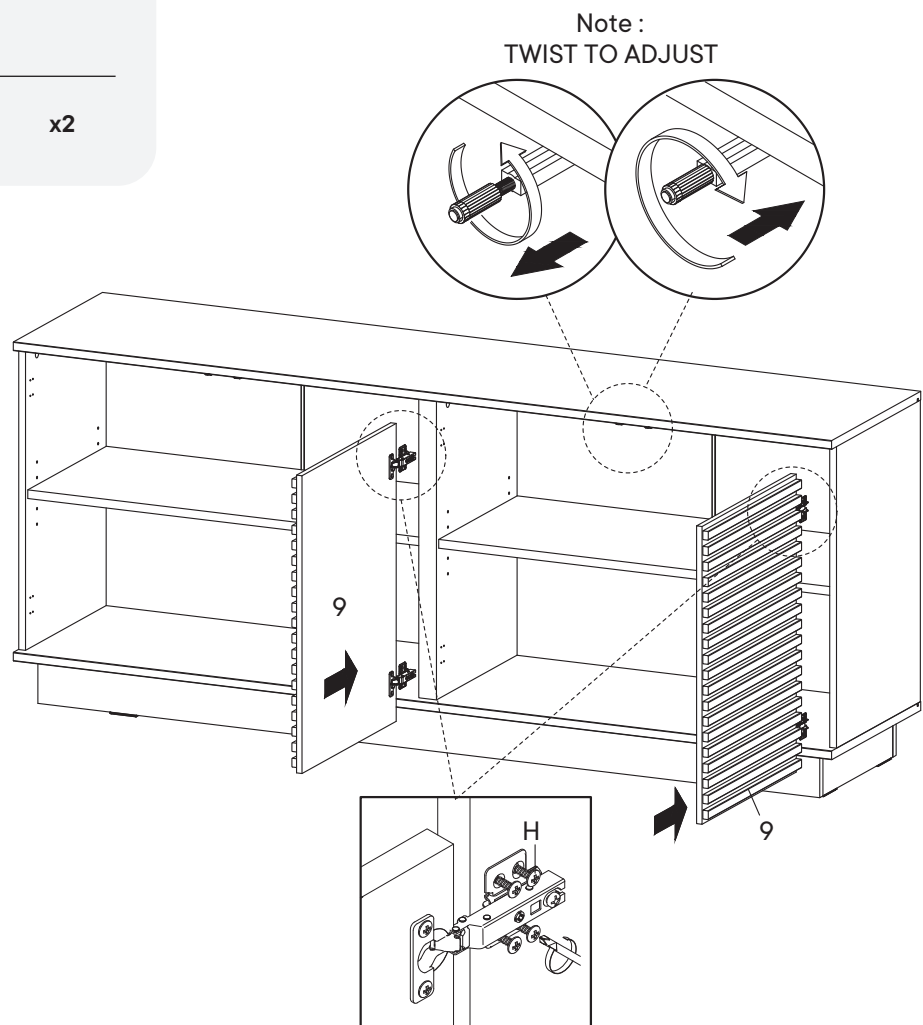

Step 14


HARDWARE

H Screw M 4.5 x 12.5 mm x16

COMPONENTS

9 Door x2

Note :
TWIST TO ADJUST



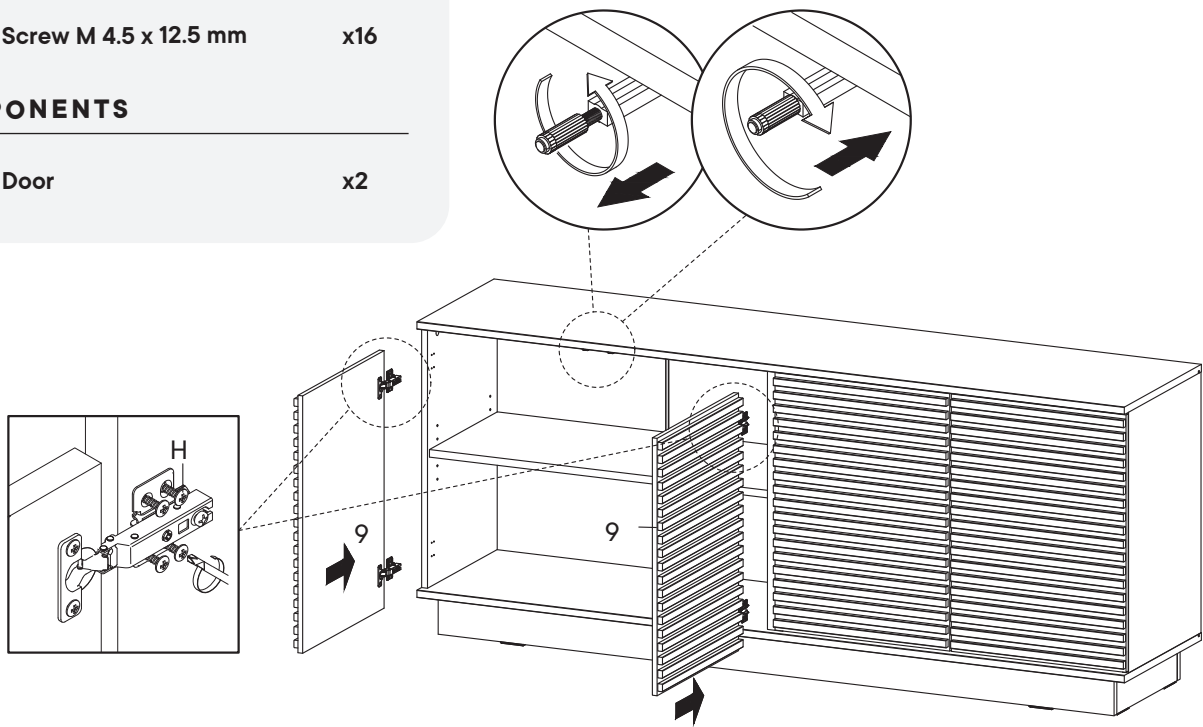


Step 15

HARDWARE

I Screw 3.5 x 15.5 mm x20

J Wedge x20

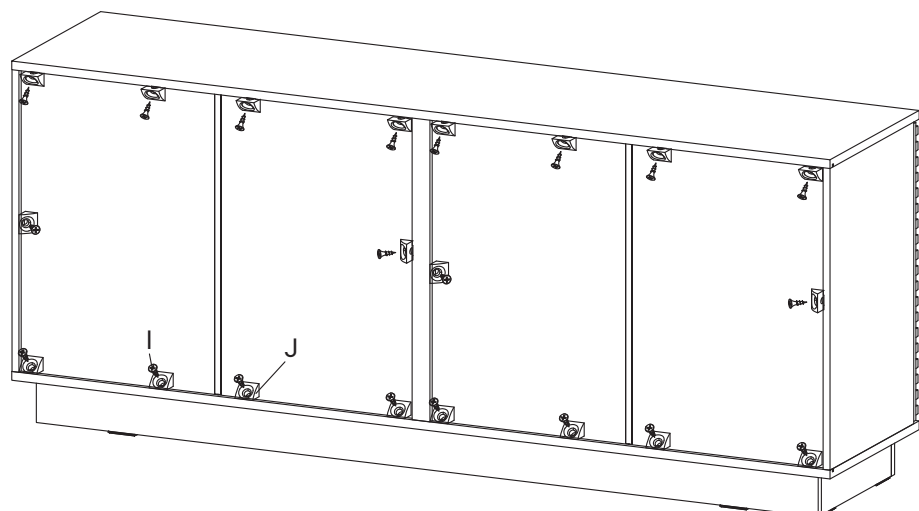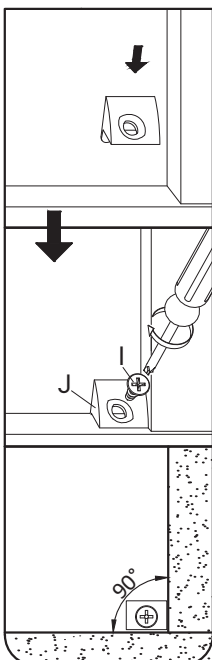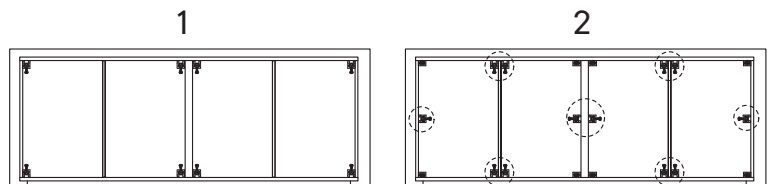

Great job!

Sideboard assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.



Never use harsh chemicals, as they could damage the finish or integrity of the item.

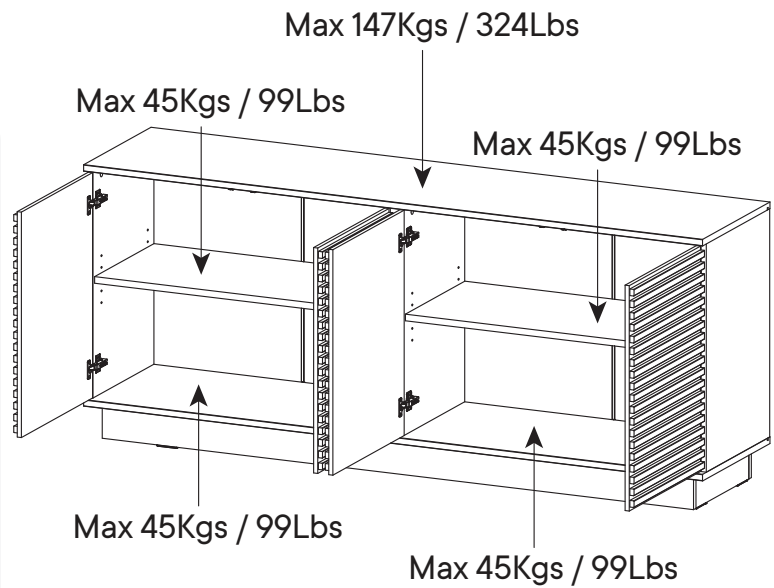

CONNECT WITH US!


Tag us **@modway_furniture** and **#modway** for a chance to be featured.

Cabinet Door Alignment

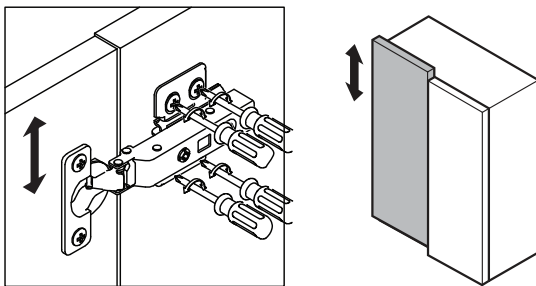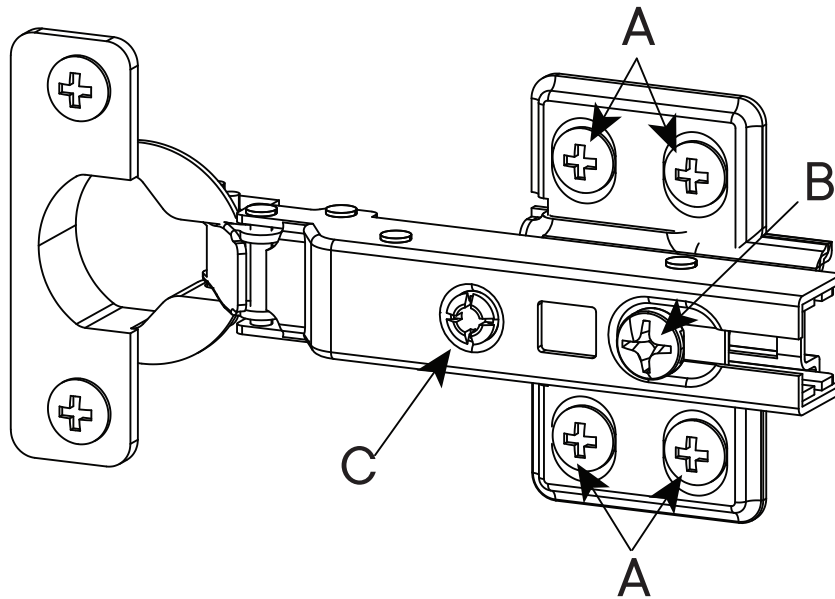


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

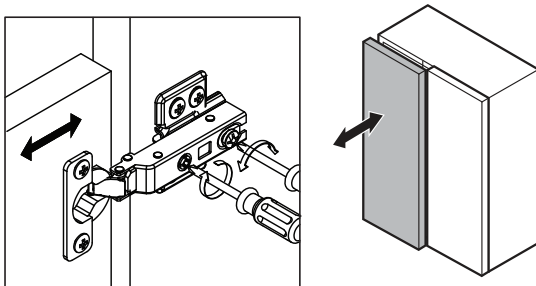

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

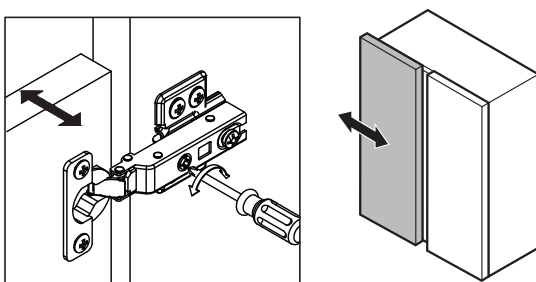

To adjust side ways.








Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

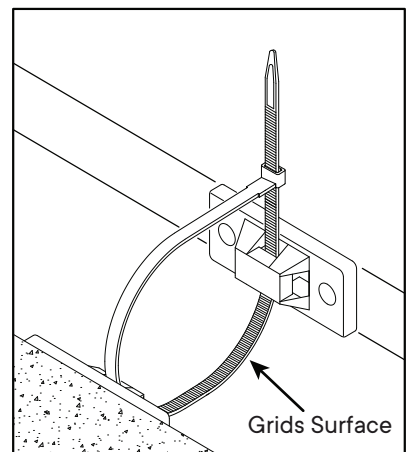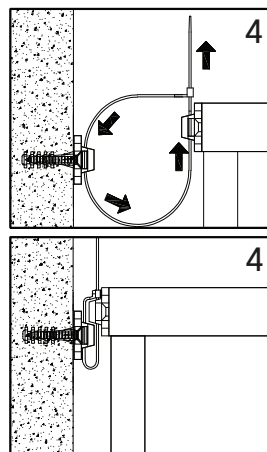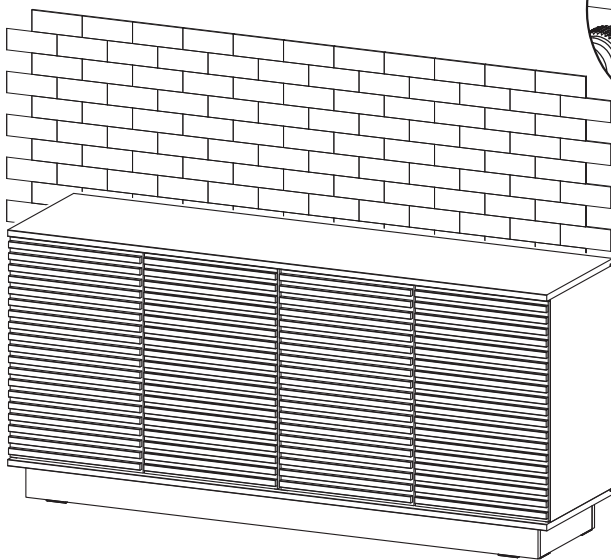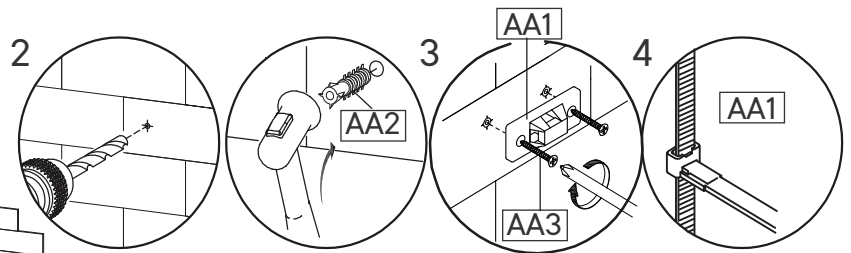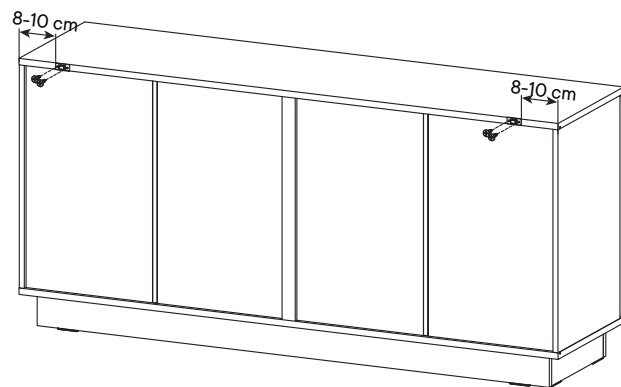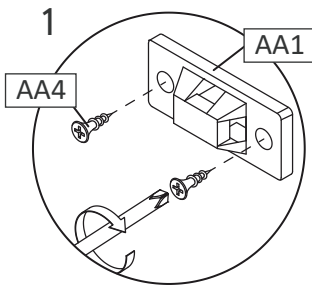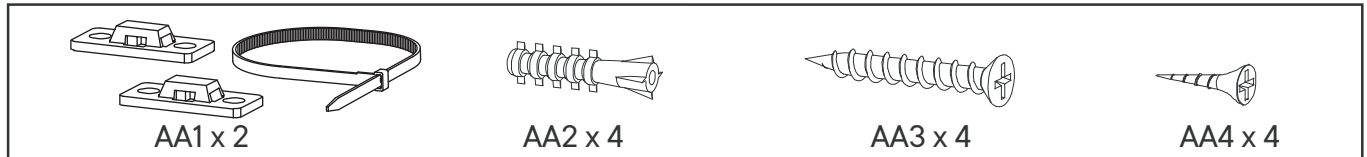

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.