


ASSEMBLY INSTRUCTIONS

EEI-6847

V0.01.01.24

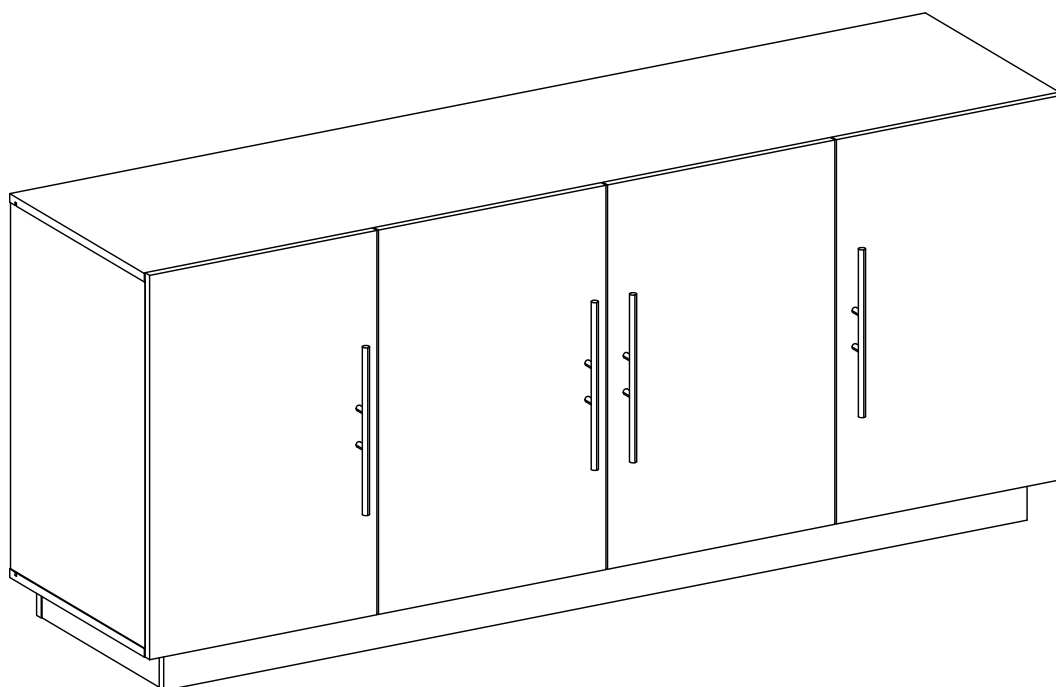

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1	10	Backboard	x2
2	Bottom Board	x1	11	Front / Rear Support	x2
3	Left Board	x1	12	Side Support	x4
4	Right Board	x1	13	Side Door	x2
5	Divider Left Board	x1	14	Middle Door	x2
6	Divider Right Board	x1			
7	Divider Middle Board	x1			
8	Side Shelf	x2			
9	Middle Shelf	x2			

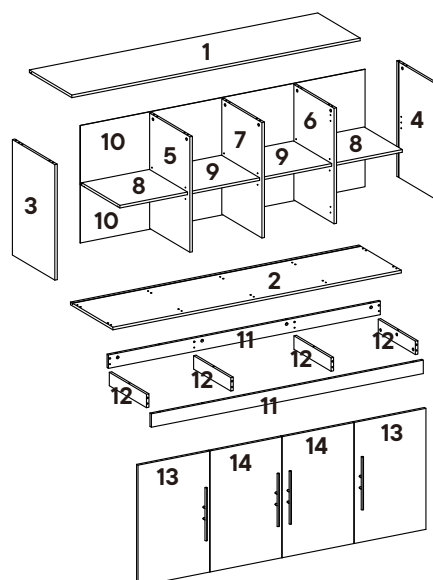


Provided hardware:

A		Cam Lock Ø15 mm	x30
B		Cam Bolt Ø7.5 x 32 mm	x30
C		Cam Cover Ø17 mm	x30
D		Plastic Dowel M8 x 32 mm	x32
E		Screw M10 x 33.5 mm	x10
F		Screw M4 x 12 mm	x6
G		Screw M4 x 19 mm	x20
H		Backply Stopper	x20
I		H-Profile	x1

J		Shelf Pin M7 x 16.5 mm	x16
K		Curve Door Hinge	x4
L		Half Curve Door Hinge	x4
M		Bolt M4 x 22	x8
N		Handle	x4
O		Wall Bracket Set	x1

What you need:



Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

HARDWARE

D Plastic Dowel M8 x 32 mm x20

COMPONENTS

3 Left Board x1
4 Left Board x1
5 Divider Left Board x1
6 Divider Right Board x1
7 Divider Middle Board x1

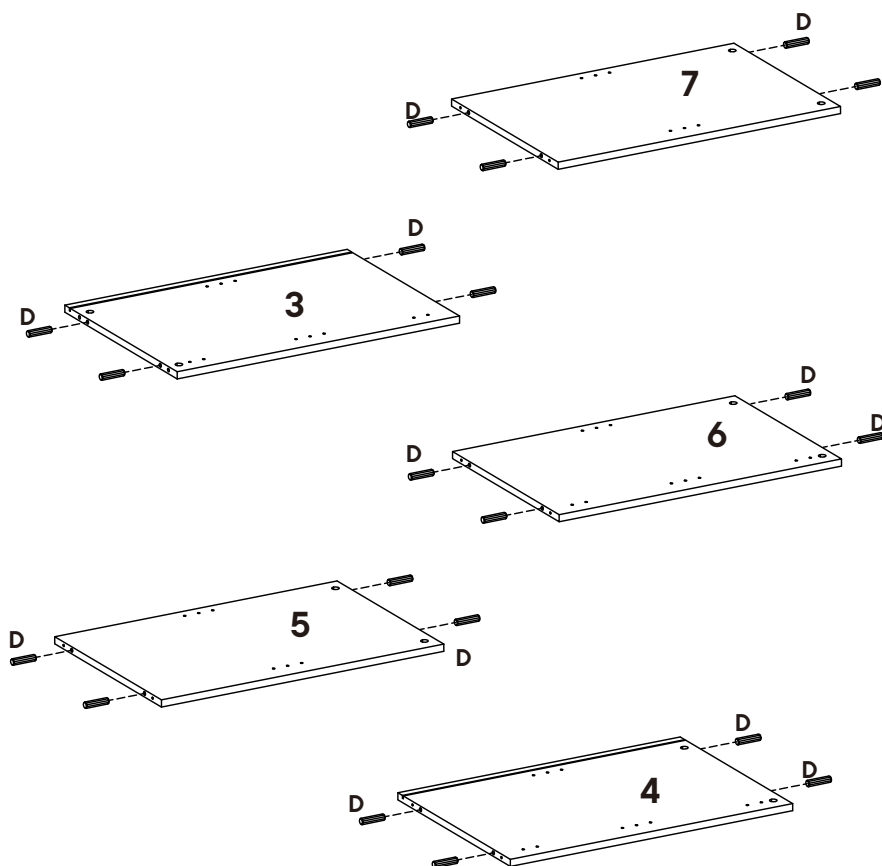


Step 2

HARDWARE

B Cam Bolt Ø7.5 x 32 mm x12

COMPONENTS

2 Bottom Board x1

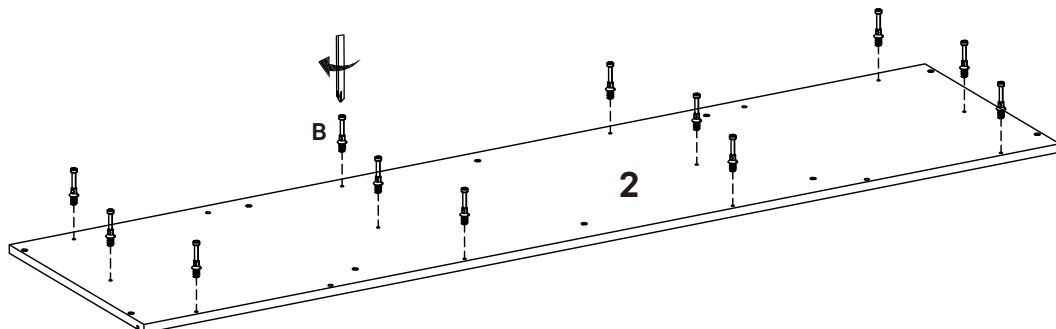


Step 3

HARDWARE

- B** Cam Bolt Ø7.5 x 32 mm x8
- D** Plastic Dowel M8 x 32 mm x12

COMPONENTS

- 11** Front / Rear Support x2
- 12** Side Support x4

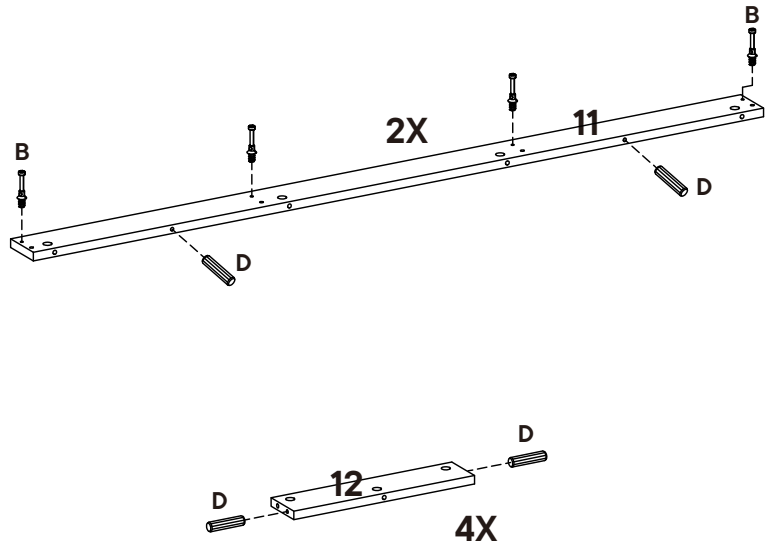


Step 4

HARDWARE

- A** Cam Lock Ø15 mm x8
- C** Cam Cover Ø17 mm x8

COMPONENTS

- 11** Front / Rear Support x2
- 12** Side Support x4

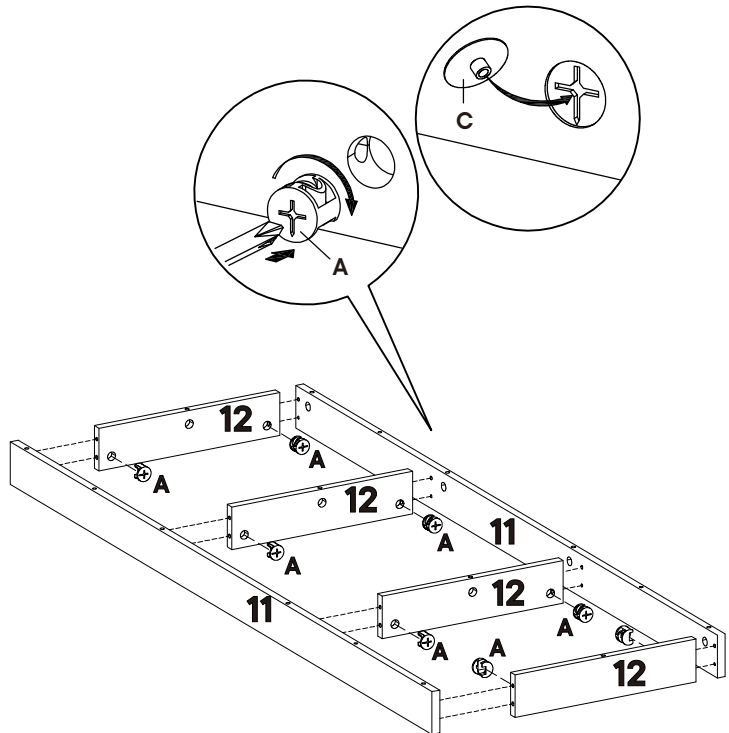


Step 5

HARDWARE

- E** Screw M10 x 33.5 mm x10

COMPONENTS

- 2** Bottom Board x1
3 Left Board x1
4 Right Board x1
5 Divider Left Board x1
6 Divider Right Board x1
7 Divider Middle Board x1

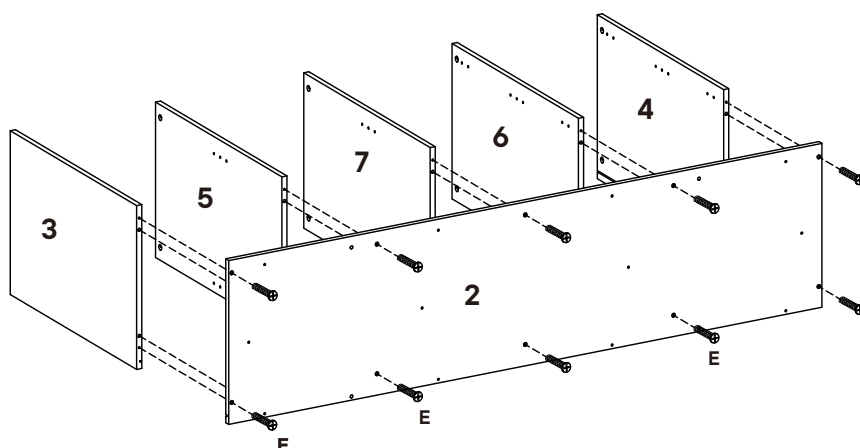


Step 6

HARDWARE

- A** Cam Lock Ø15 mm x12
C Cam Cover Ø17 mm x12

COMPONENTS

- 2** Bottom Board x1
11 Front / Rear Support x2
12 Side Support x4

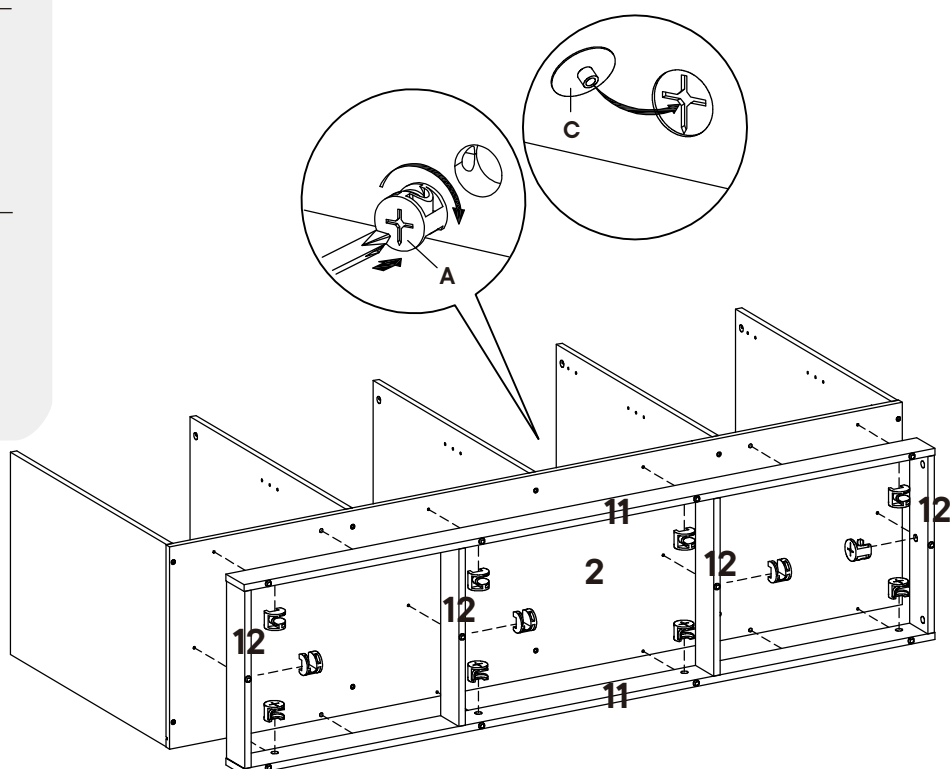

Step 7

HARDWARE

I H-Profile x1

COMPONENTS

2 Bottom Board x1

3 Left Board x1


4 Right Board x1

5 Divider Left Board x1

6 Divider Right Board x1

7 Divider Middle Board x1

10 Backboard x2

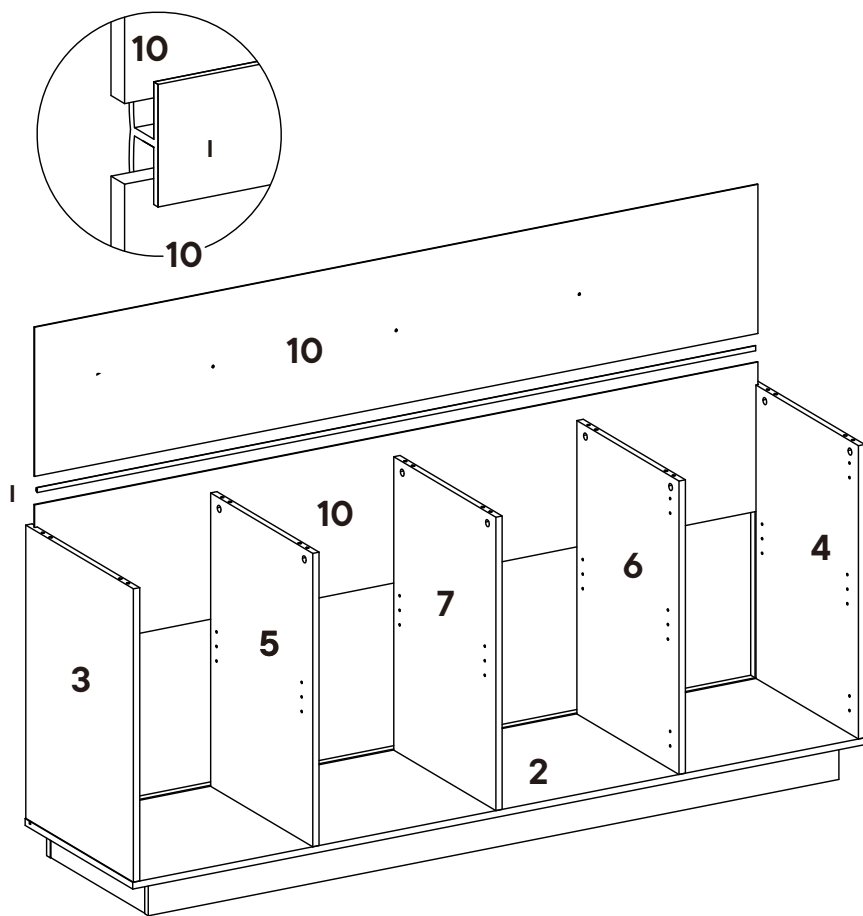


Step 8

HARDWARE

B Cam Bolt Ø7.5 x 32 mm x10

COMPONENTS

1 Top Board x1

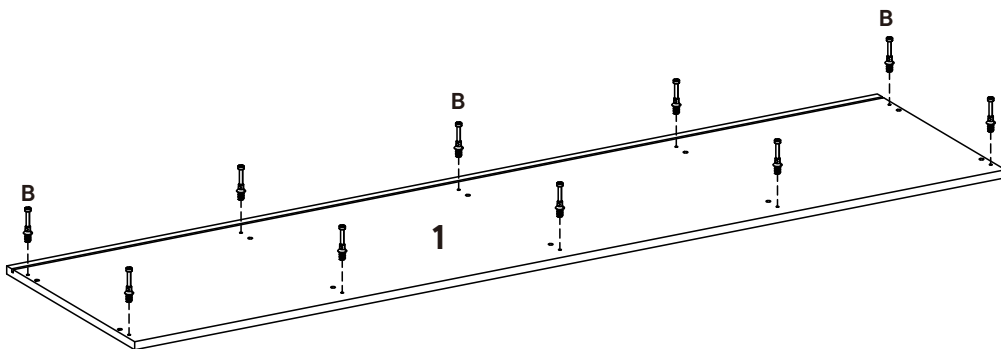


Step 9

HARDWARE

A	Cam Lock Ø15 mm	x10
C	Cam Cover Ø17 mm	x10

COMPONENTS

1	Top Board	x1
3	Left Board	x1
4	Right Board	x1
5	Divider Left Board	x1
6	Divider Right Board	x1
7	Divider Middle Board	x1
10	Backboard	x2

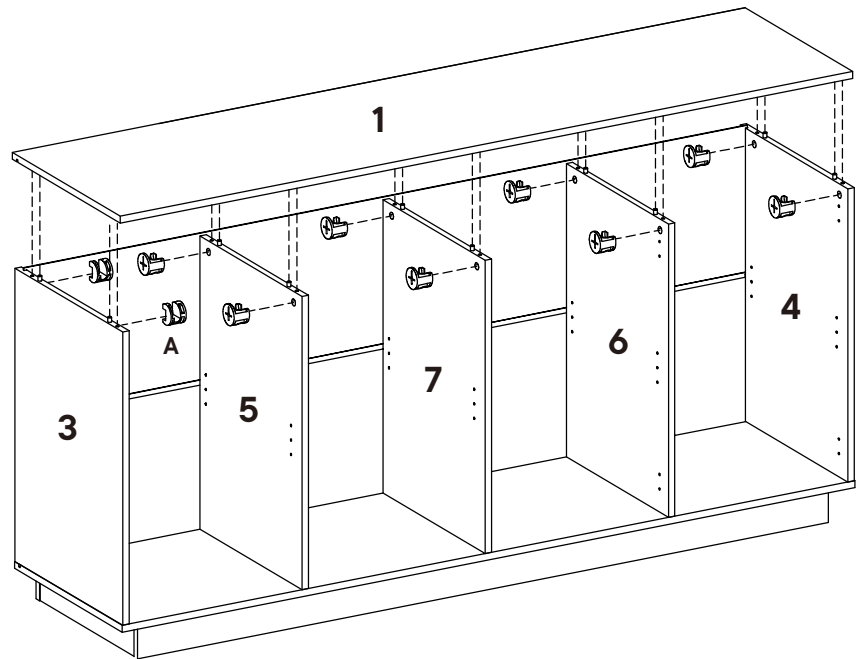



Step 10

HARDWARE

F	Screw M4 x 12 mm	x6
G	Screw M4 x 19 mm	x20
H	Backply Stopper	x20

COMPONENTS

1	Top Board	x1
2	Bottom Board	x1
3	Left Board	x1
4	Right Board	x1
5	Divider Left Board	x1
6	Divider Right Board	x1
7	Divider Middle Board	x1
10	Backboard	x2

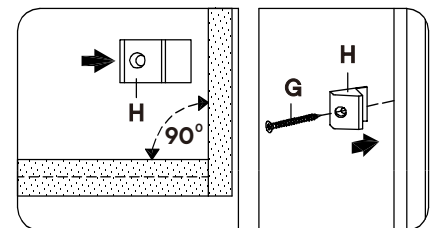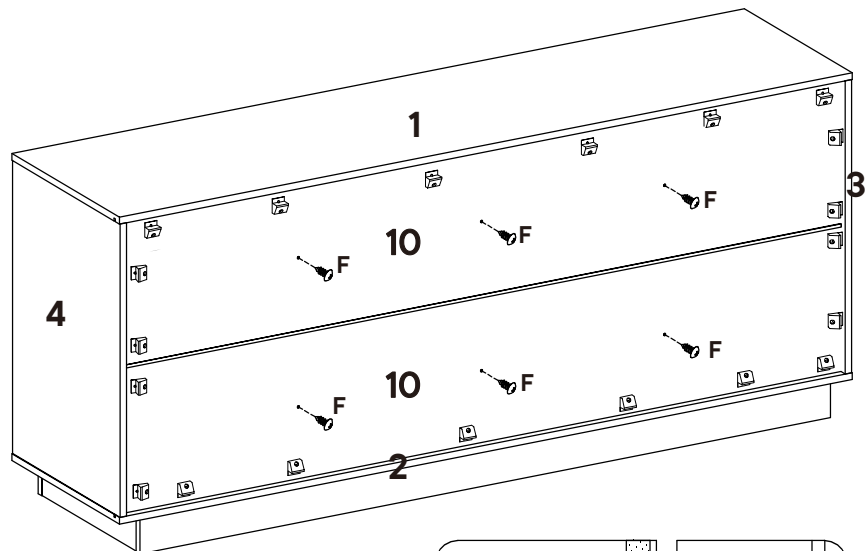

MUST INSTALLED BACKBOARD AT FLAT SURFACE


Step 11

HARDWARE

- J** Shelf Pin M7 x 16,5 mm x16

COMPONENTS

- 3** Left Board x1
4 Right Board x1
5 Divider Left Board x1
6 Divider Right Board x1
7 Divider Middle Board x1
8 Side Shelf x2
9 Middle Shelf x2

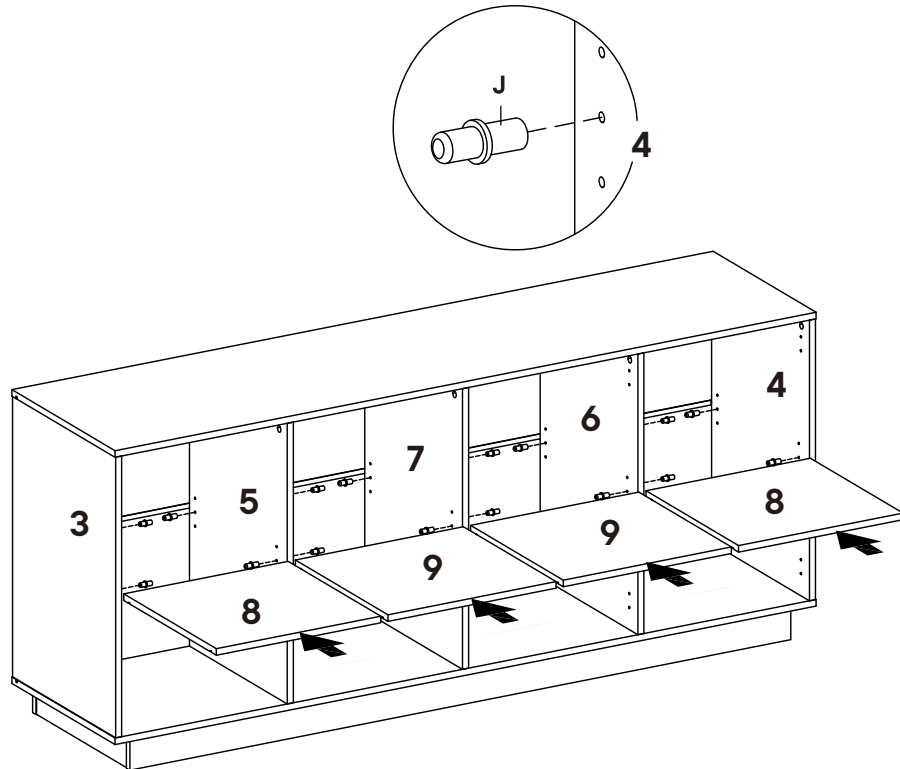






Step 12

HARDWARE

- K** Curve Door Hinge x4
L Half Curve Door Hinge x4
M Bolt M4 x 22 x8

COMPONENTS




- 13** Middle Door x2
14 Side Door x2

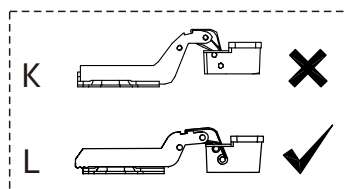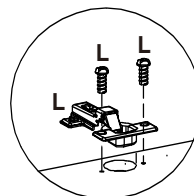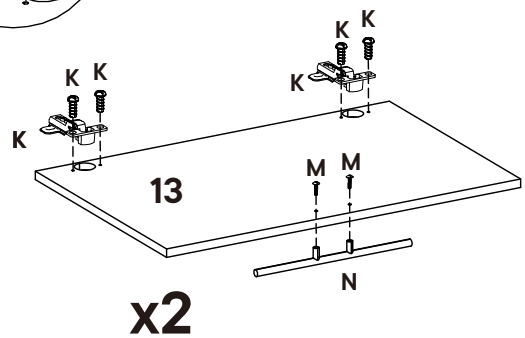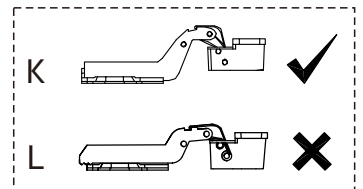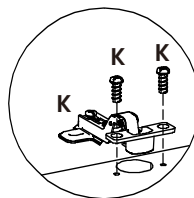

Step 13

COMPONENTS




- | | | |
|----|---------------------|----|
| 5 | Divider Left Board | x1 |
| 6 | Divider Right Board | x1 |
| 13 | Middle Door | x2 |

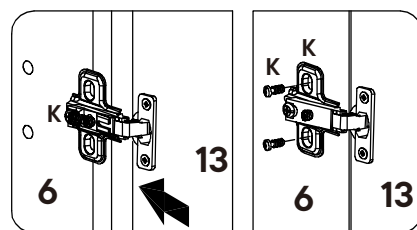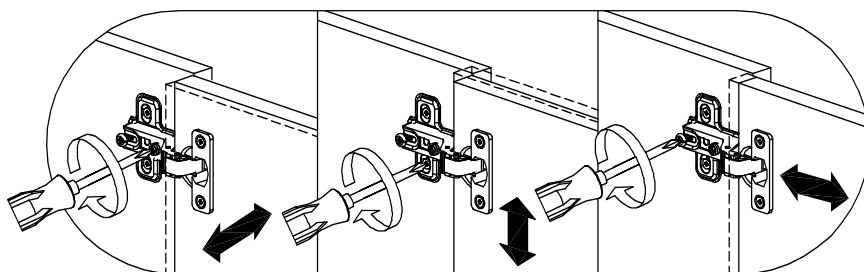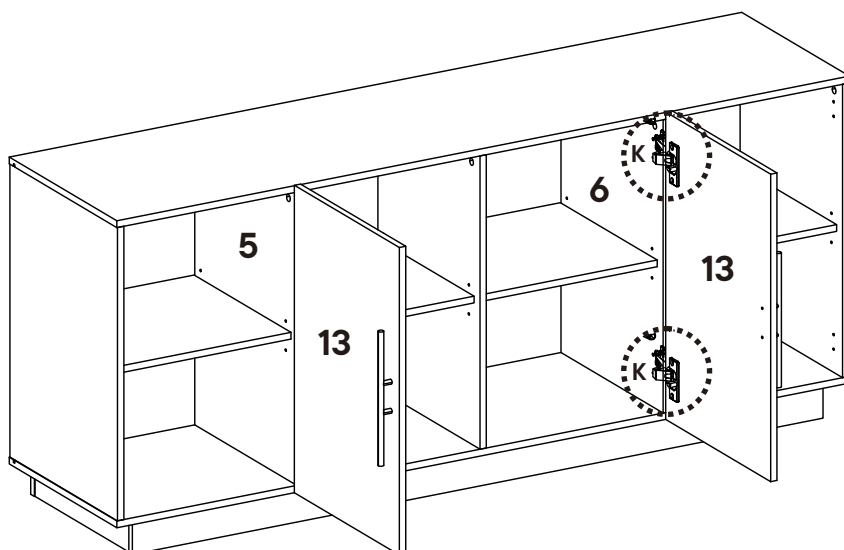

Step 14

COMPONENTS

- | | | |
|----|-------------|----|
| 3 | Left Board | x1 |
| 4 | Right Board | x1 |
| 14 | Side Door | x2 |

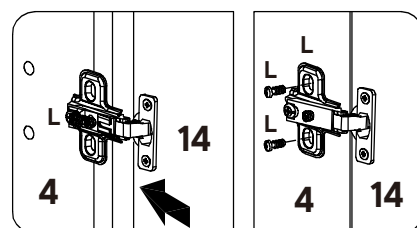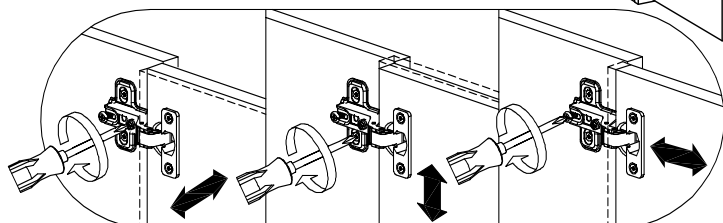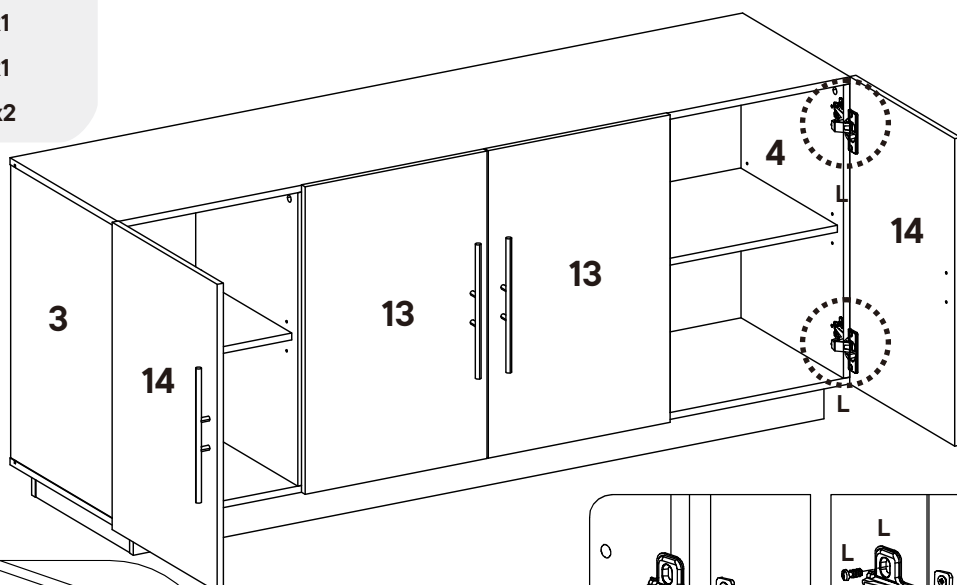

Great job!

High TV Stand assembly is complete.



CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.


Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!












Tag us @modway_furniture and #modway for a chance to be featured.

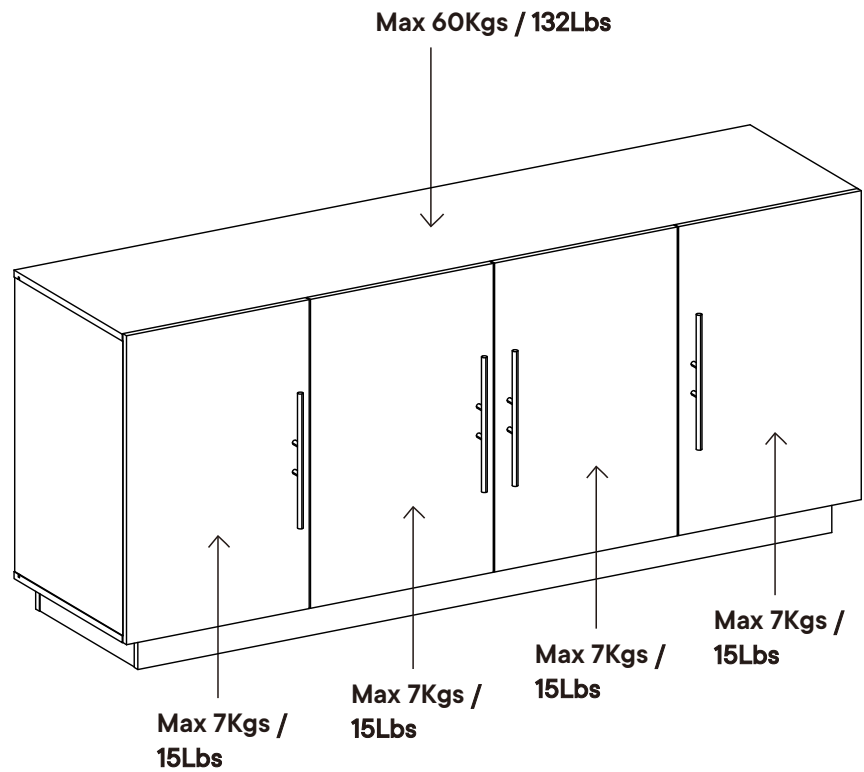

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

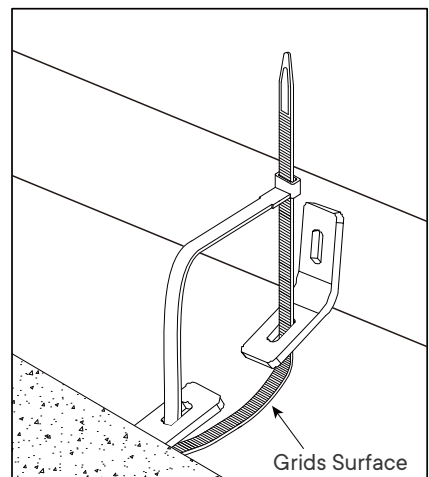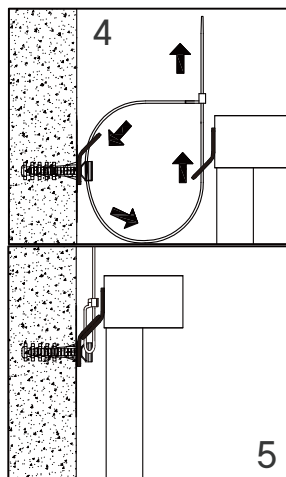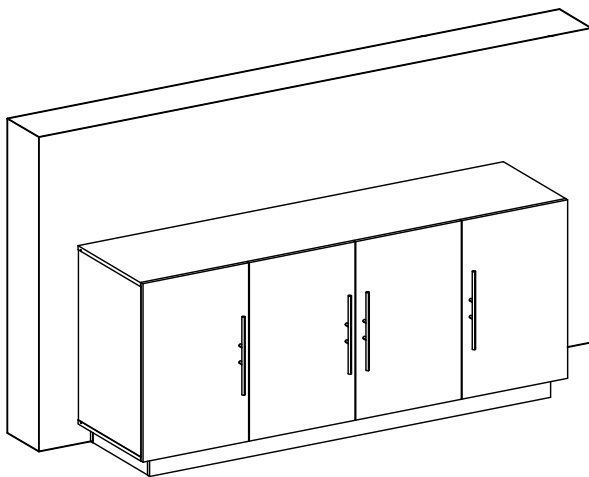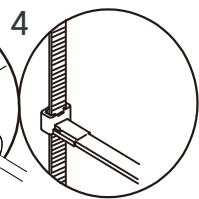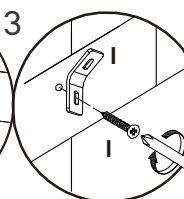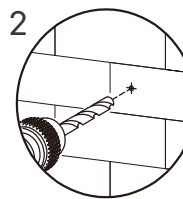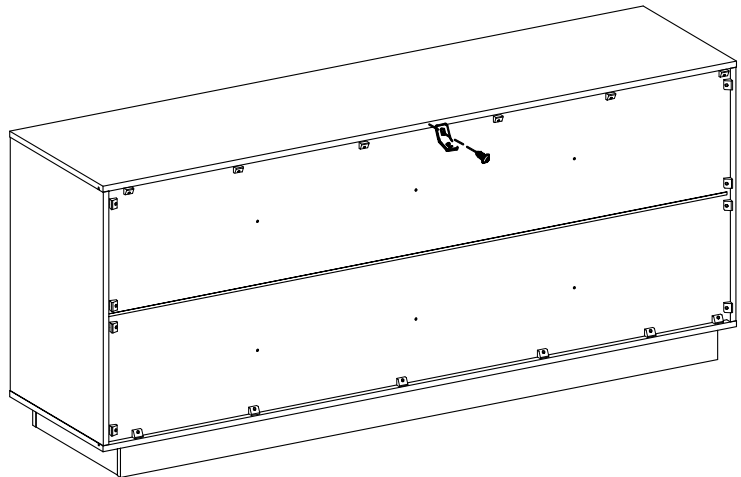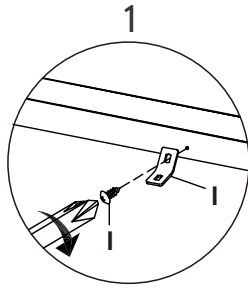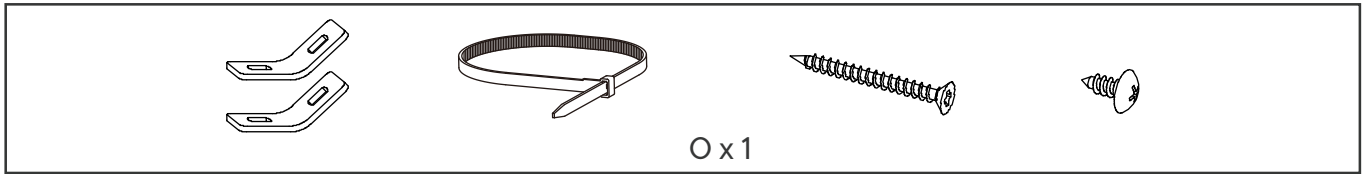

Installation Instructions :

1. Attach bracket (I) securely to the back top of the furniture using short screw (I) provided.
2. Please make a hole on the wall for attach the bracket (I) to the back of unit.
3. Attach bracket (I) on the wall using long screw (I) as shown.
Locate the other bracket (I) on the wall. Place furniture into position so both brackets (I) as shown.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.