


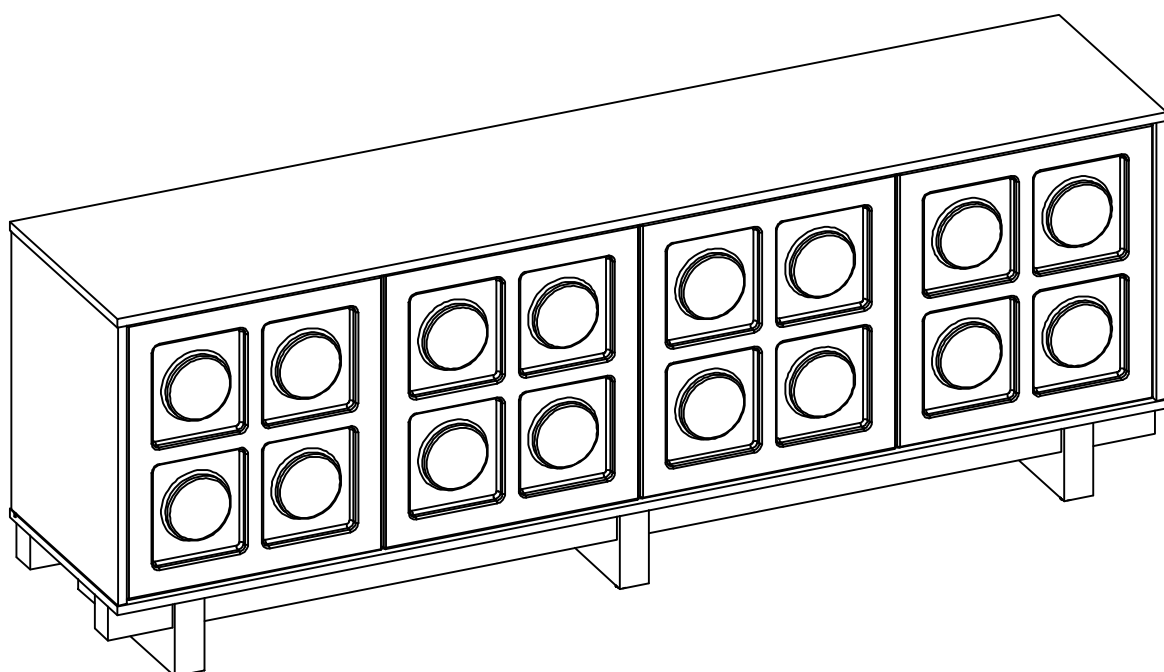

ASSEMBLY INSTRUCTIONS

Sideboard

EEI-7450 / V0.09.06.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item.

Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?

Contact us before returning your item.


We're here to help!



HARDWARE INCLUDED IN THE BOX:

A.		Cambolt Ø6 x 32 mm	x34
B.		Cam Lock	x34
C.		Cover cap	x16
D.		Dowel Ø7.8 x 32 mm	x57
E.		Assembly Screw	x10
F.		Hinge	x4
G.		Hinge	x4
H.		Screw Ø7 x 14 mm	x16
I.		Screw Ø7 x 52 mm	x4
J.		Screw Ø6 x 12 mm	x8
K.		Screw Ø4 x 12 mm	x18
L.		Screw Ø6 x 19 mm	x9
M.		Wedge	x9
N.		Shelf Pin	x16
O.		Sticker	x2
P.		Bolt JF Ø6 x 15 mm	x4
Q.		Nut	x4
R.		Push to open	x4
S.		Rear Clamp	x1
T.		Wall Fixing	x2
U.		Screw Ø6 x 12 mm	x2
V.		Adjustable Leveller	x6

WHAT YOU NEED:




Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 15

All parts are numbered with a sticker according to this list.

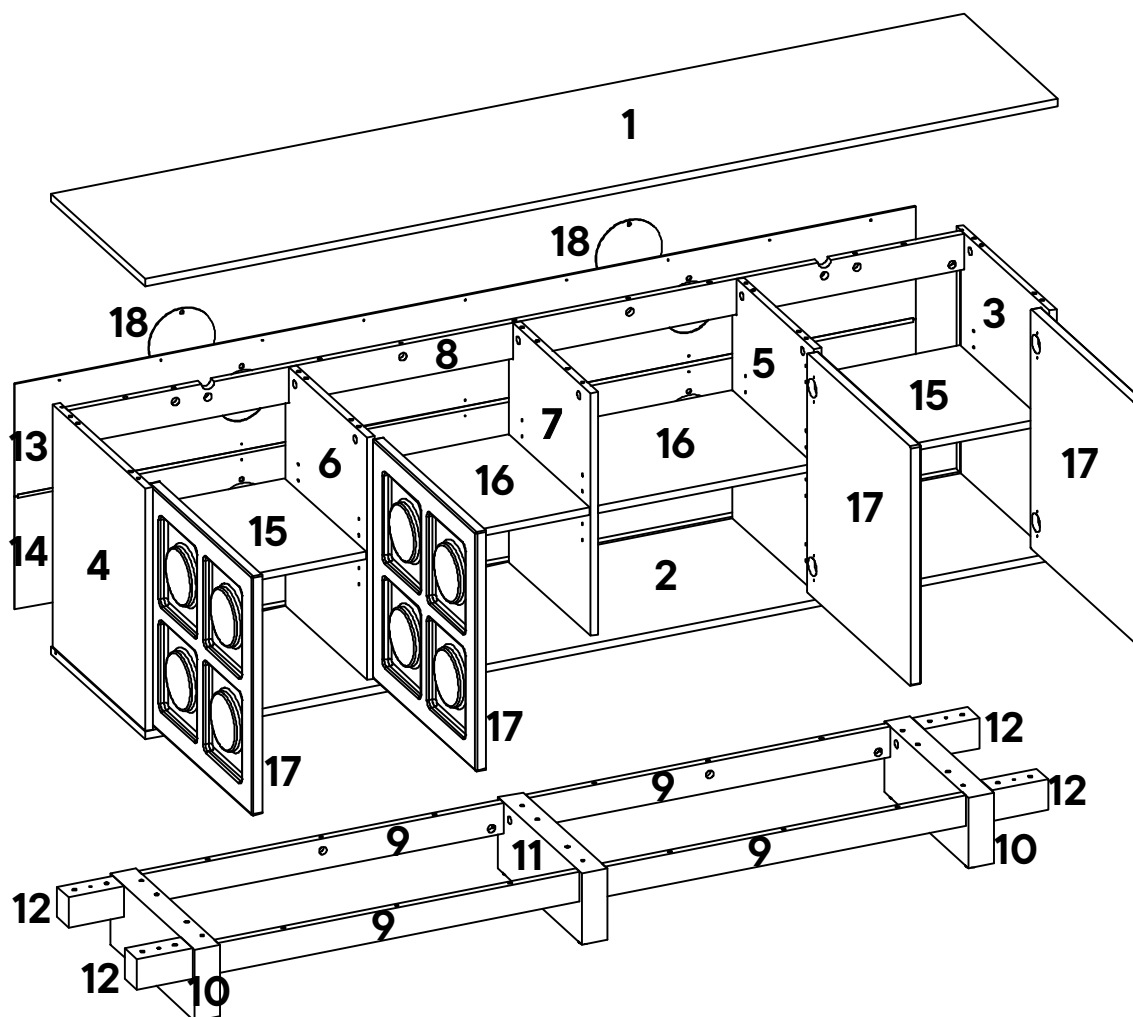

Carton 1 of 2

3	Right side panel	x1
4	Left side panel	x1
5	Right middle panel	x1
6	Left middle panel	x1
7	Middle panel	x1
9	Horizontal bottom support	x2
12	Side support	x4
15	Side adjustable shelf	x2
16	Middle adjustable shelf	x2
17	Door	x4
	Hardware	x1

Carton 2 of 2

1	Top panel	x1
2	Bottom panel	x1
8	Back support	x1
10	Side Leg	x2
11	Middle Leg	x1
13	Top back panel	x1
14	Bottom back panel	x1
18	Hole back cover	x4

HARDWARE

A Cam Bolt Ø6 x 32 mm	x14
J Screw Ø6 x 12 mm	x8
R Push to open	x4
T Wall Fixing	x2
U Screw Ø6 x 12 mm	x2


COMPONENTS

1 Top Panel	x1
--------------------	----

1.1 Insert and screw 14x **Cam Bolts (A)** into the bottom hole of the **Top Panel (1)**.

1.2 Fasten 2x **Wall Fixings (T)** onto the **Top Panel (1)** with 2x **Screws (U)**.

1.3 Fasten 4x **Push to open (R)** onto the **Top Panel (1)** with 8x **Screws (J)**.

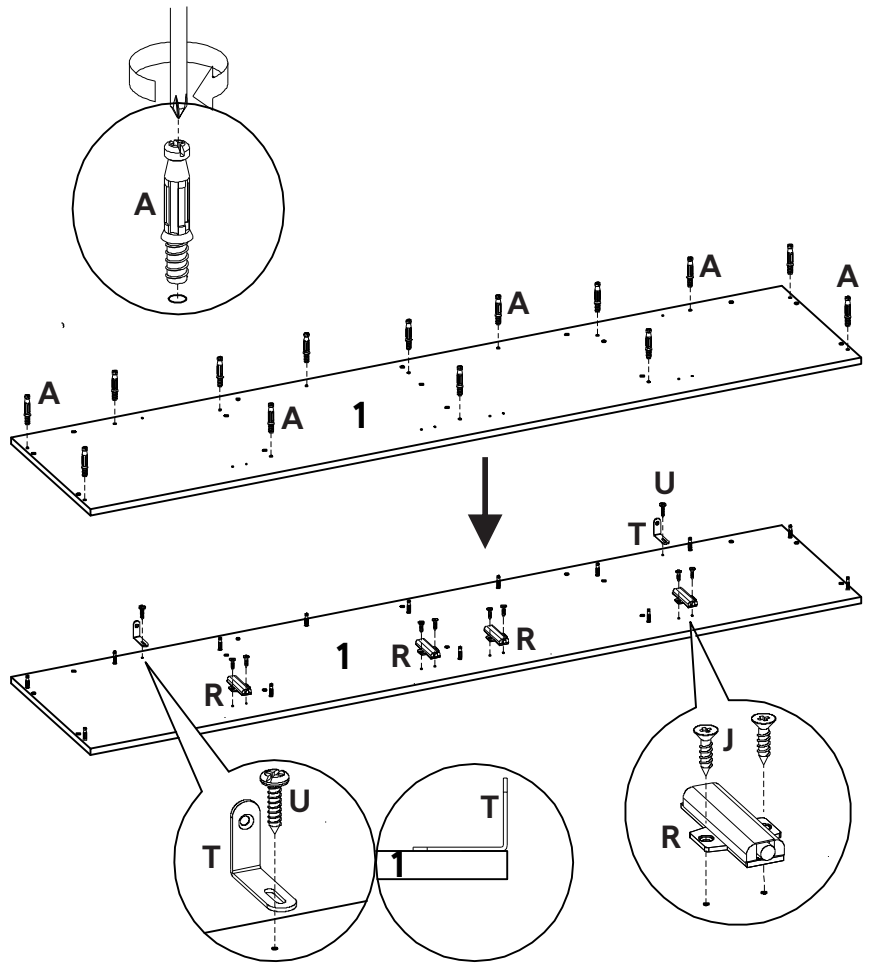

STEP 02

HARDWARE

A Cambolt Ø6 x 32 mm	x2
D Dowel Ø7.8 x 32 mm	x15

COMPONENTS

3 Right side panel	x1
4 Left side panel	x1
8 Back support	x1


2.1 Insert and screw **Cam Bolt (A)** into the bottom hole of the **Left side Panel (4)**.

2.2 Insert 4x **Dowels (D)** into the holes on edge of the **Left Side Panel (4)**.

2.3 Insert and screw **Cam Bolt (A)** into the bottom hole of the **Right side Panel (3)**.

2.4 Insert 4x **Dowels (D)** into the holes on edge of the **Right Side Panel (3)**.

2.5 Insert 7x **Dowels (D)** into the holes on edge of the **Back support (8)**.

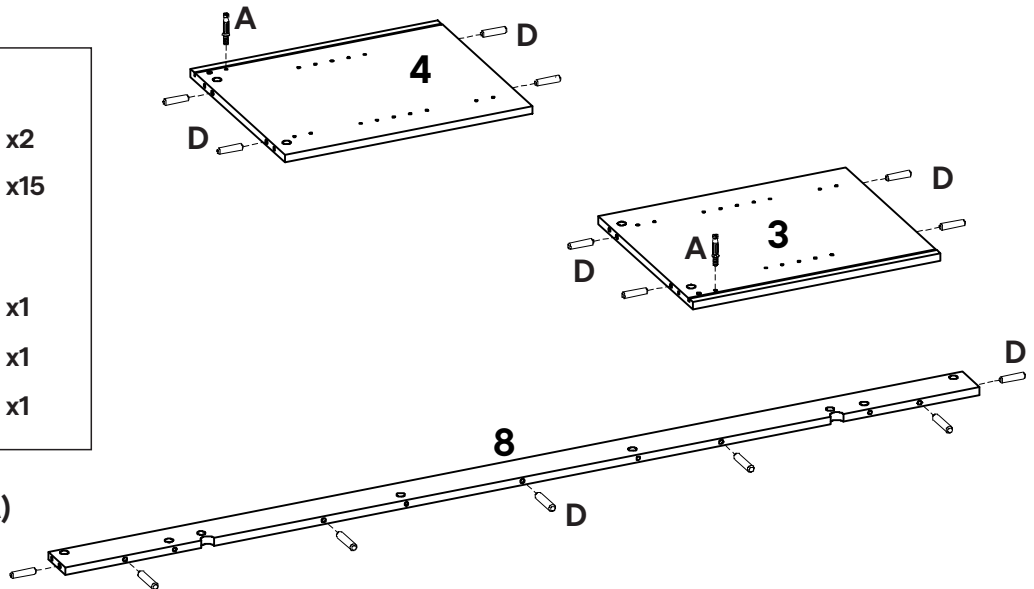

HARDWARE

- (B)** Cam Lock x2
(C) Cover cap x2


COMPONENTS

- (3)** Right Side Panel x1
(4) Left Side Panel x1
(8) Back Support x1

3.1 Connect **Back Support (8)** onto the **Left side Panel (4)**, by inserting **Cam Lock (B)** to the corresponding holes.

3.2 Connect **Right side panels (3)** onto the **Assembled unit**, by inserting **Cam Lock (B)** to the corresponding holes.

3.3 Place 2x **Cover caps (C)** onto Cam Lock.

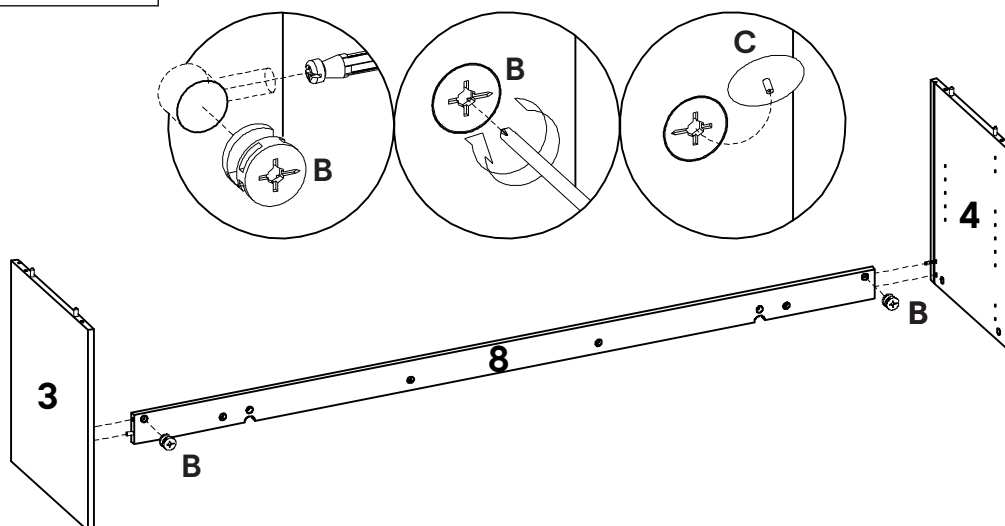

STEP 04

HARDWARE


- (B)** Cam Lock x8
(C) Cover cap x8

COMPONENTS

- (1)** Top Panel x1

4.1 Connect **Assembled Unit**, onto the **Top Panel (1)**, by inserting 8x **Cam Locks (B)** to the corresponding holes.

4.2 Place 8x **Cover caps (C)** onto Cam Lock.

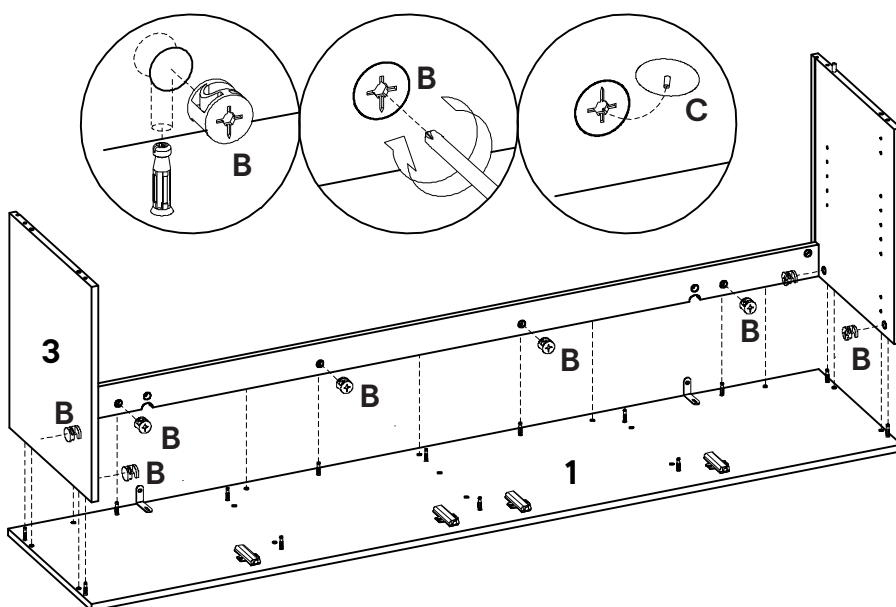


HARDWARE

- (A)** Cam Bolt Ø6 x 32mm x10
(D) Dowel Ø7.8 x 32 mm x12

COMPONENTS

- (2)** Bottom panel x1
(5) Right side panel x1
(6) Left side panel x1
(7) Middle panel x1

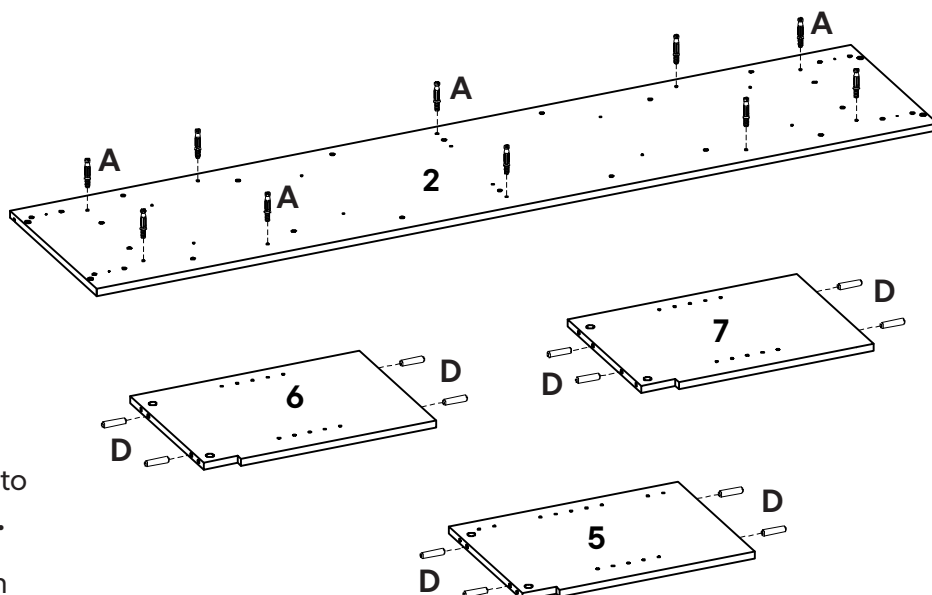

5.1 Insert and screw 10x **Cam Bolts (A)** into the bottom hole of the **Bottom Panel (2)**.

5.2 Insert 4x **Dowels (D)** into the holes on edge of the **Left Middle Panel (6)**.

5.3 Insert 4x **Dowels (D)** into the holes on edge of the **Right Middle Panel (5)**.

5.4 Insert 4x **Dowels (D)** into the holes on edge of the **Middle Panel (7)**.


STEP 06

HARDWARE

- (B)** Cam Lock x6
(C) Cover cap x6


COMPONENTS

- (5)** Right middle panel x1
(6) Left middle panel x1
(7) Middle panel x1

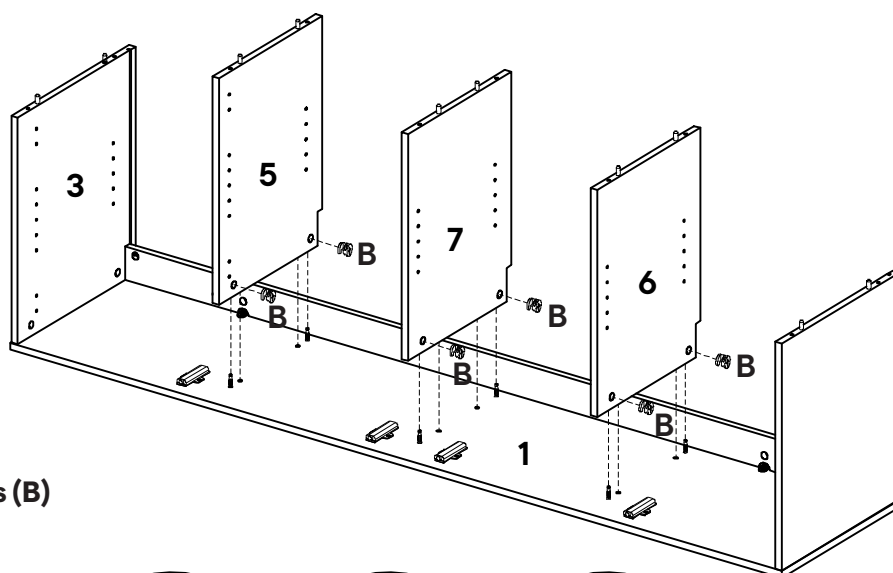

6.1 Connect **Panels (5), (6) & (7)** onto the Assembly Unit, by inserting 6x **Cam Locks (B)** to the corresponding holes.

6.2 Place 6x **Cover caps (C)** onto Cam Lock.

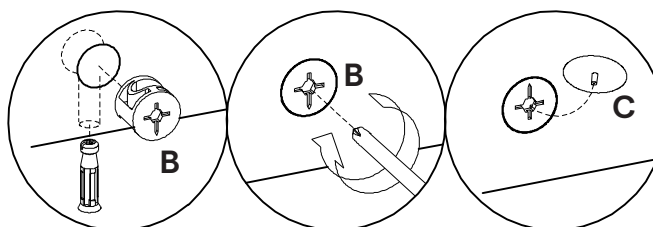

HARDWARE


P Bolt JF Ø6 x 15 m	x4
Q Nut	x4

COMPONENTS

13 Top back panel	x1
14 Bottom back panel	x1
18 Hole back cover	x4

7.1 Connect 2x **Hole back cover (18)** onto the **Top back panel (13)** with secure it by tightening 2x **Bolts (P)** with the 2x **Nuts (Q)**.

7.2 Connect 2x **Hole back cover (18)** onto the **Bottom back panel (14)** with secure it by tightening 2x **Bolts (P)** with the 2x **Nuts (Q)**.

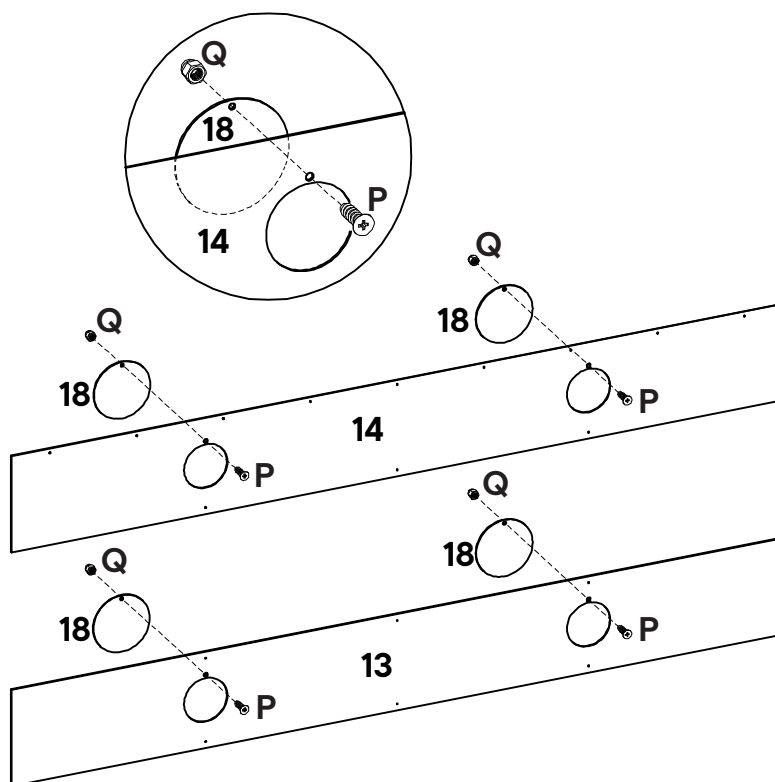


STEP 08

HARDWARE

S Rear Clamp	x1
---------------------	----

COMPONENTS


13 Top back panel	x1
14 Bottom back panel	x1

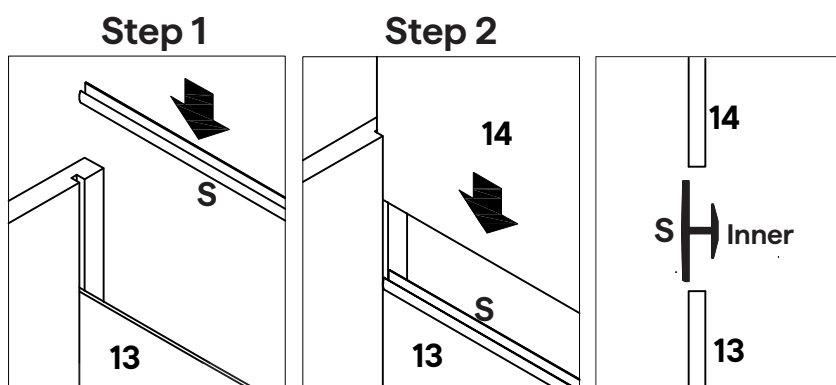

8.1 Slide **Top back panel (13)** into the Assembled unit as shown.


8.2 Slide **Rear Clamp (S)** onto the **Top back panel (13)**.

8.3 Slide **Bottom back panel (14)** into the Assembled unit and Rear clamp as shown.

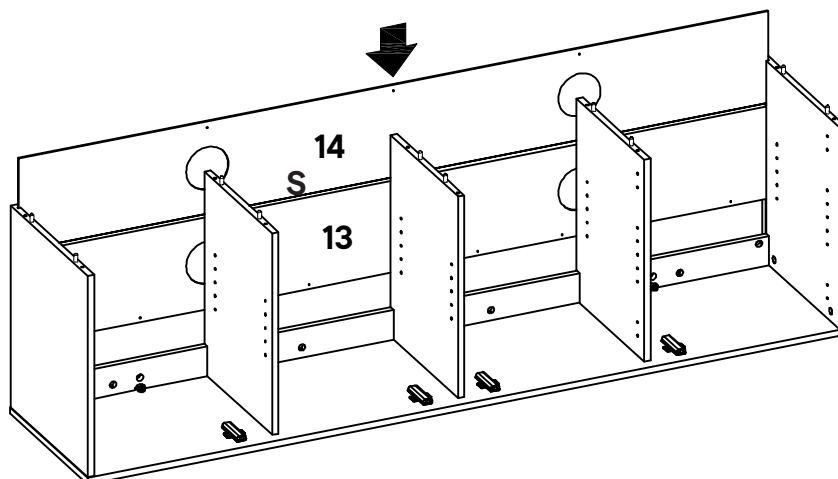


HARDWARE**E** Assembly screw x10**COMPONENTS****2** Bottom Panel x1

9.1 Connect **Bottom Panel (2)** onto the Assembled unit, and secure it by tightening 10x **Assembly Screws (E)**.

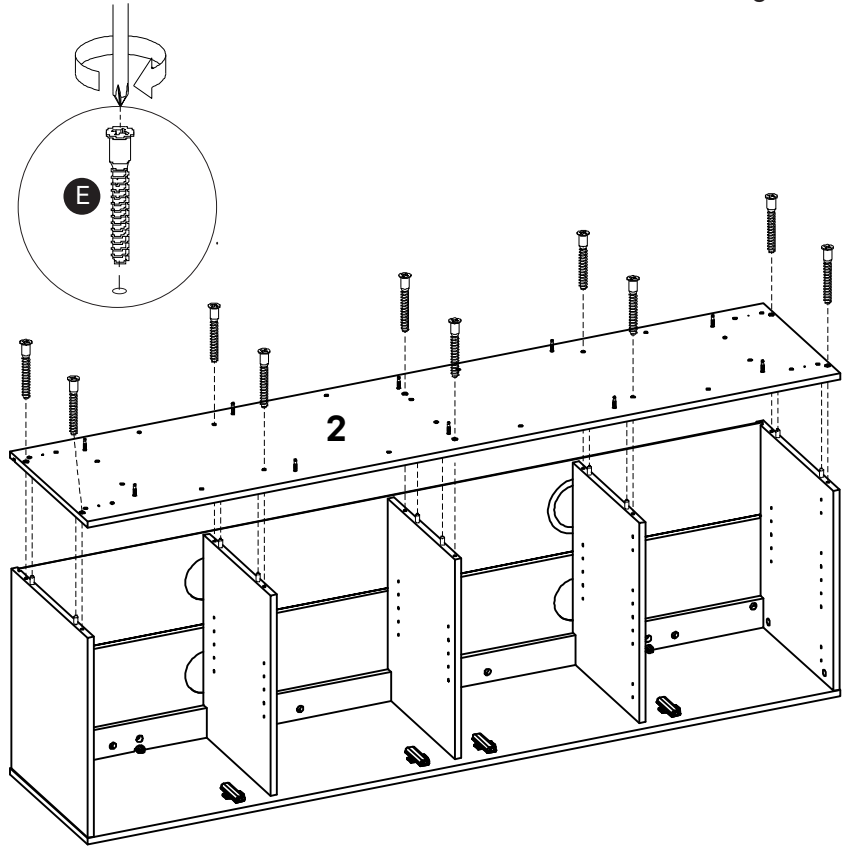

STEP 10

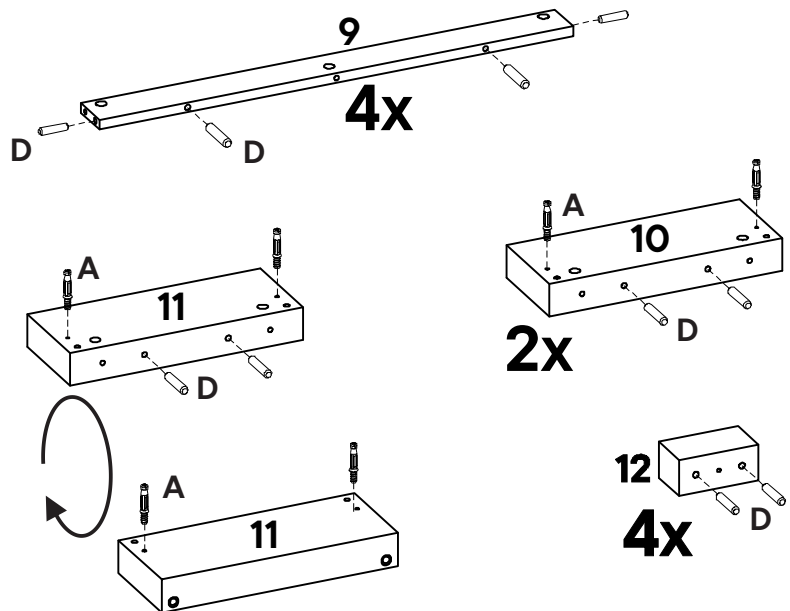HARDWARE**A** Cambolt Ø6 x 32 mm x8**D** Dowel Ø7.8 x 32 mm x30**COMPONENTS****9** Horizontal bottom support x4**10** Side Leg x2**11** Middle Leg x1**12** Side Support x4

10.1 Insert 4x **Dowels (D)** into the holes of the **Horizontal bottom support (9)**. Repeat this step on the same components.

10.2 Insert and screw 4x **Cam Bolts (A)** into the hole of the **Middle leg (11)**.

10.3 Insert 2x **Dowels (D)** into the holes of the **Middle leg (11)**. Repeat this step on the same components.

10.4 Insert and screw 2x **Cam Bolts (A)** into the hole of the **Side leg (10)**. Repeat this step on the same components.


10.5 Insert 2x **Dowels (D)** into the holes of the **Side leg (10)**. Repeat this step on the same components.

10.6 Insert 2x **Dowels (D)** into the holes of the **Side support (12)**. Repeat this step on the same components.

HARDWARE**(B)** Cam Lock x8**COMPONENTS****(9)** Horizontal bottom support x4**(10)** Side Leg x2**(11)** Middle Leg x1

11.1 Connect 4x **Horizontal bottom supports (9)** onto the **Middle Leg (11)**, by inserting 4x **Cam Locks (B)** to the corresponding holes.


11.2 Connect 2x **Side Legs (10)** onto the Assembled unit, by inserting 4x **Cam Locks (B)** to the corresponding holes.

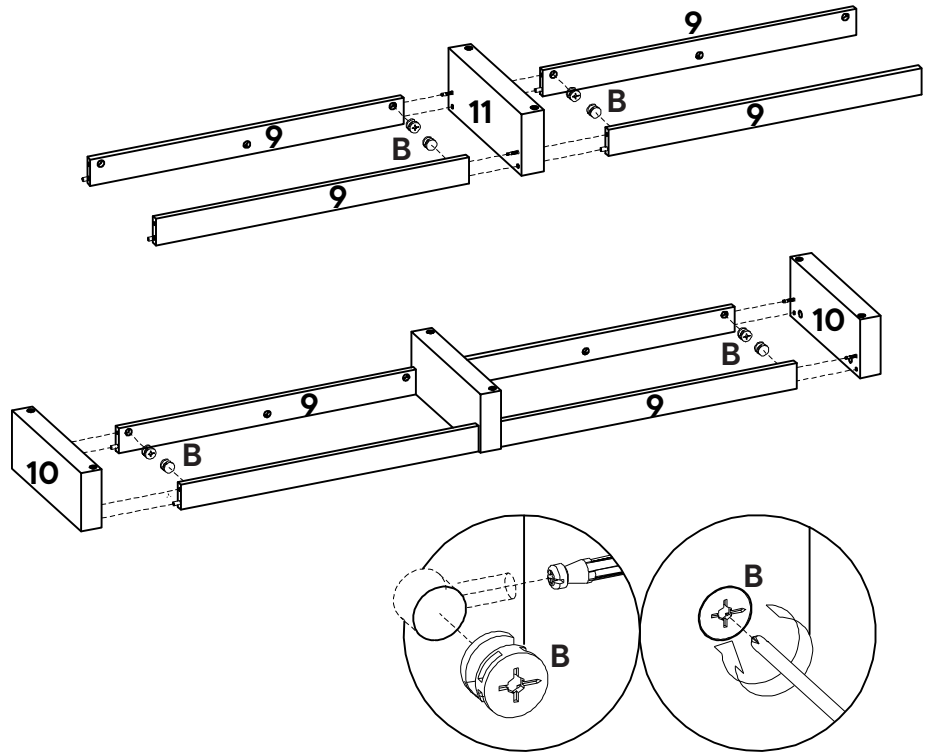

STEP 12

HARDWARE**(B)** Cam Lock x10

12.1 Connect **Bottom Assembled unit** to the **Top Assembled Unit** by inserting 10x **Cam Locks (B)** to the corresponding holes.

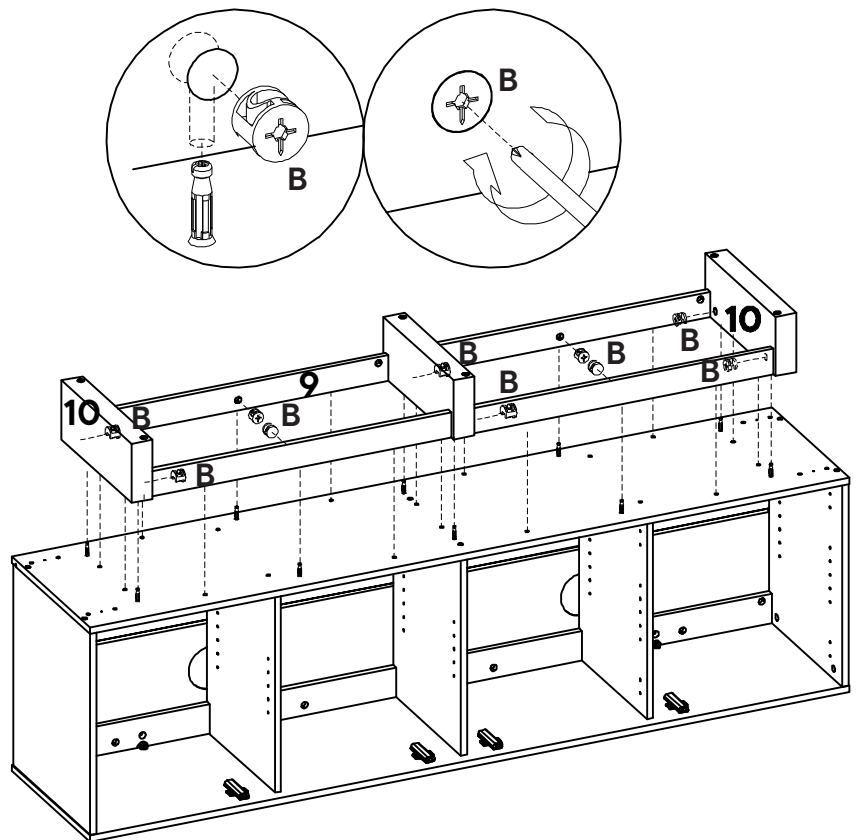


HARDWARE

I Screw Ø7 x 52 mm x4

COMPONENTS

12 Side Support x4

13.1 Connect 4x **Side supports (12)** into the Assembled unit with 4x **Screws (I)**.

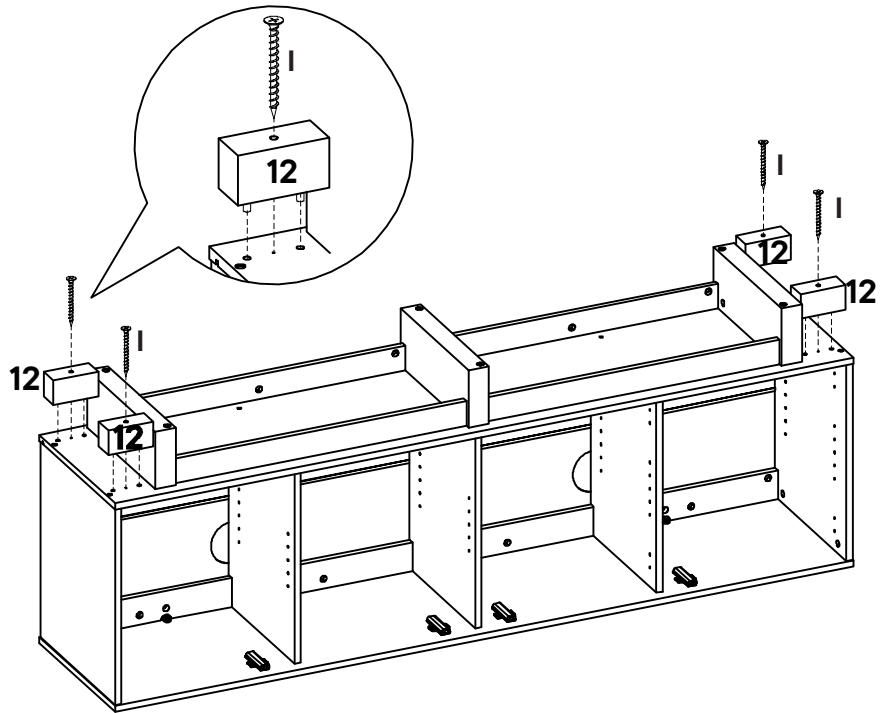


STEP 14

HARDWARE

V Adjustable Leveller x6


14.1 Insert and rotate 6x **Adjustable Leveller (V)** to the Assembled Unit.

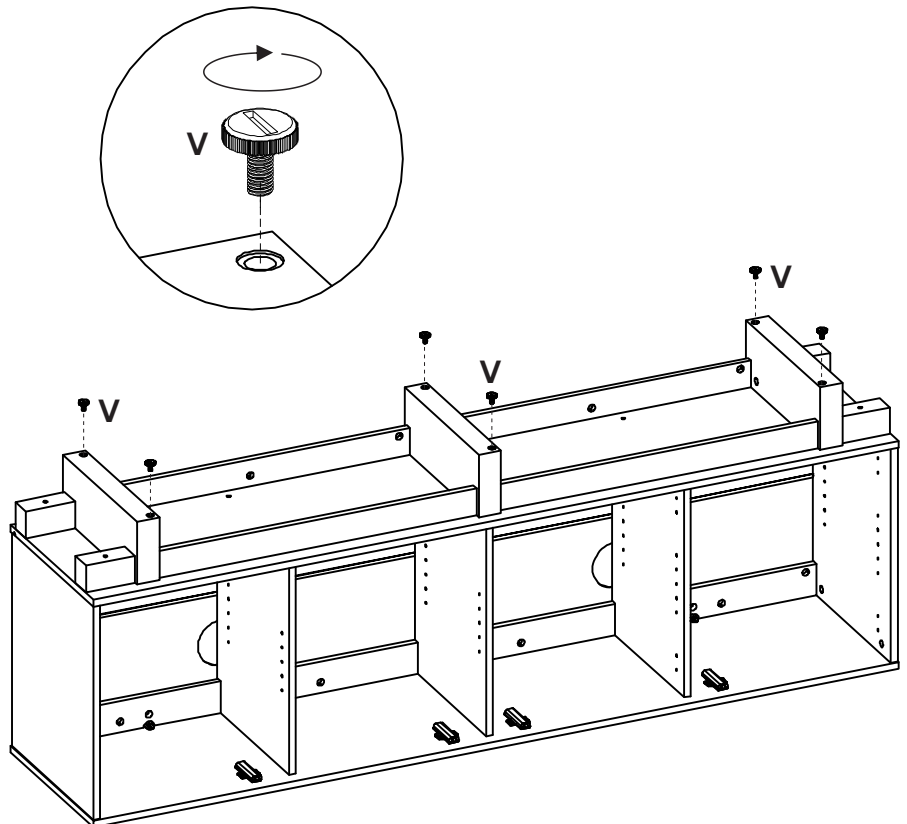


HARDWARE

(K) Screw Ø4 x 12 mm	x18
(L) Wedge	x9
(M) Screw Ø6 x 19 mm	x9

15.1 Gently adjust the top panel sideways in either direction until the diagonal measurements of the frame are equal. Holding the assembly in place, fix the 9x **Wedge (L)** with 9x **Screws (M)** as shown.

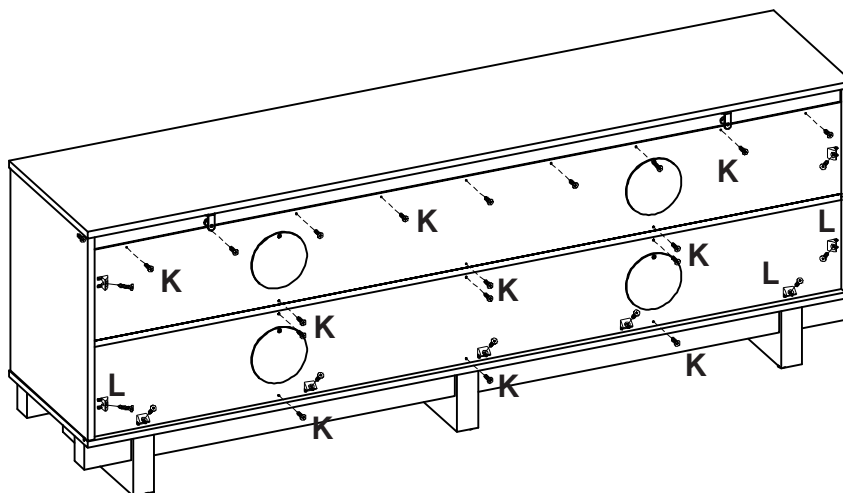

15.2 Fasten Back Panels with 18x **Screws (K)**.

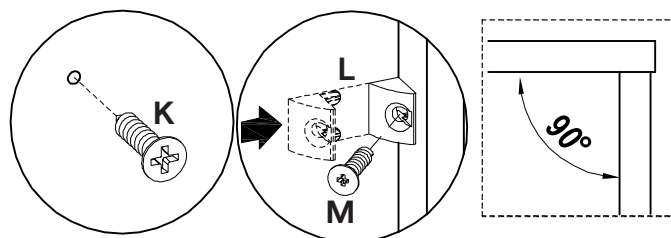

STEP 16

HARDWARE





(F) Side Hinge	x4
(G) Middle Hinge	x4
(H) Screw Ø7 x 14 mm	x16

COMPONENTS

(17a) Side door	x2
(17b) Middle door	x2

16.1 Fasten 2x **Side Hinges (F)** with 4x **Screws (H)** onto 2x **Side doors (17a)**.


16.2 Fasten 2x **Middle Hinges (G)** with 4x **Screws (H)** onto 2x **Middle doors (17b)**.

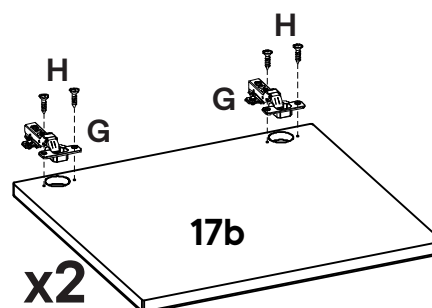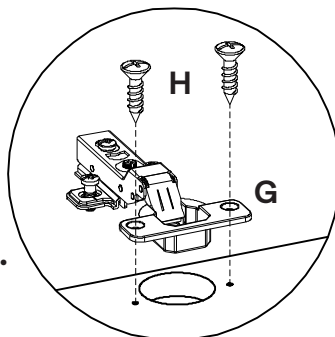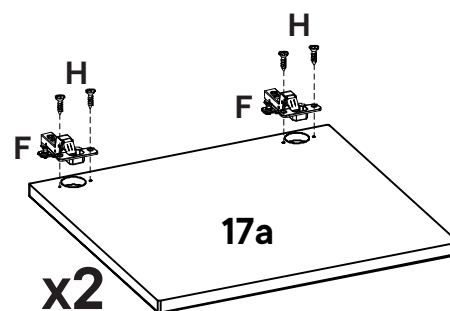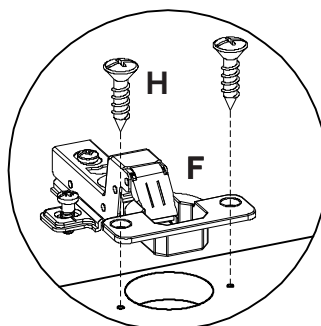

HARDWARE

17a Side door x2

17.1 Carefully align each 2x **Doors (17a)** to the edge of the assembled and secure each **Door Hinge**.

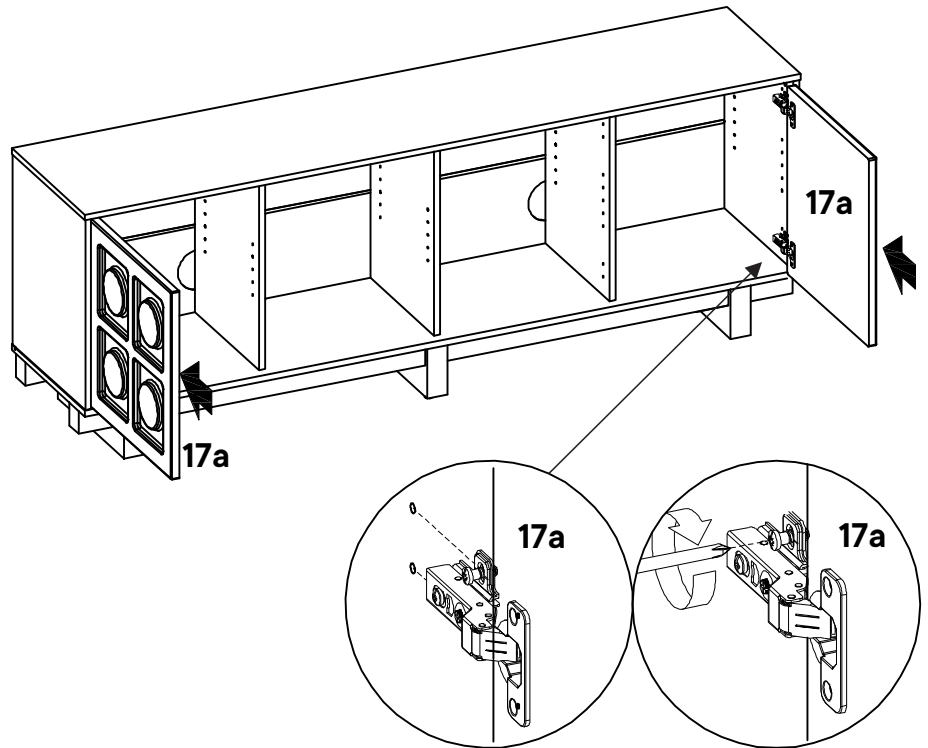


STEP 18





HARDWARE

17b Middle door x2

18.1 Carefully align each 2x **Doors (17b)** to the edge of the assembled and secure each **Door Hinge**.


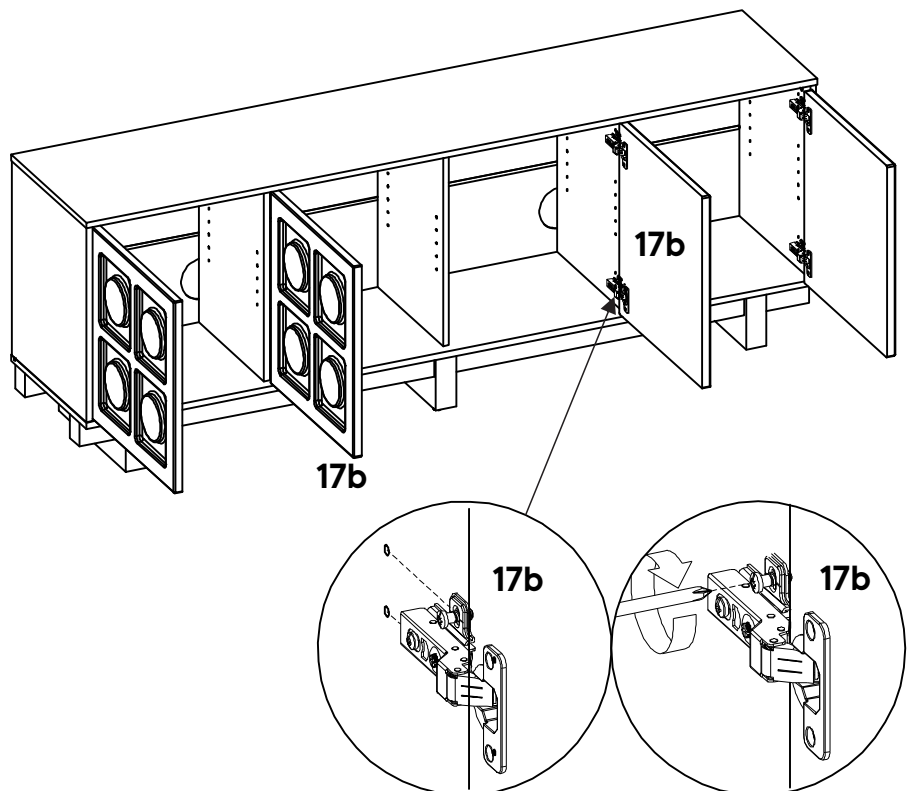


Sideboard Door Alignment

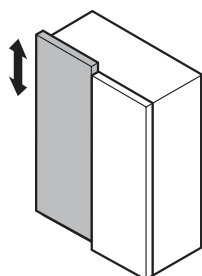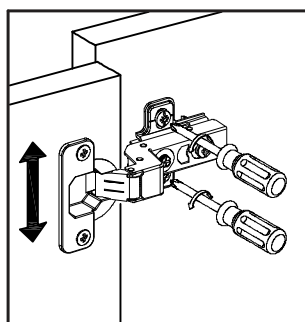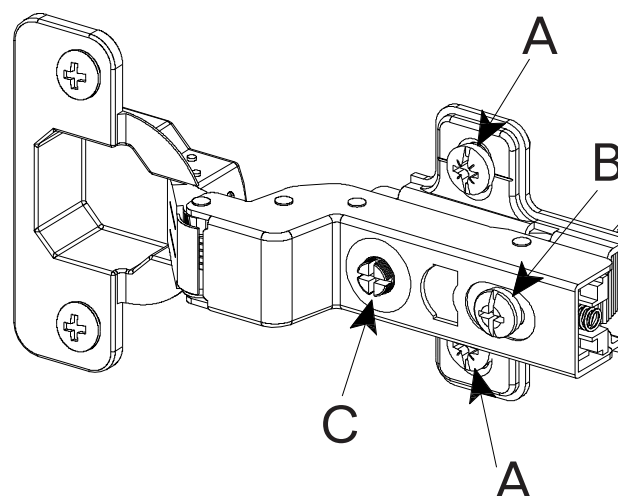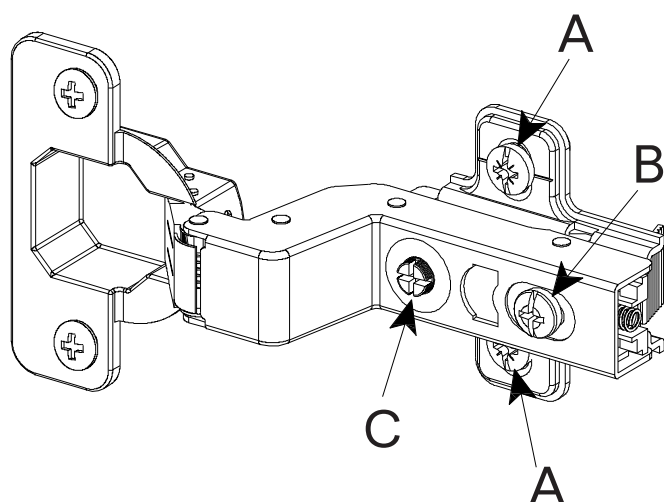



To adjust the vertical height.

Loosen the two screws A on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

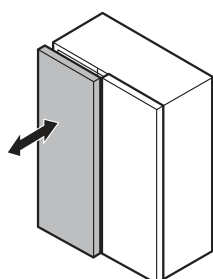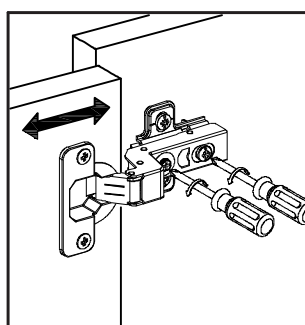

To adjust depth.

Loosen screw B and adjust door, if the door can not be adjusted, please loosen screw C, then try again. Tighten screw B and C.

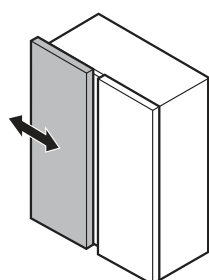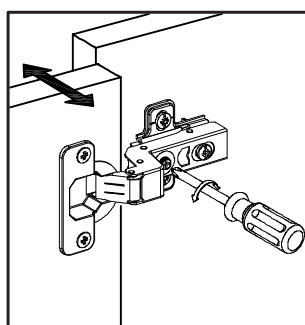

To adjust side ways.


Turn screw C on BOTH hinges on each door.

HARDWARE

○ Sticker x2

19.1 Place 2x **Stickers (O)** onto the Wall fixing hole.

Important : For your safety it is imperative to fix your furniture to the wall.
Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

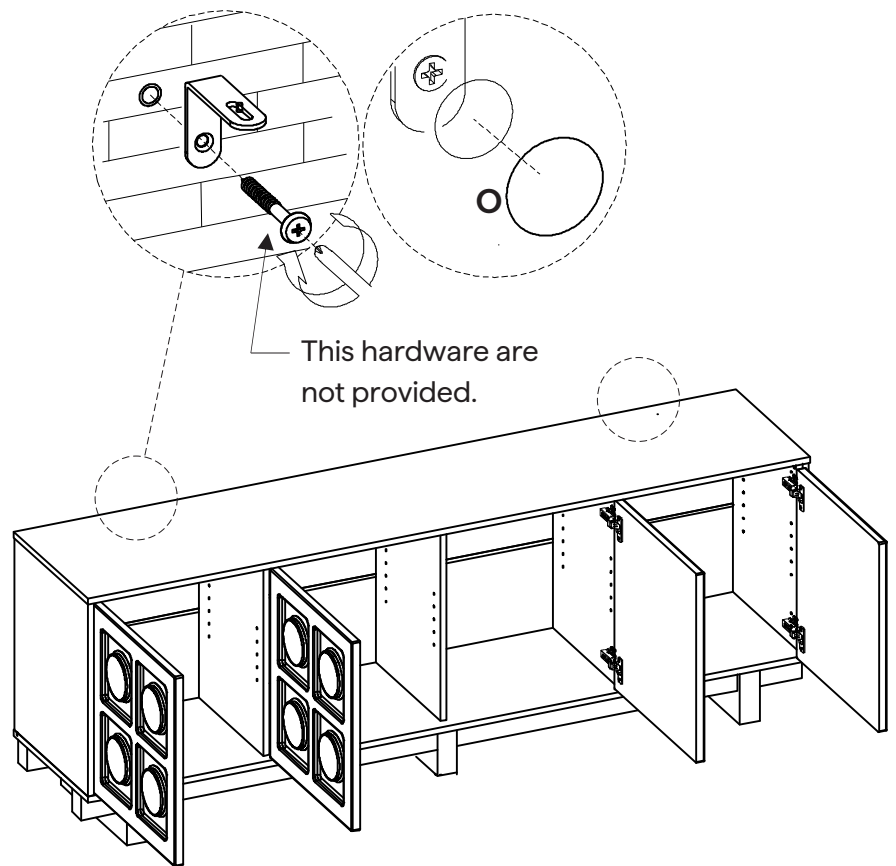

STEP 20

HARDWARE

N Shelf Pin x16



COMPONENTS

15 Side adjustable shelf x2

16 Middle adjustable shelf x2

20.1 Insert 16x **Shelf Pins (N)** onto Side and Divider Panels in the desired positions.

20.2 Slide 2x **Side adjustable shelf (15)** and 2x **Middle adjustable shelf (16)** diagonally in, and rest on the **Shelf Pins (N)**.

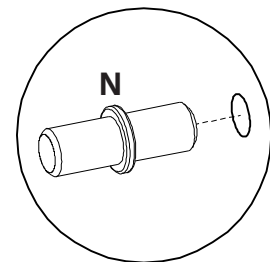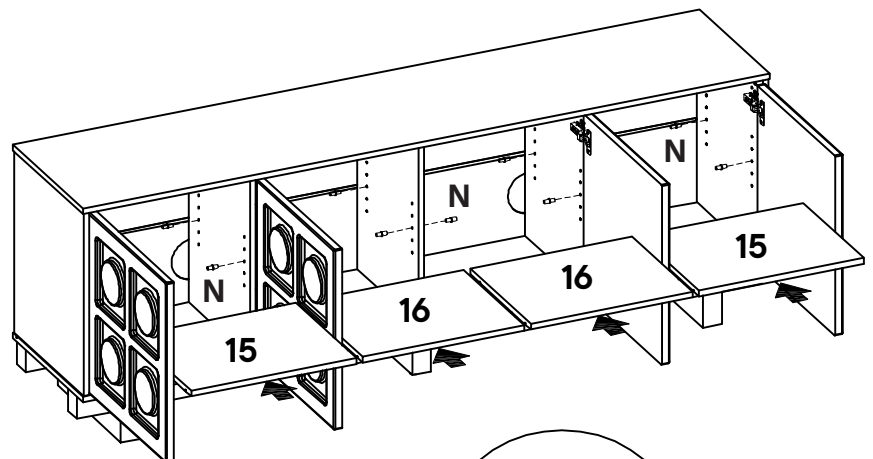


Great job!

Sideboard assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

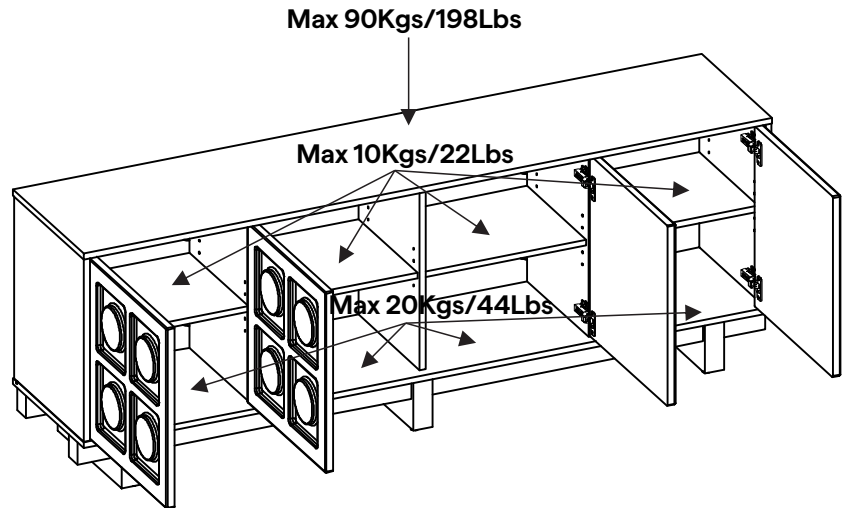

CONNECT WITH US!

Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com